

## VB3xx 10G Probes

Applies to software release v6.5

Form 8046L • February 2025

VB3xx 10G Probe User's Manual  
Revision 9f077faf (2025-02-05)

### **Copyright**

© 2025 Sencore, Inc. All rights reserved.  
3200 Sencore Drive, Sioux Falls, SD USA  
[www.sencore.com](http://www.sencore.com)

This publication contains confidential, proprietary, and trade secret information. No part of this document may be copied, photocopied, reproduced, translated, or reduced to any machine-readable or electronic format without prior written permission from Sencore. Information in this document is subject to change without notice and Sencore Inc. assumes no responsibility or liability for any errors or inaccuracies. Sencore, Sencore Inc, and the Sencore logo are trademarks or registered trademarks in the United States and other countries. All other products or services mentioned in this document are identified by the trademarks, service marks, or product names as designated by the companies who market those products. Inquiries should be made directly to those companies. This document may also have links to third-party web pages that are beyond the control of Sencore. The presence of such links does not imply that Sencore endorses or recommends the content on those pages. Sencore acknowledges the use of third-party open source software and licenses in some Sencore products. This freely available source code can be obtained by contacting Sencore Inc.

### **About Sencore**

Sencore is an engineering leader in the development of high-quality signal transmission solutions for the broadcast, cable, satellite, IPTV, and telecommunications markets. The company's world-class portfolio includes video delivery products, system monitoring and analysis solutions, and test and measurement equipment, all designed to support system interoperability and backed by best-in-class customer support. Sencore products meet the rapidly changing needs of modern media by ensuring the efficient delivery of high-quality video from the source to the home. More information about Sencore is available at the company's website, [www.sencore.com](http://www.sencore.com).

This product can include software developed by the following people and organizations with the following copyright notices:

- Curl. Copyright © Daniel Stenberg and many contributors. All rights reserved.
- Dropbear. Contains software copyright © 2008 Google Inc. All rights reserved.
- OpenSSL Project for use in the OpenSSL Toolkit. (<http://www.openssl.org/>).  
Copyright © The OpenSSL Project. Copyright © Eric A. Young, Tim J. Hudson All rights reserved.

All trademarks and registered trademarks mentioned herein are the property of their respective owners.

# Contents

<b>Contents</b>	<b>3</b>
<b>Document Revision History</b>	<b>9</b>
<b>1 INTRODUCTION</b>	<b>10</b>
1.1 About the 10G Probe . . . . .	10
1.1.1 VB330 – Overview . . . . .	10
1.1.2 VB330 – Platform alternatives . . . . .	11
1.1.3 Embedded 10G Probe – Functionality . . . . .	11
1.2 How to Use This Manual . . . . .	13
<b>2 PRINCIPLE OF OPERATION</b>	<b>14</b>
<b>3 SAFETY</b>	<b>16</b>
<b>4 INSTALLATION AND INITIAL SETUP</b>	<b>17</b>
4.1 Quick Installation Guide . . . . .	17
4.2 The Enhanced Chassis (VB300) . . . . .	17
4.2.1 Dual Power Supply . . . . .	17
4.2.2 Cooling System . . . . .	18
4.3 The Enhanced Chassis –48V DC version (VB300-DC) . . . . .	18
4.3.1 Dual Power Supply . . . . .	18
4.3.2 Cooling System . . . . .	18
4.3.3 VB300-DC Power Supply . . . . .	19
4.4 Serial Number Location . . . . .	19
4.5 The Hardware Modules and Connectors . . . . .	20
4.5.1 The VB330 Module . . . . .	20
4.6 Installing the Unit in a Rack . . . . .	21
4.6.1 Default Installation — Connectors at the Front of Rack . . . . .	21
4.6.2 Optional Installation — Connectors at the Rear of Rack . . . . .	21
4.6.3 Optional Installation — Mid-Mounting . . . . .	21
4.7 Powering up the Unit . . . . .	22
4.8 Initial Configuration . . . . .	22
4.8.1 Initial Configuration Using the Pre-Set IP-Address . . . . .	22

4.8.2	Initial Configuration Via Serial Console Emulated Over USB . . . . .	23
4.8.3	Verifying Correct Initial Setup of the 10G Probe . . . . .	26
4.8.4	Initial Setup Troubleshooting . . . . .	26
<b>5</b>	<b>QUICK SETUP GUIDE</b>	<b>28</b>
5.1	Basic Setup . . . . .	28
5.2	Input Signal Definitions . . . . .	28
5.2.1	Multicasts . . . . .	28
5.2.2	OTT Input (OTT Engine Option Only) . . . . .	29
5.3	Monitoring . . . . .	29
5.4	Adjusting Alarm Thresholds . . . . .	29
<b>6</b>	<b>VB330 EMBEDDED HARDWARE PROBE GRAPHICAL USER INTERFACE</b>	<b>31</b>
6.1	Main . . . . .	33
6.1.1	Main — Summary . . . . .	33
6.1.2	Main — Stream overview . . . . .	37
6.1.3	Main — CPU usage . . . . .	38
6.1.3.1	Advanced CPU settings . . . . .	39
6.1.4	Main — Chassis . . . . .	39
6.1.5	Main — Eii graphing . . . . .	40
6.2	Alarms . . . . .	43
6.2.1	Alarms — All Alarms . . . . .	44
6.2.2	Alarms — Alarm setup . . . . .	45
6.2.3	Alarms — Event log . . . . .	52
6.2.4	Alarms — Flash Alarms (requires FLASH-OPT) . . . . .	53
6.2.5	System alarms . . . . .	53
6.3	OTT (Option) . . . . .	56
6.3.1	OTT — Active testing . . . . .	56
6.3.2	OTT — Details . . . . .	57
6.3.2.1	OTT — Details — Profiles . . . . .	58
6.3.2.2	OTT — Details — Manifest . . . . .	60
6.3.2.3	OTT — Details — Alarms . . . . .	62
6.3.2.4	OTT — Details — Thumbnails . . . . .	63
6.3.2.5	OTT — Details — Alignment . . . . .	64
6.3.3	OTT — Channels . . . . .	66
6.3.4	OTT — Settings . . . . .	73
6.3.5	OTT — Thresholds . . . . .	74
6.4	Multicasts . . . . .	77
6.4.1	Multicasts — Parameters . . . . .	77
6.4.1.1	Parameter columns . . . . .	79
6.4.2	Multicasts — Parameters — Fields . . . . .	92
6.4.3	Multicasts — Summary . . . . .	92
6.4.4	Multicasts — History . . . . .	94

6.4.5	Multicasts — Detect	95
6.4.6	Multicasts — SAP	95
6.4.7	Multicasts — Join	96
6.4.8	Multicasts — Streams	97
6.4.9	Multicasts — Ethernet thresh.	104
6.5	MW (Media Window)	107
6.5.1	Media Window — Selected channel	109
6.5.2	Media Window — Bandwidth graph	110
6.5.3	Media Window — Inter Arrival Time graph	110
6.6	RDP (Return Data Path)	111
6.6.1	RDP — Control	111
6.6.2	RDP — Setup	112
6.7	Traffic	114
6.7.1	Traffic — Protocols	114
6.7.2	Traffic — Detect	116
6.7.3	Traffic — Filter statistics	117
6.7.4	Traffic — Filter setup	120
6.7.5	Traffic — Microbitrate	122
6.7.6	Traffic — Multicast scan	125
6.8	Ethernet	126
6.8.1	Ethernet — FSM	126
6.8.1.1	Ethernet — FSM — Monitor	126
6.8.1.2	Ethernet — FSM — Setup	128
6.8.1.3	Ethernet — FSM — Syslog	129
6.8.2	Ethernet — IGMP	130
6.8.3	Ethernet — PCAP	131
6.9	ETR 290 (Option)	132
6.9.1	ETR 290 — Overview	133
6.9.2	ETR 290 — ETR Details	134
6.9.3	ETR 290 — PIDs	137
6.9.4	ETR 290 — Services	138
6.9.5	ETR 290 — Bitrates	143
6.9.6	ETR 290 — Tables	143
6.9.7	ETR 290 — PCR	148
6.9.8	ETR 290 — T2MI (requires T2MI-OPT)	150
6.9.9	ETR 290 — Status	154
6.9.10	ETR 290 — Compare	155
6.9.11	ETR 290 — ETR threshold	160
6.9.12	ETR 290 — PID thresholds	174
6.9.13	ETR 290 — Service thresh.	177
6.9.14	ETR 290 — Gold TS thresholds	180
6.10	Content	186
6.10.1	Content — Thumbnails	186

6.10.2	Content — SCTE 35 (requires SCTE35-OPT)	188
6.10.3	Content — Content thresh.	190
6.10.4	Content — Service thresh.	195
6.11	Redundancy (requires IP-SWITCH-OPT)	197
6.11.1	Redundancy — Status	197
6.11.2	Redundancy — Switch setup	199
6.11.3	Redundancy — Integration	200
6.11.4	Redundancy switch operation modes	200
6.11.5	Setup guide	201
6.12	Setup	204
6.12.1	Setup — Params	204
6.12.2	Setup — Pages	207
6.12.3	Setup — Colors	207
6.12.4	Setup — Time	208
6.12.5	Setup — Ethernet	208
6.12.5.1	Setup — Ethernet — IPv6 Settings	210
6.12.5.2	Example 1 – Separate Management IPv4	211
6.12.5.3	Example 2 – In-Line Management IPv4	212
6.12.5.4	Example 3 – Mixed Mode IPv4	212
6.12.6	Setup — VLANs	213
6.12.7	Setup — Login	214
6.12.8	Setup — ETR	215
6.12.9	Setup — VBC thresh.	218
6.12.10	Setup — Scheduling	222
6.12.11	Setup — Routing	223
6.12.12	Setup — Security	224
6.12.12.1	Setup — Security — Ports	225
6.12.12.2	Setup — Security — Authentication	227
6.12.12.3	Setup — Security — Tacacs+	228
6.12.12.4	Setup — Security — Local users	229
6.12.12.5	Setup — Security — Access control	230
6.12.12.6	Setup — Security — Password	231
6.13	Data	232
6.13.1	Data — Configuration	232
6.13.1.1	Configuration snapshots	233
6.13.2	Data — Software	234
6.13.3	Data — Certificates (requires OTT-OPT)	235
6.13.4	Data — Table Descriptors	236
6.13.5	Data — Eii	237
6.13.6	Data — Eii Portability	237
6.13.7	Data — Storage (requires FLASH32-OPT)	238
6.14	About	239
6.14.1	About — Release info	239

6.14.2 About — License . . . . .	240
6.14.3 About — Technologies . . . . .	241
6.14.4 About — Credits . . . . .	242
6.14.5 About — System . . . . .	243
<b>A Appendix: VB330 Versus VBC Alarms</b>	<b>244</b>
<b>B Appendix: Monitoring Practices</b>	<b>246</b>
B.1 RTP Monitoring . . . . .	246
B.2 Default Multicast Monitoring . . . . .	246
B.3 Strategy for MediaWindow Analysis . . . . .	247
B.3.1 IAT Before and After Router . . . . .	249
B.3.2 Identifying UDP Packet Loss . . . . .	249
B.4 Multicast Thresholds . . . . .	250
B.5 Content Thresholds . . . . .	251
B.6 Dedicated interface for OTT . . . . .	251
B.7 Monitoring HTTP Live Streaming (HLS) . . . . .	252
B.8 Monitoring RTMP and SHOUTcast . . . . .	252
B.9 OTT descrambling with Verimatrix . . . . .	252
B.10 OTT Bandwidth requirements . . . . .	252
<b>C Appendix: OTT Profile Health</b>	<b>254</b>
C.1 OTT Profile Health Bar . . . . .	254
C.2 OTT Profile Health Timeline . . . . .	254
<b>D Appendix: SRT Streams</b>	<b>256</b>
D.1 Introduction . . . . .	256
D.1.1 Overview . . . . .	256
D.1.2 Reception . . . . .	256
D.1.3 Transmission . . . . .	257
<b>E Appendix: On-line License Activation</b>	<b>258</b>
E.1 Introduction . . . . .	258
E.2 Requirements . . . . .	258
<b>F Appendix: Software Maintenance</b>	<b>261</b>
<b>G Appendix: Software Upload</b>	<b>262</b>
G.1 Obtain the software image . . . . .	262
G.2 Export and save the probe configuration . . . . .	262
G.3 Delete any existing probe stream recordings . . . . .	263
G.4 Transfer the image to the probe and save to flash . . . . .	263
G.5 Wait while the software is being saved . . . . .	265
G.6 Verify the new image . . . . .	265
G.7 Software upload troubleshooting . . . . .	266



# Document Revision History


<i>Date</i>	<i>Version</i>	<i>Description</i>
<b>February 2025</b>	6.5	Updated manual to reflect changes in v6.5 software
<b>March 2024</b>	6.3	Updated manual to reflect changes in v6.3 software
<b>June 2023</b>	6.2	Updated manual to reflect changes in v6.2 software
<b>February 2022</b>	6.1	Updated manual to reflect changes in v6.1 software
<b>February 2020</b>	5.6	Updated manual to reflect changes in v5.6 software
<b>February 2019</b>	5.5	Updated manual to reflect changes in v5.5 software
<b>February 2018</b>	5.4	Updated manual to reflect changes in v5.4 software
<b>February 2017</b>	5.3	Updated manual to reflect changes in v5.3 software
<b>March 2016</b>	5.2	Updated manual to reflect changes in v5.2 software
<b>February 2015</b>	5.1	Updated manual to reflect changes in v5.1 software
<b>January 2014</b>	5.0	Updated manual to reflect changes in v5.0 software

# 1 INTRODUCTION

## 1.1 About the 10G Probe

### 1.1.1 VB330 – Overview

With dual 10 Gbit/s Ethernet connectivity and a massive multiprocessor architecture the VB330 can deliver monitoring and analytics of thousands of streams and a multitude of technologies in real-time and in parallel. The VB330 is deployed either on dedicated embedded hardware, as a pre-configured and pre-installed appliance or as a software-only solution. This gives the operator greater flexibility when it comes to tailoring the monitoring solution towards the underlying system architecture in the best possible manner. Feature parity is ensured across the various deployment options, varying only in factors such as scalability, power consumption and longevity. The web-based user experience and feature availability stays the same across all the deployment alternatives.

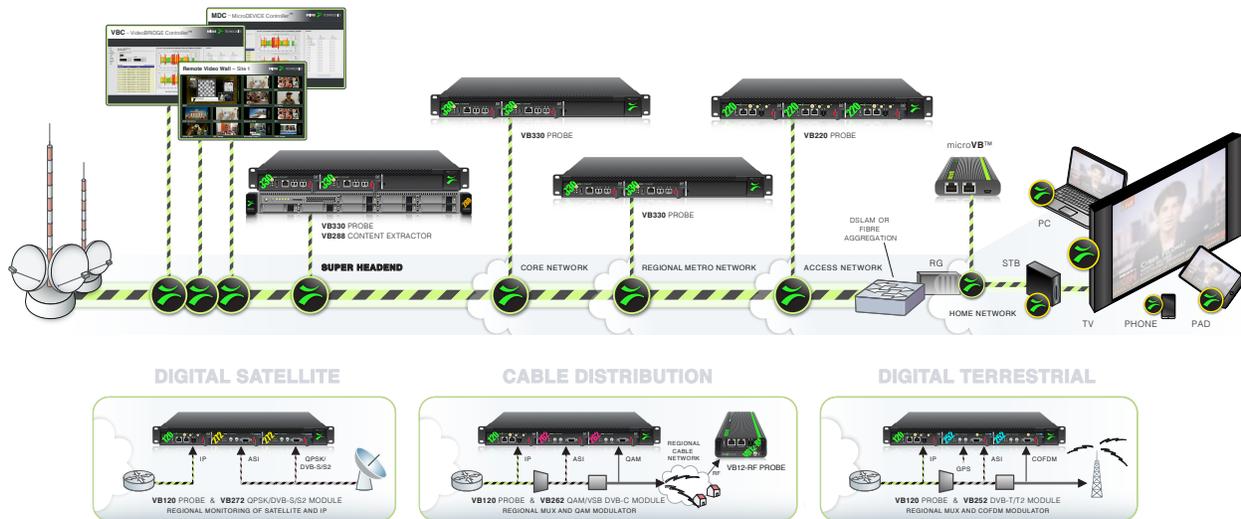

The OTT software option is available on the VB330 and enables monitoring of up to 500 adaptive bitrate channels in steps of 5 or 50 (Bulk OTT option) OTT engines depending on licensing.

A built-in web server in the VB330 allows remote signal monitoring using a standard web browser. This can be managed either through a separate Ethernet network, or by using the regular video/data network – both IPv4 and IPv6 are supported.

The VB330 10G Probe can also be managed via the VideoBRIDGE Controller. The VideoBRIDGE Controller will add management features like alarm aggregation and report functionality.

The VB330 10G Probe is a module housed in a 1 RU chassis. Up to two VB330 modules may be installed in one chassis, extending the monitoring capacity.

## 1.1.2 VB330 – Platform alternatives

The VB330, VB330-SW and VB330-SW probes supports common functionality for all the available deployment alternatives, varying mostly only in factors such as storage size and stream count. This is in contrast to the VB120 and VB220 embedded hardware probes which support add-on interface cards to support different RF and ASI standards. These include VB242 and VB246 for ASI, VB252 for DVB-T/T2, VB262 for QAM, VB256 for ISDB-T, VB258 for DVB-T, DVB-T2, DVB-C, QAM-B, ISDB-T, ATSC 1.0 and ATSC 3.0 and VB272 for satellite.

<i>VB330 Embedded Hardware</i>	<i>VB330/VB380 Server</i>	<i>Appliance</i>	<i>VB330 Software Image</i>
Custom electronics developed by Sencore	Pre-selected server hardware with pre-loaded software		Software image for installation on Ubuntu
Low power consumption. Each VB330 draws approx. 35 W	Server power consumption		Suitable for 3rd party server installation
Dual 10 Gbit/s SFP+ network interface	Dual QSFP28 10/25/40/50/100 Gbit/s network interface		Suitable for cloud-based infrastructure
1RU 40 cm depth rack solution with space for 2 VB330 modules	1RU 50 cm depth rack solution		Suitable for architectures where virtualization technology is utilized
Dual 10 Gbit/s network connectivity per VB330	Delivered as working system out of the box		Warranty depends on underlying system
Capacity: 12 Gbit/s per VB330 with second input option enabled	Capacity: Up to 50 Gbit/s		Capacity: Will depend on underlying drivers and architecture
24 month standard warranty	24 month standard warranty		
Designed for long lifetime and long product availability	Powerful and future-proof server based platform		License manager / floating licenses

Note that the VB330 software image and VB330 Appliance can be licensed to run any bitrate from 1 Gbit/s to 50 Gbit/s, limited by the underlying network interface cards and server performance.

## 1.1.3 Embedded 10G Probe – Functionality


An IP-based network is fully transparent with respect to signal contents quality, provided that the IP packets arrive, and provided that they arrive in time. The 10G Probe therefore uses the patented MediaWindow to allow monitoring at-a-glance of packet loss and errors in inter-packet arrival time. This way the operator can conveniently ensure correct signal quality at IP-level.

The advanced Ethernet protocol analysis tool automatically detects all protocols carried over Ethernet past the port the 10G Probe is connected to, and it displays statistics like percentage utilization of the

interface and percentage of the different transported protocols. This gives the 10G Probe a real-time sniffer capability.

The 10G Probe allows the user to define a Return Data Path (RDP), using the regular video/data network or the management network to return a stream. A faulty signal can then be further analyzed at the studio premises, when necessary.

The recording functionality allows the user to record a stream, either triggered manually by the user or triggered by a user defined alarm.

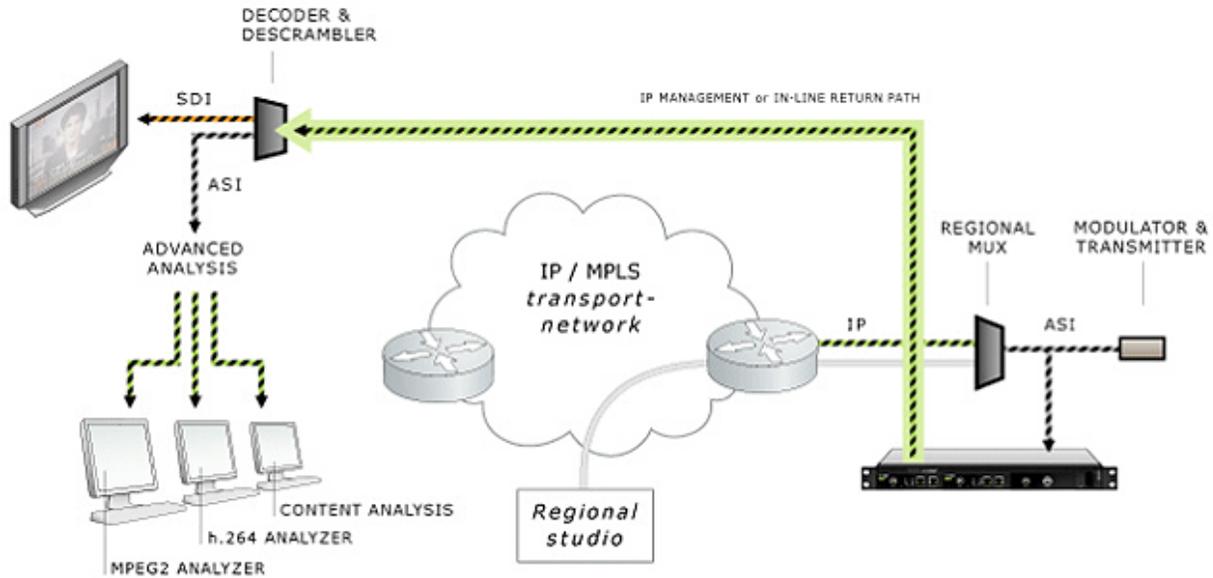

Full Service Monitoring (FSM) checks that vital system components like CA-servers are active.

Optional Ethernet TR 290 monitoring allows the operator to check parameters like transport stream sync and PSI/SI standards conformity. This option also performs further PSI/SI analysis, making it possible to view PSI/SI contents. PID and service bitrates are also continuously measured.

Optional OTT monitoring allows the operator to set up active testing of Over-the-top type signals as found in adaptive bitrate streaming architectures. Formats supported include Apple™ HLS, Microsoft™ Smoothstream, RTMP, MPEG DASH, Adobe™ HDS and Nullsoft SHOUTcast™.

The 10G Probe can be expanded through license options to monitor the T2MI protocol layer as found in DVB-T2 networks.

The 10G Probe can also be licensed with an SCTE 35 option that allows monitoring and logging of splice time codes embedded in the transport streams.

## 1.2 How to Use This Manual

This User's Manual is valid for software version 6.5 of the VB330 10G Probe.

Throughout this manual the term stream is often used rather than unicast or multicast. One stream may consist of one or more services, and refers to one IP stream received as a uni- or multicast or over an SRT connection. When the term multicast is used in this manual, it explicitly refers to a stream arriving over the network as a multicast or unicast, including unicasts that use the SRT protocol.

Chapter 2 **PRINCIPLE OF OPERATION** provides a simplified block-diagram overview of the probe.

Chapter 3 **SAFETY** lists safety precautions, and this chapter should be read prior to equipment installation.

Chapter 4 **INSTALLATION AND INITIAL SETUP** explains how to install the equipment and also how to perform the necessary initial configuration of the 10G Probe management IP address. A step-by-step quick installation guide is found in section 4.1.

Chapter 5 **QUICK SETUP GUIDE** contains a quick setup guide; a step-by-step description of how to setup the 10G Probe once the initial setup has been performed.

Chapter 6 **VB330 EMBEDDED HARDWARE PROBE GRAPHICAL USER INTERFACE** describes the graphical user interface (GUI) as seen when pointing a web browser to the 10G Probe's IP address.

A **Appendix: VB330 Versus VBC Alarms** describes the alarm handling in the 10G Probe versus the VideoBRIDGE Controller.

B **Appendix: Monitoring Practices** explains some useful monitoring practices.

C **Appendix: OTT Profile Health** explains the OTT profile health bar and timeline.

D **Appendix: SRT Streams** provides a quick introduction to SRT (Secure Reliable Transport).

E **Appendix: On-line License Activation** outlines the on-line license activation procedure.

F **Appendix: Software Maintenance** briefly describes software maintenance licenses and how they are used.

G **Appendix: Software Upload** explains how to upgrade the software on the 10G Probe.

H **Appendix: Restoring probe factory defaults** details how to reset the 10G Probe to factory default settings.

Note that current version of the User's Manual can be obtained from Sencore ProCare support by emailing [procare@sencore.com](mailto:procare@sencore.com).

## 2 PRINCIPLE OF OPERATION

The VB330 module is equipped with two SFP+ optical ports and one RJ45 Ethernet port. The user selects which transport stream signal input to be used by the monitoring engine. Management of the probe is conducted via the Ethernet management port or alternatively in-band via the video/data ports.

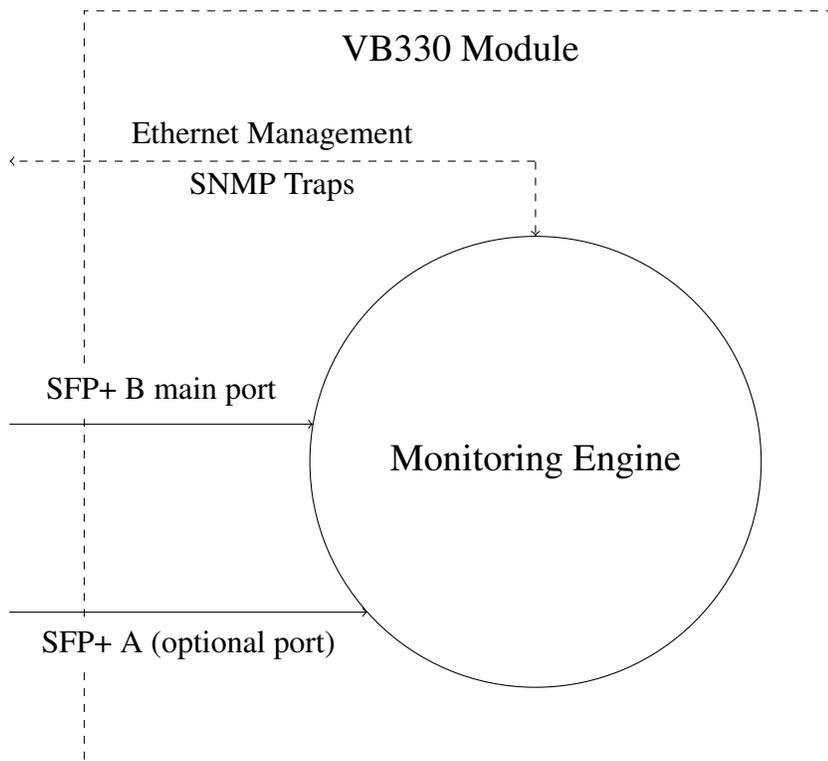


Figure 2.1: The VB330 Module – Principle of Operation

A simplified diagram of the alarm handling mechanisms of the 10G Probe is shown in figure 2.2. The input signals are continuously analyzed, and measured data are checked against user defined threshold values. If the data do not comply with the threshold values alarms will be generated. The overall alarm settings further make it possible to enable and disable alarms, thus defining which alarms should be reported in the 10G Probe alarm list and sent as SNMP traps to an external management system.

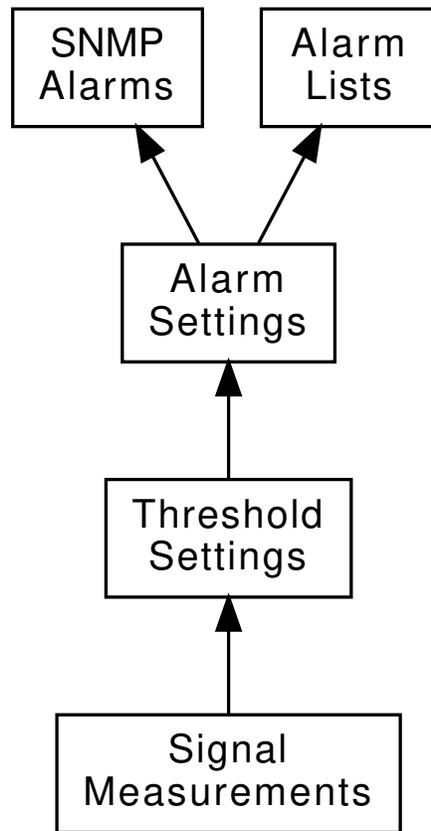


Figure 2.2: Simplified Diagram of the Alarm Handling in the 10G Probe

## 3 SAFETY

**Read the installation instructions before connecting the chassis unit to the power source. Do not install the chassis unit with power on.**

**The equipment described in this user manual is considered professional equipment to be installed by skilled personnel. The equipment should be connected to protective earth through the ground lug at the back of the chassis marked clearly with the ground symbol.**

**The chassis is intended for installation in restricted access areas. A restricted access area can be accessed only through the use of a special tool, lock and key, or other means of security.**

**Blank face plates and cover panels serve three important functions: they prevent exposure to hazardous voltages and currents inside the chassis, they provide electromagnetic interference shielding and they direct the flow of cooling air through the chassis. Do not operate the chassis unit unless all modules, face plates, front covers and rear covers are in place.**

**Only trained and qualified personnel should be allowed to install, replace or service this equipment.**

**This equipment must be installed and maintained by service personnel as defined by AS/NZS 3260. Incorrectly connecting this equipment to a general-purpose outlet could be hazardous.**

**The 10G Probe is shipped with an SX SFP+ module that is equipped with a Class 1 laser. Do not stare into open optical ports. Note that if the SFP+ module is replaced special precautions may have to be taken – refer to the manufacturer’s instructions. SFP+ modules are static sensitive devices, and ESD-preventive measures should be taken when handling them, to avoid damage.**

**Ultimate disposal of this product should be handled according to all national laws and regulations.**

**To prevent the system from overheating, do not operate it in an area that exceeds the maximum ambient temperature of 45 degrees Celsius.**

**Do not work on the system or connect or disconnect cables during periods of lightning activity.**

**The chassis requires short-circuit (overcurrent) protection. Ensure that the protective device is rated not greater than 120 VAC, 15 A; 240 VAC, 16 A; 60 VDC, 20 A.**

# 4 INSTALLATION AND INITIAL SETUP

## 4.1 Quick Installation Guide

1. Read the safety instructions, refer to chapter 3
2. Install the unit in a 19 inch rack for rack mount probes, refer to section 4.6
3. Connect the signal cables, refer to section 4.5
4. Power up the unit, refer to section 4.7
5. Perform initial set-up of IP addresses, refer to section 4.8
6. Verify that the GUI launches correctly, refer to section 4.8.3

## 4.2 The Enhanced Chassis (VB300)

The 1RU Enhanced Chassis can house a maximum of **2** modules, and it is equipped with two 100–240V AC 75W power supplies. The unit is forced air ventilated, the air flow going from front to back. The maximum power consumption of the chassis with optional modules is 75W. By default all connectors are located at the front of the unit. The power plugs are located at the rear of the unit. The rack ears of the chassis may be moved to provide for mid or rear mounting of the unit. The rack ears are designed to support the weight of the unit.



Figure 4.1: The Enhanced Chassis with probe boards installed

### 4.2.1 Dual Power Supply

The Enhanced Chassis (VB300) is delivered with two 100–240V AC / 75W power supplies, providing power redundancy. In normal operation load is shared between the two power supplies. If mains fall-out occurs for one of the power sources or one of the power supplies fails, the power supply still in operation will take the full load, seamlessly. This means that monitoring operation will not be affected if one of the power sources fails.

## 4.2.2 Cooling System

The chassis is equipped with six long-life fans that suck in air from front of the chassis. The air exits at the back of the unit. The fans are temperature controlled, allowing them to run at an optimum speed. Venting holes at the sides of the chassis provide an optional air intake, ensuring good aerodynamic properties of the cooling air flow. It is recommended, but not essential, that these venting holes are not covered.

## 4.3 The Enhanced Chassis –48V DC version (VB300-DC)

The 1RU Enhanced Chassis can house a maximum of 2 modules, and it is equipped with two –48V DC 75W power supplies. The unit is forced air ventilated, the air flow going from front to back. The maximum power consumption of the chassis with optional modules is 75W. By default all connectors are located at the front of the unit. The power plugs are located at the rear of the unit. The rack ears of the chassis may be moved to provide for mid or rear mounting of the unit. The rack ears are designed to support the weight of the unit.

### 4.3.1 Dual Power Supply



Figure 4.2: VB300-DC rear: two –48V DC connectors located on the the right

The Enhanced Chassis (VB300-DC) is delivered with two –48V DC / 75W power supplies, providing power redundancy. Each VB300-DC unit consists of a 1RU chassis with 2 option slots. In normal operation load is shared between the two power supplies. If mains fall-out occurs for one of the power sources or one of the power supplies fails, the power supply still in operation will take the full load, seamlessly. This means that monitoring operation will not be affected if one of the power sources fails.

### 4.3.2 Cooling System

The chassis is equipped with six long-life fans that suck in air from front of the chassis. The air exits at the back of the unit. The fans are temperature controlled, allowing them to run at an optimum speed. Venting holes at the sides of the chassis provide an optional air intake, ensuring good aerodynamic properties of the cooling air flow. It is recommended, but not essential, that these venting holes are not covered.

### 4.3.3 VB300-DC Power Supply

The VB300-DC unit is equipped with two –48V DC / 50W power inlet connectors. The power plug is a male 3-PIN D-sub(15) connector. Matching female plugs are supplied with the VB300-DC unit. This plug should be soldered to the power cable in accordance with the drawing in figure 4.4.



Figure 4.3: The VB200-DC Power connector on the chassis

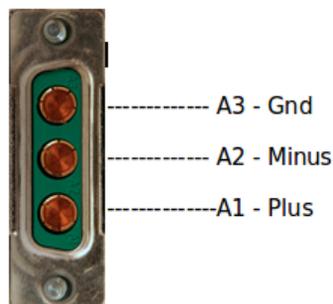


Figure 4.4: Soldering the Female 3-PIN D-sub(15) Connector to the Power Cable


## 4.4 Serial Number Location

The serial number of the Enhanced Chassis is located at the rear of the unit. The serial numbers of the individual optional modules are located on the components side of the modules. All serial numbers can also be found on the shipping box.

All modules except the demodulator interface modules have a serial number that is available via the web GUI under **About License**.

## 4.5 The Hardware Modules and Connectors

### 4.5.1 The VB330 Module

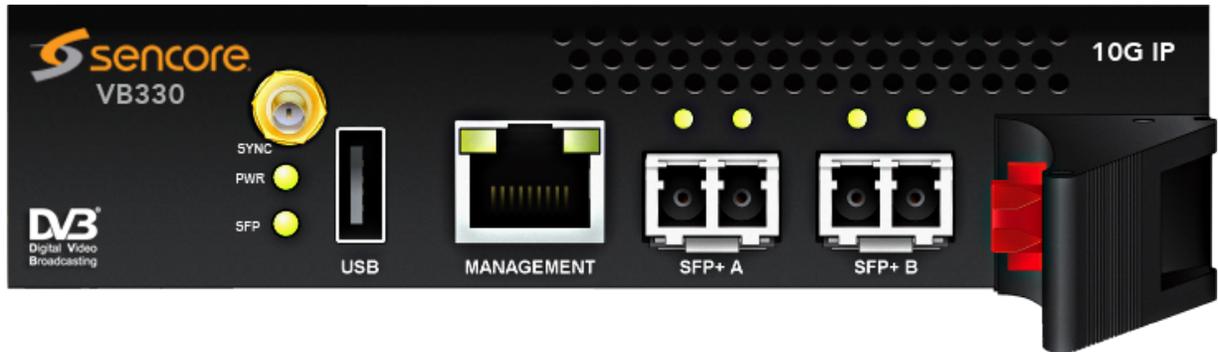

The VB330 module is equipped with the following connectors:

<b>SYNC:</b>	1PPS input (for future use)
<b>USB:</b>	USB serial port emulator for initial set-up of the probe – Type A
<b>MANAGEMENT:</b>	For optionally running management of the probe on a separate network – RJ-45. This interface supports 10/100/1000T.
<b>SFP+ A:</b>	SFP+ optical interface (optional interface not enabled by default)
<b>SFP+ B:</b>	SFP+ optical interface – main data input. The VB330 module's SFP+ B port is shipped with an SR (short range) SFP+ module. This should be replaced if the system requires a different SFP+ module, e.g. for use with single mode fiber. Note that using other SFP+ modules than the type shipped may imply that special safety precautions must be taken, like using protective glasses. Refer to the manufacturer for instructions.

A number of LEDs serve the following purposes:

<b>PWR:</b>	Green power LED
<b>STAT:</b>	Green status LED for future use
<b>MANAGEMENT:</b>	The green LEDs indicate link and activity. A blinking LED indicates activity, whereas a steadily lit LED indicates link without activity (traffic). If the left LED is active the speed is 10/100Mbit/s, the right LED indicates 1000Mbit/s.
<b>LINK:</b>	Green LED indicating SFP link status
<b>ACT:</b>	Green LED indicating SFP activity (traffic)

## 4.6 Installing the Unit in a Rack

The following equipment is needed for hardware installation of the unit:

- 4 rack screws
- A screw driver for the rack screws
- For rear mounting: a size 2 Phillips screwdriver for rack ear screws

### 4.6.1 Default Installation — Connectors at the Front of Rack

By default the Enhanced chassis is shipped with rack ears for front mounting of the unit. The rack ears are designed to support the weight of the unit, so no additional support, like a rack shelf, is needed.

When deciding where to locate the unit, make sure there is sufficient space surrounding the unit to allow efficient cooling, refer to section 4.2.2.

Use four rack screws to install the unit in the rack.

### 4.6.2 Optional Installation — Connectors at the Rear of Rack

For rear mounting of the chassis, the rack ears should be moved prior to rack installation. Unscrew the six size 2 Phillips screws holding the rack ears, and move the six screws covering the rear mounting holes to the front mounting holes. Remount the rack ears at the rear end of the unit.

Install the unit as described in section 4.6.1.

### 4.6.3 Optional Installation — Mid-Mounting

The Enhanced Chassis allows rack ears to be mid-mounted. This can be convenient if the chassis is installed in a telco environment. Unscrew the six size 2 Phillips screws holding the rack ears, and move the six screws covering the mid mounting holes to the front mounting holes. Remount the rack ears at the middle of the unit.



Figure 4.5: Rack Ears Mounting – Side View of Enhanced Chassis Showing Screw Holes

## 4.7 Powering up the Unit

Once the chassis is securely mounted and signal cables are connected, it can be powered up by connecting the power cable to a mains source. When the power cable is connected the power LEDs of the individual optional modules should light up and the chassis fans should operate.

Note that it will take some time from power-up until the modules can be accessed via the management interface – typically the start-up may take up to two minutes.

## 4.8 Initial Configuration

There are two alternative ways of performing an initial configuration of the probe module:

1. By using the preconfigured IP address of the probe management port
2. Via serial console emulated over USB

For most users the first method will be the easiest.

Note that if there are two 10G Probe modules in the chassis, each module should be configured individually, one by one.

### 4.8.1 Initial Configuration Using the Pre-Set IP-Address

The 10G Probe modules are shipped with the following factory settings:

<b>Management (eth1) IP address:</b>	10.0.20.101
<b>Management (eth1) subnet mask:</b>	255.255.0.0

In order to connect to the eth1 management port, the PC used for set-up should have corresponding network settings. Typically a lap-top PC is used for initial configuration. Connect directly to the device's eth1 management port using an Ethernet cable.

For Windows, the network parameters are set in the **Control Panel — Network and Internet — Network and Sharing Center — Network Connection — Properties — Internet Protocol Version 4 Properties** view, as shown in figure 4.6. Select the user defined address, and set the PC's IP address to 10.0.20.100 and the subnet mask to 255.255.0.0.

When the IP address of the PC has been set to match the VB330 factory setting, the permanent network settings can be configured through the VB330 web browser interface. Refer to sections 4.8.3 and 6.12.5 for details on how to launch the VB330 graphical user interface and how to set the network parameters.

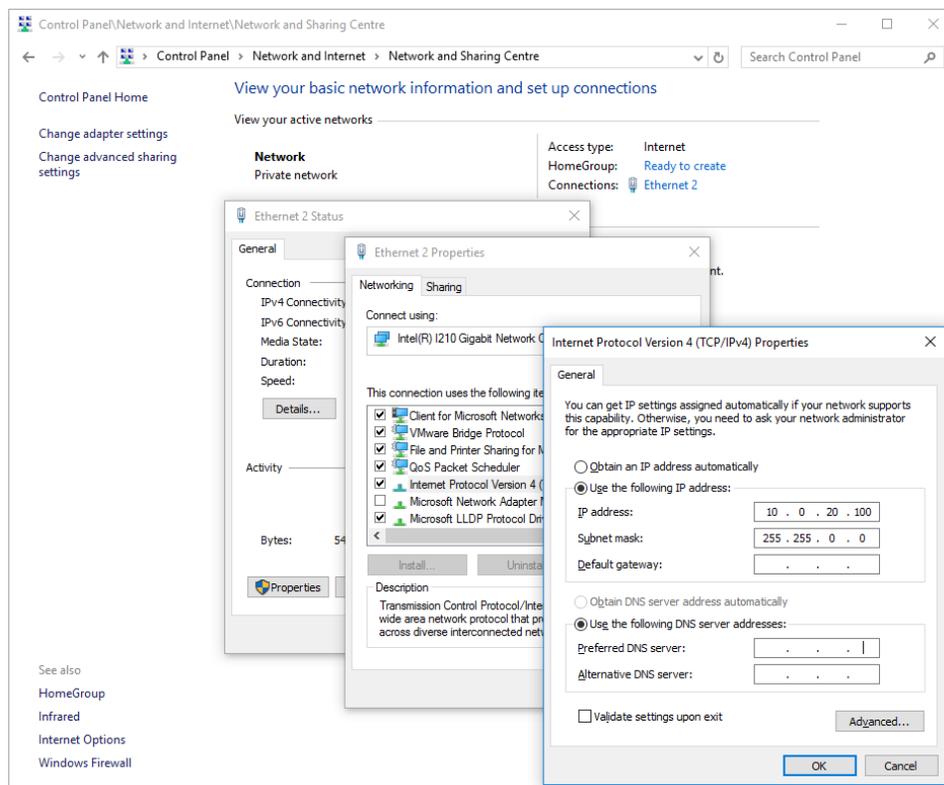


Figure 4.6: Setting the IP address manually in Windows

## 4.8.2 Initial Configuration Via Serial Console Emulated Over USB

If the 10G Probe for some reason cannot be reached through Ethernet communication, the initial set-up may be performed via serial console emulated over USB. For the initial set-up, you must do the following:

1. Installing a driver for the USB communication, if not already supported by the operating system
2. Setting the management IP address

Most operating systems will have native support for the FT232 driver needed. When a USB cable is connected between a PC and the 10G Probe, the operating system will detect a new USB device. For Windows, the new device will appear as a COM port in the **Device Manager** view as shown in figure 4.7.

If your operating system does not detect the probe, you may have to download and install a driver for it. The driver may be downloaded directly from the chip manufacturer at <https://www.ftdichip.com/>. Select first Drivers, then VCP followed by the operating system (VCP is short for Virtual COM Port).

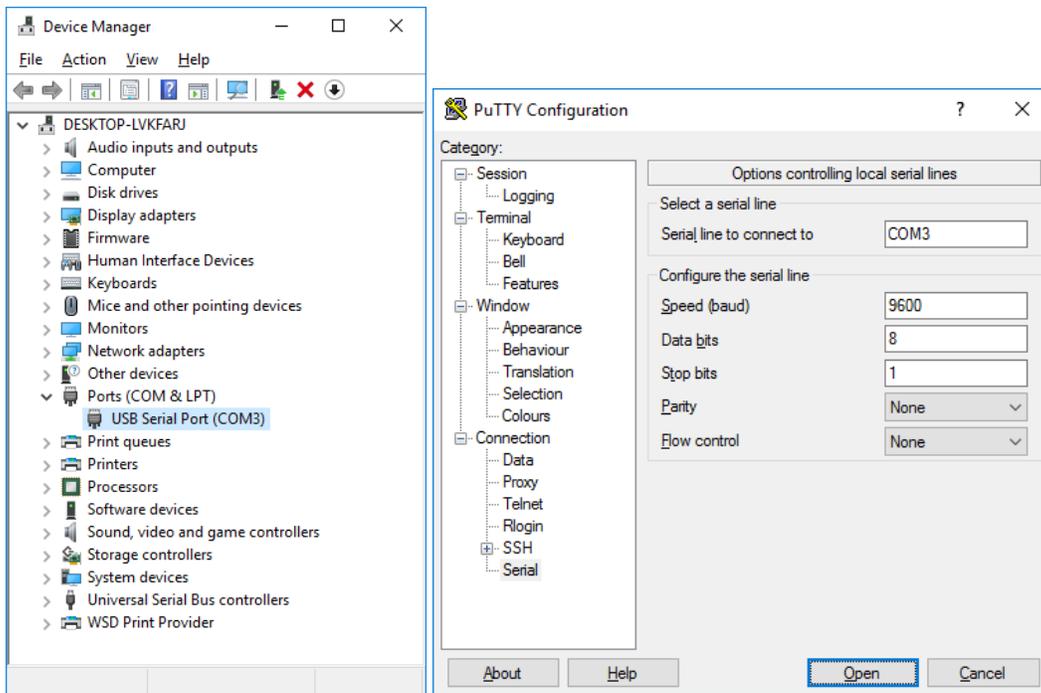


Figure 4.7: Connecting to the serial console over USB

If it is not already connected, connect the USB cable between the USB port on the probe and a USB port on the PC.

Start a terminal program. Windows XP users can use Hyperterm, Linux users can use minicom. For modern versions of Windows, that do not ship with a terminal program, the free application **PuTTY** may be downloaded from <https://www.chiark.greenend.org.uk/~sgtatham/putty/>.

Select the new COM port that should appear as the USB cable is plugged in (Linux users should check /var/log/messages to see what device to use) and establish a serial connection to the 10G Probe using these communication parameters:

- Baud rate: 9600
- Data bits: 8
- Parity: None
- Stop bits: 1
- Flow control: None

Press **Enter** a few times to bring up the login prompt. Log in using the user name **admin** and the password **elvis** (this password can be changed in the **Setup — Security — Password** view).

```

Menu: /ewe/probe/core/setup/ethernet/
=====
<0> Back      <9> Exit
<1> ethStatusDoc
-----
<A> data_dhcp      - false          SFP+ B port (eth0) DHCP
<B> data_ipa       - 10.0.30.101    SFP+ B port (eth0) IP address
<C> data_mask      - 255.255.255.0  SFP+ B port (eth0) netmask
<D> data_gateway  - 10.0.30.1      SFP+ B port (eth0) IPv4 GW
<E> data_management - true           SFP+ B port (eth0) web-server
<F> dhcp           - false          Management port (eth1) DHCP
<G> ipaddress     - 10.0.20.101    Management port (eth1) IP address
<H> netmask       - 255.255.255.0  Management port (eth1) netmask
<I> mm_gateway    - 10.0.20.1      Management port (eth1) IPv4 GW
<J> management    - true           Management port (eth1) web-server
<K> gateway_interface - eth1          Force default interface
<L> hostname      - 10gbprobe      Host name to use for device
<M> dns_server    - 208.67.222.222 DNS Server
<N> reboot        - false          Reboot is required for changes
-----

```

Figure 4.8: Text-based menu displayed when connecting over USB

A simple text based menu system like the one in figure 4.8 should now be displayed. The actual menu displayed may appear different depending on the software version and license. To change a setting, press the appropriate character from the left-most column, enter the new value and confirm by pressing . If DHCP is enabled, you can find the currently assigned IP address by selecting the **ethStatusDoc** option.

The 10G Probe is equipped with two network interfaces called management (or eth1) and data/video SFP+ B (or eth0). It is necessary to configure at least one of these interfaces from the terminal and then do the rest of the setup from a web browser. Depending on the installed license, an additional data interface, labeled data2 (eth2), may also be available.

The 10G Probe supports both in-band management (i.e. using eth0 for both data/video and management) and separate management (i.e. using eth1 for management). In any case make sure that the subnets configured for the network interfaces do not overlap – otherwise the probe will not work properly. If the IP addresses for network interfaces are configured so that the subnets overlap, the settings will be automatically reverted by the 10G Probe.

To configure the management interface, edit values for ipaddress, netmask and mm\_gateway or enable dhcp instead.

Make sure *Management* is enabled (set to true) – otherwise management via web will not be possible.

To configure the data/video interface, enter values for `data_ipa`, `data_mask`, `data_gateway` or alternatively enable `data_dhcp`. Set `data_management` to true to enable web access via the data interface.

When all the listed parameters have been configured, the probe must be rebooted to let the parameters take effect. This is achieved by selecting the **reboot** option and confirming by selecting ‘t’ for TRUE.

### 4.8.3 Verifying Correct Initial Setup of the 10G Probe

Once the probe management network interface have been configured, all further configuration takes place using a web browser over HTTP.

Launch a web browser application on the management PC. The following web browsers are supported:

- Google Chrome
- Mozilla Firefox
- Microsoft Edge
- Apple Safari

Type the IP address of the probe in the browser URL field and press . The IP address of the probe is that of the eth0 or eth1 port (the one used for management) as set in the initial set-up procedure.

The default management view should be displayed inside the browser. This could look similar to figure 4.9, depending on the options installed.

### 4.8.4 Initial Setup Troubleshooting

If there are problems bringing up the probe web-based management interface, verify the following:

- Verify that the laptop and the probe are configured on the same subnet and that they have different addresses. The network settings of the probe can be verified through RS232/USB as described earlier
- Make sure that the IP address of the gateway and the network interface are not the same
- Verify that the appropriate Ethernet link indicators of the PC and probe are lit
- Verify that web browser proxy settings are not interfering
- Verify that local firewall settings on the laptop are not interfering

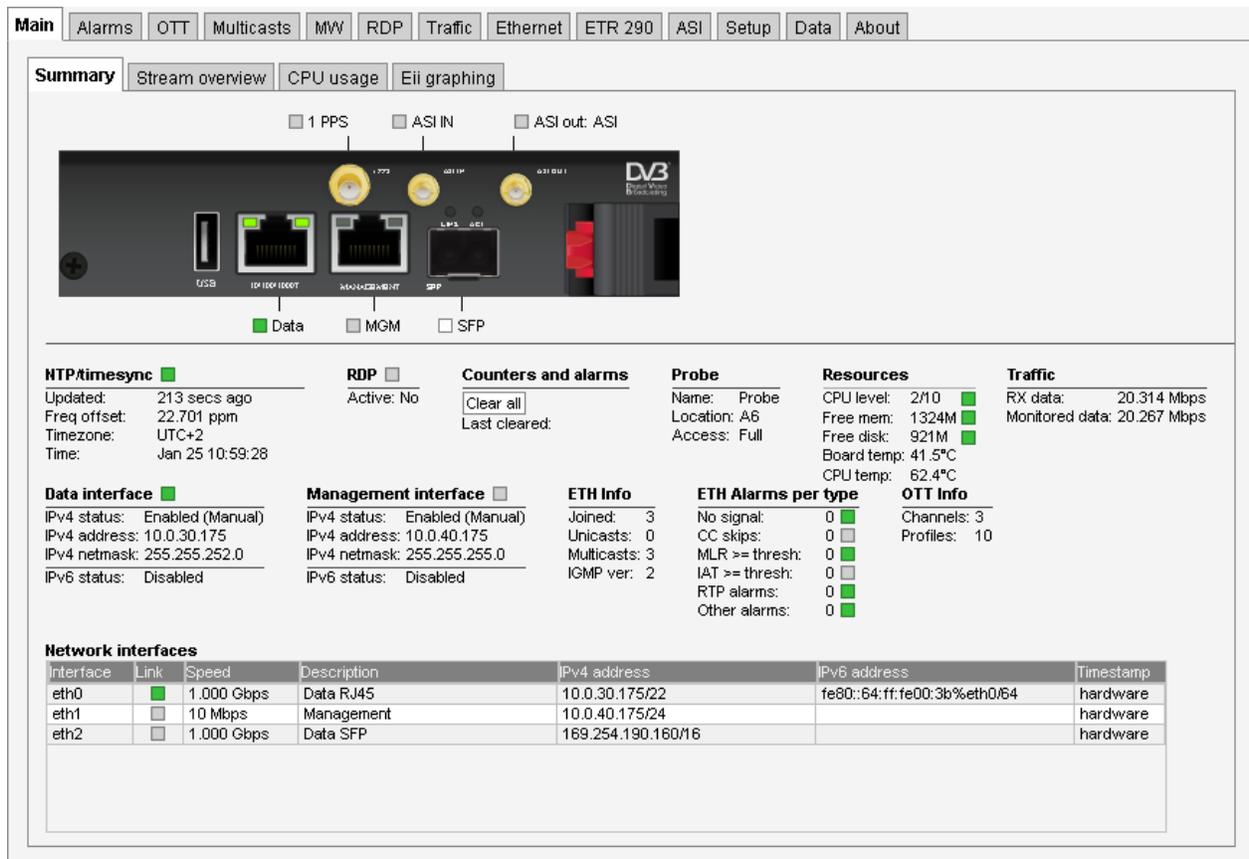


Figure 4.9: Web-based management view

- Make sure that the management and data/video subnets do not overlap (even if only one is physically connected)
- Make sure the probe was rebooted to activate the new settings
- Clear the browser's cache

## 5 QUICK SETUP GUIDE

This quick setup guide is intended to provide a step-by-step explanation of how to setup a probe once the initial setup has been performed (as described in chapter 4).

More detailed instructions are found in chapter 6 of this manual.

The Return Data Path and Full Service Monitoring features are not covered by this quick setup guide.

### 5.1 Basic Setup

1. Set appropriate parameters in the **Setup — Params** and **Setup — Ethernet** views.
2. Enabling Time synchronization is strongly recommended, this can be done in **Setup — Params**. If no time reference for automatic time locking is available set the time manually in the **Setup — Time** view.
3. If access control is required, first log in as the **admin** user using the **Setup — Login** view, and then define users and password and configure firewall settings in the **Setup — Security** view.

**Note:** it is important to read the instructions in the associated section of this manual, see chapters 6.12.7 and 6.12.12.

### 5.2 Input Signal Definitions

#### 5.2.1 Multicasts

1. Define multicasts using the **Multicasts — Streams** view. You can also import multicast lists from another probe using the **Data — Configuration** view, or add them automatically, either by using the multicast detect feature in the **Multicasts — Detect** view, or from SAP announced streams using the **Multicasts — SAP** view.

**Note:** Often upstream equipment will not transmit multicasts unless join messages have been received, and in this case it will usually not be possible to detect multicasts automatically.

Select predefined threshold templates that seem appropriate for the signal.

**Note:** The sequence of the multicast definitions will be reflected in monitoring, so order the multicasts correctly if required. Also note that ETR 290 monitoring for Ethernet streams is disabled by default, so if this is required, it will have to be enabled by the user (on a per-stream basis).

2. Define stream page name(s) in the **Setup — Pages** view (not strictly necessary).
3. Join multicasts in the **Multicasts — Join** view or in the **Multicasts — Streams** view.

## 5.2.2 OTT Input (OTT Engine Option Only)

1. Define the OTT channel manifest URLs and channel names in the **OTT — Channels** view. Leave the Threshold and VBC threshold settings at default values for now. Remember to tick the Enable box in the dialog box. If you have multiple OTT engines installed (1 to 50 are allowed) then select which engine to assign to the channel. Any number of OTT channels can be assigned to each OTT engine. Each engine works in parallel to each other.

**Note:** When monitoring both multicast (UDP) and OTT (TCP) traffic, we recommend using different network interfaces. Mixing the two traffic types on the same network can have unwanted impact on the monitored signals. The interface used for OTT traffic is controlled using the **Setup — Routing** view.

2. Inspect the OTT monitoring progress using the **OTT — Active testing** dialog. Useful information on OTT monitoring can be found in Appendix C.

## 5.3 Monitoring

When input signal parameters have been set, the signals may be monitored.

For Ethernet multicasts the relevant monitoring views are **Main**, **Alarms**, **Multicasts**, **MW**, **Traffic** and **Ethernet**. If the probe is equipped with the ETR 290 and/or the OTT option then the views **ETR 290** and **OTT** are of relevance as well.

Ethernet monitoring hints are found in B Appendix: Monitoring Practices.

## 5.4 Adjusting Alarm Thresholds

When the probe inputs and streams have been defined using default thresholds, the result will usually be a number of more or less permanent alarms, some which may not be relevant under the current circumstances. In order for the user to get rid of unwanted alarms, the probe provides alarm filtering functionality in the form of alarm thresholds and alarm on/off selection.

### Multicasts

By default Ethernet thresholds are set to raise alarms when service affecting errors occur, that are caused by the network. There may however be reasons for these thresholds to be altered, for instance to reflect receiver robustness in the case of IAT, or to reflect a TS into IP mapping different from the default (7TS/UDP). Creating a new threshold template is done either by copying an existing one and altering the copy, or by creating a new threshold template from scratch. The Ethernet thresholds are defined in the **Multicasts — Ethernet thresh.** view. These thresholds are associated with streams in the **Multicasts — Streams** view.

In addition to the miscellaneous thresholds, that affect only the streams with which they are associated, the **Alarm — Alarm setup** view allows the user to enable and disable alarms on an overall basis. You can also define the alarm severity levels for different alarms in this view.

## OTT

When an OTT channel is defined the default OTT threshold template is assigned to it. To change threshold values create one or more new templates in the **OTT — Thresholds** view and assign them to OTT channels in the **OTT — Channels — Edit** view.

## ETR 290

By default the streams configured in the probe will be set up to use the ETR 290 threshold named **Default**. This has the most important alarms enabled but have been adjusted to match real world systems and only alarm on more severe problems. The threshold named **ETSI TR 101 290** is based on the ETSI TR 101 290 guidelines and are fairly strict generating more alarms. The ETR 290 thresholds should be changed if there are tables that are not relevant for a system, or if the user requires alarm functionality that exceeds the ETR 290 guidelines. The ETR engines has a lot of powerful functionality not enabled by default, for instance the ability to raise alarms if the number of services present in a signal is lower than a preset limit.

The default PID and service thresholds do not affect alarming at all, they are completely transparent. The thresholds may be altered for instance in order to mask an alarm generated by an unreferenced PID or to ensure an alarm is raised if a service or PID bitrate is outside preset limits.

Creating a new threshold template is done either by copying an existing one and altering the copy, or by creating a new threshold template from scratch. The thresholds are defined in these views: **ETR 290 — ETR thresh.**, **ETR 290 — PID thresh.**, **ETR 290 — Service thresh.**

The thresholds are associated with streams in the **Multicasts — Streams — Edit** view.



- Google Chrome
- Mozilla Firefox
- Microsoft Edge
- Apple Safari

Note that different web browsers behave differently with respect to memory leaking, and if the VB330 GUI should be available at all times the browser should be selected carefully. A browser memory leak manifests itself as the browser responding more and more slowly, and this is corrected by closing down the application and restarting.

The interface is easy and intuitive to use. Navigate by clicking on the tabs just below the 10G Probe logo. Some of the pages have their own tabs for accessing nested pages. The bottom frame of the interface is always the Alarms & events list, usually referred to as the **alarm list**. The alarm list is by default hidden, and can be displayed and hidden again by clicking the **Toggle** link, which is displayed as an arrow head.

The web interface has been designed to be resizable in both vertical and horizontal directions with a minimum screen resolution of 1280×800 pixels.

Tool-tips are available for most buttons and labels. To access tool-tip information simply navigate the mouse pointer towards a button or a label and leave it hovering for a second or two.

In this manual the term stream is generally used instead of the terms multicast and/or unicast. A stream may thus contain a single service or multiple services.

## 6.1 Main

### 6.1.1 Main — Summary

Interface	Link	Speed	Description	IPv4 address	IPv6 address	Timestamp
eth0	<input checked="" type="checkbox"/>	1 Gbps	Data RJ45	10.0.30.172/22		hardware
eth1	<input type="checkbox"/>	10 Mbps	Management	30.30.30.30/22		hardware
eth2	<input type="checkbox"/>	1 Gbps	Data SFP	10.0.50.198/24		hardware

The intention of this page, together with the **alarm list**, is to provide enough information for the operator to immediately see if there is anything seriously wrong with one or more input streams.

At the very top, a graphic is displayed representing the front panel of the probe, indicating the status of the different inputs. If an Enhanced Chassis is installed, there will also be an LED to the right of the card slots. This LED signals the status of the chassis, and is described in **Main — Chassis**.

Below this display, the following parameters are shown:

#### *NTP/timesync*

**(Bulb):** The NTP/timesync bulb indicates whether the VB330 clock is locked to an external time reference signal. Green indicates that the VB330 is locked to an external reference whereas grey indicates that the VB330 runs in unlocked mode.

**Updated:** The time since the last time synchronization update.

**Freq offset:** Indicates the measured frequency offset for the system clock.

**Timezone:** The time zone as selected by the operator in the **Setup — Params** view.

**Time:** The current local time (configured in the **Setup — Params** or **Setup — Time** view).

---

### *RDP*

---

**(Bulb):** The RDP bulb indicates whether RDP is active or not. Green indicates RDP active whereas grey indicates that RDP is currently not active.

**Active:** The RDP active state is either *yes* or *no*, *yes* indicating that RDP relaying or alarm triggered recording mode has been selected by the operator in the **RDP** view.

---

---

### *Counters and alarms*

---

**Clear all:** Click the **Clear all** button to reset all counters, graphs and alarms. All VB330 measurement and alarm history is cleared. Note that it is not possible to undo this operation.

**Last cleared:** The time the **Clear all** button was last clicked. If no time is indicated the counters have not been cleared since VB330 startup/reboot time.

---

---

### *Probe*

---

**Name:** The VB330 name as defined by the operator in the **Setup — Params** view.

**Location:** The VB330 location as defined by the operator in the **Setup — Params** view.

**Access:** The access rights of the current user. Access rights are either full access or read only access, and are defined by the operator in the **Setup — Security** view.

---

---

### *Resources*

---

**CPU level:** The CPU level indicates the workload of the probe, on a scale from 1 to 10 of total capacity.

**Free mem:** The available free memory.

**Free disk:** The available free probe disk space.

**Board temp:** The temperature of the probe motherboard.

**CPU temp:** The temperature of the probe CPU.

---

The probe employs a memory-based disk, which means that the amount of available free memory decreases as more files (such as recordings, thumbnails, PCAPs, etc.) are stored.

---

### *Traffic*

---

**RX data:** The total bitrate of received data traffic

**Monitored data:** The total bitrate of multicasts and unicasts monitored (analyzed) by the probe

---

---

### *Data interface*

---

<b>(Bulb):</b>	The bulb indicates whether the data interface is connected and active or not.
<b>IPv4 status:</b>	The IPv4 status as defined in the <b>Setup — Ethernet</b> view
<b>IPv4 address:</b>	The probe IPv4 Ethernet data/video interface IP address as defined by the user in the <b>Setup — Ethernet</b> view
<b>IPv4 netmask:</b>	The probe IPv4 Ethernet data/video interface IP address as defined by the user in the <b>Setup — Ethernet</b> view

---

### *Management interface*

---

<b>(Bulb):</b>	The bulb indicates whether the management interface is connected and active or not.
<b>IPv4 status:</b>	The IPv4 status as defined in the <b>Setup — Ethernet</b> view
<b>IPv4 address:</b>	The probe IPv4 Ethernet data/video interface IP address as defined by the user in the <b>Setup — Ethernet</b> view
<b>IPv4 netmask:</b>	The probe IPv4 Ethernet data/video interface IP address as defined by the user in the <b>Setup — Ethernet</b> view

---

### *ETH info*

---

<b>Joined:</b>	The number of joined streams (multicasts and unicasts)
<b>Unicasts:</b>	The number of unicasts currently being joined/monitored by the probe
<b>Multicasts:</b>	The number of multicasts currently being joined/monitored by the probe
<b>IGMP ver:</b>	The IGMP version currently used by the probe. IGMPv2 is used unless the operator has enabled IGMPv3 in the <b>Setup — Params</b> view.

---

### *ETH alarms per type*

---

<b>No signal:</b>	The number of currently active Ethernet ‘No signal’ alarms
<b>CC skips:</b>	The number of currently active Ethernet ‘CC skips’ alarms
<b>MLR&gt;=thresh:</b>	The number of currently active Ethernet MLR alarms, i.e. the total number of ‘MLR>= warning-threshold’ and ‘MLR>= alarm-threshold’ alarms
<b>IAT&gt;=thresh:</b>	The number of currently active Ethernet IAT alarms, i.e. the total number of ‘IAT>= warning-threshold’ and ‘IAT>= alarm-threshold’ alarms
<b>RTP alarms:</b>	The number of currently active RTP alarms, i.e. the total number of ‘RTP packet drop’, ‘RTP duplicates’ and ‘RTP out of order’ alarms
<b>Other alarms:</b>	The total number of currently active Ethernet alarms not included in the alarm figures specified above

---

---

### *OTT info*

---

**Channels:** The number of enabled OTT channels.

**Profiles:** The total number of profiles in the enabled OTT channels.

---

At the very bottom of the Summary page, an overview of the Ethernet network interfaces on the VB330 are displayed.

---

### *Network interfaces*

---

**Interface:** The ID of the selected network interface.

**Link:** Indicates whether the interface is connected.

**Speed:** Shows the current bitrate for the interface.

**Description:** Provides a human-readable description of the interface, if available.

**IPv4 address:** Lists the IPv4 address and netmask of the network interface, if set.

**IPv6 address:** Lists the IPv6 address and netmask of the network interface, if set.

**Timestamp:** Indicates whether the network interface supports hardware timestamping for precise measurements, or if kernel timestamping is used.

---

## 6.1.2 Main — Stream overview

The **Stream overview** offers an easy way to get an overview of the status of a single channel by collecting the relevant information views from various parts of the probe and displaying them all in one place. This page is opened when clicking a channel alarm in any of the alarm list. When using the probe in conjunction with a the VideoBRIDGE Controller, this page is also displayed when clicking on a stream mentioned in the VBC user interface.

Use the **Select stream** drop-down to select a stream to display. By entering a stream name in the **Filter** box, only streams matching this filter will be show in the drop-down.

The list of active alarms for the selected channel is displayed on top, followed by different information depending on the kind of the stream selected. Please refer to the **Multicasts**, **ETR 290** and **OTT** chapters for detailed documentation on the various information views.

### 6.1.3 Main — CPU usage

Summary   Stream overview   <b>CPU usage</b>   Eii graphing													
CPU usage per core													
CPU	System	Low pri	User	Idle	Cur streams	Cur system	Cur low pri	Cur user	Cur idle	Backlog	Peak backlog	Backlog mem	Current task
1	28%	0%	0%	71%	306					0 s	0 s	0 MB	
2	29%	0%	0%	70%	306					0 s	0 s	0 MB	
3	27%	0%	0%	72%	297					0 s	0 s	0 MB	
4	27%	0%	0%	72%	297					0 s	0 s	0 MB	
5	27%	0%	0%	72%	297					0 s	0 s	0 MB	
6	28%	0%	0%	71%	297					0 s	0 s	0 MB	
7	0%	0%	65%	33%	0								btana/6
8	5%	7%	65%	22%	0					0 s	3.7 s	0 MB	ewe

The **CPU usage** view is meant for troubleshooting performance issues in case of excessively high traffic load.


Three internal performance indicators (System, User and Idle) are displayed as percentage numbers and also graphed for the last minute. Issues can potentially arise if the System indicator becomes high (>80%).

The **CPU usage** view displays CPU usage of the 10G Probe’s eight cores. To view the CPU usage averaged over the last 10 seconds click the **Current** button. To view the usage averaged over the last 60 seconds click the **Last 60 seconds** button. Clicking the **Peak any 10 secs** or **Peak any 60 seconds** button will display the historical maximum value for an averaging period of 10 s and 60 s respectively. To clear peak values click the **Clear peaks** button. Click the **Advanced** button to open the **Advanced CPU settings** view.

The length of the queues for multicast video analysis are displayed in the **Backlog** column, with the highest recorded value in the **Peak backlog** column. If these values keep growing, the probe is not able to keep up with the amount of data it has been set to monitor, and will eventually start dropping data to catch up again. Please refer to appendix B.5 for more details. Additionally, the currently running process (at the time of update) on each CPU core is displayed in the **Current task** column.

CPU capacity is automatically allocated by the probe, and core 8 always handles ‘User’ processes, like the web server and thumbnail extraction.

### 6.1.3.1 Advanced CPU settings

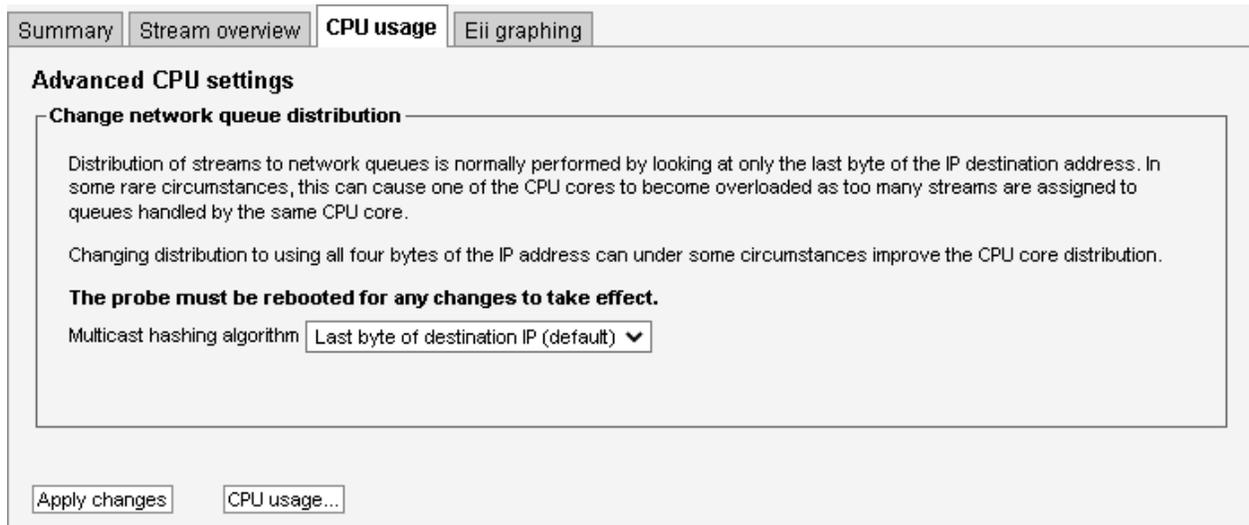


The **Advanced CPU settings** view can be opened by clicking the **Advanced** button in the **Main — CPU usage** view, and is meant for manually overriding the automatic CPU allocation settings.

During normal operation, incoming network streams are allocated automatically to different CPU cores. The default distribution algorithm uses only the last byte of the IP destination address, and in some rare circumstances, this can cause one or more of the CPU cores to have too many streams assigned to the queues handled by these CPU cores.

By changing the **Multicast hashing algorithm**, you can change the way the streams are distributed. After you have clicked **Apply changes**, you must reboot the VB330 for the changes to take effect.

Click the **CPU usage** button to return to the **Main — CPU usage** view.

### 6.1.4 Main — Chassis

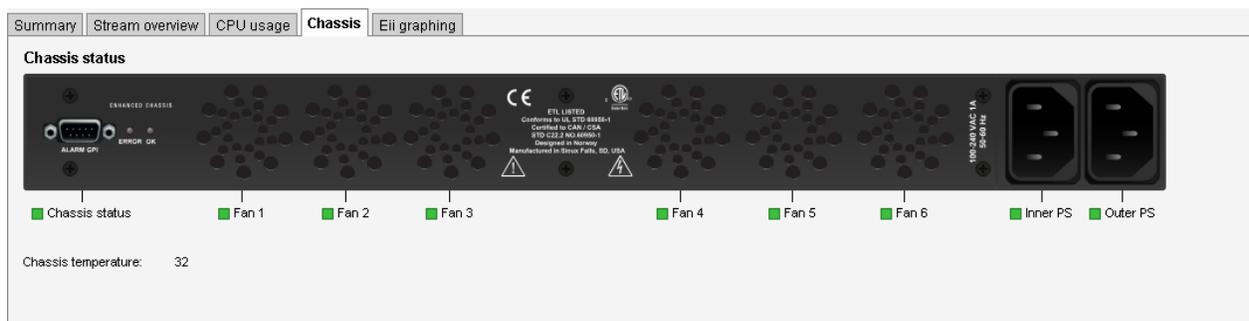

The **Chassis** view offers an easy way to survey the status of the chassis, and is present on hardware probes in an Enhanced Chassis, see section **The Enhanced Chassis (VB300)**. Here a graphic is displayed representing the back panel of the probe. In addition, the temperature inside the chassis is presented, in degrees Celsius, under the graphic. The **Chassis**-bulb in the **Main — Summary** view, displays the same status as **Chassis status**.

The bulbs displayed in this view give the following information:


### *Chassis*

- Chassis status:** Signals if there are any critical faults in the chassis. A red bulb indicates that one or more of the following conditions are true:
- Chassis temperature is above 85 °C.
  - 3 or more fans have failed.
  - One of the power supplies is disconnected or has failed.

**Fan 1–6:** Signals the status of the fans. On fan failure, the respective bulb turns yellow. If 3 or more fans have failed, an alarm is raised and the respective bulbs turn red. If more than 4 fans have failed the error is critical, and must be attended to in order to avoid damage. Please contact Sencore to have the chassis serviced.

**Inner/Outer PS:** Signals the status of the power supplies. Inner/outer describes the physical position of the power connectors. The bulbs turn red if no power is detected from the respective power supply.

## 6.1.5 Main — Eii graphing

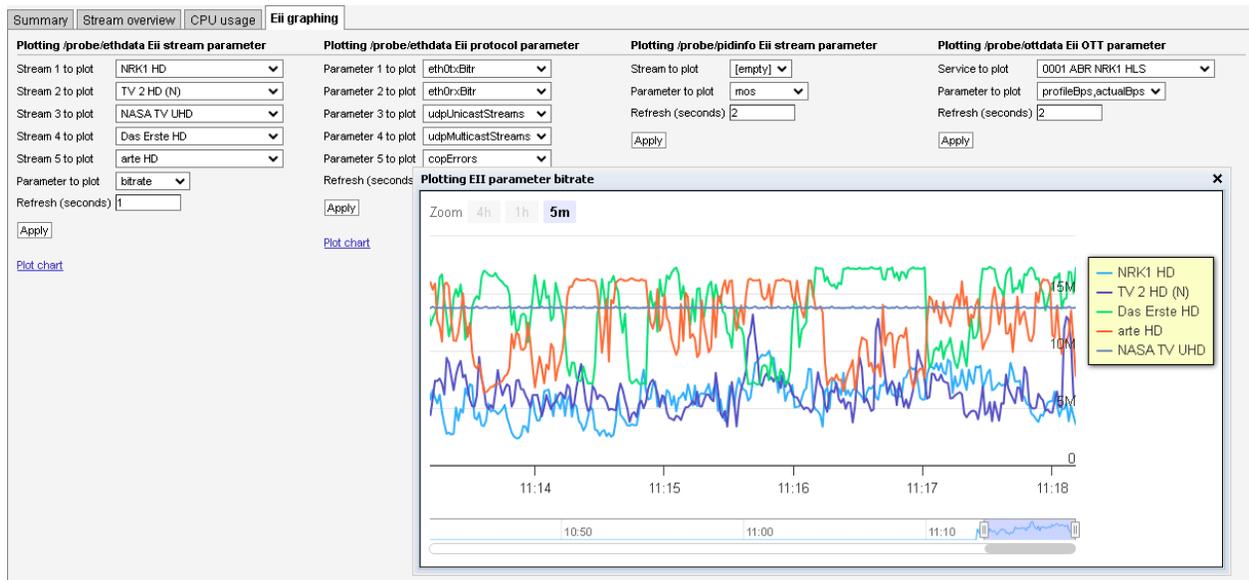

Eii is short for External Integration Interface and constitutes a set of XML files accessible through the VB330 web server interface for machine access to measurement data.

Portions of the Eii interface are available in this view for simple trend graphing over arbitrary long time by the web browser.

The screenshot shows the bandwidth of two IP streams being graphed by sampling the Eii interface every 2 seconds. The graph is stored in the client web browser for as long as the graph window

remains open. The graph starts again with zero history if the window is closed and then opened again.

### Eii stream parameter

Using the **Eii stream parameter** plot, it is possible to plot parameters from up to five IP streams. Select the streams in the **Stream N to plot** (where N is 1 through to 5) drop-downs and the parameter in the **Parameter to plot** drop-down.

<i>Eii stream parameters</i>	
<b>bitrate:</b>	Bitrate (bits per second)
<b>rtp_drops:</b>	Number of dropped IP frames due to network errors
<b>iat_avg:</b>	Average Inter-Arrival Time
<b>cc_errs:</b>	The number of discontinuities detected

**Refresh (seconds)** selects how often samples are read and plotted on the graph. Click **Apply** to store the parameters and then click the **Plot chart** link to open the chart.

### Eii protocol parameter

Using the **Eii protocol parameter** plot, it is possible to plot up to five network interface parameters. Select the parameters in the **Parameter N to plot** (where N is 1 through to 5) drop-downs.

<i>Eii protocol parameters</i>	
<b>vlanTaggedPerc:</b>	Percentage of frames being VLAN tagged
<b>ipFragPerc:</b>	Percentage of frames being IP fragmented
<b>eth0txBitr:</b>	Total TX bitrate including units on first data interface
<b>eth0rxBitr:</b>	Total RX bitrate including units on first data interface
<b>udpUnicastBitr:</b>	Bitrate of the unicast traffic
<b>udpMulticastBitr:</b>	Bitrate of the multicast traffic
<b>udpUnicastStreams:</b>	Number of UDP unicast streams present
<b>udpMulticastStreams:</b>	Number of UDP multicast streams present
<b>copPayloadBitr:</b>	Bitrate of FEC protected payload
<b>copFec1Bitr:</b>	Bitrate of the FEC columns
<b>copFec2Bitr:</b>	Bitrate of the FEC rows
<b>copCorrected:</b>	IP packets correctable by the FEC
<b>copUncorrected:</b>	IP packets not correctable by the FEC
<b>copErrors:</b>	FEC packets with errors

**Refresh (seconds)** selects how often samples are read and plotted on the graph. Click **Apply** to store the parameters and then click the **Plot chart** link to open the chart.

### Eii OTT parameter

Using the **Eii OTT parameter** plot, it is possible to plot analysis parameters from any of the monitored OTT channel. Select the channel in the **Service to plot** drop-down and the parameter in the **Parameter to plot** drop-down.

---

*Eii OTT parameters*

---

<b>profileBps,actualBps:</b>	Plots both the <b>profileBps</b> and <b>actualBps</b> parameters
<b>profileBps:</b>	Bitrate of this profile as listed in meta-data (bits per second)
<b>actualBps:</b>	Bitrate of this profile calculated from downloaded segment (bits per second)
<b>chunkDur:</b>	Last segment length (seconds)
<b>firstByte:</b>	Time to first byte (milliseconds)
<b>downloadDur:</b>	Time to download segment (seconds)
<b>chunkSize:</b>	Size of downloaded segment (bytes)

---

**Refresh (seconds)** selects how often samples are read and plotted on the graph. Click **Apply** to store the parameters and then click the **Plot chart** link to open the chart.

Please refer to the separate Eii documentation for further details.

## 6.2 Alarms

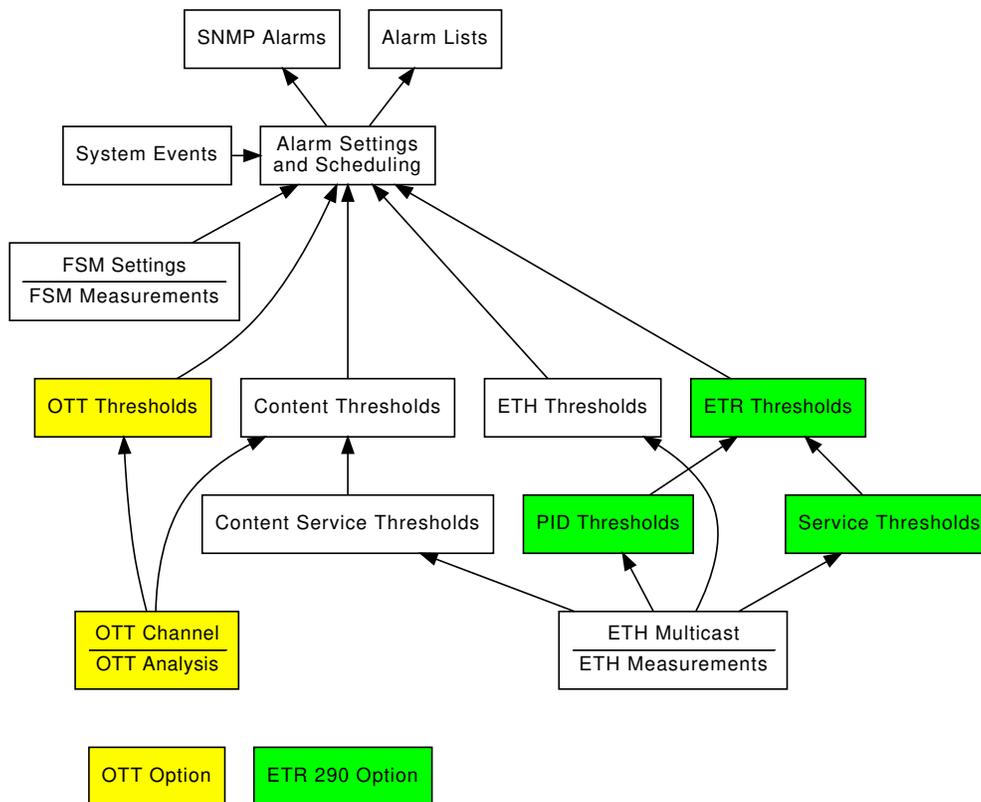


Figure 6.1: Alarm handling in the 10G Probe.

Figure 6.1 shows an overview of the alarm handling in the 10G Probe. It is useful to obtain an understanding of the alarm processing of the 10G Probe – in particular how threshold settings and alarm setup will affect alarm handling.

The 10G Probe continuously compares measurement data with user defined thresholds in order to generate alarms. These alarms are further checked against the settings defined in the **Alarms — Alarm setup** view, and the resulting alarms are presented in the alarm lists. If configured to do so, these alarms will also be sent as SNMP traps to support third party management systems. Refer to Appendix: VB330 Versus VBC Alarms for a description of alarm handling in the VideoBRIDGE Controller.

The 10G Probe distinguishes between events and alarms. The ETR software module will always generate alarms and the Systems software module will always generate events. The Ethernet software module will by default generate events for errors that are resolved within 1 second, otherwise it will generate alarms. This can be overridden by checking the ‘Treat Ethernet events as alarms’ box in the **Setup — Params** view. The OTT module generates alarms only.

## 6.2.1 Alarms — All Alarms

Main							Alarms	OTT	Multicasts	MVV	RDP	Traffic	Ethernet	ETR 290	Content	Record	Setup	Data	About	
All alarms							Ethernet alarms	FSM & MBR alarms	OTT alarms	Content alarms	ETR alarms	System alarms	Event log	Alarm setup	Flash alarms					
#	Status	Col	Time	Type	Stream	Description														
1	Active	■	Mar 25 11:23:07	ETR	<a href="#">IPTV: arte HD</a>	Pid 18 EIT: Event Information Table error														
2	Active	■	Mar 25 11:22:23	ETR	<a href="#">IPTV: arte HD</a>	Service 10302 arte HD: Pid 5115 Subtitling: Presentation Time Stamp error														
3	Active	■	Mar 25 11:22:06	ETR	<a href="#">IPTV: arte HD</a>	Service 10302 arte HD: Pid 5198 Subtitling: Presentation Time Stamp error														
4	Active	■	Mar 25 11:22:06	ETR	<a href="#">IPTV: arte HD</a>	Service 10302 arte HD: Pid 5118 Subtitling: Presentation Time Stamp error														
5	Active	■	Mar 25 11:22:00	ETR	<a href="#">IPTV: ZDF HD</a>	Service 11110 ZDF HD: Pid 6132 Private data: Presentation Time Stamp error														
6	Active	■	Mar 25 11:21:22	ETR	<a href="#">IPTV: MDR Sachsen HD</a>	Service 10352 MDR Sachsen HD: Pid 5335 Subtitling: Presentation Time Stamp error														
7	Active	■	Mar 25 11:19:57	ETR	<a href="#">IPTV: ZDF HD</a>	Service 11110 ZDF HD: Pid 6131 Subtitling: Presentation Time Stamp error														
8	Active	■	Mar 25 11:18:22	ETR	<a href="#">IPTV: BBC World News Europe HD</a>	Pid 18 EIT: Event Information Table error														
9	Active	■	Mar 25 11:12:44	ETR	<a href="#">IPTV: Das Erste HD</a>	Service 10301 Das Erste HD: Pid 5105 Subtitling: Presentation Time Stamp error														
10	Active	■	Mar 25 11:11:49	ETR	<a href="#">IPTV: DELUXE MUSIC</a>	Service 65 DELUXE MUSIC: Pid 60 SCTE 35: PID is missing														
11	Active	■	Mar 25 11:08:13	ETR	<a href="#">IPTV: Comedy Central Austria</a>	Pid 18 EIT: Event Information Table error														
12	Active	■	Mar 25 11:01:56	ETR	<a href="#">IPTV: KIK A HD</a>	Service 11160 KIK A HD: Pid 6631 Subtitling: Presentation Time Stamp error														
13	Active	■	Mar 25 10:48:05	ETR	<a href="#">IPTV: ZDF HD</a>	Pid 18 EIT: Event Information Table error														
14	Active	■	Mar 25 10:30:13	ETR	<a href="#">IPTV: KIK A HD</a>	Pid 18 EIT: Event Information Table error														
15	Active	■	Mar 25 09:42:10	CNT	Cam:Cam	Freeze-frame detected (since Mar 25 09:40:09)														
16	Active	■	Mar 24 19:29:50	ETR	<a href="#">IPTV: MDR Sachsen HD</a>	Service 10352 MDR Sachsen HD: Pid 5331 H264 Video: Program Clock Reference accuracy error														
17	Active	■	Mar 24 04:06:08	ETR	<a href="#">IPTV: BBC Earth HD</a>	Service 7190 HISTORY 2 HD: Pid 1317 H264 Video: Program Clock Reference accuracy error														
18	Active	■	Mar 24 03:53:27	OTT	<a href="#">0036.ABR Disney_SS</a>	Lagging behind (lost segments between 2911783718458666 and 2911783872058666) since last round														
19	Active	■	Mar 24 00:00:50	SYS		Auto deletion of recordings imminent. Less than 4GB usable disk														
20	Active	■	Mar 23 22:18:20	ETR	<a href="#">IPTV: HyperDeck</a>	Pid 16: Network Information Table error														
21	Active	■	Mar 23 22:18:20	ETR	<a href="#">IPTV: Cam</a>	Pid 16: Network Information Table error														
22	Active	■	Mar 23 22:18:20	ETR	<a href="#">IPTV: TLC Sverige HD</a>	Pid 16: Network Information Table error														
23	Active	■	Mar 23 22:18:20	ETR	<a href="#">IPTV: Animal Planet HD</a>	Pid 16: Network Information Table error														
24	Active	■	Mar 23 22:18:20	ETR	<a href="#">IPTV: Eurosport 1 HD (N)</a>	Pid 16: Network Information Table error														
25	Active	■	Mar 23 22:18:20	ETR	<a href="#">IPTV: TV 2 Sport 2 HD</a>	Pid 16: Network Information Table error														
26	Active	■	Mar 23 22:18:20	ETR	<a href="#">IPTV: BBC Earth HD</a>	Pid 16: Network Information Table error														
27	Active	■	Mar 23 22:18:20	ETR	<a href="#">IPTV: HISTORY HD</a>	Pid 16: Network Information Table error														
28	Active	■	Mar 23 22:18:20	ETR	<a href="#">IPTV: Nat Geo HD (N)</a>	Pid 16: Network Information Table error														
29	Active	■	Mar 23 22:18:20	ETR	<a href="#">IPTV: Discovery HD (N)</a>	Pid 16: Network Information Table error														
30	Active	■	Mar 23 22:18:20	ETR	<a href="#">IPTV: TLC Norge HD</a>	Pid 16: Network Information Table error														

Recent items: 30

The **Alarms** view gives the user the possibility of viewing alarms according to type or as one combined list. The individual alarm lists can hold the number alarms indicated below independently of each other, meaning that one may become full without affecting the other lists.

### *Alarm list capacity*

<b>Ethernet alarms (ETH)</b>	10000 alarms
<b>Full Service Monitoring and Microbitrate (FSM)</b>	100 alarms
<b>Over The Top Television (OTT)</b>	2500 alarms
<b>ETSI TR 101 290 Analysis (ETR)</b>	10000 alarms
<b>Content (CNT)</b>	2500 alarms
<b>System alarms (SYS)</b>	2500 alarms
<b>Event log (LOG)</b>	2500 events

If **Auto-refresh list** is selected, the alarm list will be continuously updated with new alarms. Active alarms are always located at the top of the list.


Clicking the **View list offline** button gives the user the opportunity to view the complete alarms and events list. By clicking one of the blue information icons leftmost in the offline list, a detailed alarm description can be viewed. The search field in the upper right corner of the view allows the user

to type a text string and the alarm list is updated to display only streams and alarms matching the specified text. To update the offline alarm list click the **Auto-refresh list** button and then go back to the offline mode.

Clicking the blue link text of any alarm in the alarm list opens the **Main — Stream overview** for the channel in the alarm. The alarm lists can be deleted by clicking the **Flush alarms** button. However it should be noted that this action will permanently clear the alarm lists — they cannot be restored.

The **Export** button enables export of the corresponding alarm list as an XML file. This file will open in a new window.

## 6.2.2 Alarms — Alarm setup

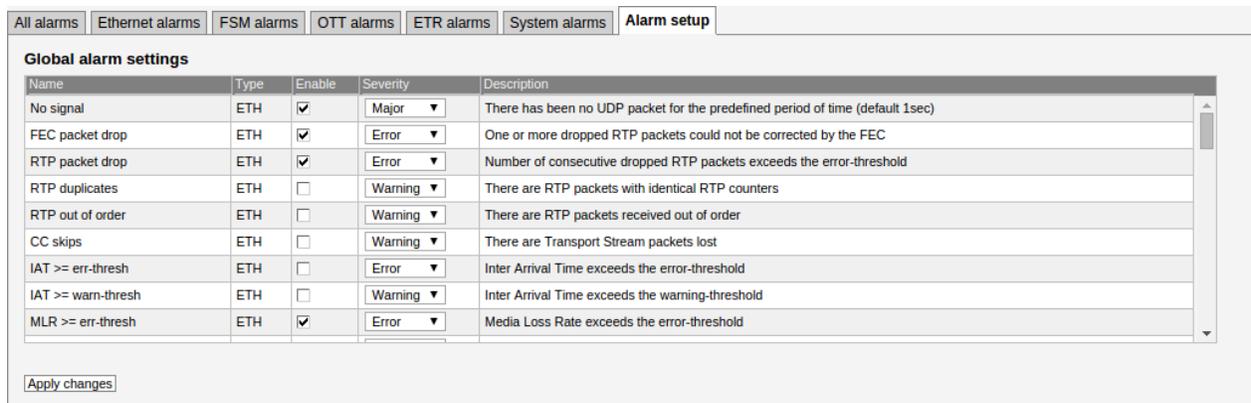

The screenshot shows the 'Alarm setup' tab in a web interface. It features a 'Global alarm settings' section with a table of alarm configurations. The table has columns for Name, Type, Enable, Severity, and Description. Below the table is an 'Apply changes' button.

Name	Type	Enable	Severity	Description
No signal	ETH	<input checked="" type="checkbox"/>	Major	There has been no UDP packet for the predefined period of time (default 1sec)
FEC packet drop	ETH	<input checked="" type="checkbox"/>	Error	One or more dropped RTP packets could not be corrected by the FEC
RTP packet drop	ETH	<input checked="" type="checkbox"/>	Error	Number of consecutive dropped RTP packets exceeds the error-threshold
RTP duplicates	ETH	<input type="checkbox"/>	Warning	There are RTP packets with identical RTP counters
RTP out of order	ETH	<input type="checkbox"/>	Warning	There are RTP packets received out of order
CC skips	ETH	<input type="checkbox"/>	Warning	There are Transport Stream packets lost
IAT >= err-thresh	ETH	<input type="checkbox"/>	Error	Inter Arrival Time exceeds the error-threshold
IAT >= warn-thresh	ETH	<input type="checkbox"/>	Warning	Inter Arrival Time exceeds the warning-threshold
MLR >= err-thresh	ETH	<input checked="" type="checkbox"/>	Error	Media Loss Rate exceeds the error-threshold

Apply changes

The **Alarm setup** represents the final filtering stage for VB330 alarms. The user selects whether an alarm should be enabled or ignored, and associates an error severity level with each alarm. When changes have been made to alarm settings click the **Apply changes** button for changes to take effect.

Figure 6.1 gives an overview of the total alarm handling of a 10G Probe. The settings in the **Alarm setup** view are represented by the **Alarm Settings** box in this figure.

Note that the probe alarm handling will also depend on the threshold template settings defined by the user in the **Multicasts — Ethernet thresh.**, **ETR 290 — ETR thresh.**, **ETR 290 — PID thresh.**, **ETR 290 — Service thresh.**, and **OTT — Thresholds** views.

Also note that only enabled alarms are shown in the alarm lists and forwarded as SNMP traps. Enabling or disabling 10G Probe alarms does however not affect the alarms presented by the VBC. Refer to Appendix: VB330 Versus VBC Alarms for a description of the VB330 versus VBC alarm handling.

The following alarm severity levels may be selected:

<b>OK:</b>	If enabled, the alarm will be present in the alarm list, color green
<b>Warning:</b>	If enabled, the alarm will be present in the alarm list, color yellow
<b>Error:</b>	If enabled, the alarm will be present in the alarm list, color orange

---

**Major:** If enabled, the alarm will be present in the alarm list, color red

---

**Fatal:** If enabled, the alarm will be present in the alarm list, color black

---

The following alarms and events are configured:

---

***ETH (Ethernet) alarms***

---

<b>No signal:</b>	There has been no UDP packet for the predefined period of time (default 1sec)	Default: Enabled, severity Major
<b>RTP packet drop:</b>	Number of consecutive dropped RTP packets exceeds the error-thresholds – only available if RTP headers are present	Default: Enabled, severity Error
<b>RTP duplicates:</b>	Number of RTP packets with identical RTP counters – only available if RTP headers are present	Default: Disabled, severity Warning
<b>RTP out of order:</b>	There are RTP packets received out of order – only available if RTP headers are present	Default: Disabled, severity Warning
<b>CC skips:</b>	Number of transport stream discontinuities due to packet loss. Note that the CC skips number does not necessarily equal the number of lost packets, as several consecutive packets lost will be counted as one CC skip.	Default: Disabled, severity Warning
<b>IAT &gt;= err-thresh:</b>	The Inter-packet Arrival Time exceeds the error threshold	Default: Disabled, severity Error
<b>IAT &gt;= warn-thresh:</b>	The Inter-packet Arrival Time exceeds the warning threshold	Default: Disabled, severity Warning
<b>MLR &gt;= err-thresh:</b>	The Media Loss Rate exceeds the error-threshold	Default: Enabled, severity Error
<b>MLR &gt;= warn-thresh:</b>	The Media Loss Rate exceeds the warning-threshold	Default: Disabled, severity Warning
<b>TTL changed:</b>	The Time-To-Live field is changing	Default: Enabled, severity Error
<b>TOS changed:</b>	The Type-Of-Service field is changing	Default: Enabled, severity Error
<b>Multiple mcast sources:</b>	There are multiple multicast sources	Default: Enabled, severity Error
<b>Mcast source changed:</b>	The multicast source changed to one of the valid multicast sources specified by the operator	Default: Enabled, severity Error

---

<b>Bitrate overflow:</b>	The net stream bitrate exceeds the maximum bitrate Ethernet threshold value specified by the operator	Default: Enabled, severity Error
<b>Bitrate underflow:</b>	The net stream bitrate goes below the minimum bitrate Ethernet threshold value specified by the operator	Default: Enabled, severity Error

### *FSM (Full service monitoring & Microbitrate) alarms*

<b>Full service monitoring:</b>	No reply was obtained within timeout period for the configured FSM service	Default: Enabled, severity Major
<b>Microbitrate bursting:</b>	Raised if the bitrate of the user-interval exceeds the <b>Burst threshold</b> setting	Default: Enabled, severity Warning
<b>Microbitrate excessive ES bursting:</b>	Raised whenever the bitrate of the user-interval exceeds the <b>Burst threshold</b> for <b>ES threshold</b> number of seconds during the last <b>ES Alarm window</b> seconds	Default: Enabled, severity Error
<b>Full service monitoring:</b>	No reply was obtained within timeout period for the configured FSM service	Default: Enabled, severity Major

### *LOG (Event log)*

<b>[Log config events]:</b>	Log configuration related events, such as config uploads	Default: Enabled, severity OK
<b>[Log startup events]:</b>	Log startup related events (currently not used)	Default: Enabled, severity OK
<b>[Log stream events]:</b>	Log stream related events, such as manual resets of monitoring for ETR	Default: Enabled, severity OK
<b>[Log other events]:</b>	Log other events (currently not used)	Default: Enabled, severity OK

### *CNT (Content) alarms*

<b>Freeze-frame detected:</b>	The service has frozen frames	Default: Enabled, severity Major
<b>Color-freeze detected:</b>	The service has frozen in one color	Default: Enabled, severity Major
<b>SCTE 35 event gap:</b>	The service has not received SCTE 35 or SCTE 104 data for longer than the threshold	Default: Enabled, severity Error

<b>Too few SCTE 35 placement opportunities:</b>	The service has not had enough placement opportunities signaled in SCTE 35 or SCTE 104 for the previous clock hour	Default: Enabled, severity Error
<b>SCTE 35 placement gap:</b>	The service has not had SCTE 35 or SCTE 104 placement opportunities for longer than the threshold	Default: Enabled, severity Error
<b>SCTE 35 end event without start:</b>	A SCTE 35 or SCTE 104 end segmentation descriptor message was received in a Time signal event, without the corresponding start segmentation descriptor message having been received.	Default: Enabled, severity Error
<b>SCTE 35 start event without end:</b>	A SCTE 35 or SCTE 104 start segmentation descriptor message was received in a Time signal event, without the corresponding end segmentation descriptor message being received within the defined timeout.	Default: Enabled, severity Error
<b>SCTE 35 minimum pre-roll time:</b>	A SCTE 35 event is received too close to the splice time.	Default: Enabled, severity Error
<b>SCTE 35 maximum pre-roll time:</b>	A SCTE 35 event is received too far from the splice time.	Default: Enabled, severity Error
<b><i>ETR (ETR 290) alarms</i></b>		
<b>TS Sync:</b>	No TS Sync (no signal)	Default: Enabled, severity Major
<b>Sync byte:</b>	Sync byte error, sync byte not 0x47	Default: Enabled, severity Major
<b>PAT:</b>	Program Association Table error	Default: Enabled, severity Major
<b>Continuity:</b>	Continuity counter error	Default: Enabled, severity Major
<b>PMT:</b>	Program Map Table error	Default: Enabled, severity Major
<b>Missing PID:</b>	PID is missing	Default: Enabled, severity Major
<b>Transport:</b>	Transport stream error indicator is set	Default: Enabled, severity Major

<b>CRC:</b>	Table checksum error	Default: Enabled, severity Major
<b>PCR:</b>	Program Clock Reference error	Default: Enabled, severity Major
<b>PCR Accuracy:</b>	Program Clock Reference accuracy error (PCR jitter)	Default: Enabled, severity Major
<b>PTS:</b>	Presentation Time Stamp error	Default: Enabled, severity Major
<b>CAT:</b>	Conditional Access Table error	Default: Enabled, severity Major
<b>NIT:</b>	Network Information Table error	Default: Enabled, severity Major
<b>SI Rep Rate:</b>	Wrong repetition rate for SI tables	Default: Enabled, severity Major
<b>Unref PID:</b>	PID is unreferenced	Default: Enabled, severity Major
<b>SDT:</b>	Service Description Table error	Default: Enabled, severity Major
<b>EIT:</b>	Event Information Table error	Default: Enabled, severity Major
<b>RST:</b>	Running Status Table error	Default: Enabled, severity Major
<b>TDT:</b>	Time Date Table error	Default: Enabled, severity Major
<b>MGT:</b>	Master Guide Table error (ATSC mode)	Default: Enabled, severity Major
<b>VCT:</b>	Virtual Channel Table error (ATSC mode)	Default: Enabled, severity Major
<b>PIM/PNM:</b>	PIM/PNM error (ATSC mode)	Default: Enabled, severity Major
<b>RRT:</b>	Region Rating Table error (ATSC mode)	Default: Enabled, severity Major
<b>ATSC EIT:</b>	ATSC EIT Table error (ATSC mode)	Default: Enabled, severity Major
<b>STT:</b>	System Time Table error (ATSC mode)	Default: Enabled, severity Major
<b>ETT:</b>	Extended Text Table error (ATSC mode)	Default: Enabled, severity Major

<b>CA System:</b>	CA System error	Default: Enabled, severity Major
<b>PID min. bitr.</b>	PID minimum bitrate below threshold	Default: Enabled, severity Major
<b>PID max. bitr.</b>	PID maximum bitrate exceeds threshold	Default: Enabled, severity Major
<b>PID checks:</b>	PID check error	Default: Enabled, severity Major
<b>Service min. bitr.</b>	Service minimum bitrate below threshold	Default: Enabled, severity Major
<b>Service max. bitr.</b>	Service maximum bitrate exceeds threshold	Default: Enabled, severity Major
<b>Service checks:</b>	Service check error	Default: Enabled, severity Major
<b>MIP:</b>	Megaframe Insertion Packet error	Default: Enabled, severity Major
<b>Reference:</b>	Reference check error (comparing the stream with a Gold TS)	Default: Enabled, severity Major
<b>Gold TS:</b>	Error found while comparing the stream with the stored Gold TS snapshot	Default: Enabled, severity Major
<b>Interface overflow:</b>	Input interface overflow error. Means that the probe is overloaded and can not properly analyze the signals.	Default: Enabled, severity Major
<b>Modulation:</b>	Unexpected modulation parameter:	Default: Enabled, severity Major

### *SYS (System) events*

<b>[Critical system errors]:</b>	Critical system errors preventing the 10G Probe from operating correctly	Default: Enabled, severity Fatal
<b>[System errors]:</b>	Enable this to view all system errors	Default: Enabled, severity Major
<b>[System warning]:</b>	Enable this to view all system warnings	Default: Enabled, severity Error
<b>[System info]:</b>	Enable this to view system information messages such as time synchronization	Default: Enabled, severity OK

There is a multitude of system alarms which are reported under the above headings and the configuration applies to them as a group. See section 6.2.5 for a partial list of possible system alarms.

---

*OTT Alarms*

---

<b>The number of profiles changed:</b>	The number of profiles flagged in the manifest file changed	Default: Enabled, severity 'Warning'
<b>Profile stream type changed:</b>	The stream type of the profile changed in the manifest	Default: Enabled, severity 'Warning'
<b>Minimum profiles</b>	The channel has less profiles than specified in the threshold	Default: Enabled, severity Warning
<b>Wrong profile type</b>	The channel has profiles of a different type than specified in the threshold	Default: Enabled, severity Warning
<b>Download bitrate low:</b>	The download duration time exceeds the OTT bitrate threshold. The bitrate threshold is part of the OTT threshold template defined in the <b>OTT — Thresholds</b> view. A threshold template is assigned to a stream in the <b>OTT — Channels</b> view.	Default: Disabled, severity Warning
<b>Download bitrate too low:</b>	The download duration time exceeds the OTT segment duration time	Default: Enabled, severity Error
<b>Manifest size:</b>	The manifest file size exceeds the OTT manifest size threshold	Default: Enabled, severity Warning
<b>Actual bitrate:</b>	The actual measured bitrate does not match the profile bitrate specified in the manifest file	Default: Enabled, severity Warning
<b>Download timeout:</b>	The download time exceeds twice the segment duration time	Default: Enabled, severity Major
<b>Address resolve error:</b>	Unable to resolve address name	Default: Enabled, severity Error
<b>Connection failed:</b>	Connection failed	Default: Enabled, severity Error
<b>Send error:</b>	Could not send data to host	Default: Enabled, severity Error
<b>Receive error:</b>	Could not receive data from host	Default: Enabled, severity Major
<b>Empty reply:</b>	Response did not contain any data in body	Default: Enabled, severity Major
<b>HTTP error:</b>	Invalid HTTP response	Default: Enabled, severity Major

---

<b>HTTP redirect error:</b>	HTTP 3xx redirection error	Default: Enabled, severity Major
<b>HTTP client error:</b>	HTTP 4xx client error	Default: Enabled, severity Major
<b>HTTP server error:</b>	HTTP 5xx server error	Default: Enabled, severity Major
<b>Static manifest:</b>	Manifest file unchanged for longer than configured threshold	Default: Enabled, severity Major
<b>Mis-alignment detected:</b>	One or more profiles are out of visual alignment	Default: Enabled, severity Major
<b>Manifest parse error:</b>	Failed to parse manifest file. Invalid format	Default: Enabled, severity Major
<b>Segment error:</b>	Expected segment missing from manifest	Default: Enabled, severity Major
<b>Unknown manifest:</b>	Cannot recognize manifest XML format	Default: Enabled, severity Fatal

### 6.2.3 Alarms — Event log

#	Time	Type	Stream	Description
1	Jan 21 15:22:54	LOG	<a href="#">SAT2: 1.2G inp2</a>	Measurement status cleared when tuning the stream
2	Jan 21 15:22:19	LOG	<a href="#">SAT4: 1.1G inp4</a>	Monitoring reset from GUI by user admin
3	Jan 21 15:22:15	LOG	<a href="#">SAT2: 1.1G inp2</a>	Measurement status cleared from GUI by user admin
4	Jan 21 15:21:59	LOG	<a href="#">SAT4: 1.1G inp4</a>	Measurement status cleared when tuning the stream
5	Jan 21 15:21:54	LOG	<a href="#">SAT3: 1.1G inp3</a>	Monitoring restarted due to config change
6	Jan 21 15:21:44	LOG	<a href="#">SAT2: 1.1G inp2</a>	Measurement status cleared when tuning the stream
7	Dec 27 14:11:03	LOG		Configuration uploaded from 192.168.50.14

Recent items: 7  
[View list offline](#) [Auto-refresh list](#) [Flush alarms](#) [Export...](#)

The Event log displays the events logged by the probe. These are events that happen which are not errors in any way, such as configuration uploads or logging of monitoring resets for ETR streams.

When **View list offline** is enabled filter buttons will be shown on the top of list. These allows filtering of the events based on their type:

- Regular events
- Config events
- Startup events
- Stream events

All alarms						Ethernet alarms	FSM & MBR alarms	OTT alarms	Content alarms	ETR alarms	System alarms	Event log	Alarm setup	Flash alarms
🔔						<input type="checkbox"/> Regular events <input type="checkbox"/> Config events <input type="checkbox"/> Startup events <input type="checkbox"/> Stream events								
#	Time	Type	Stream	Description										
1	Jan 21 15:25:14	LOG	<a href="#">SAT2: 1.2G inp2</a>	Measurement status cleared when tuning the stream										
2	Jan 21 15:24:39	LOG	<a href="#">SAT4: 1.1G inp4</a>	Measurement status cleared when tuning the stream										
3	Jan 21 15:24:04	LOG	<a href="#">SAT2: 1.1G inp2</a>	Measurement status cleared when tuning the stream										
4	Jan 21 15:23:29	LOG	<a href="#">SAT4: 1.2G inp4</a>	Measurement status cleared when tuning the stream										
5	Jan 21 15:22:54	LOG	<a href="#">SAT2: 1.2G inp2</a>	Measurement status cleared when tuning the stream										
6	Jan 21 15:22:19	LOG	<a href="#">SAT4: 1.1G inp4</a>	Monitoring reset from GUI by user admin										
7	Jan 21 15:22:15	LOG	<a href="#">SAT2: 1.1G inp2</a>	Measurement status cleared from GUI by user admin										
8	Jan 21 15:21:59	LOG	<a href="#">SAT4: 1.1G inp4</a>	Measurement status cleared when tuning the stream										
9	Jan 21 15:21:54	LOG	<a href="#">SAT3: 1.1G inp3</a>	Monitoring restarted due to config change										
10	Jan 21 15:21:44	LOG	<a href="#">SAT2: 1.1G inp2</a>	Measurement status cleared when tuning the stream										
11	Dec 27 14:11:03	LOG		Configuration uploaded from 192.168.50.14										

Items found: 11

[View list offline](#)
[Auto-refresh list](#)
[Flush alarms](#)
[Export...](#)

To enable/disable logging of ETR stream events go to the **Setup — ETR** view.

## 6.2.4 Alarms — Flash Alarms (requires FLASH-OPT)

All alarms						Ethernet alarms	FSM alarms	OTT alarms	ETR alarms	System alarms	Alarm setup	Flash alarms
Status	Col	Time	Type	Stream	Description							
Event	<input type="checkbox"/>	2015 Jan 27 14:36:20	ETH	<a href="#">10.0.81.121:1234</a>	MLR >= error-threshold (9 >= 8)							
Active	<input checked="" type="checkbox"/>	2015 Jan 27 14:36:20	ETH	<a href="#">10.0.81.121:1234</a>	CC skips:10 discontinuities:3 - counting							
Event	<input type="checkbox"/>	2015 Jan 27 14:35:31	ETH	<a href="#">10.0.81.121:1234</a>	MLR >= error-threshold (15 >= 8)							
Event	<input type="checkbox"/>	2015 Jan 27 14:35:31	ETH	<a href="#">10.0.81.121:1234</a>	CC skips:15 discontinuities:2							
Event	<input type="checkbox"/>	2015 Jan 27 14:35:15	ETH	<a href="#">10.0.81.121:1234</a>	MLR >= error-threshold (15 >= 8)							
Event	<input type="checkbox"/>	2015 Jan 27 14:35:15	ETH	<a href="#">10.0.81.121:1234</a>	CC skips:15 discontinuities:2							
Event	<input type="checkbox"/>	2015 Jan 27 14:35:08	ETH	<a href="#">10.0.81.121:1234</a>	MLR >= error-threshold (16 >= 8)							
Event	<input type="checkbox"/>	2015 Jan 27 14:35:08	ETH	<a href="#">10.0.81.121:1234</a>	CC skips:16 discontinuities:3							
Event	<input type="checkbox"/>	2015 Jan 27 14:35:03	ETH	<a href="#">10.0.81.121:1234</a>	MLR >= error-threshold (16 >= 8)							
Event	<input type="checkbox"/>	2015 Jan 27 14:35:03	ETH	<a href="#">10.0.81.121:1234</a>	CC skips:16 discontinuities:3							
Event	<input type="checkbox"/>	2015 Jan 27 14:34:46	ETH	<a href="#">10.0.81.121:1234</a>	MLR >= error-threshold (16 >= 8)							
Event	<input type="checkbox"/>	2015 Jan 27 14:34:46	ETH	<a href="#">10.0.81.121:1234</a>	CC skips:16 discontinuities:3							
Cleared	<input checked="" type="checkbox"/>	2015 Jan 27 14:34:28	ETH	<a href="#">10.0.81.121:1234</a>	CC skips:444 discontinuities:88 (Jan 27 14:34:26 - Jan 27 14:34:28)							
Event	<input type="checkbox"/>	2015 Jan 27 14:34:26	ETH	<a href="#">10.0.81.121:1234</a>	MLR >= error-threshold (437 >= 8)							
Active	<input checked="" type="checkbox"/>	2015 Jan 27 14:34:26	ETH	<a href="#">10.0.81.121:1234</a>	CC skips:443 discontinuities:87 - counting							
Event	<input type="checkbox"/>	2015 Jan 27 14:34:22	ETH	<a href="#">10.0.81.121:1234</a>	MLR >= error-threshold (16 >= 8)							

[Search](#)
[Clear filter](#)
[Older](#)
[Newer](#)
[Oldest](#)
[Newest](#)
[Export...](#)
 Total flash alarms: 192 Position: 48% Displayed: 100

The FLASH option enables the **Flash alarms** tab. This alarm list contains the last 20,000 alarms and keeps them in non-volatile memory so that they survive reboots and power-outages. This opens up a lot of possibilities for probes that cannot be reached while doing measurements and for probes that need to be powered down and consulted elsewhere. It also severely increases the size of the alarm list allowing browsing of older alarms.

## 6.2.5 System alarms

This section contains a partial list of system alarms that may be raised by the 10G Probe.

### *System alarms*

**System time is wrong** The system time does not agree with the time stamp of the license activation. Please refer to E Appendix: On-line License Activation for more details.

<b>License expires in N hours</b>	The current license activation is about to expire and the system is not able to connect to the internet to refresh it automatically. Please refer to E Appendix: On-line License Activation for more details.
<b>Stopped processes</b>	One or more of the required system processes have stopped. This can be due to an intermittent software failure (bug), in which case the alarm should go away after a little while. If the problem persists, this might indicate that the system is overloaded; try reducing load to see if the problem clears. This alarm is sometimes raised during system start-up if one of the processes is slow to start. As long as the alarm goes away in a few minutes, this is only an indication that the system might be running slow due to high load.
<b>Process ewe restarted</b>	A restart of the VB330 main process has been detected. This can be due to an intermittent software failure (bug). If the problem persists, this might indicate that the system is overloaded; try reducing load to see if the problem clears.
<b>Packet Errors on interface</b>	The VB330 has detected problems with the attached Ethernet connection. Verify cables and connectors.
<b>High rate of unmonitored multicast packets on interface NN</b>	The VB330 has detected a high amount of multicast packets being delivered on the indicated network interface that it has not been configured to monitor. This can affect monitoring performance negatively.
<b>SD card missing</b>	No attached SD card could be found. Recordings will not be saved to flash. If the system is supposed to have an SD card attached, please try rebooting the VB330 and contact technical support if the problem persists. The <b>Flash Alarms</b> functionality is not affected by this alarm.
<b>SD storage full</b>	The attached SD card is full. Recordings will not be saved to flash until some of the files are removed, using the <b>Data — Storage</b> view.
<b>No disk free</b>	The internal disk is full, please clear contents, for instance by disabling thumbnail generation, to ensure correct operation.
<b>Disk free – Software upgrade may fail</b>	The internal disk is nearly full and there is not enough space to store a software upgrade image. Please clear contents or reboot before trying to perform a system update.
<b>Write error saving config file</b>	The VB330 configuration file could not be saved. If the problem persists, you should export a full configuration using the <b>Data — Configuration</b> to avoid loss of data.


---

<b>Error copying IDProm to file</b>	The VB330 is unable to read from internal storage. If the problem persists, please contact technical support.
<b>N fans have failed</b>	Several of the internal fans in the VB330 have failed. Please contact technical support to have the unit serviced.
<b>No power from XX power supply</b>	One of the redundant power supplies in the chassis is not detecting a power plug. The alarm should go away automatically once power has been restored.
<b>Trap queue is full</b>	The VB330 is creating so many simultaneous alarms that it is unable to forward them as traps over SNMP. If the problem persists, try to reduce the load or disable unimportant alarms, or use the Eii to fetch alarm information.
<b>Content analysis overloaded</b>	The content analysis engine is overloaded. Please refer to B.5 Content Thresholds for more details.
<b>Data queue overflow</b>	The named data queue is receiving more data than the VB330 is able to process. This usually means that this part of the system is overloaded. Try reducing load to see if the problem goes away.

---

## 6.3 OTT (Option)

### 6.3.1 OTT — Active testing

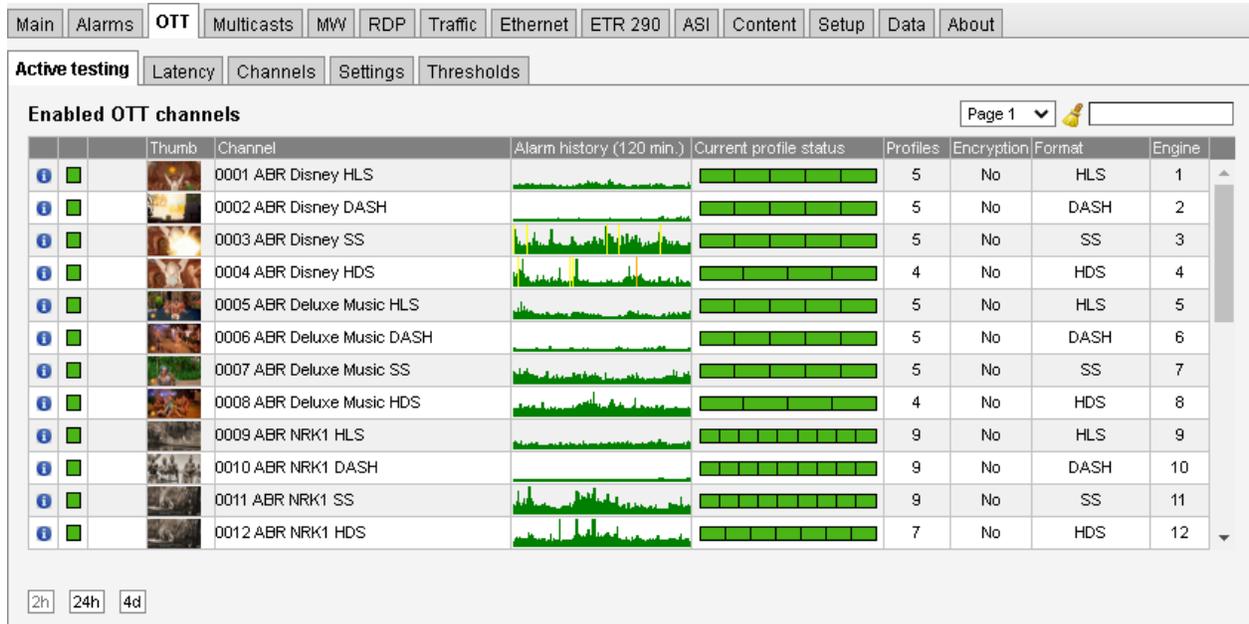

	Thumb	Channel	Alarm history (120 min.)	Current profile status	Profiles	Encryption	Format	Engine
		0001 ABR Disney HLS			5	No	HLS	1
		0002 ABR Disney DASH			5	No	DASH	2
		0003 ABR Disney SS			5	No	SS	3
		0004 ABR Disney HDS			4	No	HDS	4
		0005 ABR Deluxe Music HLS			5	No	HLS	5
		0006 ABR Deluxe Music DASH			5	No	DASH	6
		0007 ABR Deluxe Music SS			5	No	SS	7
		0008 ABR Deluxe Music HDS			4	No	HDS	8
		0009 ABR NRK1 HLS			9	No	HLS	9
		0010 ABR NRK1 DASH			9	No	DASH	10
		0011 ABR NRK1 SS			9	No	SS	11
		0012 ABR NRK1 HDS			7	No	HDS	12

The OTT option enables monitoring of up to 500 OTT channels. Up to 50 OTT engines (depends on license) can operate in parallel, and each engine licensed allows any channels to be analyzed. Each engine analyses channels in series and can be configured with any number of channels up to the maximum allowed by the license.

The 10G Probe will parse a channel’s manifest file, and for a live channel one of the latest segments in each OTT profile’s segment sequence will be analyzed. The engine then moves on to the next OTT channel in the channel list defined by the user. For a VoD channel the OTT engine will analyze all segments in the VoD file, one in each round-robin loop.

If manifest file parsing or segment analysis reveals an error, an alarm will be raised. Note that some alarms depend on user defined threshold values. Alarms must also be enabled in the **Alarm — Alarm setup** view.

Thumbnail decoding is available for **non-encrypted** HLS, HDS, DASH, Smooth Streaming and RTMP channels, as well as AES128 and SAMPLE-AES encrypted HLS channels, and fixed key CENC encrypted DASH.

The page to display can be selected from a drop-down menu.

The following OTT information is displayed in the Active testing view:

---

#### *OTT channels*

---

**Status bulb:** A bulb indicates the current status of the channel, i.e. the most severe profile status.

---

<b>Thumb:</b>	If thumbnail extraction has been enabled, a thumbnail is displayed for the channel if supported. Thumbnail decoding is a process asynchronous of the channel analysis and therefore should not be expected to be updated at the same time. The main purpose of the thumbnails is to provide brief information about the channel contents. If thumbnail extraction has not been enabled, or if the thumbnail extraction fails, an icon indicating the stream type will be displayed instead.
<b>Channel:</b>	The channel name defined by the user and linked to a URL in the <b>OTT — Channels</b> view.
<b>Alarm history:</b>	A timeline graph display of a combined bitrate and alarm representation for the channel. This shows the most severe alarm or download speed for all monitored profiles. The individual profiles graphs can be found in the <b>OTT — Details — Profiles</b> view. The timeline can display the last 120 minutes, 24 hours or four days. To switch between the graphs, press the “24h”, “2h” or “4d” button on the left under the channel list. Each bar color represents the alarm severity level as configured under <b>Alarms — Alarm setup</b> .
<b>Current profile status:</b>	The channel health bar displays the current status for individual channel profiles. Profiles are separated by vertical black lines. Colors indicate profile alarm status: <ul style="list-style-type: none"> <li>• Green: OK</li> <li>• Yellow: Warning</li> <li>• Orange: Error</li> <li>• Red: Major</li> <li>• Black: Fatal</li> </ul>
<b>Profiles:</b>	The number of profiles associated with a channel.
<b>Encryption:</b>	Scrambling information is resolved from the profile manifest. If the profile is scrambled the encryption field will read <i>Yes</i> . If the profile is transmitted in clear the encryption field will read <i>No</i> .
<b>Format:</b>	The channel format is resolved from the manifest files, and is shown here (Apple <b>HLS</b> , Microsoft <b>Smooth Streaming</b> , Adobe <b>HDS</b> , <b>MPEG DASH</b> , <b>SHOUTcast</b> or <b>RTMP</b> ).
<b>Engine:</b>	Indicates which OTT engine is assigned to what channel. The 10G Probe can be licensed with anywhere from 1 up to 50 OTT engines. Each engine is capable of handling any number of channels.

### 6.3.2 OTT — Details

Click the blue information button on a channel to open the details window. This window provides detailed information about the status and alarms on all the profiles for the selected channel. The

same pop-up can be opened from the **Content — Thumbnails** view, see chapter 6.10.1 for more information.

### 6.3.2.1 OTT — Details — Profiles

Profile	Type	Profile health (120 min.)	Profile bps	Actual bps	Download bps	Duration	DL time	First byte	DL size	Encrypt.	HTTP header
Mixed: avc1.64002...	Live		5.160 Mbps	5.270 Mbps	81.672 Mbps	10.000s	0.645s	13.630 ms	6.588 MB	Yes	<a href="#">File</a>
Mixed: avc1.64001...	Live		2.960 Mbps	2.965 Mbps	76.176 Mbps	10.000s	0.389s	49.430 ms	3.706 MB	Yes	<a href="#">File</a>
Mixed: avc1.4D401...	Live		1.460 Mbps	1.478 Mbps	59.684 Mbps	10.000s	0.248s	72.245 ms	1.847 MB	Yes	<a href="#">File</a>
Mixed: avc1.42E01...	Live		664.000 kbps	700.568 kbps	82.069 Mbps	10.000s	0.085s	10.491 ms	875.712 kB	Yes	<a href="#">File</a>
Mixed: avc1.42E01...	Live		264.000 kbps	298.696 kbps	73.761 Mbps	10.000s	0.040s	8.119 ms	373.376 kB	Yes	<a href="#">File</a>
Audio: 64kbps mp4...	Live		64.000 kbps	73.008 kbps	62.133 Mbps	9.600s	0.011s	4.959 ms	87.616 kB	Yes	<a href="#">File</a>

The **Profiles** view in this pop-up consists of two tables detailed below:

The following information relevant for the overall OTT channel is shown in the first part of the **Details — Profiles** pop-up window:

<i>Channel</i>	
<b>Channel:</b>	The channel name defined by the user and linked to a URL in the <b>OTT — Channels</b> view. A bulb indicates the current status of the channel, i.e. the most severe profile status.
<b>Profiles:</b>	The number of profiles associated with a channel.

---

**Profile status:** The channel health bar displays the current status for individual channel profiles. Profiles are separated by vertical black lines. Colors indicate profile alarm status:

- Green: OK
- Yellow: Warning
- Orange: Error
- Red: Major
- Black: Fatal

---

**Format:** The channel format is shown here (Apple **HLS**, Microsoft **Smooth Streaming**, Adobe **HDS**, **MPEG DASH**, **SHOUTcast** or **RTMP**).

---

In the same view below the table for the overall channel a more detailed view per **channel profile** is shown with the following information in it:

---


*Profiles*

---

<b>Profile:</b>	The name of the OTT profile as flagged in the manifest files.
<b>Type:</b>	<b>Live</b> for live content or <b>VoD</b> for stored content. The distinction between the two is done based on whether the profile sequence numbers update or not.
<b>Profile health:</b>	A timeline graph display of a combined bitrate and alarm representation for individual profiles. Refer to Appendix C for a description of these graphs. The timeline can display the last 120 minutes, 24 hours or four days, and the graph resolution is one minute for the two hour graph, twelve minutes for the 24 hour graph or 48 minutes for the four day graph.
<b>Profile bps:</b>	The profile nominal bandwidth as flagged in the manifest files.
<b>Actual bps:</b>	The actual profile bitrate, i.e. the segment size (megabits) divided by the segment length (seconds). The actual profile bitrate should match the manifest bitrate specification within limits defined by the user in the OTT thresholds template associated with a channel. Otherwise an alarm will be raised.
<b>Download bps:</b>	The download bitrate, i.e. the segment size (megabits) divided by the download time (seconds).
<b>Duration:</b>	The profile segment duration (seconds) specified in the manifest file.
<b>Download time:</b>	The actual profile segment download time (seconds).
<b>First byte:</b>	The time (in seconds) before the first payload data byte was received.
<b>Download size:</b>	The actual profile segment size (bytes).
<b>Encrypt.:</b>	<b>Yes</b> or <b>No</b> depending on whether the content for that profile is encrypted or not.
<b>HTTP header:</b>	The current HTTP header of the last segment downloaded for that profile.

---

### 6.3.2.2 OTT — Details — Manifest

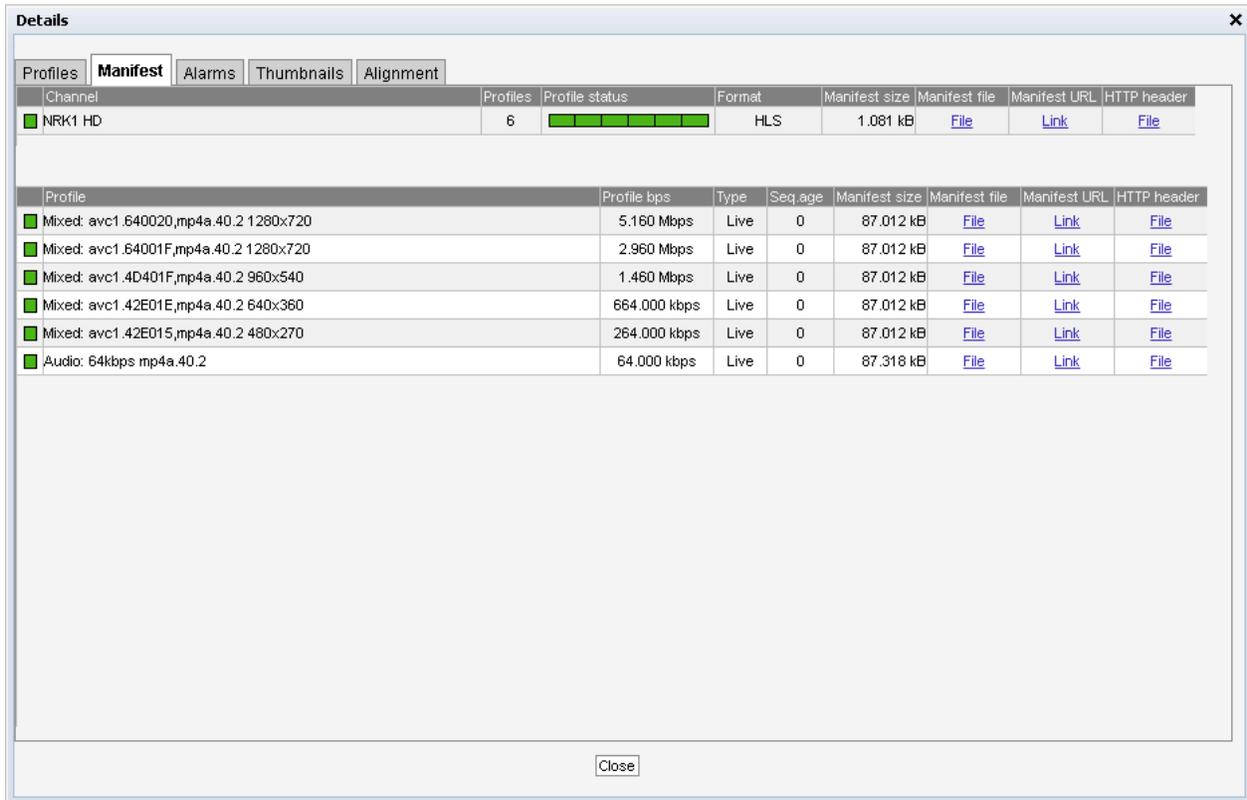

Channel	Profiles	Profile status	Format	Manifest size	Manifest file	Manifest URL	HTTP header
NRK1 HD	6		HLS	1.081 kB	<a href="#">File</a>	<a href="#">Link</a>	<a href="#">File</a>

Profile	Profile bps	Type	Seq. age	Manifest size	Manifest file	Manifest URL	HTTP header
Mixed: avc1.640020,mp4a.40.2 1280x720	5.160 Mbps	Live	0	87.012 kB	<a href="#">File</a>	<a href="#">Link</a>	<a href="#">File</a>
Mixed: avc1.64001F,mp4a.40.2 1280x720	2.960 Mbps	Live	0	87.012 kB	<a href="#">File</a>	<a href="#">Link</a>	<a href="#">File</a>
Mixed: avc1.4D401F,mp4a.40.2 960x540	1.460 Mbps	Live	0	87.012 kB	<a href="#">File</a>	<a href="#">Link</a>	<a href="#">File</a>
Mixed: avc1.42E01E,mp4a.40.2 640x360	664.000 kbps	Live	0	87.012 kB	<a href="#">File</a>	<a href="#">Link</a>	<a href="#">File</a>
Mixed: avc1.42E015,mp4a.40.2 480x270	264.000 kbps	Live	0	87.012 kB	<a href="#">File</a>	<a href="#">Link</a>	<a href="#">File</a>
Audio: 64kbps mp4a.40.2	64.000 kbps	Live	0	87.318 kB	<a href="#">File</a>	<a href="#">Link</a>	<a href="#">File</a>

The **Manifest** view shows health information on the overall manifest file for the channel as well as for the manifest files for the individual profiles for the formats were such are available.

#### *Channel*

**Channel:** The channel name defined by the user and linked to a URL in the **OTT — Channels** view. A bulb indicates the current status of the channel, i.e. the most severe profile status.

**Profiles:** The number of profiles associated with a channel.

**Profile status:** The channel health bar displays the current status for individual channel profiles. Profiles are separated by vertical black lines.

Colors indicate profile alarm status:

- Green: OK
- Yellow: Warning
- Orange: Error
- Red: Major
- Black: Fatal

**Format:** The channel format is shown here (Apple **HLS**, Microsoft **Smooth Streaming**, Adobe **HDS**, **MPEG DASH**, **SHOUTcast** or **RTMP**).

<b>Manifest size:</b>	The size in bytes of the main/top manifest file for the overall channel.
<b>Manifest file:</b>	Clickable URL for displaying the manifest file as text for the overall channel.
<b>Manifest URL:</b>	A clickable link to the current main/top manifest file for the overall channel.
<b>HTTP header:</b>	The current HTTP header of the main/top manifest file for the overall channel.

Just below the channel manifest information in the same window is the detailed manifest information per profile. This view contains the following information:

<i>Profiles</i>	
<b>Profile:</b>	The name of the OTT profile as flagged in the manifest files.
<b>Profile bps:</b>	The profile nominal bandwidth as flagged in the manifest files.
<b>Type:</b>	<b>Live</b> for live content or <b>VoD</b> for stored content. The distinction between the two is done based on the contents of the manifest file.
<b>Seq.age:</b>	The profile sequence shows how long it has been since the manifest was updated in whole seconds. The profile sequence age is only reported for <b>Live</b> profiles.
<b>Manifest size:</b>	The size in bytes of the manifest file for a particular profile, for formats where such a file is available.
<b>Manifest file:</b>	Clickable URL for displaying the manifest file as text for this particular profile, or “N/A” for formats where such a file is not available.
<b>Manifest URL:</b>	Clickable URL to the profile manifest file, for formats where such a file is available.
<b>HTTP header:</b>	URL to HTTP header in text form for a particular profile manifest file, or “N/A” for formats where such a file is not available.

### 6.3.2.3 OTT — Details — Alarms

The screenshot shows a window titled "Details" with tabs for Profiles, Manifest, Alarms, Thumbnails, and Alignment. The "Alarms" tab is active. It displays four categories of alarms: Transport, HTTP, XML, and Content. Below these are search fields and a table of active and cleared alarms.

**Transport alarms**

- Speed warning
- Speed error
- Timeout
- Resolve
- Connect
- Send
- Recv
- Profile stream type

**HTTP alarms**

- No body
- HTTP error
- HTTP 3XX
- HTTP 4XX
- HTTP 5XX

**XML alarms**

- XML size
- Actual bitrate
- Static
- Parse
- Chunk missing
- Minimum profiles
- Timesync
- Unknown

**Content alarms**

- Profile alignment
- Freeze-frame (4 / 8)
- Color-freeze
- Audio silence
- Audio too loud
- MOS below average
- Wrong DAR (1 / 1)
- Wrong PAR


Status	Col	Time	Type	Alarm id	Stream	Description
Active	■	Nov 4 15:50:34	Content	4200	ABR CamHD SS	Profile_4 [640x360 - AVC1] Content error: Freeze-frame error detected (at sequence number 1844309937129667)
Active	■	Nov 4 15:50:34	Content	4200	ABR CamHD SS	Profile_3 [720x576 - AVC1] Content error: Freeze-frame error detected (at sequence number 1844309937129667)
Active	■	Nov 4 15:50:34	Content	4200	ABR CamHD SS	Profile_2 [1280x720 - AVC1] Content error: Freeze-frame error detected (at sequence number 1844309937129667)
Active	■	Nov 4 15:50:34	Content	4200	ABR CamHD SS	Profile_1 [1920x1080 - AVC1] Content error: Freeze-frame error detected (at sequence number 1844309937129667)
Active	■	Nov 4 15:42:21	Content	4800	ABR CamHD SS	Profile_3 [720x576 - AVC1] Content error: Current DAR (20:11) is different from specified DAR (16:9) (at sequence number 1844304993129667)
Cleared	■	Nov 4 15:49:07	Content	4200	ABR CamHD SS	Profile_4 [640x360 - AVC1] Content error: Freeze-frame error detected (at sequence number 1844305473129667) (Nov 4 15:43:11 - Nov 4 15:49:07)
Cleared	■	Nov 4 15:49:07	Content	4200	ABR CamHD SS	Profile_3 [720x576 - AVC1] Content error: Freeze-frame error detected (at sequence number 1844305473129667) (Nov 4 15:43:11 - Nov 4 15:49:07)
Cleared	■	Nov 4 15:49:07	Content	4200	ABR CamHD SS	Profile_2 [1280x720 - AVC1] Content error: Freeze-frame error detected (at sequence number 1844305473129667) (Nov 4 15:43:11 - Nov 4 15:49:07)
Cleared	■	Nov 4 15:49:07	Content	4200	ABR CamHD SS	Profile_1 [1920x1080 - AVC1] Content error: Freeze-frame error detected (at sequence number 1844305473129667) (Nov 4 15:43:11 - Nov 4 15:49:07)

The **Details — Alarms** view gives an at-a-glance overview of any active OTT alarms for the selected channel. An alarm log for the selected channel is also provided here.

In the right corner of the pop-up window is a free text search field used to narrow down the entries in the alarm log.

The alarms are the same ones as explained for the **Alarms — Alarm setup** view, see chapter 6.2.2 for more information.

### 6.3.2.4 OTT — Details — Thumbnails

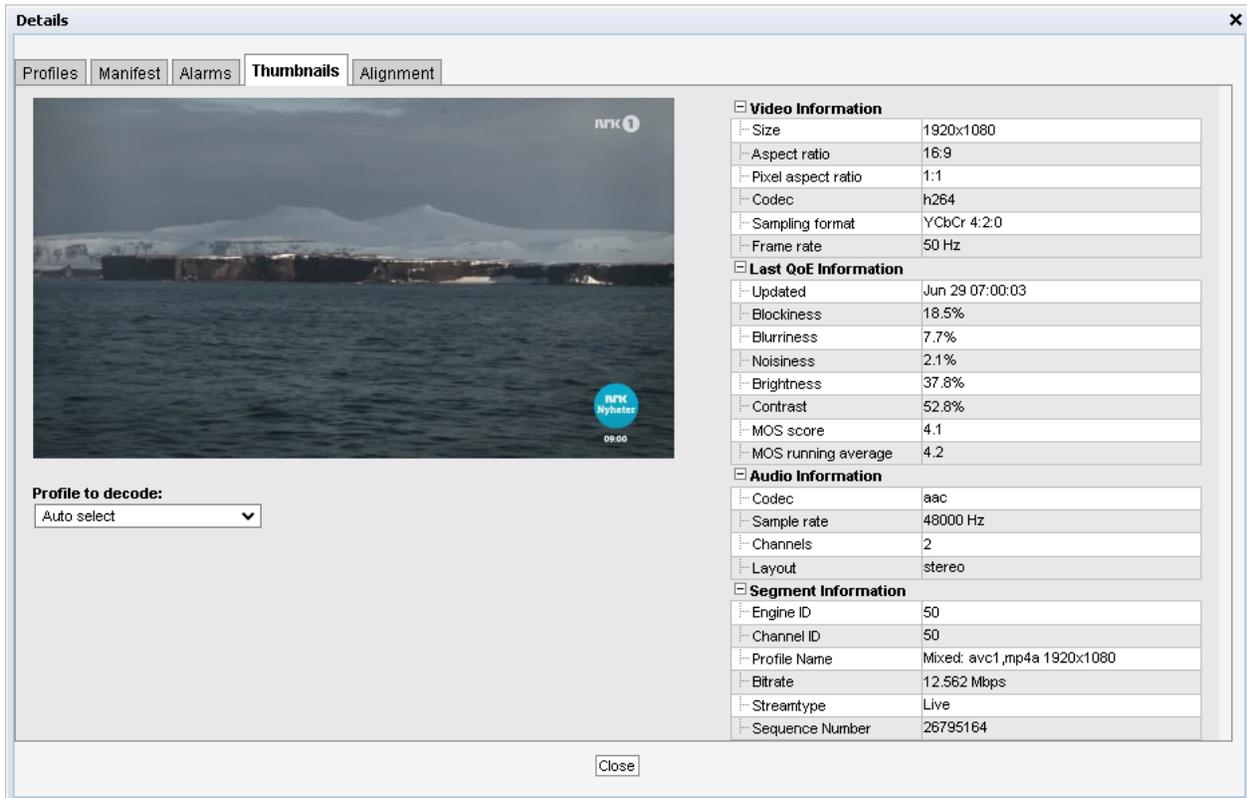

The **Thumbnails** view will provide information about the current thumbnails in the channel.

The quality of the content in the selected profile can be viewed in the thumbnail section, and the user may alter the selected profile in the drop down list.

The section on the right hand side provides specific decoder and segment information.

By pressing the **Apply** button without selecting a profile from the drop-down list the thumbnail will be switched to the default selection; **Auto select**. Auto select will select the profile with the highest bitrate and video data.

#### *Video information*

<b>Size:</b>	The video picture size of the selected profile
<b>Aspect ratio:</b>	The video aspect ratio of the selected profile
<b>Pixel aspect ratio:</b>	The video pixel aspect ratio of the selected profile
<b>Codec:</b>	The video encoding format of the selected profile
<b>Sampling format:</b>	The video sampling format of the selected profile
<b>Frame rate:</b>	The video frame rate of the selected profile (Hz)

---


*Segment Information*

---

<b>Engine ID:</b>	The OTT engine monitoring the selected channel.
<b>Channel ID:</b>	The ID of selected channel corresponding to the list of channels defined by the user.
<b>Profile Name:</b>	The name of the OTT profile as flagged in the manifest files.
<b>Bitrate:</b>	Bitrate rate of the a segment.
<b>Streamtype:</b>	The type of the stream detected; live or video on demand.
<b>Sequence Number:</b>	The current sequence number being analyzed. This is either signaled in the channel manifest (HLS, HDS, DASH, Smooth Streaming), or generated by the VB330(RTMP, SHOUTcast).

---

### 6.3.2.5 OTT — Details — Alignment

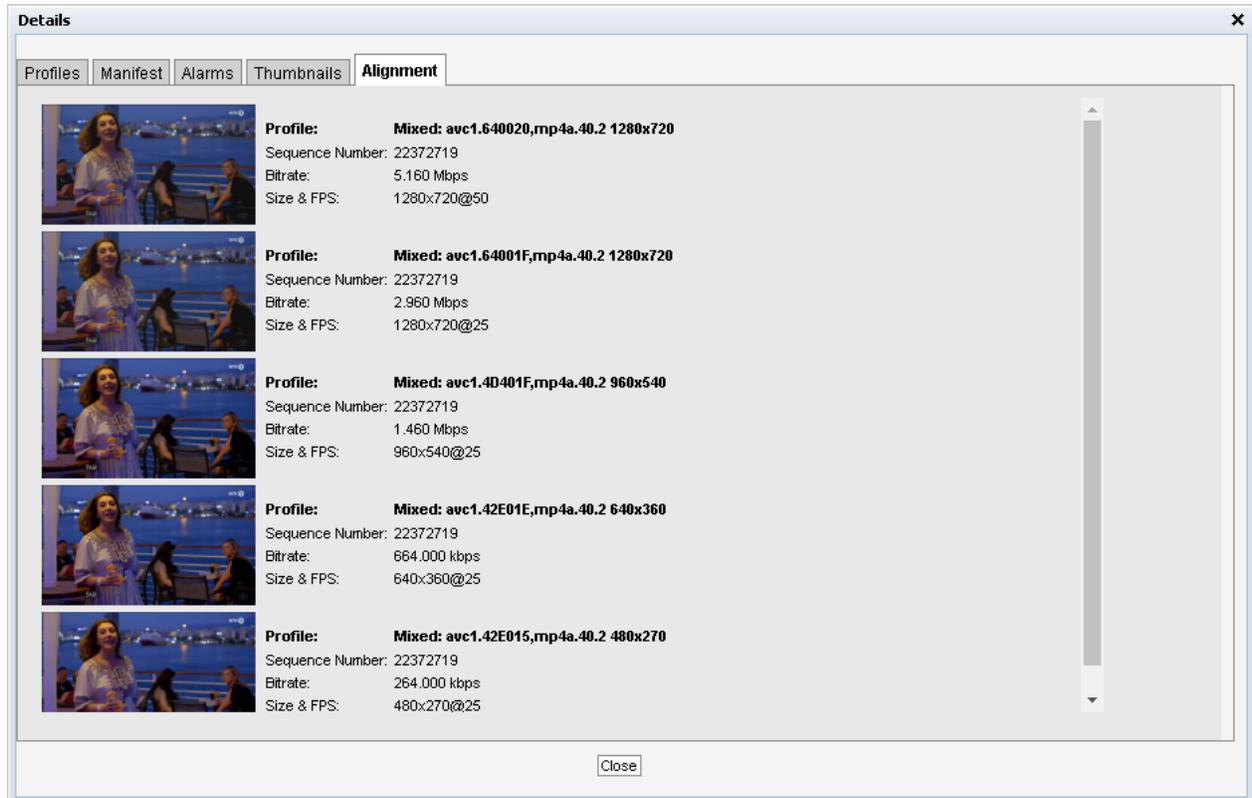

The **Alignment** view shows the user all the profiles for a selected channel with thumbnails and corresponding data.

---

*Profile Alignment Information*

---

**Profile:** The name of the OTT profile as flagged in the manifest files. The first profile listed is always the one with the highest signaled bitrate.

---

---

**Sequence Number:** The segment or sequence number for the current thumbnail. This is either signaled in the channel manifest (HLS, HDS, DASH, Smooth Streaming), or generated by the VB330(RTMP, SHOUTcast).  
If the sequence numbers are highlighted in yellow, the thumbnails are not generated from the same segment for all profiles, and may therefore appear to be out of synchronization.

---

**Bitrate:** The signaled bitrate for this profile (bits/s).

---

**Size & FPS:** Indicates the original video size (pixels) and the frame-rate (Hz).

---

### 6.3.3 OTT — Channels

Active testing
Latency
Channels
Settings
Thresholds

**OTT channel configuration** 🔔

Name	URL	Threshold	Engine	Mode	Enabled	Edit
WaterfallCam@cache	http://10.0.30.8/abr/0/0/1/s/WaterfallCam/playlist.m3u8	Default	1	Normal	✓	<a href="#">Edit</a>
Bip bop	http://10.0.30.37/bipbop/bipbopall.m3u8	Default	2	Normal	✓	<a href="#">Edit</a>
Silent Black	http://10.0.30.37/silent_black_stream/manifest.m3u8	Default	3	Normal	✓	<a href="#">Edit</a>
Silent Green	http://10.0.30.37/silent_green_stream/manifest.m3u8	Default	4	Normal	✓	<a href="#">Edit</a>
Silent Both	http://10.0.30.37/silent_alternating_stream/manifest.m3u8	Default	5	Normal	✓	<a href="#">Edit</a>
Silent Complexity	http://10.0.30.37/silent_btech_stream/manifest.m3u8	Default	6	Normal	✓	<a href="#">Edit</a>


**Channels: 6**

Add new channel
Duplicate selected
Delete selected
Distribute selected
Edit selected

The OTT Channel Configuration list shows OTT channels configured by the user.

To add a channel to the list click the **Add new channel** button. This will open the **Edit channel** pop-up view, allowing the user to define channel parameters. A channel entry can be selected by clicking the channel; the list entry will be highlighted. Several list entries can be selected by using regular *Ctrl + click* functionality. Clicking the **Duplicate selected** button will open the **Edit channel** pop-up view with all channel parameters duplicated, except the channel name. Clicking **Delete selected** will delete the highlighted list entry. Clicking **Distribute selected** will distribute the selected channels across the licensed OTT engines (the VB330 can be licensed with up to 50 OTT engines). Clicking **Edit selected** will open the **Edit channel** pop-up view associated with the highlighted channel. Batch editing is supported; this is convenient if a new threshold template should be assigned to a number of channels or if monitoring of several channels should be enabled or disabled. Select the channels and click the **Edit selected** button. Parameters differing between channels will be indicated in the **Edit selected** pop-up view by an asterisk wildcard symbol.

The search field in the upper right corner of the view allows the user to type a text string, and the OTT channel list is updated to display only channels matching the specified text.

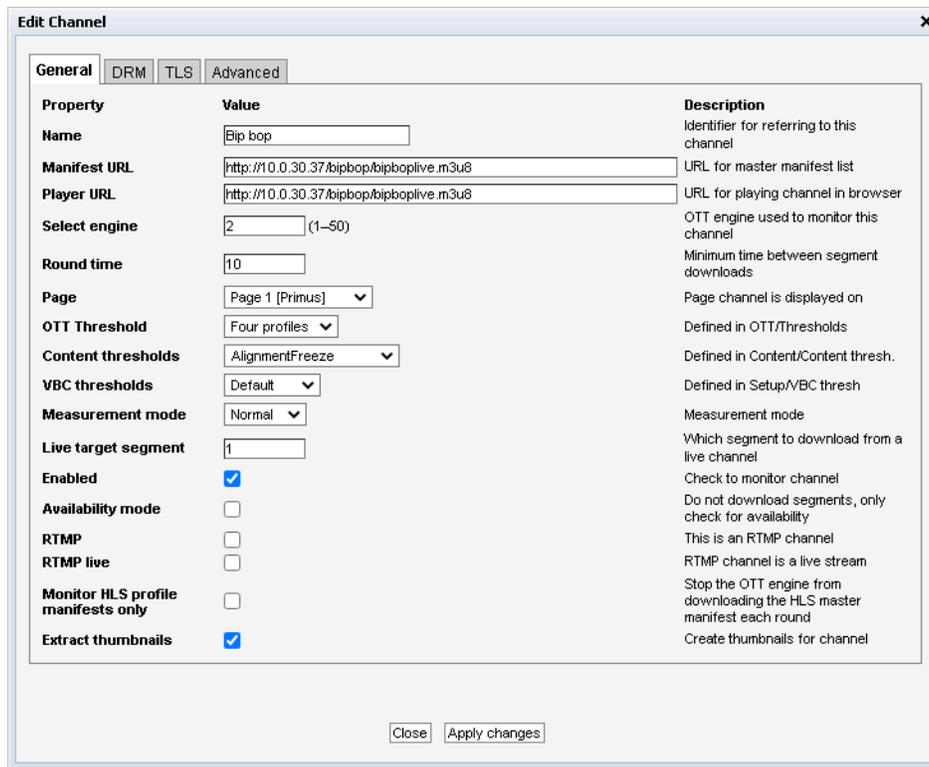

Property	Value	Description
Name	Bip bop	Identifier for referring to this channel
Manifest URL	http://10.0.30.37/bipbop/bipboplive.m3u8	URL for master manifest list
Player URL	http://10.0.30.37/bipbop/bipboplive.m3u8	URL for playing channel in browser
Select engine	2 (1-50)	OTT engine used to monitor this channel
Round time	10	Minimum time between segment downloads
Page	Page 1 [Primus]	Page channel is displayed on
OTT Threshold	Four profiles	Defined in OTT/Thresholds
Content thresholds	AlignmentFreeze	Defined in Content/Content thresh.
VBC thresholds	Default	Defined in Setup/VBC thresh
Measurement mode	Normal	Measurement mode
Live target segment	1	Which segment to download from a live channel
Enabled	<input checked="" type="checkbox"/>	Check to monitor channel
Availability mode	<input type="checkbox"/>	Do not download segments, only check for availability
RTMP	<input type="checkbox"/>	This is an RTMP channel
RTMP live	<input type="checkbox"/>	RTMP channel is a live stream
Monitor HLS profile manifests only	<input type="checkbox"/>	Stop the OTT engine from downloading the HLS master manifest each round
Extract thumbnails	<input checked="" type="checkbox"/>	Create thumbnails for channel

### *General*

**Name:** A name should be assigned to each OTT channel. The name will be used throughout the VB330's user interface when referring to this channel.

**Manifest URL:** The URL of the OTT channel.


**Player URL:** In this field you can enter the URL to a web page which will open the OTT channel in your browser. If entered, a 'play' button will be displayed in the **Active testing** view, which will open the selected URL in a new browser tab.

**Select engine:** A number between 1 and 50, depending on license activated, indicating which OTT engine the channel uses.

**Round time:** Sets the minimum round time of this OTT channel, in seconds (default: 15 seconds). If processing all the profiles of a single channel takes less time than this, it waits until this amount of seconds has passed since it started the round before starting to process through its channels again. The round time setting does not apply to channels for which real-time audio analysis have been enabled.  
Note: The round time may not be set to a value less than 2 seconds.

**Page:** Choose which Active Testing page this channel should be displayed on. Having too many channels on the same page can cause the page reloading to stutter.

<b>OTT Threshold:</b>	The OTT threshold that should be assigned to the OTT channel. OTT thresholds that have been defined in the <b>OTT — Thresholds</b> view are available for selection from the drop-down menu.
<b>Content thresholds:</b>	The Content thresholds specify content alarming options. Selectable Content thresholds templates are defined in the <b>Content — Content thresh.</b> view.
<b>Content schedule:</b>	The scheduling scheme that should be assigned to the content monitoring for the OTT channel. Scheduling schemes that have been defined in the <b>Setup — Scheduling</b> view are available for selection from the drop-down menu. Scheduling allows masking content alarms at predefined time periods.
<b>VBC thresholds:</b>	The alarm threshold template used to configure when alarms are generated towards the VBC server.
<b>Live target segment:</b>	This specifies which segment, counted from the bottom of the list, the VB330 should download when doing active testing on a live channel.
<b>Enabled:</b>	Check the 'Enabled' check box to start monitoring the OTT service.
<b>Availability mode:</b>	If this option is enabled, the engine will only check for segment presence but not download the entire file. This also disables thumbnail generation.
<b>RTMP:</b>	Check this check box if the channel is an RTMP channel.
<b>RTMP live:</b>	Check this check box if the RTMP channel is a live service.
<b>Monitor HLS profile manifests only:</b>	This option makes the OTT engine only download the master manifest once. After the initial download, it will only re-download it if one of the profiles gets an error or the connection reset timeout occurs. This option can be used if the server hosting the manifest is generating an unique session for each download of the master manifest, for instance by changing the profile playlist URLs between each download.
<b>Extract thumbnails:</b>	If the thumbnail option is enabled thumbnails will be available for the selected channels in the Active testing and Thumbnails sections.
<b>Alignment:</b>	If the alignment option is enabled the alignment section will be available. If the Content Extraction and Alarming option is licensed, alignment checking is enabled in the Content threshold and this setting is not visible.

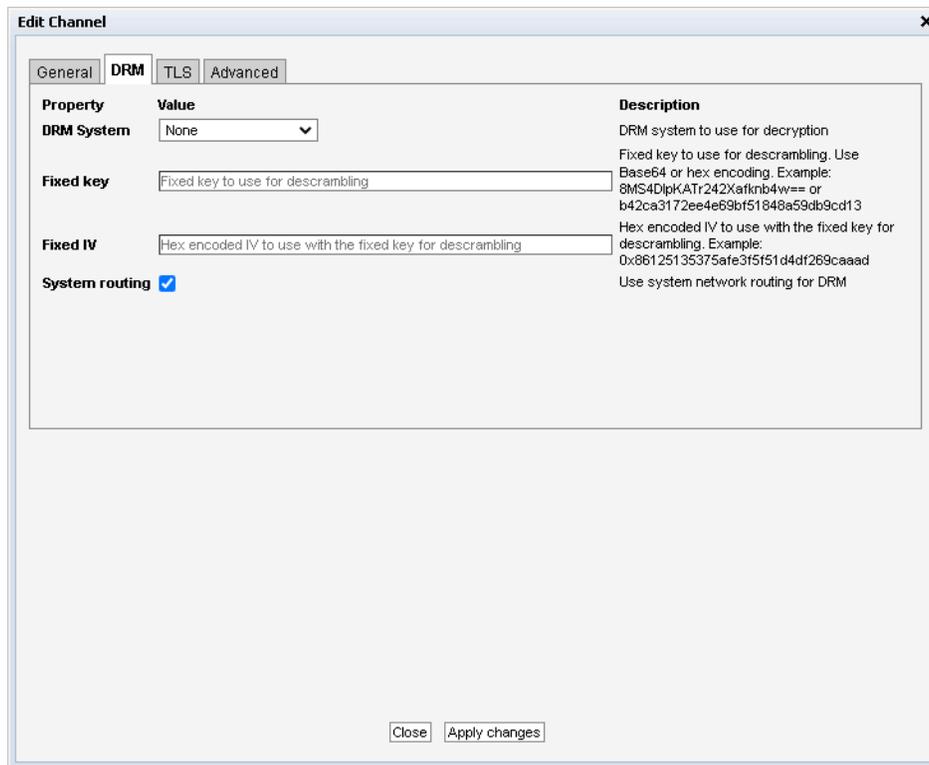

## *DRM*

**DRM system:** If this channel is encrypted using a Verimatrix VCAS server, selecting the **Verimatrix VCAS 3.7** or **Verimatrix VCAS 4.3** option and entering the IP address or hostname of the VCAS server's encoder interface in the **DRM hostname** field will allow descrambling of the encrypted segments. See **OTT descrambling with Verimatrix** for more info.

If this channel is encrypted using an Irdeto server, select the **Irdeto** option and configuring access to the Irdeto server will allow descrambling of the encrypted segments.

Select **None** option for streams that are not encrypted, or where you have a fixed key or IV available.

**Fixed key:** The key that will be used to descramble the segments for this channel. Using this field will override any key found during manifest parsing.

For HLS, use a Base64 encoded string, like this:

8MS4DlpKATr242Xafknb4w==

For DASH, use a hex encoded string, like this:

b42ca3172ee4e69bf51848a59db9cd13

**Fixed IV:** The IV to be used during descrambling of the HLS segments. Using this field will override any IV found or calculated during manifest parsing.


Use a 0x-prefixed hex encoded string, like this:

0x86125135375afe3f5f51d4df269caaad

---

<b>DRM hostname:</b>	If used with a DRM system, configure enter the IP address or hostname of the DRM server here.
<b>DRM username:</b>	When using the <b>Irdeto</b> DRM system, add the username used to log in to the Irdeto server here.
<b>DRM password:</b>	When using the <b>Irdeto</b> DRM system, add the password used to log in to the Irdeto server here.
<b>Account ID:</b>	When using the <b>Irdeto</b> DRM system, this should be set to the ID of the account that this channel is configured to. Please refer to the Irdeto User Manual for more details.
<b>Content ID:</b>	When using the <b>Irdeto</b> DRM system, this should be set to the ID of the channel on the Irdeto server. Please refer to the Irdeto User Manual for more details.
<b>Crypto Period:</b>	When using the <b>Irdeto</b> DRM system, this should be set to match the configuration on the Irdeto server. Please refer to the Irdeto User Manual for more details.
<b>System routing:</b>	If enabled, the request for the DRM system or linked key uses the system routing table. If disabled, the request uses the routing configured for the associated OTT engine.

---

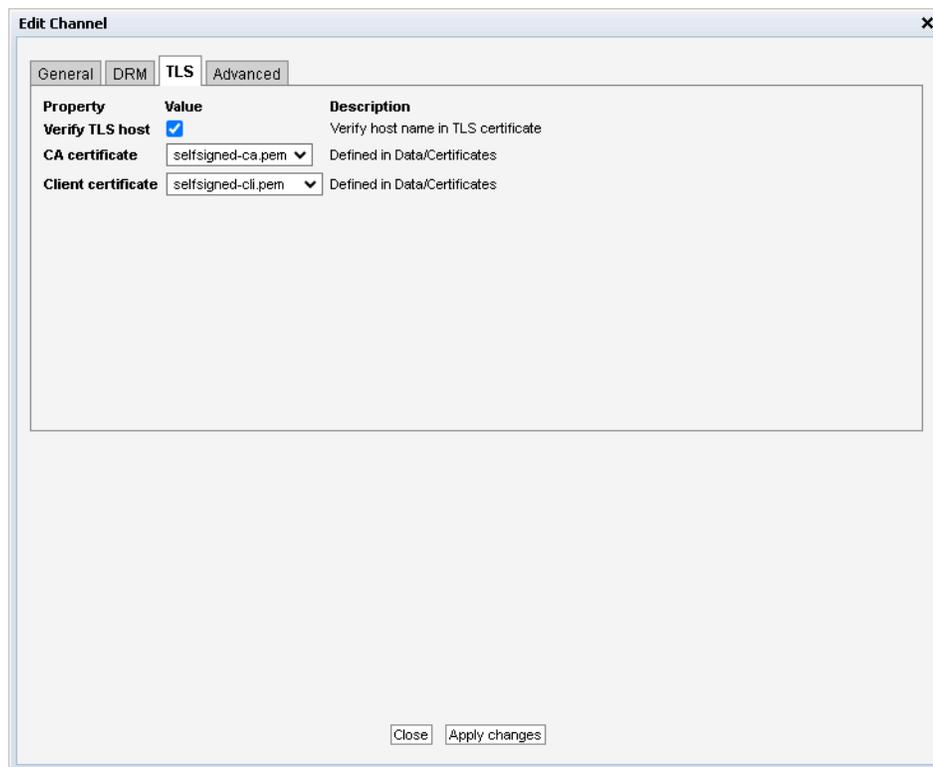


---

*TLS*

---

---

**Verify TLS host** If the channel is requested over a TLS connection, enabling this option verifies that the presented server certificate is valid for the host name used for the request.

This setting can be enabled without having the CA certificate available.

---

**CA certificate** If the channel is requested over a TLS connection, selecting a CA certificate here verifies that the presented server certificate is trusted by it.


Certificates are uploaded in the **Data — Certificates** view.

---

**Client certificate** If a client certificate is selected here, and the channel is requested over a TLS connection, the 10G Probe will present this certificate in outgoing network requests.

Enable this setting for mTLS (mutual TLS). Certificates are uploaded in the **Data — Certificates** view.

---

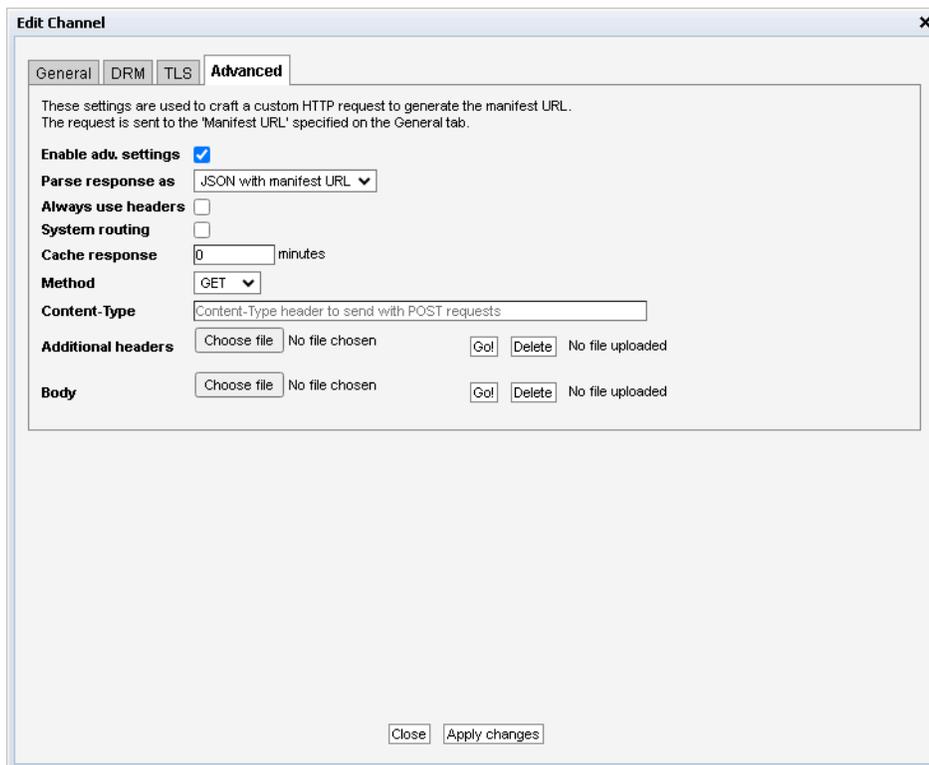

**Edit Channel**

General | DRM | TLS | **Advanced**

These settings are used to craft a custom HTTP request to generate the manifest URL. The request is sent to the 'Manifest URL' specified on the General tab.

**Enable adv. settings**

**Parse response as** JSON with manifest URL

**Always use headers**

**System routing**

**Cache response** 0 minutes

**Method** GET

**Content-Type** Content-Type header to send with POST requests

**Additional headers** Choose file No file chosen Got Delete No file uploaded

**Body** Choose file No file chosen Got Delete No file uploaded

Close Apply changes

### *Advanced*

---

**Enable adv. settings:** Check this box to enable the advanced manifest settings. If unchecked, all settings on this page are ignored.

---

**Parse response as:** Determines how to parse the response returned when requesting the **Manifest URL**. See below for an explanation of the settings.

---

**Always use headers:** If enabled, any headers specified in **Additional headers** configured below will be sent with all requests. If disabled, the additional headers will only be sent in the advanced manifest request.

---

<b>System routing:</b>	If enabled, the request for the advanced manifest URL uses the system routing table. If disabled, the request uses the routing configured for the associated OTT engine.
<b>Cache response:</b>	Defines for how long the advanced manifest response should be cached. If set to a non-zero value, the server is not queried again for the same URL until at least the configured number of minutes has passed. If the value for <i>Reset connection after</i> under <b>OTT — Settings</b> is lower, that value takes precedence.
<b>Method:</b>	Determines which HTTP method to use when requesting the top-level manifest file. Supported methods are <b>GET</b> and <b>POST</b> .
<b>Content-Type:</b>	When requesting the manifest using the HTTP <b>POST</b> , use this Content-Type for the submitted request body.
<b>Additional headers:</b>	To provide additional custom request headers or overwrite the default headers when requesting the top-level manifest file, create a text file containing the headers and upload them here.
<b>Body:</b>	When requesting the manifest using the HTTP <b>POST</b> , upload the file to submit here.

The advanced manifest options can be used in instances where the master manifest file is not directly available to download, or if additional parameters or an alternative HTTP method is required to access it.

If your channel needs several steps of authentication or other web service calls before supplying clients with an URL to the master manifest, you can make an “in-between” web service which the VB330 sends all required info to do the authentication and/or channel look-ups through this interface. Set **Parse response as** to *JSON with manifest URL* and have the in-between service return a JSON file with an “url” parameter containing the URL to the master manifest file.

If your channel just needs additional headers and/or an alternative HTTP method to return the master manifest, set **Parse response as** to *Normal manifest*. Enable **Always use headers** if the additional headers are to be supplied in all requests, and not only the request for the top-level manifest.

## 6.3.4 OTT — Settings

Active testing
Latency
Channels
**Settings**
Thresholds

### OTT engine settings

Reset connection after:  minutes

Latency engines:

Normal engines: 15

---

**Routing interface**

Engine 1

Engine 3

Engine 5

Engine 7

Engine 9

Engine 11

Engine 13

Engine 15

Latency engine 2

Latency engine 4

Latency engine 6

Latency engine 8

Latency engine 10

**Routing interface**

Engine 2

Engine 4

Engine 6

Engine 8

Engine 10

Engine 12

Engine 14

Latency engine 1

Latency engine 3

Latency engine 5

Latency engine 7

Latency engine 9

---

Page name	Page name	Page name
Page 1 <input type="text" value="Primus"/>	Page 2 <input type="text" value="Secundus"/>	Page 3 <input type="text" value="Set the name for page 3"/>
Page 4 <input type="text" value="Set the name for page 4"/>	Page 5 <input type="text" value="Set the name for page 5"/>	Page 6 <input type="text" value="Set the name for page 6"/>
Page 7 <input type="text" value="Set the name for page 7"/>	Page 8 <input type="text" value="Set the name for page 8"/>	Page 9 <input type="text" value="Set the name for page 9"/>
Page 10 <input type="text" value="Set the name for page 10"/>	Page 11 <input type="text" value="Set the name for page 11"/>	Page 12 <input type="text" value="Set the name for page 12"/>
Page 13 <input type="text" value="Set the name for page 13"/>	Page 14 <input type="text" value="Set the name for page 14"/>	Page 15 <input type="text" value="Set the name for page 15"/>
Page 16 <input type="text" value="Set the name for page 16"/>	Page 17 <input type="text" value="Set the name for page 17"/>	Page 18 <input type="text" value="Set the name for page 18"/>
Page 19 <input type="text" value="Set the name for page 19"/>	Page 20 <input type="text" value="Set the name for page 20"/>	Page 21 <input type="text" value="Set the name for page 21"/>
Page 22 <input type="text" value="Set the name for page 22"/>	Page 23 <input type="text" value="Set the name for page 23"/>	Page 24 <input type="text" value="Set the name for page 24"/>
Page 25 <input type="text" value="Set the name for page 25"/>		

The **Settings** view makes it possible to change global and per-engine OTT monitoring parameters. Press **Apply** to confirm changes made.


### *Settings*

**Reset connection after:** Configures the VB330 OTT engines to reset the connections after the specified number of minutes. This is useful for cases where the server has a limit for how long a session can live. By resetting before that limit a new session is created and the problem is avoided.

**Routing interface:** Selects the interface on which to connect to the OTT server. This defaults to the interface selected in the **Setup — Routing** view, but can be overridden for each engine. The routing applies to all channels monitored by this engine.

**Page name:** This setting allows names to be associated with different pages. Individual channels can be assigned to different pages in the **OTT — Channels** view, to facilitate easier navigation in the different **OTT** views.

### 6.3.5 OTT — Thresholds

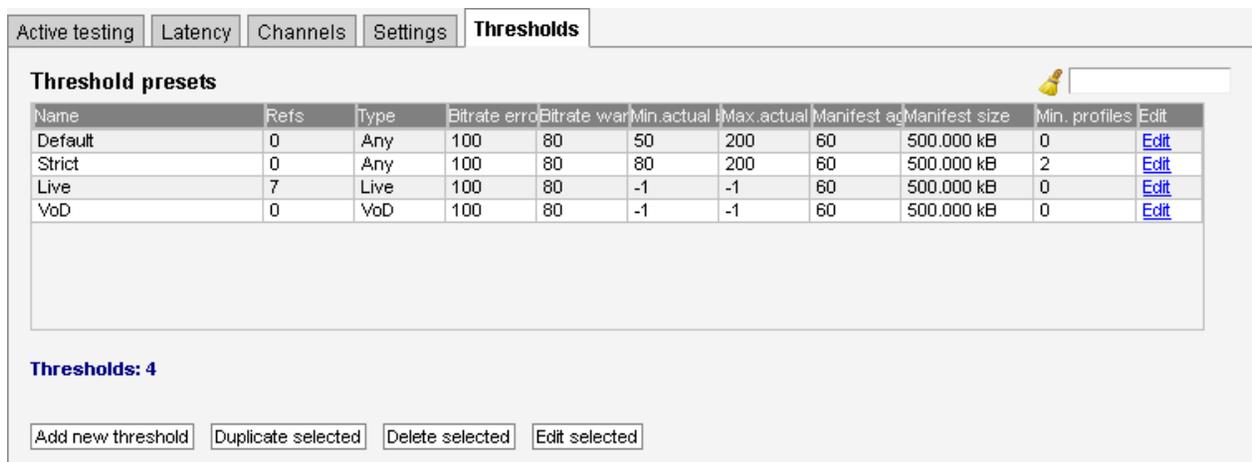

**Threshold presets**

Name	Refs	Type	Bitrate error	Bitrate warn	Min. actual	Max. actual	Manifest ad	Manifest size	Min. profiles	Edit
Default	0	Any	100	80	50	200	60	500.000 kB	0	<a href="#">Edit</a>
Strict	0	Any	100	80	80	200	60	500.000 kB	2	<a href="#">Edit</a>
Live	7	Live	100	80	-1	-1	60	500.000 kB	0	<a href="#">Edit</a>
VoD	0	VoD	100	80	-1	-1	60	500.000 kB	0	<a href="#">Edit</a>

**Thresholds: 4**

The OTT **Threshold presets** list shows OTT threshold templates configured by the user.

To add a threshold template to the list click the **Add new threshold** button. This will open the **Edit threshold** pop-up view, allowing the user to define threshold parameters. A threshold template entry can be selected by clicking the threshold template; the list entry will be highlighted. Several list entries can be selected by using regular *Ctrl + click* functionality. Clicking the **Duplicate selected** button will open the **Edit threshold** pop-up view with all threshold template parameters duplicated, except the threshold template name. Clicking **Delete selected** will delete the highlighted list entry. Clicking **Edit selected** will open the **Edit threshold** pop-up view associated with the highlighted threshold template. Batch editing is supported. Select the threshold templates and click the **Edit selected** button. Parameters differing between templates will be indicated in the **Edit selected** pop-up view by an asterisk wildcard symbol.

The search field in the upper right corner of the view allows the user to type a text string, and the threshold list is updated to display only thresholds matching the specified text.

**Edit Threshold** X

Name:

Parameter	Threshold	Format	Description
Profile stream type	Any		Expected profile stream type
Download speed error	100	%	Download time / segment length >= err-thresh %
Download speed warn.	-1	%	Download time / segment length >= warn-thresh %
Actual bitrate min	-1	%	Downloaded segment size / indicated segment length <= % of profile bitrate
Actual bitrate max	-1	%	Downloaded segment size / indicated segment length >= % of profile bitrate
Actual bitrate media type	Any		Profile media type to apply actual bitrate alarm to
Sequence age	60	seconds	Number of seconds manifest files are allowed to stay unchanged (Live streams)
Manifest size	500000	bytes	Maximum size of the manifest files
Min. profiles	1	profiles	Minimum number of profiles
Ignore video profiles	<input type="checkbox"/>		Do not raise any alarms for video profiles
Ignore audio profiles	<input type="checkbox"/>		Do not raise any alarms for audio profiles
Ignore subtitle profiles	<input type="checkbox"/>		Do not raise any alarms for subtitle profiles
Ignore trickplay profiles	<input type="checkbox"/>		Do not raise any alarms for trickplay profiles
Ignore mixed profiles	<input type="checkbox"/>		Do not raise any alarms for mixed profiles
Ignore image profiles	<input type="checkbox"/>		Do not raise any alarms for image profiles
Download ignored profiles	<input checked="" type="checkbox"/>		Download segments of ignored profiles

To disable an alarm, set Threshold value to -1

To disable a threshold alarm, set the threshold value to *-1* or *Any*. This does **not** apply for *Manifest XML size*.

---

### Threshold preset

---

**Name:** The threshold template name defined by the user.

**Refs:** The number of channels associated with the threshold template

**Profile stream type:** The stream type (*Live* or *VoD*). If any of the profiles have a different type a wrong profile type alarm will be raised.

**Download speed error:** The maximum allowed difference between profile bitrate and download bitrate (%). If the difference exceeds the threshold value a bitrate error alarm will be raised.

**Download speed warn:** The maximum allowed difference between profile bitrate and download bitrate (%). If the difference exceeds the threshold value a bitrate error warning will be raised.

**Actual bitrate min:** The minimum allowed bitrate when measured actual bitrate is compared to profile bitrate (%). If the actual bitrate goes below the threshold an actual bitrate alarm will be raised.

**Actual bitrate max:** The maximum allowed bitrate when measured actual bitrate is compared to profile bitrate (%). If the actual bitrate exceeds the threshold an actual bitrate alarm will be raised.

---

---

<b>Actual bitrate media type:</b>	The profile types that the actual bitrate alarm applies to. If set to <i>Any</i> , the actual bitrate is checked for all profiles.
<b>Sequence age:</b>	The maximum time a manifest can remain unchanged before a manifest age alarm is raised.
<b>Manifest size:</b>	The maximum detected size of the manifest before a manifest size alarm is raised. Manifests larger than this will not be analyzed. Also applies to profile manifests, where applicable.
<b>Min. profiles:</b>	Minimum number of profiles in the selected channel before an alarm is raised.
<b>Ignore X profiles:</b>	When any of these are checked, all alarms are disabled for profiles of the corresponding media types.
<b>Download ignored profiles:</b>	If this is unchecked, no segments will be downloaded for profiles which are ignored above.

---

## 6.4 Multicasts

### 6.4.1 Multicasts — Parameters

Thumb	Name	Signal	Page	CPU	Input	Mapping	Net bitrate	CC errs	Pids	Curr bitrate	Min bitrate	Max bitrate	IP packets	Dst address
	NRK_1	34h	1	2	B	7TS/UDP	8.944 Mbps	0	5	8.944 Mbps	2.362 Mbps	8.968 Mbps	75707518	239.255.0.1:5500
	NRK_2	34h	1	3	B	7TS/UDP	4.232 Mbps	0	5	4.232 Mbps	2.357 Mbps	8.960 Mbps	64174782	239.255.0.2:5500
	TV2_NORWAY	34h	1	4	B	7TS/UDP	4.456 Mbps	0	5	4.456 Mbps	735.248 kbps	8.752 Mbps	47296409	239.255.0.3:5500
	TVNORGE	34h	1	5	B	7TS/UDP	3.144 Mbps	0	5	3.144 Mbps	2.228 Mbps	4.968 Mbps	40174174	239.255.0.4:5500
	STAR	34h	1	7	B	7TS/UDP	2.921 Mbps	1	5	2.921 Mbps	1.977 Mbps	3.035 Mbps	32200974	239.255.0.6:5500
	CNN_EUROPE	34h	1	4	B	7TS/UDP	2.644 Mbps	0	5	2.644 Mbps	2.168 Mbps	4.030 Mbps	40653886	239.255.0.10:5500
	MTV_NORDIC	34h	1	6	B	7TS/UDP	4.176 Mbps	0	6	4.176 Mbps	4.152 Mbps	4.192 Mbps	49091959	239.255.0.12:5500
	DISCOVERY_WORLD	34h	1	7	B	7TS/UDP	3.672 Mbps	0	5	3.672 Mbps	3.656 Mbps	3.721 Mbps	43331102	239.255.0.13:5500
	TV2 ZEBRA	34h	1	4	B	7TS/UDP	4.760 Mbps	0	5	4.760 Mbps	728.576 kbps	8.752 Mbps	47616019	239.255.0.31:5500
	BBC HD	34h	1	4	B	7TS/UDP	12.424 Mbps	0	12	12.424 Mbps	12.408 Mbps	12.744 Mbps	146618770	239.255.0.159:5500
	Accumulated	34h		1		n/a	51.373 Mbps	1	58	51.373 Mbps	3.480 Mbps	59.084 Mbps		

The **Multicasts — Parameters** view displays detailed information about each stream.

The user selects which group of measurements should be displayed. Selections are *IP parameters*, *TS parameters*, *Ethernet parameters*, *RTP and FEC parameters*, *User-defined parameters* and *Statistical parameters*. If *User-defined parameters* is selected, the **Multicasts** view displays parameters selected by the user in the **Multicasts — Parameters — Fields** view.

For each page the *Accumulated* row at the bottom of the multicast list displays accumulated values for all streams associated with the page. The accumulated *Min bitrate* and *Max bitrate* is the minimum and maximum value of the *Accumulated* current bitrate.

Thumb	Name	Signal	Page	CPU	Input	Mapping	Net bitrate	CC errs	Pids	Curr bitrate	Min bitrate	Max bitrate	IP packets	Dst address
	NRK_1	34h	1	2	B	7TS/UDP	6.744 Mbps	0	5	6.744 Mbps	2.362 Mbps	8.968 Mbps	75918222	239.255.0.1:5500
	NRK_2	34h	1	3	B	7TS/UDP	5.424 Mbps	0	5	5.424 Mbps	2.357 Mbps	8.960 Mbps	64316858	239.255.0.2:5500
	TV2_NORWAY	34h	1	4	B	7TS/UDP	3.520 Mbps	0	5	3.520 Mbps	735.248 kbps	8.752 Mbps	47403979	239.255.0.3:5500
	TVNORGE	34h	1	5	B	7TS/UDP	2.992 Mbps	0	5	2.992 Mbps	2.228 Mbps	4.968 Mbps	40285019	239.255.0.4:5500
	STAR	34h	1	7	B	7TS/UDP	2.576 Mbps	1	5	2.576 Mbps	1.977 Mbps	3.035 Mbps	32277174	239.255.0.6:5500
	CNN_EUROPE	34h	1	4	B	7TS/UDP	3.680 Mbps	0	5	3.680 Mbps	2.168 Mbps	4.030 Mbps	40760389	239.255.0.10:5500
	MTV_NORDIC	34h	1	6	B	7TS/UDP	4.168 Mbps	0	6	4.168 Mbps	4.152 Mbps	4.192 Mbps	49213393	239.255.0.12:5500
	DISCOVERY_WORLD	34h	1	7	B	7TS/UDP	3.680 Mbps	0	5	3.680 Mbps	3.656 Mbps	3.721 Mbps	43438289	239.255.0.13:5500
	TV2 ZEBRA	34h	1	4	B	7TS/UDP	3.080 Mbps	0	5	3.080 Mbps	728.576 kbps	8.752 Mbps	47747551	239.255.0.31:5500
	BBC HD	34h	1	4	B	7TS/UDP	12.600 Mbps	0	12	12.600 Mbps	12.408 Mbps	12.744 Mbps	146981565	239.255.0.159:5500
	Accumulated	34h		1		n/a	48.464 Mbps	1	58	48.464 Mbps	3.480 Mbps	59.084 Mbps		

When the **Current page** button is clicked it is possible to select the page from a drop-down menu. The associated thumbnails are shown in the leftmost column of the list of measurements. Click one

of the small thumbnails to view a larger thumbnail that is updated more frequently. Note that it is possible to disable probe thumbnail extraction in the **Setup — Params** view.

When **All streams (offline)** is clicked a complete list of measurements for all joined streams is displayed. A search field allows the user to type a text string and the multicast list is updated to display only multicasts matching the specified text. Note that monitoring parameters and thumbs will not be updated in **All streams (offline)** mode.

Peak and aggregate measurements are cleared when the **Clear counters** or **Clear counters all pages** button is clicked. Clicking this button also restarts the ETR monitoring for the streams have this enabled.

Clicking the **Export** button will allow export of the measurement data as an XML file that is opened in a new window.

Name	ES(IAT)-24h	ES(MLR)-24h	ES(RTP)-24h	ES(overfl)-24h	ES(nosig)-24h	Peak(IAT)-24h	Sum(MLR)-24h	Peak(bitr)-24h
NRK_1	0	0	0	0	0	5.3 ms	0	8.900 Mbps
NRK_2	0	0	0	0	0	5.6 ms	0	8.900 Mbps
TV2_NORWAY	0	0	0	0	0	36.1 ms	0	8.700 Mbps
TVNORGE	0	0	0	0	0	10.3 ms	0	4.900 Mbps
STAR	0	0	0	0	0	9.4 ms	0	3.000 Mbps
CNN_EUROPE	0	0	0	0	0	25 ms	0	4.000 Mbps
MTV_NORDIC	0	0	0	0	0	4.3 ms	0	4.100 Mbps
DISCOVERY_WORLD	0	0	0	0	0	5.6 ms	0	3.700 Mbps
TV2 ZEBRA	0	0	0	0	0	33.7 ms	0	8.500 Mbps
BBC HD	0	0	0	0	0	1.5 ms	0	12.700 Mbps
Accumulated								

Clicking a stream brings up the **Detailed monitoring** pop-up described later in this section.

In **All streams (offline)** mode a search field allows the user to type a text string and the multicast list is updated to display only multicasts matching the specified text.

Name	ES(IAT)-24h	ES(MLR)-24h	ES(RTP)-24h	ES(overfl)-24h	ES(nosig)-24h	Peak(IAT)-24h	Sum(MLR)-24h	Peak(bitr)-24h
NRK_1	0	2	0	0	0	7.1 ms	5	9.30 Mbps
NRK_2	0	0	0	0	0	4.9 ms	0	9.30 Mbps
TVNORGE	0	0	0	0	0	4.7 ms	0	5.20 Mbps
STAR	8	9	0	0	0	433.9 ms	243	4.40 Mbps
CNN_EUROPE	0	0	0	0	0	57.5 ms	0	4.20 Mbps
TRAVEL_CHANNEL	0	0	0	0	0	6.6 ms	0	3.30 Mbps
DISCOVERY_WORLD	0	0	0	0	0	7.7 ms	0	3.60 Mbps
ANIMAL_PLANET	0	0	0	0	0	14.8 ms	0	5.40 Mbps
BBC_LIFESTYLE	0	0	0	0	0	7.6 ms	0	4.20 Mbps
BBC_ENTERTAINMEN	0	0	0	0	0	3.7 ms	0	4.20 Mbps
BBC_WORLD	0	6	0	0	0	5.3 ms	75	3.90 Mbps
BOOMERANG	0	0	0	0	0	22.9 ms	0	4.60 Mbps
TCM_NORDIC	0	0	0	0	0	33.9 ms	0	4.40 Mbps
CARTOON_NORDIC	0	0	0	0	0	22.6 ms	0	4.70 Mbps
TV2 ZEBRA	0	0	0	0	0	10.6 ms	0	8.70 Mbps
DISCOVERY_SCIENCE	0	0	0	0	0	8 ms	0	3.60 Mbps
DISNEY_CHANNEL	0	1	0	0	0	4.4 ms	20	4.60 Mbps
DISNEY_XD	0	1	0	0	0	4.4 ms	22	4.30 Mbps
TV2 FILMKANALEN	0	0	0	0	0	10.6 ms	0	7.70 Mbps

Click the **Trim ch-list** button to unjoin streams with current status ‘No signal’, thereby removing them from the list. The **Statistical parameters** view lists sum or peak values for parameters over the interval indicated by the selected time button (Last 4d, Last 24h, Last 8h, Last 20m, Last 1m).

### 6.4.1.1 Parameter columns

Following is a listing explaining the meaning of the columns which may be shown for the joined multicasts view at **Multicasts — Parameters**. The columns displayed may be selected in see **Multicasts — Parameters — Fields**.

---

#### *Common parameters*

---

<b>①:</b>	Click the information icon to access the <b>Detailed Monitoring</b> pop-up view.
<b>Thumb:</b>	If thumbnail extraction has been enabled, a thumbnail is displayed for each unencrypted stream. Click the small thumbnail to view a larger image that is updated more frequently. If thumbnail extraction has not been enabled, or if the thumbnail extraction fails, an informational icon will be displayed instead, see <b>Thumbnails</b> below for details on the different icons.
<b>Name:</b>	The stream name specified by the user in the <b>Edit Multicast</b> view
<b>Signal:</b>	Time since last signal loss
<b>Page:</b>	The page associated with the multicast
<b>CPU:</b>	CPU core monitoring this multicast
<b>Input:</b>	Network interface used to receive this multicast
<b>Mapping:</b>	For MPEG-2 Transport streams, the number of MPEG-2 packets mapped into each RTP, UDP or SRT packet is displayed here. For SMPTE 2022-7 combined streams, “ST 2022-7” is displayed. For MABR streams, when MSYNC packets are detected, “MSYNC<version>/<protocol>” is displayed, where “<version>” is either 1 or 3 and “<protocol>” is either UDP or RTP. For other unsupported RTP streams, “RTP data” is displayed.

---

#### *IP parameters*

---

<b>Curr bitrate:</b>	Instantaneous MPEG-2 Transport Stream bitrate including null packets (PID 8191). The instantaneous bitrate is measured over a time period of 1000 ms, and is calculated from the size of the RTP, L2TP or UDP payloads.
<b>Min bitrate:</b>	The minimum current bitrate measurement
<b>Max bitrate:</b>	The maximum current bitrate measurement
<b>IP packets:</b>	The number of IP packets received
<b>Dst address:</b>	Multicast/unicast destination address : port
<b>TOS:</b>	Type-Of-Service (also called Differentiated Services Field)
<b>TTL:</b>	Time-To-Live
<b>VLAN ID:</b>	Native VLAN ID of this stream
<b>Src address:</b>	Multicast/unicast source address : port
<b>Joined src:</b>	The source address of the originally joined multicast.

---

---

<b>IAT avg:</b>	Average Inter-Arrival Time. The average time between consecutive IP frames (in milliseconds). Recalculated each second. For SMPTE ST 2022-7 combined streams, the path differential (PD) is shown instead, with the sign indicating which of the paths is ahead of the other.
<b>IAT min:</b>	The Minimum Inter-Arrival Time is the minimum registered time between two consecutive IP frames carrying video. Units are in milliseconds. For SMPTE ST 2022-7 combined streams, the minimum path differential is shown instead.
<b>IAT max:</b>	The Maximum Inter-Arrival Time is the maximum registered time between two consecutive IP frames carrying video. Units are in milliseconds. The Max-IAT is a measure of the maximum amount of network-induced packet jitter present. IP packet jitter affects video quality and should be minimized. For SMPTE ST 2022-7 combined streams, the maximum path differential is shown instead.

---

*TS parameters*

---

<b>Net bitrate:</b>	Instantaneous MPEG-2 Transport Stream bitrate excluding null packets (PID 8191). The instantaneous bitrate is measured over a time period of 1000 ms. No bitrate is reported for SMPTE ST 2022-7 combined streams.
<b>CC errs:</b>	The number of times a discontinuity has been detected for all the MPEG-2 Transport Stream continuity counters. This value is the total number of discontinuities detected for all PIDs present. Note that this value does NOT represent the number of MPEG-2 TS packets lost because any continuity counter mismatch detected for an IP-frame will increase CC errs by one. CC errors are serious as they will in practice usually result in visual video artifacts ('blocking') if occurring on the video PIDs. CC errors can be due to an erroneous input signal to the streaming head-end (e.g. from satellite rain fading or changes in the uplink). Alternatively, CC errors can arise from IP packets being dropped in the network.
<b>PIDs:</b>	Number of PIDs in the MPEG2-TS
<b>Syncb errs:</b>	Number of transport stream packets with wrong syncbyte (0x47)
<b>#Services:</b>	The number of services found in the multicasts

---

*Ethernet parameters*

---

<b>Src MAC:</b>	Source MAC address
<b>Dst MAC:</b>	Destination MAC address

---

*RTP Parameters*

---

<b>RTP drops:</b>	Accumulated number of dropped IP-frames due to network errors. Only available for multicasts that carry RTP information, and for L2TP streams that carry sequence numbers. When running video inside an RTP wrapper it is possible to exactly deduce the number of dropped IP frames due to network issues. This is possible as a result of the 16-bit sequence counter inside the RTP header. The following sequence will generate an RTP drops of +3: ..., 10, 11, 12, 16, 17, 18, ...
<b>RTP dups:</b>	Accumulated number of duplicate IP-frames. Only available for multicasts that carry RTP information, and for L2TP streams that carry sequence numbers. Duplicate IP-frames in the network can occur under normal circumstances and does not necessarily indicate network problems. The following sequence will generate an RTP dups of +2: ..., 10, 11, 12, 12, 12, 13, 14, ...
<b>RTP ooo:</b>	Accumulated number of times a packet has been found to be out of order. Only available for multicasts that carry RTP information. An out-of-order situation is defined to have occurred when the current sequence number is lower than the previous one. The following sequence will generate an RTP ooo of +2 (since there are two occurrences): ..., 10, 11, 15, 12, 16, 17, 13, 14, 18, 19, ...
<b>RTP lag:</b>	The maximum number of packet positions an out-of-order packet has been moved relative to its correct position. So for example 1,2,3,5,6,7,8,4,9,10 will result in an RTP lag of 4. The RTP lag is a good measure of how big a packet re-ordering buffer is needed in the receiving equipment to re-order packets.
<b>Min hole size:</b>	Minimum number of consecutive dropped RTP packets. The sequence 1,2,3,10,11,12,15 gives a min hole size of 2.
<b>Max hole size:</b>	Maximum number of consecutive dropped RTP packets. The sequence 1,2,3,10,11,12,15 gives a max hole size of 6.
<b>Min hole sep:</b>	Minimum number of RTP packets separating any holes. The sequence 1,2,3,10,11,12,15 gives a min hole sep of 3.
<b>Num holes:</b>	Number of packet loss sequences. The sequence 1,2,3,10,11,12,15 gives a num holes of 2.
<b>FEC mode:</b>	The CoP3 FEC mode.
<b>FEC drops:</b>	Number of RTP packet drops in the main stream that the FEC could not correct.
<b>C-FEC drops:</b>	Number of IP packets in the column-FEC streams dropped.
<b>R-FEC drops:</b>	Number of IP packets in the row-FEC streams dropped.

---

*Statistical parameters: MPEG-2 transport stream parameters*

---

<b>ES(IAT):</b>	Number of seconds during selected period with Inter-packet Arrival Time higher than associated Ethernet IAT warning threshold.
<b>ES(MLR):</b>	Number of seconds during selected period with Media Loss (corresponding to number of seconds with CC-errors).

---

<b>ES(RTP):</b>	Number of seconds during selected period with RTP packet drops.
<b>ES(overflow):</b>	Number of seconds during selected period with bitrate overflow.
<b>ES(nosig):</b>	Number of seconds during selected period without signal.
<b>Peak(IAT):</b>	Peak Inter-packet Arrival Time during selected period.
<b>Sum(MLR):</b>	Sum of Media Loss during selected period (equals number of TS packets lost).
<b>Peak(bitr):</b>	Peak stream bitrate during selected period.

### *MSYNC parameters*

<b>MSYNC URI</b>	URI of of the MSYNC object being decoded as given from the object URI field of the Object Info MSYNC packet.
------------------	--

## Thumbnails

The probe will try to generate thumbnail pictures for all streams. For multi-program transport streams (MPTS) the first video component is selected. MPEG-2, H.264/MPEG-4, H.265/HEVC, JPEG 2000 and JPEG XS video formats in standard definition, high definition or ultra-high definition are supported in MPEG-2 transport streams. Thumbnails are not generated for SMPTE ST 2022-7 combined streams.

The thumbnail update rate will depend on how the streams are coded and if they are standard definition, high definition or ultra-high definition. It is possible to increase the update rate by opening the **Thumb View** pop-up, described below.

If the probe is unable to generate a thumbnail from the signal, it will present one of the following icons:

	Shown if no data is received for the stream. There should be a match between presenting this icon and a No-signal alarm; however since the alarm and thumbnail mechanisms work independently of each other they have been given different names (loss of signal and no signal).
	Shown while the thumbnail engine is trying to decode a thumbnail picture and more precise status information has not yet been obtained. This icon is typically displayed after probe reboot or if new streams have recently been joined.
	Shown if the service does not carry a video PID — which is the case for radio services.
	The stream contains no service, as signaled in PSI/SI.
	The signal cannot be decoded due to excessive CC errors or RTP packet drops.

	<p>The signal cannot be decoded because the Transport Error Indicator bit (TEI) is set.</p>
	<p>The signal cannot be decoded because the video bitstream contains errors. It might be possible to create thumbnails from this stream by enabling the “Ignore bitstream errors” checkbox in the content thresholds associated with the stream.</p>
	<p>The probe does not support thumbnail generation for this protocol mapping.</p>
	<p>The signal is recognized as being MPEG-2 encoded but the thumbnail extractor is unable to correctly decode a thumbnail picture.</p>
	<p>The signal is recognized as being MPEG-4/H.264 encoded but the thumbnail extractor is unable to correctly decode a thumbnail picture.</p>
	<p>The signal is recognized as being MPEG-H/H.265 encoded but the thumbnail extractor is unable to correctly decode a thumbnail picture.</p>
	<p>The signal is recognized as being JPEG 2000 encoded but the thumbnail extractor is unable to correctly decode a thumbnail picture.</p>
	<p>The signal is recognized as being JPEG XS encoded but the thumbnail extractor is unable to correctly decode a thumbnail picture. To display thumbnails for JPEG XS services, the JPEGXS-OPT license is required.</p>
	<p>The signal is recognized as being an uncompressed (raw) video stream but the thumbnail extractor is unable to correctly decode a thumbnail picture.</p>
	<p>This icon is shown if the probe is unable to receive or analyze the PMT PID. Only streams with PSI information can have thumbnails decoded since the probe does not support a manual specification of the video PID.</p>
	<p>The probe can only generate a thumbnail picture if the video data is not scrambled.</p>
	<p>The stream is configured to be interpreted as MABR.</p>


## Detailed Monitoring

The **Detailed Monitoring** pop-up is activated by clicking a stream line in the monitoring list.

The current parameters for the selected stream are displayed in the bottom of the dialog, as in the **Joined multicasts** list.

Clicking the **Clear** button will clear all information about the selected stream, including PSI/SI analysis data. Clicking the **MediaWindow** button will open the Media Window **Selected channel** view. This is described in section 6.5.

## Detailed Monitoring — Services

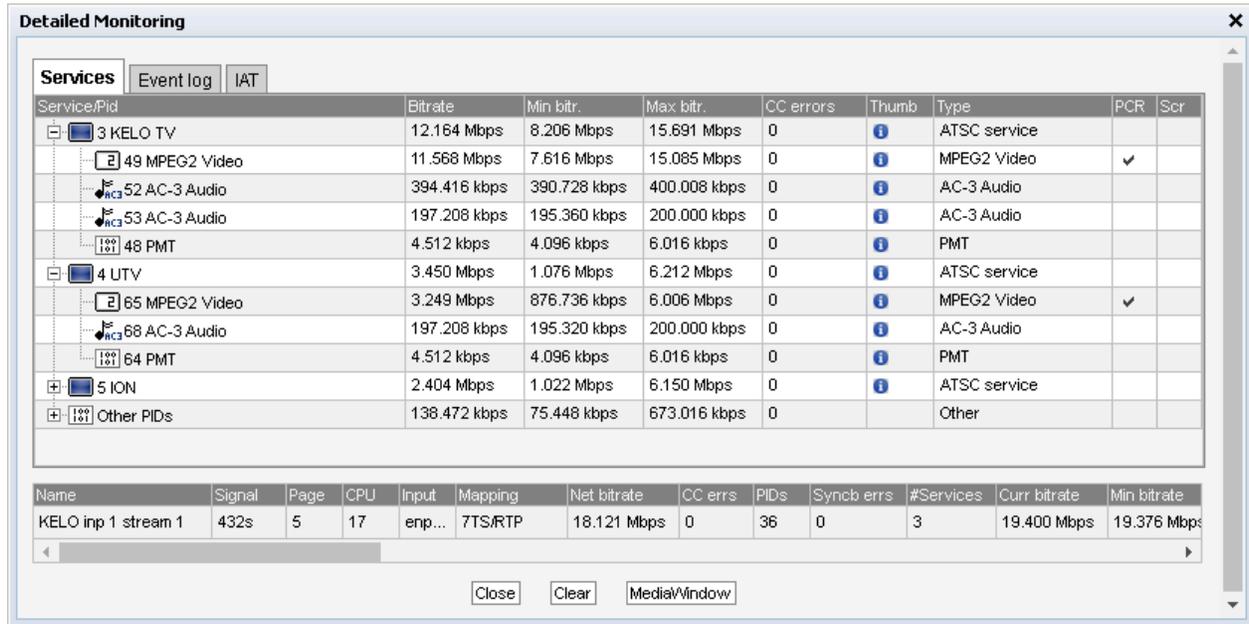

Service/Pid	Bitrate	Min bitr.	Max bitr.	CC errors	Thumb	Type	PCR	Scr
3 KELO TV	12.164 Mbps	8.206 Mbps	15.691 Mbps	0		ATSC service		
49 MPEG2 Video	11.568 Mbps	7.616 Mbps	15.085 Mbps	0		MPEG2 Video	✓	
52 AC-3 Audio	394.416 kbps	390.728 kbps	400.008 kbps	0		AC-3 Audio		
53 AC-3 Audio	197.208 kbps	195.360 kbps	200.000 kbps	0		AC-3 Audio		
48 PMT	4.512 kbps	4.096 kbps	6.016 kbps	0		PMT		
4 UTV	3.450 Mbps	1.076 Mbps	6.212 Mbps	0		ATSC service		
65 MPEG2 Video	3.249 Mbps	876.736 kbps	6.006 Mbps	0		MPEG2 Video	✓	
68 AC-3 Audio	197.208 kbps	195.320 kbps	200.000 kbps	0		AC-3 Audio		
64 PMT	4.512 kbps	4.096 kbps	6.016 kbps	0		PMT		
5 ION	2.404 Mbps	1.022 Mbps	6.150 Mbps	0		ATSC service		
Other PIDs	138.472 kbps	75.448 kbps	673.016 kbps	0		Other		


Name	Signal	Page	CPU	Input	Mapping	Net bitrate	CC errs	PIDs	Synchb errs	#Services	Curr bitrate	Min bitrate
KELO inp 1 stream 1	432s	5	17	enp...	7TS/RTP	18.121 Mbps	0	36	0	3	19.400 Mbps	19.376 Mbps

The 10G Probe is continuously gathering detailed information for the selected multicast. The VB330 will continue updating the detailed information for the selected multicast until another is selected.

The **Detailed Monitoring — Services** view lists detected MPEG-2 TS services (by analyzing the PSI/SI tables), providing the following aggregate information for each service:


<b>Service/Pid:</b>	For each service, the service-name or service-id is obtained from the PSI/SI tables. PIDs that do not belong to a service are denoted 'Other PIDs'. The service ID is presented in square brackets.
<b>Bitrate:</b>	Service bitrate in bits per second
<b>Min bitr.:</b>	Minimum service bitrate in bits per second
<b>Max bitr.:</b>	Maximum service bitrate in bits per second
<b>CC errors:</b>	Number of Continuity Counter occurrences
<b>Thumb:</b>	Click the  icon to access the <b>Thumb</b> pop-up view, explained below
<b>Type:</b>	The list entry service type or PID type
<b>PCR:</b>	This field will be checked if the corresponding PID carries PCR
<b>Scr:</b>	This field will be checked if the corresponding PID is scrambled

## Detailed Monitoring — Event Log

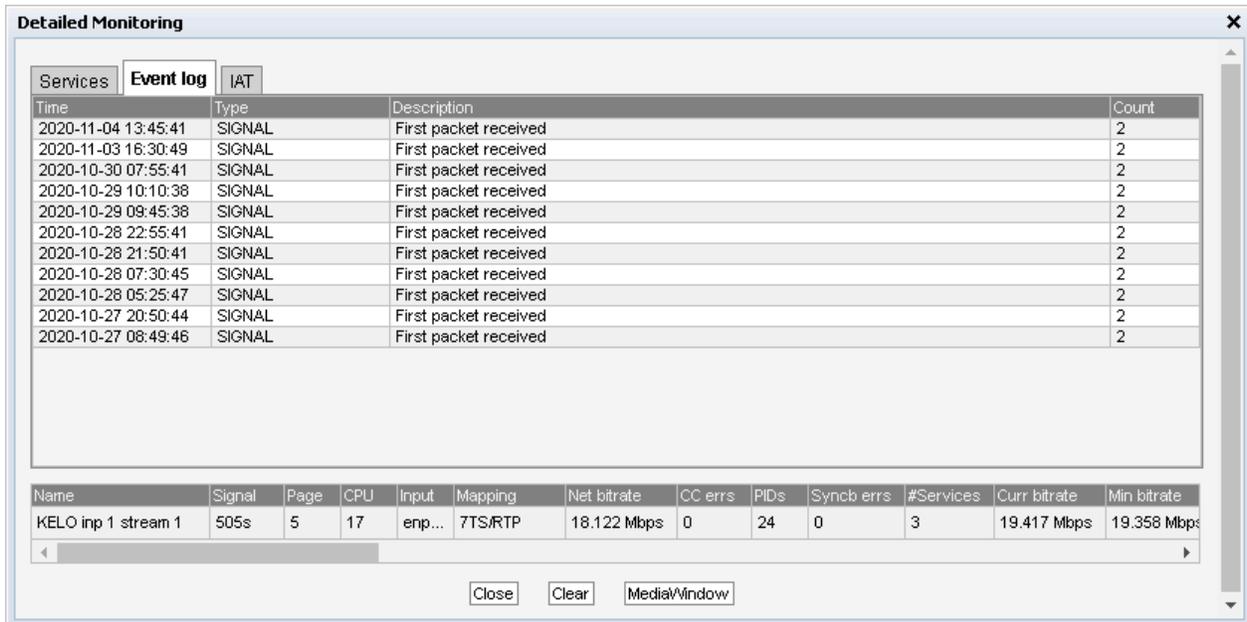

The event log contains informative text that may prove helpful for diagnosing transport and bitstream level errors.

### Detailed Monitoring — IAT

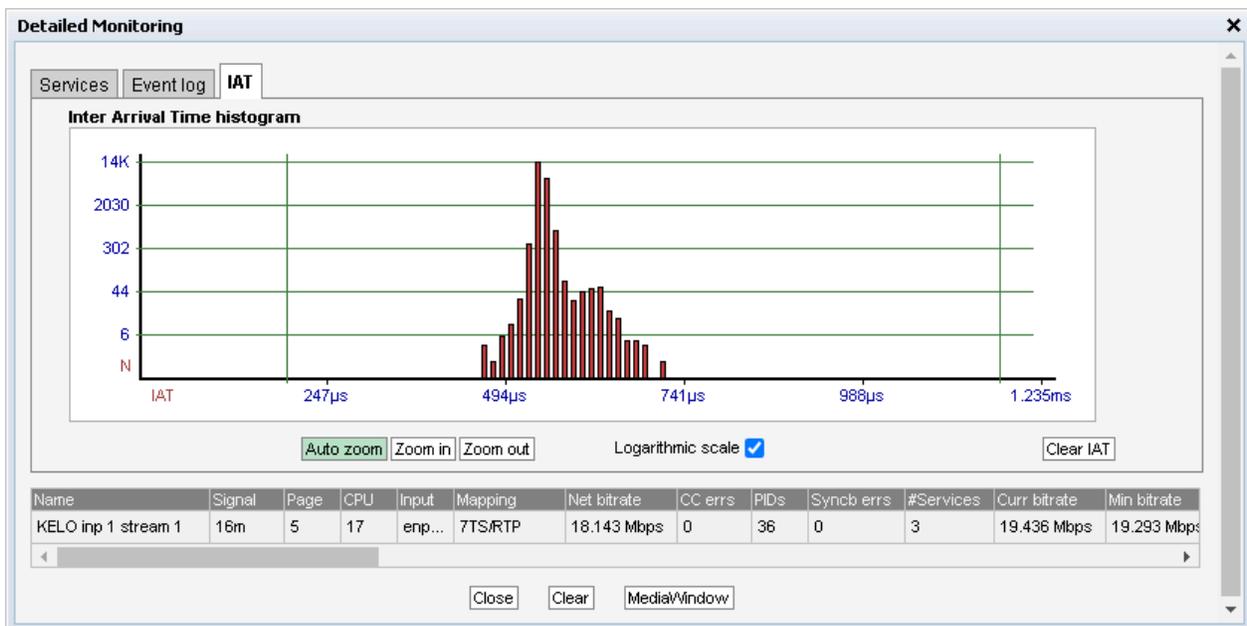


In the **Detailed Monitoring — IAT** view, the **Inter Arrival Time** histogram shows the accumulated number of IAT measurements within each presented interval. Vertical green lines indicate the maximum and minimum IAT values. By clicking the IAT range buttons it is possible to change the zooming of the graph. If the **Auto zoom** button is pressed the diagram will auto-scale to always include the minimum and maximum IAT readings.

The IAT histogram is a very useful and intuitive measure of how well the network is performing in terms of forwarding real-time traffic. A predictable and tightly bunched graph indicates small levels of network jitter. An unbound graph indicates network jitter issues typically brought forward by traffic congestion or misconfigured routers. Clicking the **Clear IAT** button will clear the IAT graph.

Note that for variable bitrate streams the IAT histogram will show a very different IAT distribution compared to the histogram for a constant bitrate stream. The histogram in the screenshot above displays the IAT distribution for a CBR stream.

For SMPTE ST 2022-7 combined streams, the path differential (PD) is shown instead.

### Detailed Monitoring — MSYNC

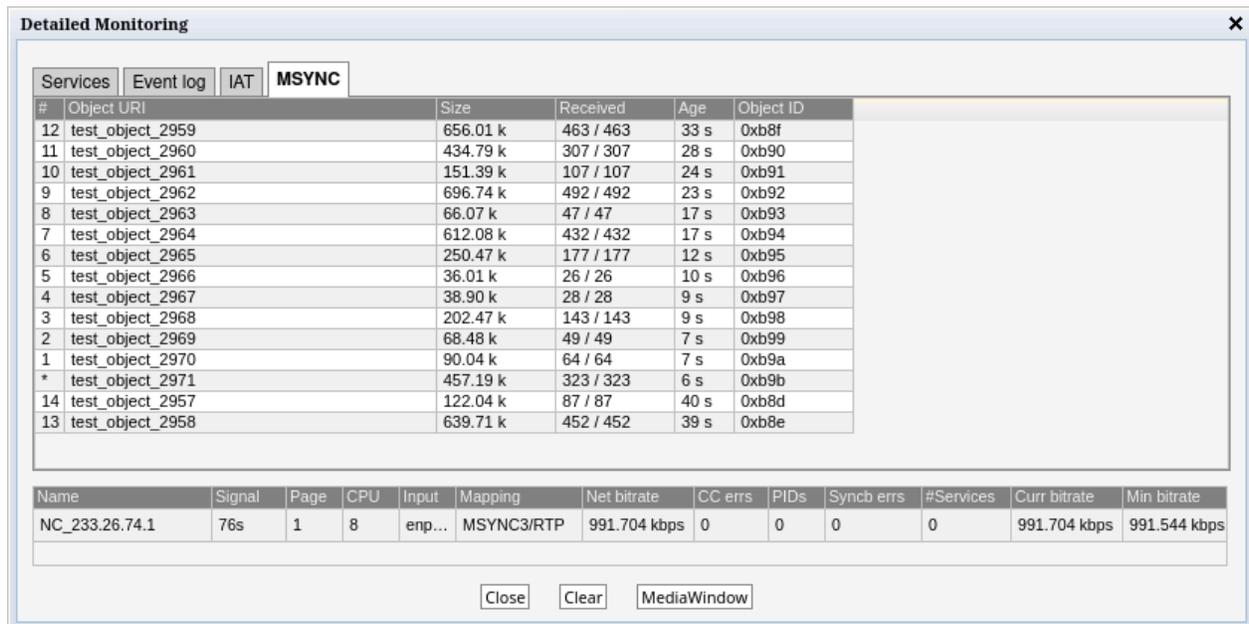

#	Object URI	Size	Received	Age	Object ID
12	test_object_2959	656.01 k	463 / 463	33 s	0xb8f
11	test_object_2960	434.79 k	307 / 307	28 s	0xb90
10	test_object_2961	151.39 k	107 / 107	24 s	0xb91
9	test_object_2962	696.74 k	492 / 492	23 s	0xb92
8	test_object_2963	66.07 k	47 / 47	17 s	0xb93
7	test_object_2964	612.08 k	432 / 432	17 s	0xb94
6	test_object_2965	250.47 k	177 / 177	12 s	0xb95
5	test_object_2966	36.01 k	26 / 26	10 s	0xb96
4	test_object_2967	38.90 k	28 / 28	9 s	0xb97
3	test_object_2968	202.47 k	143 / 143	9 s	0xb98
2	test_object_2969	68.48 k	49 / 49	7 s	0xb99
1	test_object_2970	90.04 k	64 / 64	7 s	0xb9a
*	test_object_2971	457.19 k	323 / 323	6 s	0xb9b
14	test_object_2957	122.04 k	87 / 87	40 s	0xb8d
13	test_object_2958	639.71 k	452 / 452	39 s	0xb8e

Name	Signal	Page	CPU	Input	Mapping	Net bitrate	CC errs	PIDs	Syncb errs	#Services	Curr bitrate	Min bitrate
NC_233.26.74.1	76s	1	8	enp...	MSYNC3/RTP	991.704 kbps	0	0	0	0	991.704 kbps	991.544 kbps

When MSYNC monitoring is enabled for a stream, this view displays a list of the objects received. To enable MSYNC monitoring, the stream may be configured as *MSYNC* in **Multicasts — Streams — Edit**.

The probe retains a list of the last 15 objects received for each stream configured as *MSYNC*. As new objects are received, they are appended to the bottom of the list. When the probe has filled up the list, it starts writing new objects from the first row again, thereby overwriting the oldest objects. This facilitates viewing the objects which have been received within the last update. In addition it makes reading the lines easier as only the minimum amount of rows are changed between each view update.

The following columns are defined:

---

# Object receive order. The most recently received object is indicated with an asterisk (\*). The oldest object received is 14.

---

<b>Object URI</b>	The URI of the object as given from the object URI field of the Object Info MSYNC packet. If the file contains control information, i.e. the object type field of the Object Info MSYNC packet is equal to control or Media manifest, the URI is displayed as a link and the content of the object may be downloaded. The size of the file which the probe keeps is limited to 1 MiB. If the file was not received in its entirety, there will be gaps in the file.
<b>Size</b>	The size of the object as specified by the object size field of the Object Info MSYNC packet.
<b>Received</b>	Number of packets received / Number of packets in the object. Any difference between these two numbers indicates packet loss. The number of packets in the object is given by the number of MSYNC packets field of the Object Info MSYNC packet.
<b>Age</b>	The age of the object. This is calculated as the difference between the current time and the reception time of the Object Info MSYNC packet.
<b>Object ID</b>	The id of the object as given from the object identifier field of every MSYNC packet.

## Thumb View

Thumb View
✕



Stream (DELUXE MUSIC)	
Transport stream ID	15
Name	DELUXE MUSIC
Type	multicast
Multicast address	239.255.1.20
Multicast port	5500
Bitrate	2.844 Mbit/s
Content Threshold	Everything
Service Threshold	Default
Schedule	Never
Service (65)	
Video PID (3327)	
Video Information	
Size	544x576
Aspect ratio	16:9
Pixel aspect ratio	32:17
Codec	mpeg2video
Sampling format	YCbCr 4:2:0
Frame rate	25 Hz
Interlaced	yes
Audio PID (3328)	

PID	Language
3328	deu

Name	Status description
Freeze-frame	Consecutive frozen frames: 0
Color-freeze	Consecutive frozen frames: 0
SCTE 35 Gap	Threshold: 30 min 0 s
SCTE 35 Placements	Placement opportunities last clock hour: N/A Threshold: 2
SCTE 35 Placement Gap	Threshold: 30 min 0 s

Monitoring "DELUXE MUSIC" service ID 65.

Close

The **Thumb View** pop-up is accessed by clicking an information icon in the **Detailed Monitoring — Services** view. This view presents a large thumbnail, as well as video and audio metadata for the selected stream, with an increased update rate compared to non-selected streams. The same pop-up can be opened from the **Content — Thumbnails** view, see chapter 6.10.1 for more information.

Clicking the **Close** button will close the **Thumb View** view.

The following metadata is displayed for multicasts:

---

*Audio fields*

---

<b>PID:</b>	The audio PID for which the associated parameters apply
<b>Language:</b>	The audio language, as derived from PSI/SI

---

If SCTE 35 monitoring has been enabled for the channel, the last two SCTE 35 events for the service are displayed. For more information on these events, compare the **Content — SCTE 35** view.

The following stream status information will be displayed (bulbs will be green for status OK, red to indicate an active alarm and grey if the associated check has been disabled):

---

*Status description*

---

<b>Freeze-frame:</b>	<p>A bulb indicating the freeze-frame detection status. The freeze-frame error timeout value is set as part of the content threshold group associated with each multicast (refer to the <b>Content — Content thresh.</b> and <b>Multicasts — Streams — Edit</b> views).</p> <p><b>Consecutive frozen frames:</b> The number of consecutive equal frames that have been detected</p>
<b>Color-freeze:</b>	<p>A bulb indicating the color-freeze detection status. The freeze-frame error timeout value is set as part of the content threshold group associated with each multicast (refer to the <b>Content — Content thresh.</b> and <b>Multicasts — Streams — Edit</b> views).</p> <p><b>Consecutive frozen frames:</b> The number of consecutive single color frames that have been detected</p>
<b>SCTE 35 Gap:</b>	<p>If the probe has been licensed with the SCTE 35 Signaling Analysis and Logging option, this displays a status bulb indicating whether the SCTE 35 Command Gap alarm is active.</p> <p>The SCTE 35 alarming threshold values are set as part of the content threshold template associated with each multicast (refer to the <b>Content — Content thresh.</b> and <b>Multicasts — Streams — Edit</b> views).</p> <p><b>Time since last event:</b> The number of seconds since the last received SCTE 35 event is displayed here.</p> <p><b>Threshold:</b> The SCTE 35 Command gap threshold as defined in the content threshold template associated with the stream.</p>

---

---

**SCTE 35 Placements:** If the probe has been licensed with the SCTE 35 Signaling Analysis and Logging option, this displays a status bulb indicating whether the Too few SCTE 35 placement opportunities alarm is active. The SCTE 35 alarming threshold values are set as part of the content threshold template associated with each multicast (refer to the **Content — Content thresh.** and **Multicasts — Streams — Edit** views).

**Placement opportunities last clock hour:** The number of placement opportunities found during the previous clock hour, or N/A if the service was not monitored for the whole previous clock hour.

**Threshold:** The SCTE 35 Minimum number of placement opportunities per clock hour threshold as defined in the content threshold template associated with the stream.

---

**SCTE 35 Placement Gap:** If the probe has been licensed with the SCTE 35 Signaling Analysis and Logging option, this displays a status bulb indicating whether the SCTE 35 placement gap alarm is active. The SCTE 35 alarming threshold values are set as part of the content threshold template associated with each multicast (refer to the **Content — Content thresh.** and **Multicasts — Streams — Edit** views).

**Time since last opportunity:** The number of seconds since the start of the last placement opportunity is displayed here.

**Threshold:** The SCTE 35 Maximum opportunity gap threshold as defined in the content threshold template associated with the stream.

---

The right-hand column will display the following detailed metadata:

---

<i>Multicast</i>	
<b>Transport stream ID:</b>	The ID of the selected stream as shown in the list of multicasts; non-TS services display <i>I</i> here
<b>Name:</b>	The name of the multicast containing the selected service, as defined by the user
<b>Type:</b>	The type of the stream containing the selected service; multicast, unicast or SRT Stream (a type of unicast)
<b>Multicast address:</b>	The multicast address of the stream containing the selected service. Multicasts only; not displayed for SRT streams.
<b>Multicast port:</b>	The port number of the multicast containing the selected service. Multicasts only; not displayed for SRT streams.
<b>SRT Mode:</b>	The SRT mode of operation selected to receive an SRT stream. SRT streams only; not displayed for multicasts.

---

<b>SRT Latency:</b>	The configured latency for the SRT connection. SRT streams only; not displayed for multicasts.
<b>SRT Host:</b>	The host address of the SRT stream source. SRT streams only; not displayed for multicasts. Not displayed in case of SRT mode 'Listener'.
<b>SRT Port:</b>	The port used to receive from the SRT stream source. SRT streams only; not displayed for multicasts.
<b>Bitrate:</b>	The total stream bitrate of the multicast containing the selected service (bits/s)
<b>Content Threshold:</b>	The name of the content threshold template assigned to the multicast
<b>Service Threshold:</b>	The name of the service threshold template assigned to the multicast
<b>Schedule:</b>	The name of the content alarm masking schedule template assigned to the multicast

#### *Service*

<b>Service ID:</b>	The service ID of the selected service; non-TS services display / here
<b>PSI/SI Name:</b>	The name of the selected service, as derived from PSI/SI; non-TS services display the multicast name here instead
<b>Number of PIDs/Components:</b>	The number of PIDs or components associated with the selected service

#### *Video PID/Component*

<b>PID/Component:</b>	The video PID of the selected service for MPEG-TS services, or the video component number for non-TS services
<b>Has PCR:</b>	Yes if the selected stream contains PCR, No if not
<b>Bitrate:</b>	The video PID bitrate of the selected service

#### *Video Information*

<b>Size:</b>	The video picture size of the selected service
<b>Aspect ratio:</b>	The video aspect ratio of the selected service, or "N/A" if no information is available
<b>Pixel aspect ratio:</b>	The video pixel aspect ratio of the selected service, or "N/A" if no information is available
<b>Codec:</b>	The video encoding format of the selected service
<b>Pixel format:</b>	The video sampling format of the selected service
<b>Frame rate:</b>	The video frame rate of the selected service (Hz)

---

**Interlace:** Whether the video source is interlaced or not

---

*Video color metadata*

---

**Range:** Whether the range of visual content values in the video source are limited or not.

**Possible ranges:** Full range, Narrow range

---

**Color primaries:** The specific primary colors used to encode all colors in the video source.

**Possible color primaries:** BT.709, BT.470 System M, BT.470 System B, G, ST 170, ST 240, Film, BT.2020, ST 428-1, ST 431-2, ST 432-1, EBU 3213

---

**Matrix coefficients:** What matrix coefficients the video source specifies to use to convert between RGB and Y'CbCr.

**Possible matrix coefficients:** RGB, BT.709, FCC NTSC, BT.470 System B, G, ST 170, ST 240, YCgCo, BT.2020 non-constant luminance, BT.2020 constant luminance, ST 2085, Chromaticity-derived non-constant luminance, Chromaticity-derived constant luminance, ST ICtCp

---

**Transfer characteristics system:** What transfer characteristics system the video source specifies to use to convert between RGB and Y'CbCr.

**Possible transfer characteristics systems:** BT.709, Gamma 2.2, Gamma 2.8, ST 170, ST 240, Linear, Logarithmic, Logarithmic square root, xvYCC (IEC 61966-2-4), BT.2020 (10-bit), BT.2020 (12-bit), PQ, ST 428-1, HLG (ARIB-STD-B67)

---

*Audio PID/Component*

---

**PID/Component:** The audio PID of the selected service for MPEG-TS services, or the audio component number for non-TS services

Note that there may be several audio PIDs or components associated with a service

---

**Type:** The audio encoding standard

---

**Has PCR:** Yes if the selected Audio PID contains PCR

---

**Bitrate:** The audio bitrate for this PID or component (bit/s)

---

**Language:** The language of the audio, as defined in the MPEG-TS Program Map Table (PMT)

---

## 6.4.2 Multicasts — Parameters — Fields

Parameters **Summary** History Detect Join Streams Ethernet thresh.

**Custom monitoring parameter selection**

Common	Display in list	Description
Thumb	<input checked="" type="checkbox"/>	Thumbnail
Name	<input checked="" type="checkbox"/>	Name of stream (i.e. channel)
Signal	<input checked="" type="checkbox"/>	Time since last signal loss
Page	<input type="checkbox"/>	Which page a multicast is assigned to
CPU	<input type="checkbox"/>	Which CPU core stream is processed on
Input	<input checked="" type="checkbox"/>	Ethernet input of stream
Mapping	<input checked="" type="checkbox"/>	How MPEG packets are mapped into RTP or UDP packets

IP	Display in list	Description
Curr bitrate	<input checked="" type="checkbox"/>	Instant bitrate (last 1000 ms) of UDP payload
Min bitrate	<input checked="" type="checkbox"/>	Min Curr bitrate
Max bitrate	<input checked="" type="checkbox"/>	Max Curr bitrate
IP packets	<input type="checkbox"/>	Number of IP packets
Dst address	<input checked="" type="checkbox"/>	Multicast/unicast destination address : port

Select parameters that are to be displayed in list. List will load faster if fewer parameters are selected.

The **Multicasts — Parameters — Fields** view enables selection of the parameters to be displayed in the **Multicasts — Parameters** view. They are only in effect when *User-defined parameters* is selected as shown in **Multicasts — Parameters**. Note that thumbnails must also be enabled in the **Setup — Params** view for thumbnail availability.

## 6.4.3 Multicasts — Summary

Parameters **Summary** History Detect Join Streams Ethernet thresh.

**Overall eth stream status Probe** **Full Service Monitoring status**

■ Eth streams with active alarms:3 Interface bitrate:29.447 Mbps Monitoring:7 / 29.397 Mbps ■ Enabled/OK: 2 / 2

**Summary for each page**

	OK	ES(MLR)	ES(RTP)	ES(overfl)	ES(nosig)		OK	ES(MLR)	ES(RTP)	ES(overfl)	ES(nosig)
<span style="color: green;">■</span> <a href="#">P1</a>	3 / 3	11m	497s	0	0	<a href="#">Major</a>	<input type="checkbox"/> <a href="#">P11</a>	0 / 0	0	0	0
<span style="color: red;">■</span> <a href="#">P2</a>	1 / 4	0	0	0	150s	<a href="#">Minor</a>	<input type="checkbox"/> <a href="#">P12</a>	0 / 0	0	0	0
<input type="checkbox"/> <a href="#">P3</a>	0 / 0	0	0	0	0		<input type="checkbox"/> <a href="#">P13</a>	0 / 0	0	0	0
<input type="checkbox"/> <a href="#">P4</a>	0 / 0	0	0	0	0		<input type="checkbox"/> <a href="#">P14</a>	0 / 0	0	0	0
<input type="checkbox"/> <a href="#">P5</a>	0 / 0	0	0	0	0		<input type="checkbox"/> <a href="#">P15</a>	0 / 0	0	0	0
<input type="checkbox"/> <a href="#">P6</a>	0 / 0	0	0	0	0		<input type="checkbox"/> <a href="#">P16</a>	0 / 0	0	0	0
<input type="checkbox"/> <a href="#">P7</a>	0 / 0	0	0	0	0		<input type="checkbox"/> <a href="#">P17</a>	0 / 0	0	0	0
<input type="checkbox"/> <a href="#">P8</a>	0 / 0	0	0	0	0		<input type="checkbox"/> <a href="#">P18</a>	0 / 0	0	0	0
<input type="checkbox"/> <a href="#">P9</a>	0 / 0	0	0	0	0		<input type="checkbox"/> <a href="#">P19</a>	0 / 0	0	0	0
<input type="checkbox"/> <a href="#">P10</a>	0 / 0	0	0	0	0		<input type="checkbox"/> <a href="#">P20</a>	0 / 0	0	0	0

The intention of this page, together with the **alarm list**, is to provide enough information for the operator to immediately see if there is anything seriously wrong with one or more Ethernet input streams. The overall status for the Full Service Monitoring (FSM) is also shown.

Throughout this view the bulb colors indicate the most severe active alarm. They may be green (no alarm), yellow (warning), orange (error) or red (major). The bulb color is based on user defined alarm severity settings for each alarm. A grey bulb indicates that monitoring is disabled.

The following Ethernet parameters are shown:

<b>Eth streams with active alarms:</b>	Shows the number of streams that are presently in an alarm state. Note that the number of alarms counted refers to default settings, and alarms disabled by the user will still be counted.
<b>Interface bitrate:</b>	This is the total bitrate sensed on the data/video interface(s). It should be greater than or equal to the Monitoring bitrate.
<b>Monitoring:</b>	This is the total number of Ethernet streams monitored and the total bitrate for these streams.
<b>Full Service Monitoring status:</b>	The number of enabled FSM services / number of OK FSM services

The probe is capable of monitoring several thousand streams simultaneously. The probe splits streams into pages for easy handling. Each of the 30 predefined pages can be given a name and have a user defined number of streams associated.

Part of the page-status is error-second statistics for the fundamental parameters **MLR**, **RTP**, **overfl** and **nosig** summed across all streams belonging to that page.

The error-second statistics interval is selected by clicking the buttons. For example, clicking the **ES-8h** button will present error-seconds for the last 8 hours. If 10 streams for a page have been without signal for the last 8 hours, the **nosig** will show as 80hours.

The following parameters are presented (note that the error second values are accumulated from probe boot time, and they will only be cleared by reboot or by clicking the **Clear all** counters button in the **Main** view):

<b>'Bulb':</b>	The bulb indicates the most severe active alarm for any of the streams on the page. Active alarms are located on top of the alarm list. The alarm severity is reflected by the color of the associated icon. Next to the bulb is a link that will lead to the <b>Monitoring page</b> if pressed. The Monitoring page will present error-second statistics for each stream individually.
<b>OK:</b>	Shows how many of the streams monitored on this page are without active alarms
<b>ES(MLR):</b>	Number of seconds in selected period with continuity counter errors in the MPEG2 transport stream (which corresponds to the number of seconds with non-zero Media Loss Rate).

---

**ES(RTP):** Number of seconds in selected period with RTP packet-drop

---


**ES(overfl):** Number of seconds in selected period with bitrate overflow

---

**ES(nosig):** Number of seconds in selected period where no signal (i.e. no data) was received

---

## 6.4.4 Multicasts — History

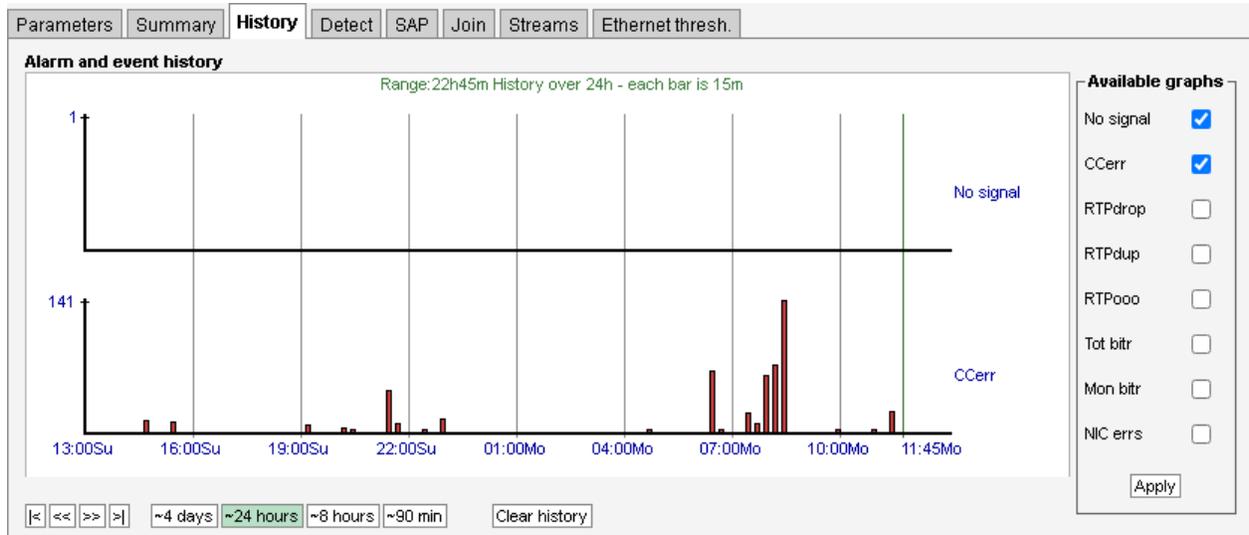

The probe keeps statistical Ethernet information for the last 4 days for visual inspection in the **history timeline view**.

Each bar in the histogram corresponds to a number of events that occurred within a certain time interval. The interval that each bar represents depends on the scale, from 1 minute (when 90 min is selected) to 1 hour (when 4 days is selected).

Clicking the **Clear history** button will reset all history graphs.

Tool-tip information is available for each bar and shows the time-interval for the bar and its exact value. For example, the tool-tip information '1315-1330:2' means that within the time interval 13:15–13:30 there were 2 occurrences.

The histogram is updated every minute.

Any subset of the following parameters can be selected, click the **Apply** button for changes to take effect:

---

**No signal:** The number of streams that reported the 'No signal' alarm during the interval represented by the bar.

---

**CCerr:** The number of times a discontinuity has been detected for all the MPEG-2 Transport Stream continuity counters in the interval represented by the bar. This parameter corresponds to the sum of **CC errs** reported by all streams.

---

<b>RTPdrop:</b>	Accumulated number of dropped IP-frames due to network errors in the interval represented by the bar. This parameter corresponds to the sum of <b>RTP drops</b> reported by all streams.
<b>RTPdup:</b>	Accumulated number of duplicate IP-frames in the interval represented by the bar. This parameter corresponds to the sum of <b>RTP dups</b> reported by all streams.
<b>RTPooo:</b>	Accumulated number of times a packet has been found to be out of order in the interval represented by the bar. This parameter corresponds to the sum of <b>RTP ooo</b> reported by all streams.
<b>Tot bitr:</b>	Bitrate sensed on the data/video interface(s).
<b>Mon bitr:</b>	Bitrate on the data/video interface(s) corresponding to joined multicasts.
<b>NIC errs:</b>	Detected NIC errors. NIC errors are most likely caused by a bad cable or a misconfigured router. A NIC error may impact packet loss measurements such as CC errors and RTP errors.

Note that the history graphs show the sum for all streams being analyzed across all pages. So for example, if two streams experience **No signal** at the same time the **No signal** graph will increase by 2.

## 6.4.5 Multicasts — Detect

Please see chapter 6.7.2 on page 116.

## 6.4.6 Multicasts — SAP

Parameters	Summary	History	Detect	<b>SAP</b>	Join	Streams	Ethernet thresh.
Dst address	Src address	Name	Interface	Joined	User	Mapping	
239.255.0.2	10.0.81.13	FEM HD	eth0	no	SAP	TS/RTP	
239.255.0.3	10.0.81.13	VOX HD	eth0	no	SAP	TS/RTP	
239.255.0.4	10.0.81.13	TVNorge HD	eth0	yes	SAP	TS/RTP	
239.255.0.5	10.0.81.13	TV 2 News HD	eth0	no	SAP	TS/RTP	
239.255.0.6	10.0.81.13	C More Golf HD	eth0	no	SAP	TS/RTP	
239.255.0.8	10.0.81.13	Nat Geo HD (N)	eth0	no	SAP	TS/RTP	
239.255.0.10	10.0.81.13	239.255.0.10:5500 Not Present(7:B (TP C13):7007)	eth0	no	SAP	TS/RTP	
239.255.0.12	10.0.81.16	4Music	eth0	no	SAP	TS/RTP	
239.255.0.20	10.0.81.16	CNBC Europe	eth0	no	SAP	TS/RTP	
239.255.0.23	10.0.81.13	TLC Sverige HD	eth0	no	SAP	TS/RTP	
239.255.0.24	10.0.81.13	239.255.0.24:5500 Not Present(7:B (TP C13):7084)	eth0	no	SAP	TS/RTP	
239.255.0.26	10.0.81.13	239.255.0.26:5500 Not Present(7:B (TP C13):7006)	eth0	no	SAP	TS/RTP	
239.255.0.27	10.0.81.13	TLC Norge HD	eth0	no	SAP	TS/RTP	

The **SAP** view displays streams announced using the Session Announcement Protocol, detected by the VB330.


As long as **Enable SAP discovery** is enabled in the **Setup — Params** view, the VB330 will continuously try to detect streams. Click the **View list offline** button to view the stream list in offline mode. Click the **Refresh** button to update the stream list in offline mode.

The source address makes it possible for the 10G Probe to distinguish between multicasts with the same destination IP address and port, provided that **Source specific multicasts** has been enabled in the **Setup — Params** view.

If the stream is currently joined by the 10G Probe (i.e. the VB330 is currently monitoring the stream), the **Joined** field is set to yes.

Detected streams can be added to the VB330's stream list by selecting streams and clicking the **Add selected to stream list**. To add all detected streams the **Add all to stream list** button can be pressed.

## 6.4.7 Multicasts — Join

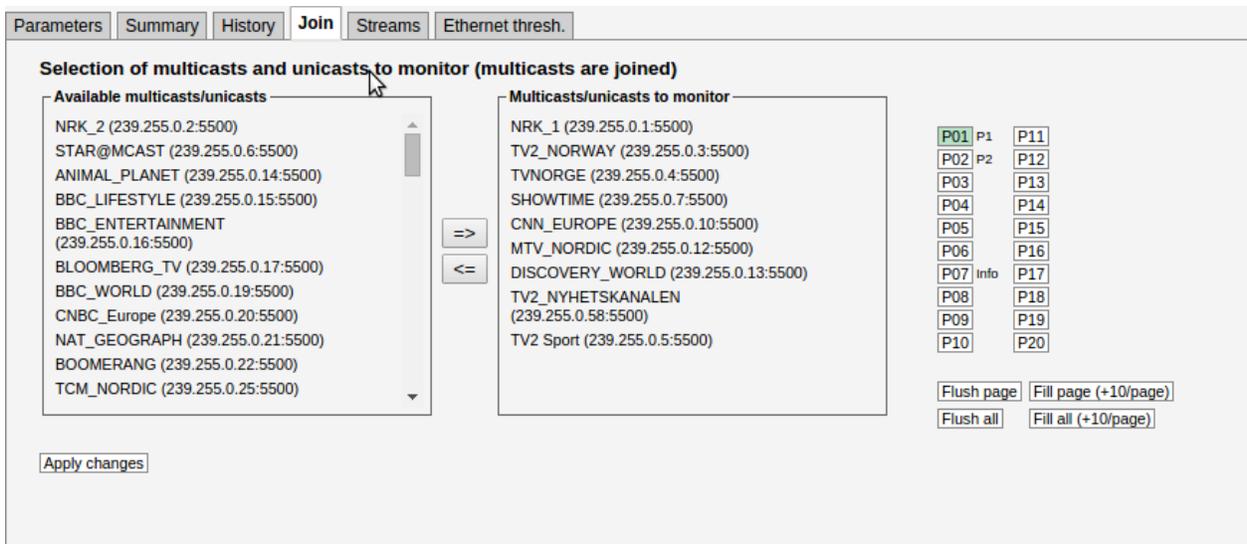

The screenshot shows the 'Join' view of the Multicasts configuration. It features two main panels: 'Available multicasts/unicasts' on the left and 'Multicasts/unicasts to monitor' on the right. The left panel lists various channels like NRK\_2, STAR@MCAST, ANIMAL\_PLANET, etc. The right panel lists channels like NRK\_1, TV2\_NORWAY, TVNORGE, etc. Between the panels are arrows for moving items. On the right side, there is a grid of buttons labeled P01 through P20, with P01 highlighted. Below the grid are buttons for 'Flush page', 'Fill page (+10/page)', 'Flush all', and 'Fill all (+10/page)'. At the bottom left, there is an 'Apply changes' button.

In order for the defined Ethernet multicasts to be monitored by the probe, they must be joined. The **Multicasts — Join** view and the **Multicasts — Streams** view allow the user to select which multicasts that are joined by the probe.


Streams defined in the **Multicasts — Streams** view will appear as available streams on the left hand side of the arrows in this view. Select streams to be monitored by clicking them and moving them to the right hand side of this view using the arrow. Changes should be confirmed by clicking the **Apply changes** button.

Joined streams may be freely associated with the 30 probe pages.

The streams will be presented in the Joined multicasts list in the **Multicasts — Parameters** view.

It is possible to flush or fill the multicasts/unicasts to monitor list by clicking the corresponding button. Note that these operations will take effect immediately; it is not necessary to click **Apply changes** for multicasts to be joined or unjoined.

## 6.4.8 Multicasts — Streams

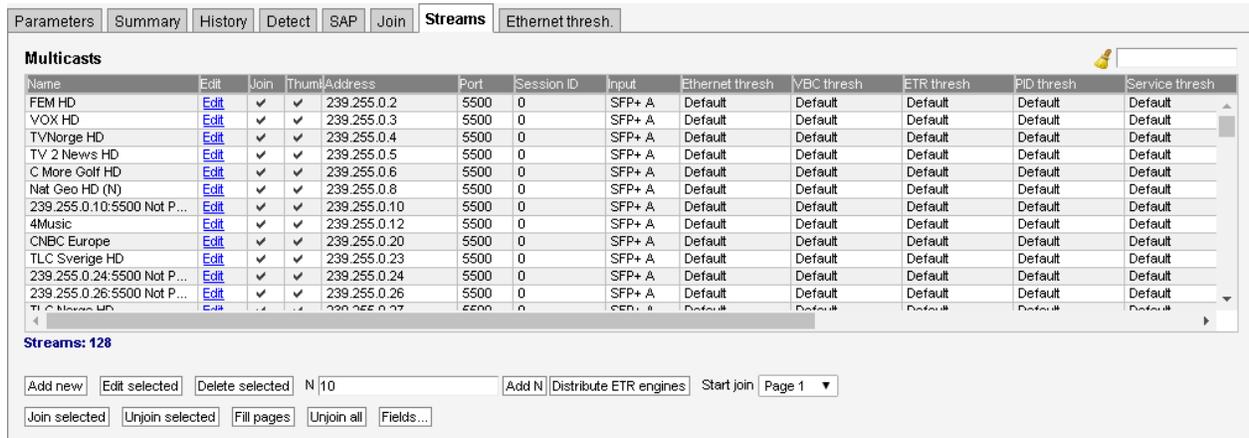

The screenshot shows the 'Multicasts' tab in the 'Streams' section. It features a table with columns for Name, Edit, Join, Thumbnail, Address, Port, Session ID, Input, Ethernet thresh, VBC thresh, ETR thresh, PID thresh, and Service thresh. Below the table are control buttons: Add new, Edit selected, Delete selected, Add N, Distribute ETR engines, Start join, Page 1, Join selected, Unjoin selected, Fill pages, Unjoin all, and Fields...

Name	Edit	Join	Thumb	Address	Port	Session ID	Input	Ethernet thresh	VBC thresh	ETR thresh	PID thresh	Service thresh
FEM HD	Edit	✓	✓	239.255.0.2	5500	0	SFP+ A	Default	Default	Default	Default	Default
VOX HD	Edit	✓	✓	239.255.0.3	5500	0	SFP+ A	Default	Default	Default	Default	Default
TVNorge HD	Edit	✓	✓	239.255.0.4	5500	0	SFP+ A	Default	Default	Default	Default	Default
TV 2 News HD	Edit	✓	✓	239.255.0.5	5500	0	SFP+ A	Default	Default	Default	Default	Default
C More Golf HD	Edit	✓	✓	239.255.0.6	5500	0	SFP+ A	Default	Default	Default	Default	Default
Nat Geo HD (N)	Edit	✓	✓	239.255.0.8	5500	0	SFP+ A	Default	Default	Default	Default	Default
239.255.0.10:5500 Not P...	Edit	✓	✓	239.255.0.10	5500	0	SFP+ A	Default	Default	Default	Default	Default
4Music	Edit	✓	✓	239.255.0.12	5500	0	SFP+ A	Default	Default	Default	Default	Default
CNBC Europe	Edit	✓	✓	239.255.0.20	5500	0	SFP+ A	Default	Default	Default	Default	Default
TLC Sverige HD	Edit	✓	✓	239.255.0.23	5500	0	SFP+ A	Default	Default	Default	Default	Default
239.255.0.24:5500 Not P...	Edit	✓	✓	239.255.0.24	5500	0	SFP+ A	Default	Default	Default	Default	Default
239.255.0.26:5500 Not P...	Edit	✓	✓	239.255.0.26	5500	0	SFP+ A	Default	Default	Default	Default	Default
TLC News HD	Edit	✓	✓	239.255.0.27	5500	0	SFP+ A	Default	Default	Default	Default	Default

In this view the operator can define multicasts available to the probe and associate a name with each multicast address. This name will be used by the probe when referring to the multicast. If no name has been defined the probe will use the multicast address:port notation.

It is possible to add, delete or edit several entries simultaneously. Several entries are selected by using the regular *Ctrl + click* or *Shift + click* functionality. When adding new entries the current dialogue values will be used as the template with the values for Name and Address incremented for each.


Note that both multicast and unicast addresses can be entered here.

The **Distribute ETR engines** button will distribute the selected streams, with ETR disabled, on the unused ETR engines. An ETR engine is considered unused if no stream with ETR enabled is assigned to it.

The search field in the upper right corner of the view allows the user to type a text string, and the multicast list is updated to display only streams matching the specified text.

Clicking **Add new** or selecting one or more multicasts and clicking **Edit selected** will open the **Multicast — Streams — Edit** pop-up view. When multicasts have been defined, clicking **Join selected** will join the selected multicasts and enable monitoring. The probe will only analyze joined multicasts. Clicking **Join all** will join all multicasts in the list (up to the licensed maximum number of channels). Unjoining one or more multicasts is done by selecting multicasts and clicking **Unjoin selected** or by clicking **Unjoin all**.

When the Edit button is clicked it is possible to define the following multicast parameters (note that some parameters are only relevant and selectable when the probe is equipped with the correct options):

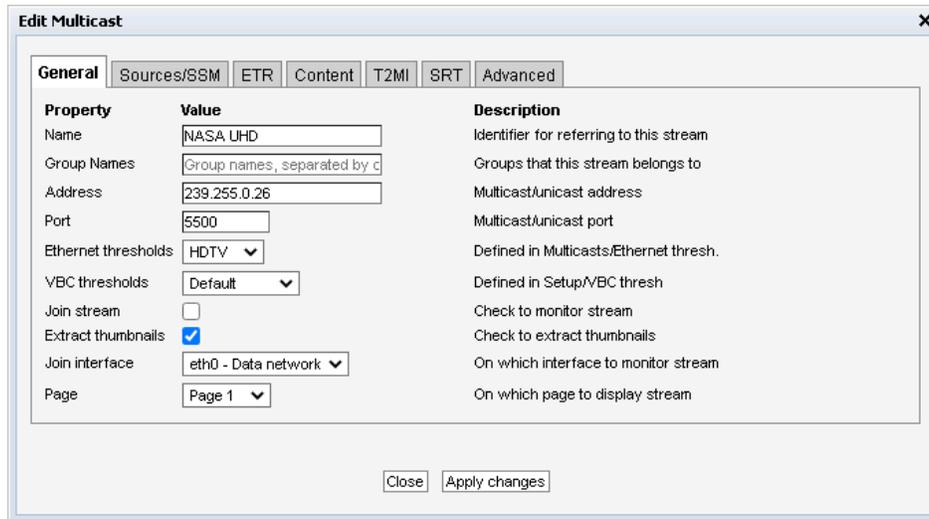

Property	Value	Description
Name	NASA UHD	Identifier for referring to this stream
Group Names	Group names, separated by c	Groups that this stream belongs to
Address	239.255.0.26	Multicast/unicast address
Port	5500	Multicast/unicast port
Ethernet thresholds	HDTV	Defined in Multicasts/Ethernet thresh.
VBC thresholds	Default	Defined in Setup/VBC thresh
Join stream	<input type="checkbox"/>	Check to monitor stream
Extract thumbnails	<input checked="" type="checkbox"/>	Check to extract thumbnails
Join interface	eth0 - Data network	On which interface to monitor stream
Page	Page 1	On which page to display stream

---

### *General*

---

**Name:** A name should be assigned to each unicast/multicast. The name will be used throughout the VB330 user interface when referring to this stream. It may also be used by an external management system like the VideoBRIDGE Controller.

To enable SMPTE ST 2022-7 monitoring, create two streams with the same name, but with a different class name, for each of the paths, and enable **SMPTE ST 2022-7 monitoring** on the **Advanced** tab. The class name is everything added after @ in the name.

---

**Group Names:** A comma separated list of groups this stream belongs to.

---

**Address:** The IP address of the unicast or multicast. For a SRT, T2MI inner or SMPTE ST 2022-7 combined stream, enter a dummy address that falls within the range 224.0.0.0 to 239.255.255.255.

---

**Port:** The port number of the unicast or multicast. For a SRT, T2MI inner or SMPTE ST 2022-7 combined stream, enter a dummy port number.

---

**Ethernet thresholds:** The Ethernet thresholds specify various error limits. Selectable Ethernet thresholds templates are defined in the **Multicasts — Ethernet thresh.** view. For a T2MI stream select a dummy threshold template.

---

**VBC thresholds:** The VBC thresholds specify various error limits to be used by VideoBRIDGE Controller to generate alarms. These thresholds are only relevant if the VideoBRIDGE Controller is used. VBC threshold templates are defined in the **Setup — VBC thresh.** view.

---

**Join stream:** Check the ‘Join stream’ check box to join a multicast or unicast. Only joined streams are analyzed. A stream may also be joined from the **Multicasts — Join** or **Multicasts — Streams** views, and the status of this check box will be updated accordingly.

---

---

**Extract thumbnails:** When enabled, the probe will generate thumbnails for this multicast. In order to enable this option, *Extract thumbnails* also needs to be enabled in the **Setup — Params** view


---

**Join interface:** Select which interface to join the selected multicast. The data interface(s) are listed, as well as any enabled VLAN interface (defined in **Setup — VLANs**).

---

**Page:** For easy navigation, each stream can be assigned a specific page. The names of the pages are defined in **Setup — Pages**.

---

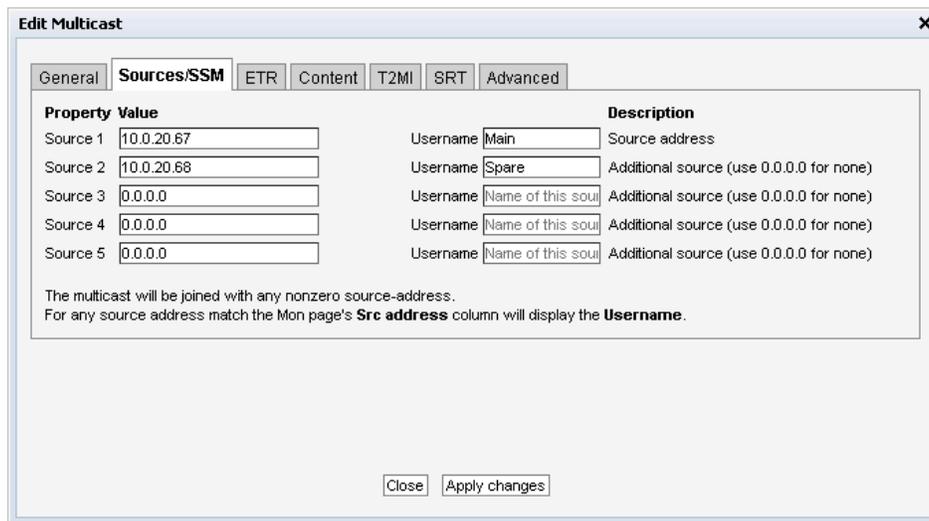

Property	Value	Description
Source 1	10.0.20.67	Username: Main, Source address
Source 2	10.0.20.68	Username: Spare, Additional source (use 0.0.0.0 for none)
Source 3	0.0.0.0	Username: Name of this sou, Additional source (use 0.0.0.0 for none)
Source 4	0.0.0.0	Username: Name of this sou, Additional source (use 0.0.0.0 for none)
Source 5	0.0.0.0	Username: Name of this sou, Additional source (use 0.0.0.0 for none)

The multicast will be joined with any nonzero source-address.  
For any source address match the Mon page's **Src address** column will display the **Username**.

Close Apply changes

---

### *Sources/SSM*

---

**Source 1:** If a zero source address is specified for a multicast it will be joined without a source. This allows both source specific multicasts and non-source specific multicasts to co-exist in the same network and be joined by the VB330.


---

**Source 2–5:** Additional SSM source addresses may be specified to enable back-up solutions. Note that it is the operator's responsibility to ensure that a multicast is only transmitted by one SSM source at any time.

---

**Username:** For each of the sources listed it is possible to specify a name for this source. In the **Multicasts — Parameters** view, this name will be displayed in the **Src address** column instead of the source IP address. This can be used to easier distinguish between the main and backup transmitters etc.

---

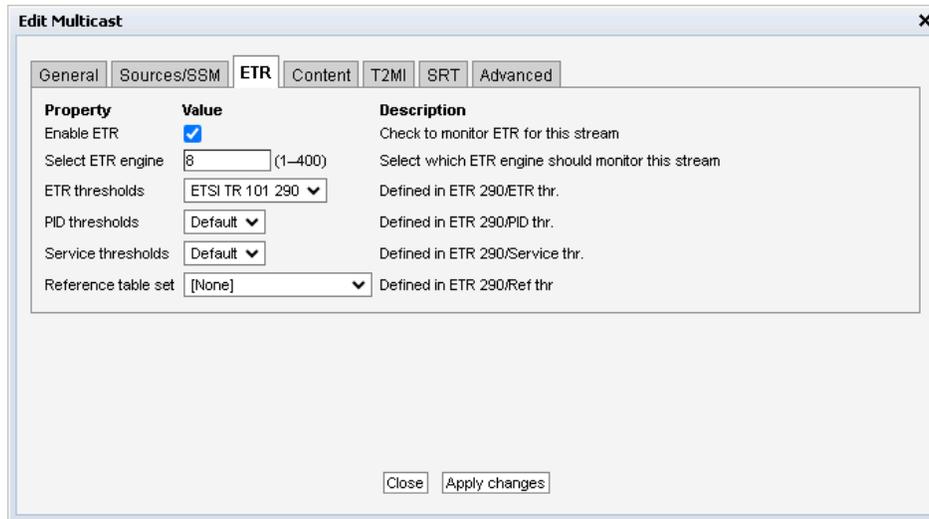

### *ETR (ETR290 Option)*

**Enable ETR:** ETR monitoring of a stream will not take place unless it is enabled by this setting. This parameter is only relevant if the probe is ETR enabled. ETR monitoring is not supported for SMPTE ST 2022-7 combined streams.


**Select ETR engine:** If the probe is licensed for several Ethernet ETR engines the user may select which engine should be used to analyze the stream. The default ETR engine selection is IPTV1. It is also possible to use the **Distribute ETR engines** button described above to assign streams to engines.

**ETR thresholds:** The ETR thresholds specify various error limits and alarm conditions. Selectable ETR thresholds templates are defined in the **ETR 290 — ETR thresh.** view. The round-robin cycling time is also defined by this threshold template. This parameter is only relevant if the probe is ETR enabled.

**PID thresholds:** The PID thresholds specify various error limits and alarm conditions. Selectable PID thresholds templates are defined in the **ETR 290 — PID thresh.** view. This parameter is only relevant if the probe is ETR enabled.

**Service thresholds:** The Service thresholds selection defines various error limits and alarm conditions. Selectable service thresholds templates are defined in the **ETR 290 — Service thresh.** view. This parameter is only relevant if the probe is ETR enabled.

**Reference table set:** The Reference table set selection is used to compare the tables in the transport stream with a set of stored tables. These tables are defined in the **ETR 290 — Gold TS thresholds** view.

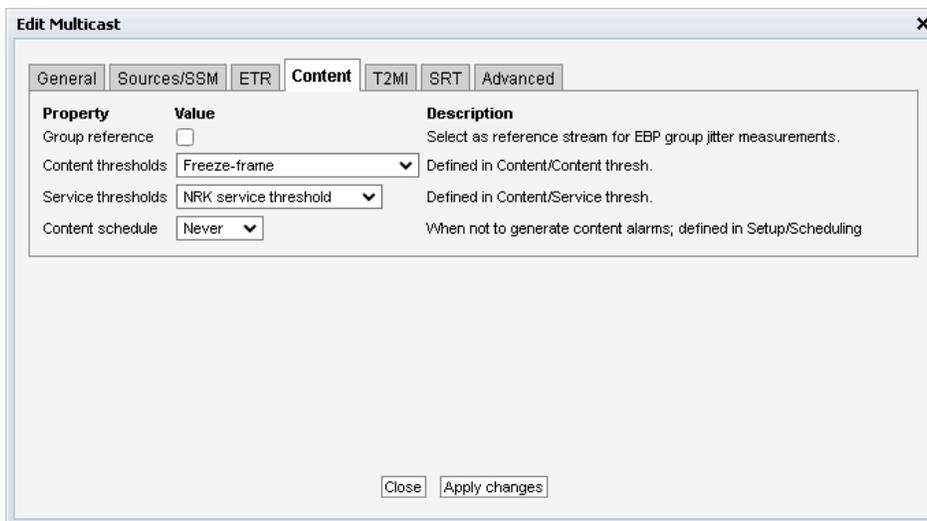


### *Content*

**Content thresholds:** The Content thresholds specify content alarming options. Selectable Content thresholds templates are defined in the **Content — Content thresh.** view.

**Service thresholds:** The Content service threshold group that should be assigned to the multicast. Content service threshold groups that have been defined in the **Content — Service thresh.** view are available for selection from the drop-down menu.

**Content schedule:** The scheduling scheme that should be assigned to the content monitoring for the multicast. Scheduling schemes that have been defined in the **Setup — Scheduling** view are available for selection from the drop-down menu. Scheduling allows masking content alarms at predefined time periods. The schedules can be overridden for specific services using Content service thresholds.

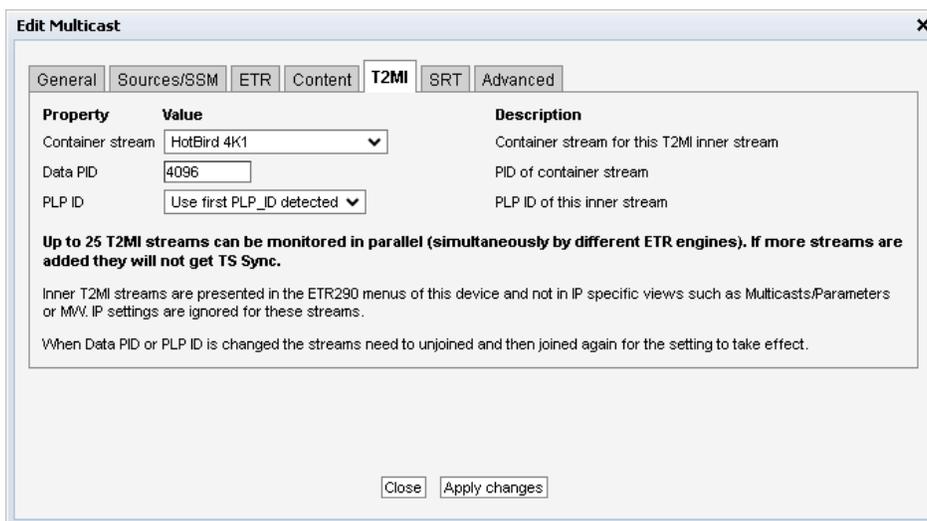

---

### *T2MI (T2MI Option)*


---

**Container stream:** For an T2MI inner stream the container stream (outer stream) must be specified. Select the container stream from the drop-down menu. For streams other than T2MI inner streams (none) should be selected.

**Data PID:** The container stream PID carrying the inner stream

**PLP ID:** The PLP ID for the inner stream. Select a fixed PLP ID value from the drop-down menu or specify that the first detected PLP ID should be used.

---

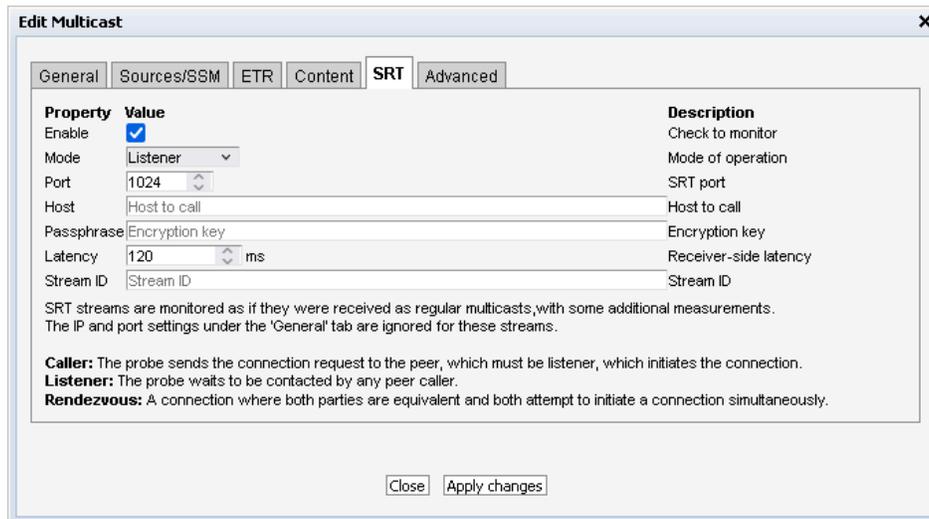


---

### *SRT*

---

**Enable:** Enable to monitor SRT stream

**Mode:** The mode of operation the probe should use; either a *Listener*, a *Caller* or *Rendezvous*.

**Port:** The port number to receive the SRT stream through.

**Host:** The host address of the SRT stream source. (ignored for Listener mode)

**Passphrase:** In case the SRT stream you want to receive is encrypted. If left blank the stream is assumed to be unencrypted.


**Latency:** Defines the minimum receiver buffering delay before analyzing the video content in an SRT data packet. A larger value gives a larger window of time for the SRT protocol to retransmit lost packets, and vice versa.

**Stream ID:** A free-form string sent by a caller to the opposing listener during connection initiation. Will have no effect if set on Rendezvous or Listener mode.

---

The probe currently supports up to 10 concurrent SRT receive sessions. When operating SRT in **Listener** mode the probe will await an external caller to connect to the specified UDP port before data reception occurs. Select the network interface to listen on under the **General** tab.

More information on SRT streams can be found in D Appendix: SRT Streams.

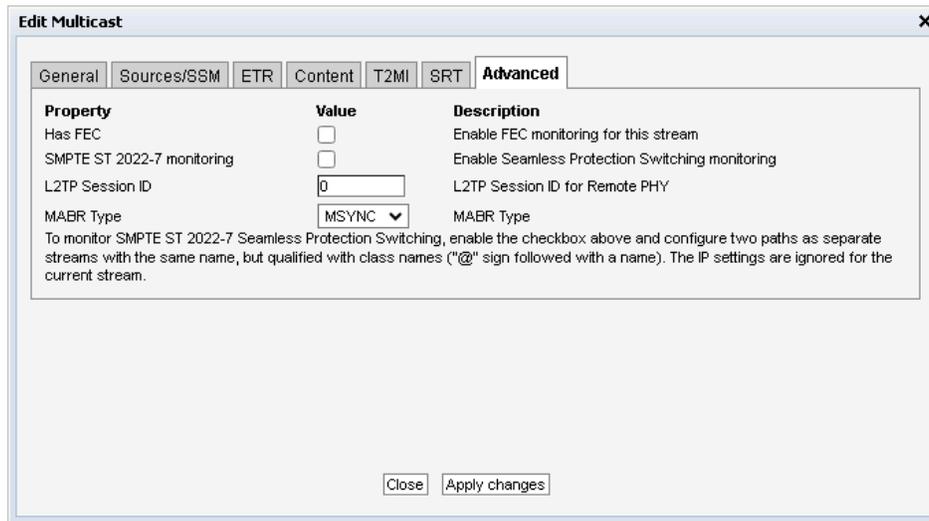


---

### *Advanced*

---

**Has FEC:** The stream carries COP3 (SMPTE ST 2022-5) Forward Error Correction. If enabled, statistics about FEC drops and correctible errors will be reported for the stream.

**SMPTE ST 2022-7 monitoring:** This is a Seamless Protection Switching (SMPTE ST 2022-7) combined stream.

**Session ID:** The session ID of the L2TP stream is specified here (or 0 if not used). It is used together with the multicast address to identify the L2TP stream.

**MABR Type:** The MABR kind. Possible values are: *Disabled* and *MSYNC*. When the setting is *Disabled*, the stream is decoded normally. When set to *MSYNC*, the stream is interpreted as *MSYNC*. If the stream may be decoded as *MSYNC*, the *MSYNC* objects received are stored and listed in **Detailed Monitoring — MSYNC**.

---

Seamless Protection Switching (SMPTE ST 2022-7) monitors the same stream transmitted twice. The probe verifies that the two streams combined do not have packet loss and the jitter between the two streams. When two multicast/unicast streams are selected, the probe will report errors if the same RTP packets are missing from both streams. Errors are also reported if the timing between the two stream exceeds the threshold settings.

To enable SMPTE ST 2022-7 monitoring, set up a combined stream with the **SMPTE ST 2022-7 monitoring** checkbox enabled. The IP settings are ignored for this stream. Then set up the two path streams, giving the same name, but with different class names. The class name is everything added after @ in the name.


The VB330 supports monitoring as a receiver class C for SBR streams, as defined in SMPTE ST 2022-7:2019.

L2TP (remote PHY) streams are mapped into multicasts. In order to identify the correct stream the multicast address is entered in the **General** tab and the session ID of the L2TP stream is specified here. The port number is not used, and will be shown as 0.

To identify available L2TP session IDs, join the stream first and then use the **Multicasts — Detect** view to see the session IDs that are available. Both IPv4 and IPv6 is supported.

If the L2TP stream carries valid sequence numbers, dropped or duplicated frames will be analyzed by the 10G Probe in a manner similar to RTP streams.

## 6.4.9 Multicasts — Ethernet thresh.

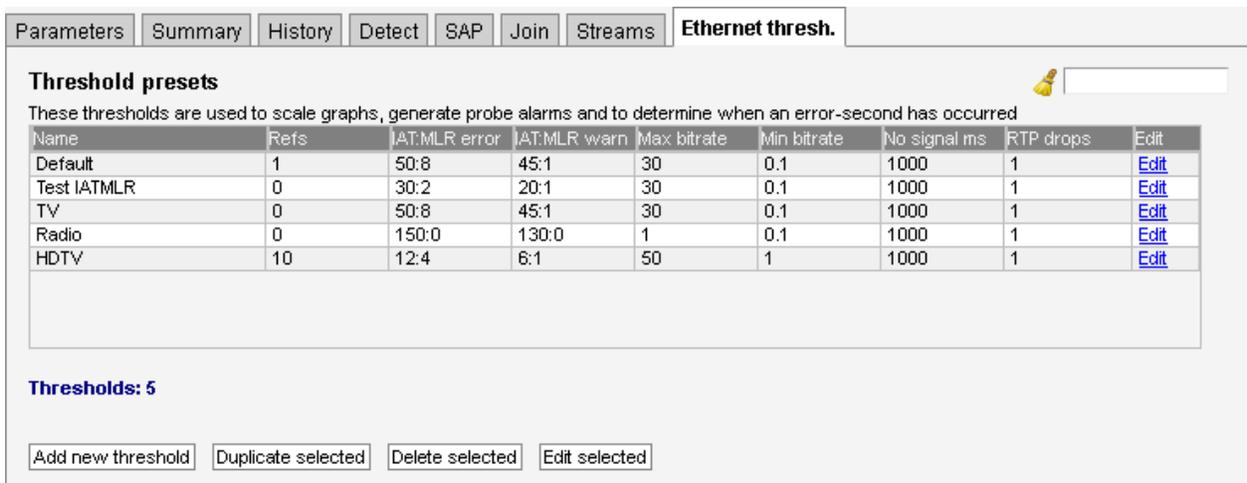

**Threshold presets**

These thresholds are used to scale graphs, generate probe alarms and to determine when an error-second has occurred

Name	Refs	IAT:MLR error	IAT:MLR warn	Max bitrate	Min bitrate	No signal ms	RTP drops	Edit
Default	1	50:8	45:1	30	0.1	1000	1	<a href="#">Edit</a>
Test IATMLR	0	30:2	20:1	30	0.1	1000	1	<a href="#">Edit</a>
TV	0	50:8	45:1	30	0.1	1000	1	<a href="#">Edit</a>
Radio	0	150:0	130:0	1	0.1	1000	1	<a href="#">Edit</a>
HDTV	10	12:4	6:1	50	1	1000	1	<a href="#">Edit</a>

**Thresholds: 5**

Thresholds are used to determine when to actually raise an alarm upon detection of an error. The Ethernet thresholds are used for generating Ethernet probe alarms as well as for calculating error-seconds. Error seconds and ETH probe alarms are issued whenever measurements exceed the defined threshold levels for a parameter. Ethernet thresholds are also used to scale some graphs like the MediaWindow graphs. The alarm level of each of these alarms is set in the **Alarms — Alarm setup** view. Note that it is also possible to disable alarms in the **Alarms — Alarm setup** view.

The **Multicasts — Ethernet thresh.** view makes it possible to define threshold values that operate at stream level. Thresholds are associated with each stream in the **Multicasts — Streams — Edit** view. There are two different ways of creating user-defined thresholds. To create a new threshold template from scratch the operator should click the **Add new threshold** button. A pop-up window will appear allowing the user to define alarm conditions. Another way of creating a user-defined threshold template is by highlighting one of the threshold templates already defined and then click the **Duplicate highlighted** button.

Deleting a threshold template is done by highlighting the threshold template that should be removed and clicking **Delete selected**. It is possible to delete or edit several entries simultaneously. Several

entries are selected by using the regular *Ctrl + click* or *Shift + click* functionality. Click the **Edit** button to edit one or more selected threshold templates. Note that the predefined ‘Default’ threshold template cannot be deleted or changed.

In the threshold presets list the ‘Refs’ column displays how many streams are associated with each stream threshold template.

**Edit Threshold** ✕

Name

Parameter	Threshold	Format	Corresponding probe alarm(s)
IAT:MLR error	<input type="text" value="200:8"/>	n.n:n	IAT >= err-thresh, MLR >= err-thresh
IAT:MLR warning	<input type="text" value="100:1"/>	n.n:n	IAT >= warn-thresh, MLR >= warn-thresh
Max bitrate	<input type="text" value="20"/>	Mbit/s	Bitrate overflow
Min bitrate	<input type="text" value="0"/>	Mbit/s	Bitrate underflow
No signal	<input type="text" value="1000"/>	ms	No signal
RTP drop limit	<input type="text" value="1"/>	n	RTP packet drop
Ignore PID loss	<input type="text"/>	p1,p2,...	CC skips, MLR >= thresh

Pids listed in **Ignore PID loss** will have packet loss ignored in the MediaWindow, Ethernet History graph and Ethernet alarms.

If IAT or bitrate thresholds are set to 0, they will be ignored.

---

### Ethernet thresholds

---

**Name:** A text string that identifies the Ethernet threshold

---

**IAT:MLR error:** This threshold contains error limits for IAT (Inter-packet Arrival Time) and MLR (Media Loss Rate).  
 The IAT limit, in milliseconds, is the first parameter (before the colon), the MLR limit, in number of TS packets, is the last parameter. If the IAT limit is exceeded the alarm ‘IAT >= err-thresh’ will be raised. If the MLR limit is exceeded the alarm ‘MLR >= err-thresh’ will be raised. The severity (and hence the color used in the MediaWindow view) for IAT:MLR errors depend on the severity assigned to these alarms in the **Alarms — Alarm setup** view.  
 Note that error seconds based on MLR are counted regardless of this threshold if one or more packets are missing.


---

---

<b>IAT:MLR warning:</b>	This threshold contains warning limits for IAT (Inter-packet Arrival Time) and MLR (Media Loss Rate). The IAT limit, in milliseconds, is the first parameter (before the colon), the MLR limit, in number of TS packets, is the last parameter. If the IAT limit is exceeded the alarm ‘IAT >= warn-thresh’ will be raised. If the MLR limit is exceeded the alarm ‘MLR >= warn-thresh’ will be raised. The severity (and hence the color used in the MediaWindow view) for IAT:MLR errors depend on the severity assigned to these alarms in the <b>Alarms — Alarm setup</b> view.
<b>Max bitrate:</b>	The maximum bitrate in Mbit/s. An alarm will be raised if the stream bitrate exceeds the maximum bitrate.
<b>Min bitrate:</b>	The minimum bitrate in Mbit/s. A value of 0 will never generate an alarm. A value of 0.1 Mbit/s will generate an alarm if the minimum bitrate threshold is less than 0.1 Mbit/s.
<b>No signal:</b>	Number of milliseconds without receiving any signal before the ‘No signal’ alarm is raised
<b>RTP drop limit:</b>	If the number of lost RTP packets exceeds the RTP drop limit an alarm will be raised. Note that error seconds based on packet drops are counted regardless of this threshold.
<b>Ignore PID loss:</b>	A comma separated list of PIDs for which the probe should ignore packet loss. Packet loss that affects these PIDs will not result in an error-second count, and the ETR monitoring engine will not count these errors.

---

## 6.5 MW (Media Window)

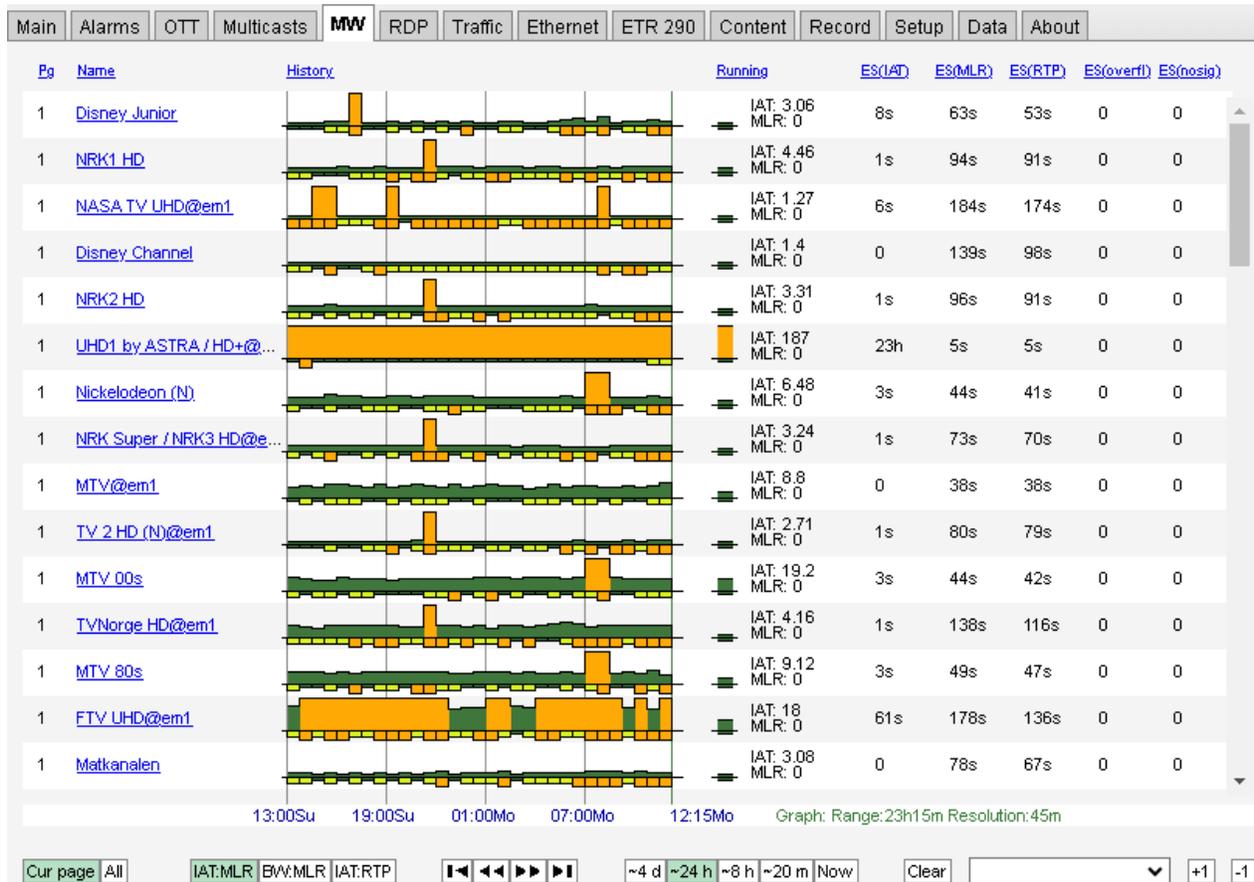

The MW Media Window view provides an at-a-glance status for each of the multicasts/unicasts being monitored. From the graphs it is easy to see the jitter characteristics of the signal and if there is packet loss or CC errors present in the signal. Periods of no signal are also displayed.

The measurements are always aggregated over a time interval – typically one second. The IAT(max) is the maximum time measured between two neighboring IP frames within the measurement time interval (the peak packet Inter-arrival time). IAT is expressed in milliseconds.

The MLR is the peak estimated number of lost MPEG-2 Transport Stream packets inside any second within the actual time period. The number of lost TS packets is derived from the continuity counters inside the TS packet headers.

A common scenario is to have 7 TS packets per UDP frame. Losing an IP packet will therefore usually (but not always) result in an MLR of 7 (not always the case because some TS packets such as null packets or PCR packets do not carry a valid CC field).

The patented Sencore VideoBRIDGE **Media Window** presents both jitter and packet loss measurements in one graph, with jitter (IAT) values growing upwards (+ve Y) and packet loss (MLR) growing downwards (-ve Y). Each sample along the x-axis corresponds to a measurement time-


interval that depends on the range of the graph selected. Periods of no sync are also displayed in the graph.

Error-second statistics for the graph-interval is displayed to the right. As the graphs are zoomed or scrolled the error-second statistics is updated as well as the graphs.

Tool-tip provides the exact jitter (IAT) and packet loss (MLR) values for a selected bar in a selected graph, the denotation is IAT::MLR. The current graph value displayed under ‘Running’ provides the maximum MLR and IAT values measured during the last 3 seconds.


Red color is used to indicate that within the period represented by the bar there has been one or more occurrences of no-signal. Orange is used to indicate error while yellow indicates warning. The error and warning thresholds are allocated to each multicast in the **Multicasts — Streams** view.

The user determines whether only multicasts associated with the currently selected page should be displayed (by clicking the **Cur page** button), or if all joined multicasts should be presented in one list (by clicking the **All** button). The time window buttons allow selection of x-axis resolution in the graphs, and by using the arrow buttons it is possible to move the timeline to view an error incident more accurately. Clicking **Clear** will clear all graphs. Note that clearing graphs cannot be undone. Clicking the **+1** button will display the next page. Clicking the **-1** button will display the previous page.

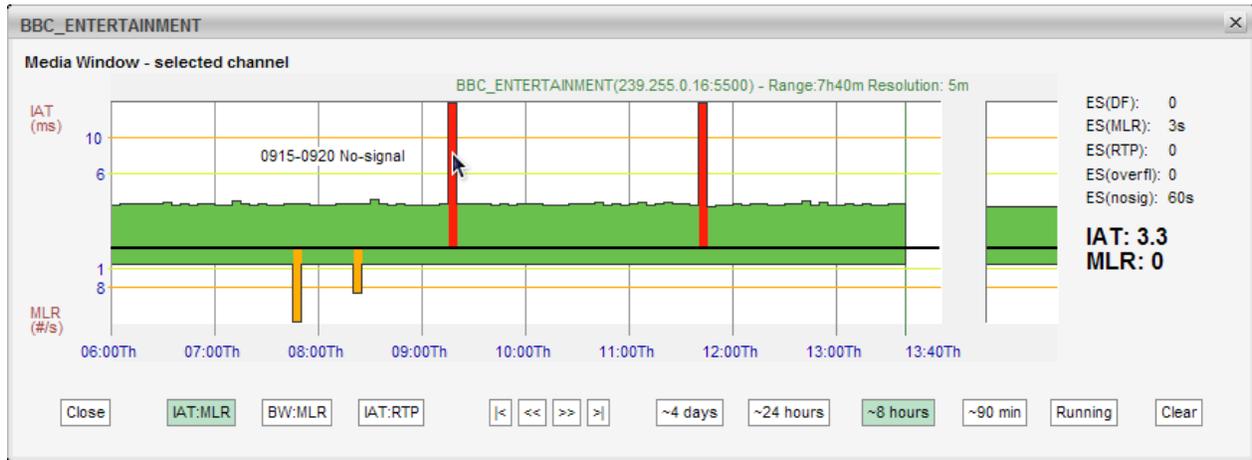


By zooming and panning the user can pinpoint more accurately when errors occurred. In the above diagram tool-tip reveals that ‘No signal’ occurred between 9:15 and 9:20.

## 6.5.1 Media Window — Selected channel

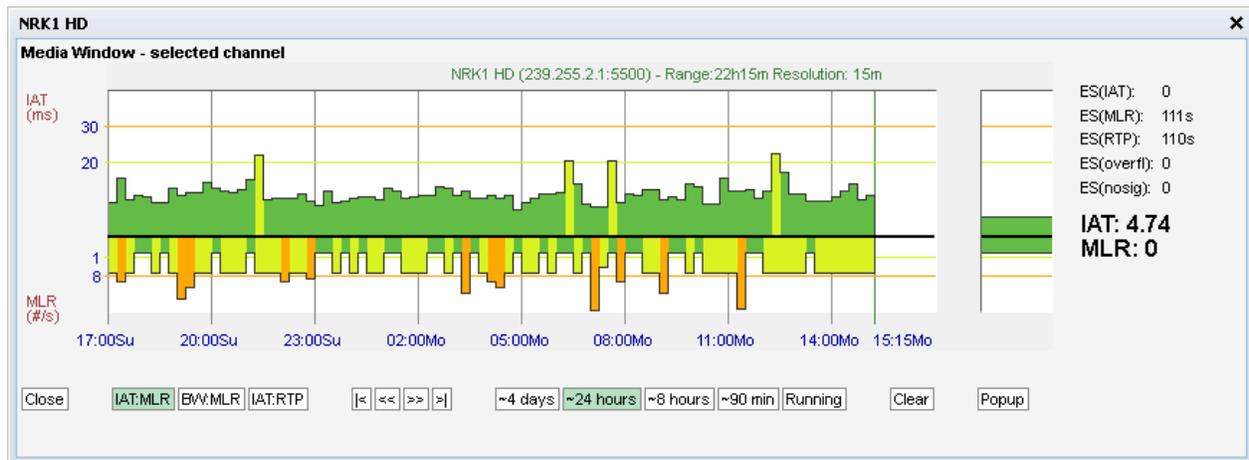


The **Media Window — selected channel** view is activated by clicking a multicast label in the **MW** page. Clicking anywhere in the running graph will zoom in, unless you already are at the maximum zoom level.

This high-resolution version of the **Media Window** reveals more details than the compressed version. There are 3 times more samples along the X-axis, and the graph indicates visually the error and warning thresholds. Note that the time windows of the regular **Media Window** and **Media Window — selected channel** are not exactly the same, even if the same time window has been selected for both views.

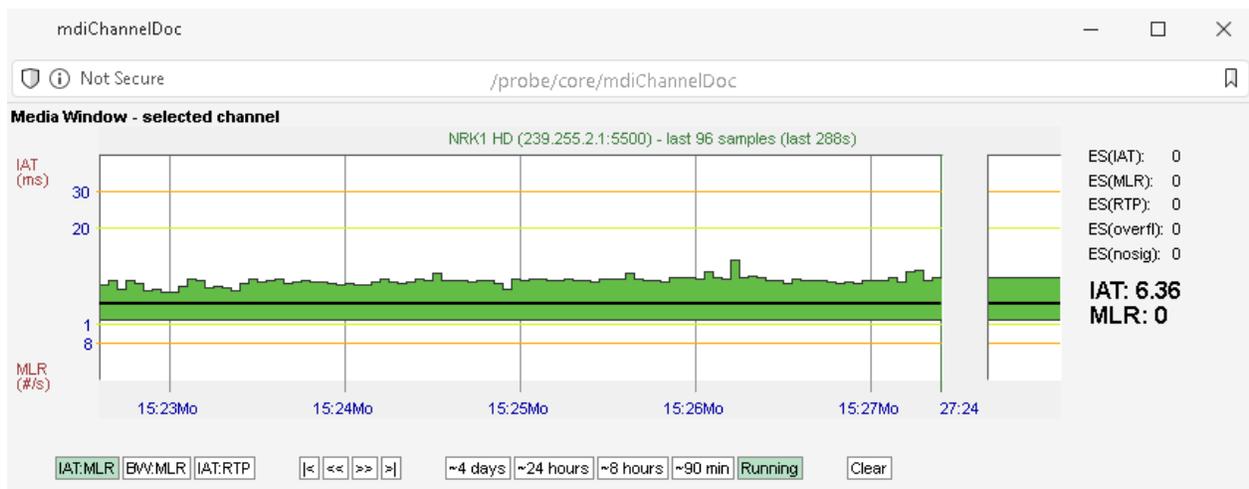

By clicking the **Popup** button, a pop-up window will appear. This separate window can be used to display the selected channel even when navigating away from the probe. This also provides the ability to monitor media windows for several streams without starting several browser sessions.

## 6.5.2 Media Window — Bandwidth graph

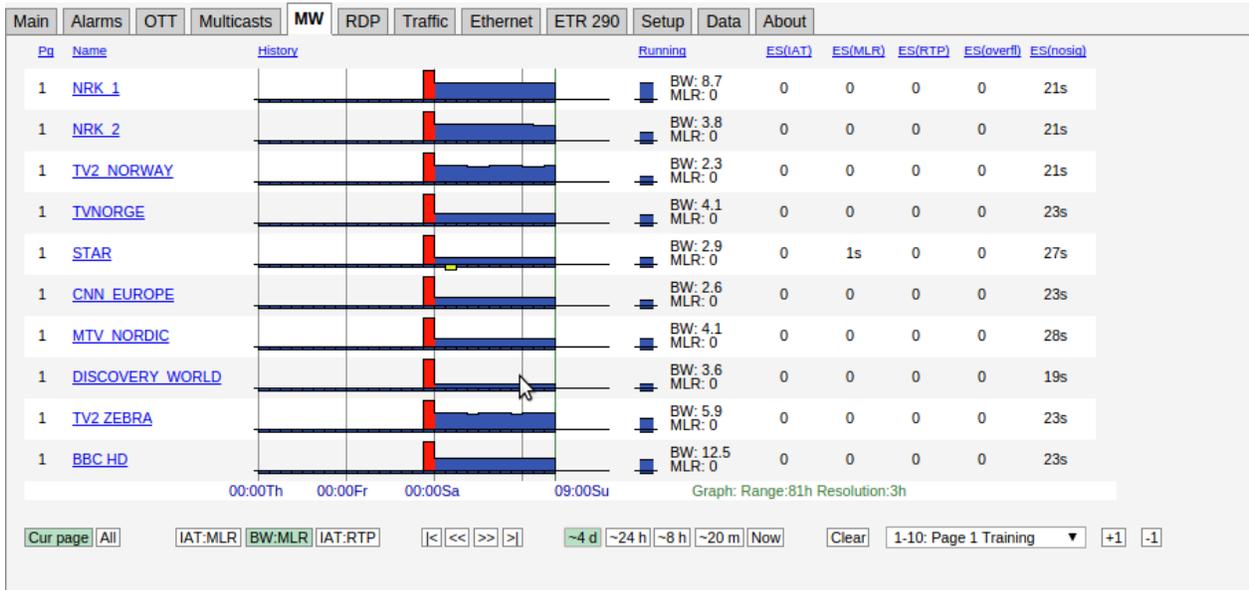


By clicking the **BW:MLR** button the graph displays the peak bandwidth as a function of time. The negative part of the composite graphs is still the packet loss (i.e. the MLR).

If the stream contains a transport stream (mapping TS/x) the bitrate corresponds to the **Multicasts** parameter **Net bitrate** (i.e. bitrate excluding null packets). Otherwise the bitrate is the UDP payload bitrate corresponding to the **Multicasts** parameter **Curr bitrate**.

The bandwidth error threshold is configured in the **Multicasts — Ethernet thresh.** view.

## 6.5.3 Media Window — Inter Arrival Time graph

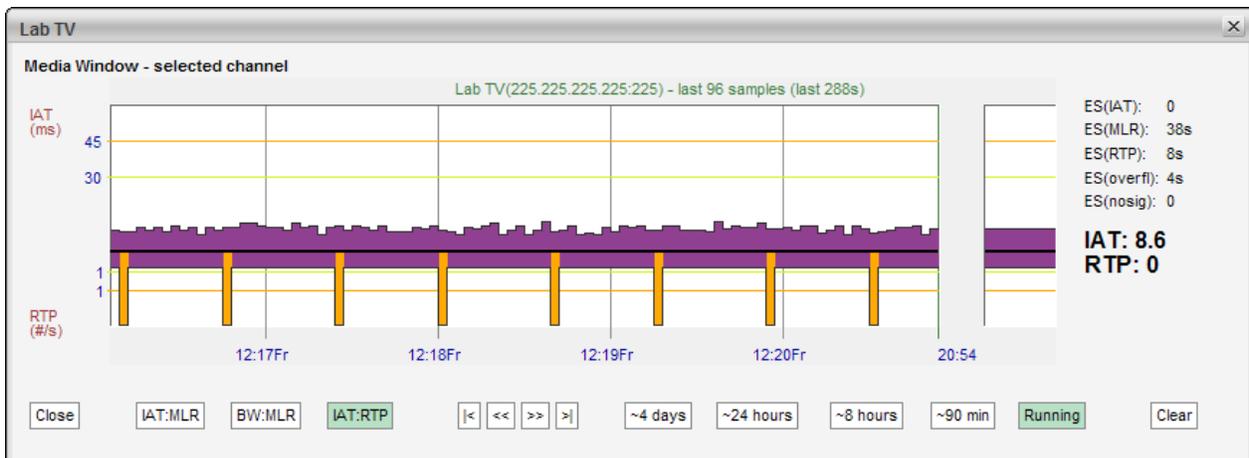


By clicking the **IAT:RTP** button the graph displays the packet jitter as a function of time. The composite graphs displays the RTP packet loss below the X-axis. If the monitored stream is not RTP encapsulated, IAT will be represented by grey color and there will never be any indication of packet loss in the graph.

## 6.6 RDP (Return Data Path)

The Return Data Path feature enables forwarding of streams from any probe interface to another destination IP address. Stream may also be recorded to file, either directly or triggered by alarms. The probe supports forwarding or recording of two streams in parallel.

### 6.6.1 RDP — Control

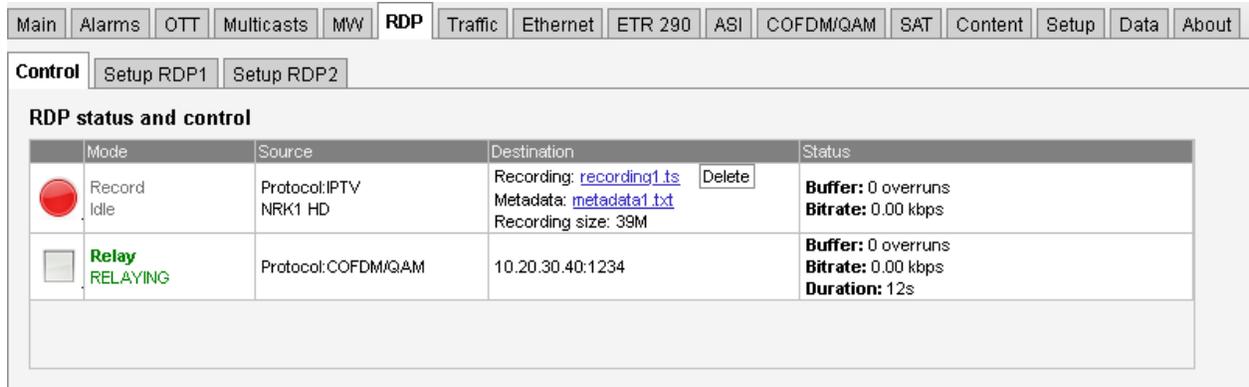

The screenshot shows the RDP Control interface with a navigation bar at the top containing tabs for Main, Alarms, OTT, Multicasts, MW, RDP, Traffic, Ethernet, ETR 290, ASI, COFDM/QAM, SAT, Content, Setup, Data, and About. Below the navigation bar, there are sub-tabs for Control, Setup RDP1, and Setup RDP2. The main content area is titled "RDP status and control" and contains a table with the following data:

	Mode	Source	Destination	Status
	Record Idle	Protocol:IPTV NRK1 HD	Recording: <a href="#">recording1.ts</a> <input type="button" value="Delete"/> Metadata: <a href="#">metadata1.txt</a> Recording size: 39M	<b>Buffer:</b> 0 overruns <b>Bitrate:</b> 0.00 kbps
	Relay RELAYING	Protocol:COFDM/QAM	10.20.30.40:1234	<b>Buffer:</b> 0 overruns <b>Bitrate:</b> 0.00 kbps <b>Duration:</b> 12s

Click the icons in the **Control** view to activate or de-activate an RDP engine. There are different icons for controlling RDP engines depending on whether they are configured to relay or record. The state of each RDP engine is restored after a reboot.

For recordings and triggered recordings the last recording is made available in the Destination column along with the metadata file. The metadata file contains basic information about the recording such as the recording size, list of PIDs and CC-errors for each PID. In the case of triggered recording, the alarm causing the recording is also included. Pressing the Delete button deletes the recording. For triggered recordings the number of recordings is stated in the Status column. Pressing the Delete button resets this counter. The buffer utilization is stated as a percentage and should never approach 100% for correct relaying or recordings.

## 6.6.2 RDP — Setup

Control
Setup RDP1
Setup RDP2

**Mode**

Mode:

**Input**

Source interface:

Source stream:

Content:

Selected PIDs:

**Relay**

IPv4-address:

Port:

TTL:

Timeout (minutes):

Encapsulation:

Relay via interface:

**Record**

Rec timeout (sec):

Rec size (MB):

Protect:

Alarm trigger 1:

Alarm trigger 2:

Alarm trigger 3:

**SRT Transmit**

Mode:

Passphrase:

Latency setting (ms):

For some parameter changes to take effect, RDP must be restarted

Each of the RDP engines is configured separately. First the Mode is selected. Depending on the mode either the Relay or Record settings needs to be configured. The Input selects the stream or interface to relay or record.

These are the settings:

---

### *Mode and Input*

---

<b>Mode:</b>	Select whether this RDP engine should relay, record or trigger-record.
<b>Source interface:</b>	The source interface drop-down menu allows selection of available input signals.
<b>Source Stream:</b>	When Ethernet input is selected the user selects the stream to forward or record. Ethernet streams being joined/monitored by the probe are available for selection.
<b>Content:</b>	The user selects the service to be relayed or recorded, or alternatively selects that the complete stream should be used. The PIDs associated with the service are automatically displayed in the ‘Selected PIDs’ field, and these may be edited if required.
<b>Selected PIDs:</b>	The user can specify the PIDs to be selected, default is all PIDs. Typically PAT and PMT PIDs should be forwarded in addition to video and audio PIDs, however this depends on the equipment receiving the forwarded stream.

---

When mode **Relay over IP** has been selected, the RDP parameters are:

---

*Relay*

---

<b>IPv4-address:</b>	The unicast address or multicast address to forward to. Multicast addresses are in the range 224.0.0.0 – 239.255.255.255.
<b>Port:</b>	The port to forward to. The combination of IP address and port fully describes the destination address.
<b>TTL:</b>	The Time-To-Live flagging of the relayed signal. The default value is 64.
<b>Timeout:</b>	The relaying period in minutes. If the value 0 is selected, no timeout applies, and relaying will continue until it is stopped manually.
<b>Encapsulation:</b>	The encapsulation format of the relayed stream. <b>UDP, RTP</b> or <b>SRT</b> may be selected.
<b>Relay via interface:</b>	The available interfaces for forwarding the stream are listed.

---

When mode **Record** or **Trigger recording** has been selected the options are:

---

*Record*

---

<b>Rec timeout:</b>	The maximum recording time in seconds. This setting enables the user to limit recordings of low-bitrate streams.
<b>Rec size:</b>	The total file size of the recording. When in alarm trigger mode the resulting recording will consist of a fixed sized portion of data before the alarm is raised and the remaining recording from data after the trigger occurred.
<b>Protect:</b>	When in alarm trigger mode the user may select to protect a recording from being overwritten due to a new alarm occurrence. The user may select between ‘Never overwrite’, ‘Do not protect’, ‘30 seconds’, ‘60 seconds’ and ‘5 minutes’.
<b>Alarm trigger 1–3:</b>	Select a maximum of three different alarms that should trigger recording. Note that a recording will start upon a transition from status <i>OK</i> to status <i>alarm</i> . Alarms that have been disabled in the <b>Alarm — Alarm setup</b> view will be shown in brackets – these will never trigger a recording.

---

The maximum recording size depends on the amount of free disk on the probe, up to a maximum of 1500 Mbyte.

When encapsulation **SRT** has been selected the SRT Transmit options are:

---

*SRT configuration options*

---

**Mode:** SRT can be connected using one of three connection modes: **Caller:** the probe sends the connection request to the peer, which must be **listener**, to initiate the connection. **Listener:** the probe waits to be contacted by any peer **caller**. **Rendezvous:** the probe and the peer (which must be in **rendezvous** mode as well) both attempt to initiate a connection simultaneously.

**Passphrase:** Specifies a passphrase to encrypt the forwarded stream.

**Latency setting:** The latency value (milliseconds) insisted upon by the sender side as a minimum value for the receiver.

Please refer to appendix D for more details on SRT.

## 6.7 Traffic

### 6.7.1 Traffic — Protocols

Statistic	Cur bitrate	Max bitrate	Min bitrate	Frames/sec	Frames	Frames %	Min flen	Max flen
Protocols	6.226 Gbps	6.233 Gbps		539 697	45 209 768 888	100.00 %	60	1442
IPv4	6.226 Gbps	6.233 Gbps		539 696	45 209 760 486	100.00 %	60	1442
UDP	6.226 Gbps	6.233 Gbps		539 696	45 209 755 999	100.00 %	342	1442
Monitored	6.226 Gbps	6.233 Gbps		539 696	45 209 752 628	100.00 %	1442	1442
DHCP		5.472 kbps		0	3 371	0.00 %	342	342
ICMP		504 bps		0	4 487	0.00 %	60	60
IPv6		2.656 kbps		0	5 584	0.00 %	62	90
Other	480 bps	77 824 kbps		1	2 818	0.00 %	60	256
ECN marking				0	0	0.00 %	0	0
DiffServ marking	6.226 Gbps	6.233 Gbps		539 696	45 209 760 486	100.00 %	60	1442
DSCP 4		5.472 kbps		0	3 371	0.00 %	342	342
DSCP 25	6.226 Gbps	6.233 Gbps		539 696	45 209 752 628	100.00 %	1442	1442
DSCP 48		504 bps		0	4 487	0.00 %	60	60
802.1Q marking				0	0	0.00 %	0	0

Interface: eth2 - SFP+ A    Statistics | Bitrates | Frames    Clear statistics

The **Protocols** view allows monitoring of IP traffic on the selected port in terms of the protocols used.

The interface can be selected using the drop-down at the bottom of the page. Clicking the **Clear statistics** button will reset displayed values.

The following measurements are presented, depending on which statistic is selected:

#### *Statistics*

**Statistic:** The protocol for which the following measurements apply

**Cur bitrate:** The current total bitrate for this protocol (measured over the last 1s period)

**Max bitrate:** The maximum bitrate during any 1s period

<b>Min bitrate:</b>	The minimum non-zero bitrate during any 1s period
<b>Frames/sec:</b>	Traffic speed in number of IP packets per second
<b>Frames:</b>	Number of Ethernet frames
<b>Frames %:</b>	Percentage of total number of frames
<b>Min flen:</b>	Minimum Ethernet frame length
<b>Max flen:</b>	Maximum Ethernet frame length

### *Bitrates*

<b>Statistic:</b>	As above
<b>Cur bitrate:</b>	As above
<b>Bitrates:</b>	A graph displaying the bitrate over time, displaying the last five minutes
<b>Bitrate graph:</b>	Click the bitrate graph button to display a detailed bitrate graph for the specified protocol

### *Frames*

<b>Statistic:</b>	As above
<b>Frames/sec:</b>	Traffic speed for this protocol expressed in number of IP packets per second
<b>Frames:</b>	A graph displaying frames per second over time, displaying the last five minutes
<b>Frames graph:</b>	Click the frames graph button to display a detailed frames per second graph for the specified protocol

### *Interface statistics*

<b>Link status:</b>	Displays whether the interface is up or down
<b>Link speed:</b>	Displays the interface speeds, as bits per second
<b>Link duplex:</b>	Indicates whether the interface is operating at full or half duplex
<b>UDP unicasts:</b>	The number of detected UDP unicasts
<b>UDP multicasts:</b>	The number of detected UDP multicasts
<b>COP3 Correctable:</b>	Total count of dropped payload IP packets that are correctable by the FEC
<b>COP3 Uncorrectable:</b>	Total count of dropped payload IP packets that cannot be corrected by the FEC
<b>COP3 Late:</b>	Payload or FEC packets are received slightly too late according to the buffer model and may result in errors in another implementation of the specifications. The number of packets with this error.

**COP3 Errors:** Either the L/D parameters are not consistent across the streams or payload/FEC packets are received too late or too early according to the buffer model. The number of packets with these errors.

## 6.7.2 Traffic — Detect

The screenshot shows the 'Detect' tab in the software interface. It displays a table titled 'Detected UDP traffic' with the following columns: Dst address, Src address, Name, Interface, Joined, Session ID, Mapping, Signal, RTP drops, CC errors, Bitrate, and CPU. Below the table, there are controls for '8 detected streams', including buttons for 'Live view', 'View list offline', a dropdown menu set to '(All)', an 'Include source address' checkbox, and buttons for 'Add selected to stream list', 'Add all to stream list', and 'Export...'.

	Dst address	Src address	Name	Interface	Joined	Session ID	Mapping	Signal	RTP drops	CC errors	Bitrate	CPU
i	239.255.2.1:5500	10.0.76.119:5500	NRK1 HD	eth0	yes		7TS/RTP	44h	24025	39557	7.824 M...	2
	239.255.2.1:5502	10.0.76.119:5500		eth0	no		n/a	-	-	-	-	2
i	239.255.2.2:5500	10.0.76.119:5500	NRK2 HD	eth0	yes		7TS/RTP	44h	24509	40073	3.513 M...	2
	239.255.2.2:5502	10.0.76.119:5500		eth0	no		n/a	-	-	-	-	2
	239.255.2.2:5504	10.0.76.119:5500		eth0	no		n/a	-	-	-	-	2
i	239.255.2.3:5500	10.0.76.119:5500	NRK3/Super HD	eth0	yes		7TS/RTP	44h	22192	38353	7.042 M...	2
i	239.255.2.50:5500	10.0.76.119:5500	Hyperdeck_p1	eth0	yes		7TS/RTP	44h	25123	25684	6.368 M...	2
i	239.255.2.51:5500	10.0.76.119:5500	CamHD	eth0	yes		7TS/RTP	44h	24866	22958	6.291 M...	2

The **Traffic Detect** view displays all UDP traffic sensed by the probe. Note that generally the upstream switch or router will not output streams that are not joined by downstream equipment, i.e. usually only joined streams will be available for monitoring.

If the unicast/multicast destination address is known to the probe (i.e. listed in the **Multicasts — Streams** view) the stream's **Name** is looked up, otherwise a generic name is used.

When the **Traffic — Detect** view is entered after probe booting, the probe will continuously try to detect streams. Click the **View list offline** button to view the stream list in offline mode. Click the **Refresh** button to update the stream list in offline mode.

The source address makes it possible for the probe to distinguish between multicasts with the same destination IP address and port, provided that **Source specific multicasts** has been enabled in the **Setup — Params** view.

If the stream is currently joined by the probe (i.e. the probe is currently monitoring the stream), the **Joined** field is set to yes.

Detected streams can be added to the probe's stream list by selecting streams and clicking the **Add selected to stream list**. If the checkbox **Include source address** is checked, the detected source address is added to the configuration, which will instruct the probe to request the stream as a source specific multicast; this setting can be configured globally in **Setup — Params**. To add all detected streams the **Add all to stream list** button can be pressed. Only streams not already in the probe's stream list are considered. Clicking the **Export** button will generate an XML-file that opens in a new window.


A drop down menu allows filtering of detected streams, making it possible to view streams of a specific type only. Stream types are defined in the **Traffic — Filter setup** view. If the AEO option is

enabled for the probe the Detect list will contain the following additional columns: Mapping, signal, RTP drops, CC errors and Bitrate. These parameters are the same as on the **Multicasts** page.

<b> ⓘ</b>	Click the blue information icon to pop up the detailed stream info if the stream is already monitored.
<b>Dst address:</b>	The multi- or unicast address
<b>Src address:</b>	The stream source address
<b>Name:</b>	The stream name, as defined in the <b>Multicasts — Streams</b> view. A generic name will be used for multi- or unicasts not defined by the user.
<b>Interface:</b>	The stream source network interface (physical or VLAN)
<b>Joined:</b>	If the stream is joined by the probe this field will read 'Yes'.
<b>Session ID:</b>	The session ID of the L2TP stream is specified here (or 0 if not used). It is used together with the multicast address to identify the L2TP stream.
<b>Mapping:</b>	The transport stream to IP mapping. Typically seven transport stream packets are mapped into one IP packet.
<b>Signal:</b>	The duration of stream availability
<b>RTP drops:</b>	The number of detected RTP drops for the stream. This is only valid if the stream is RTP encapsulated.
<b>CC errors:</b>	The number of detected continuity counter errors for the stream.
<b>Bitrate:</b>	The stream bitrate
<b>CPU:</b>	The probe CPU used to analyze the stream (1-7)

Please note that the **Multicast scan** and the **Detect** features are mutually exclusive, so it is necessary to click the **Exit scan mode** in the **Multicast scan** view to resume population of the **Detect** list.

### 6.7.3 Traffic — Filter statistics

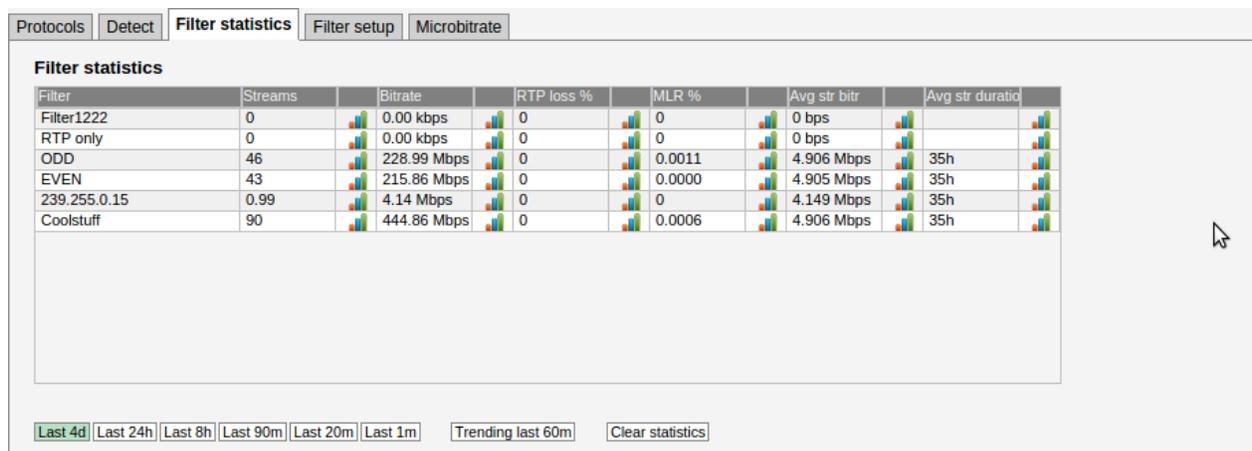

The **Traffic — Filter statistics** view makes it possible to view statistics for different stream types. Stream types are defined by the user in the **Traffic — Filter setup** view.

Statistics is displayed for a time period selected by clicking one of the time duration buttons.

---


*Filter statistics:*

---

<b>Filter:</b>	The filter name, as defined by the user in the <b>Traffic — Filter setup</b> view.
<b>Streams:</b>	The number of streams matching the associated filter, averaged over the selected time duration.
<b>Bitrate:</b>	The total summed bitrate for streams matching the associated filter.
<b>RTP loss %:</b>	<p>Percentage of time an average stream that matches the filter experiences RTP packet loss inside selected time period.</p> <p>Example: If the <b>Last 1m</b> period is selected and there are totally three streams caught by filter:</p> <ul style="list-style-type: none"> <li>• stream A: present for 60 seconds, 4 RTP error seconds</li> <li>• stream B: present for 30 seconds, 0 RTP error seconds</li> <li>• stream C: present for 30 seconds, 5 RTP error seconds</li> </ul> <p>RTP loss % = 9ES / 120s  RTP loss % = 9ES / 3streams / 120s *100% = 7.5%</p>
<b>MLR %:</b>	<p>Percentage of time an average stream that matches the filter experiences MLR inside selected time period.</p> <p>The calculation is similar to that for RTP loss %.</p>
<b>Avg str bitr:</b>	The average bitrate for streams matching the associated filter.
<b>Avg str duration:</b>	<p>The stream duration is calculated for each stream by identifying the stream's average stream alive counter inside the selected time period, then multiply by 2.</p> <p>The stream alive counter is the number of seconds the stream has existed. This gives accurate results for streams that begin within the selected time period, but may give up to twice the real bitrate for streams that begin (long) before the selected period.</p> <p>Examples: a stream exists for 100 seconds, and begins within the selected period. The calculation becomes:  Stream duration = (1+2+...+100)/100*2 = 101</p> <p>If the same stream started 50 seconds before the selected period, the calculation becomes:  Stream duration = (51+52+...+100)/50*2 = 151</p>

---


Clicking the icon next to each value brings up the detailed graph window.

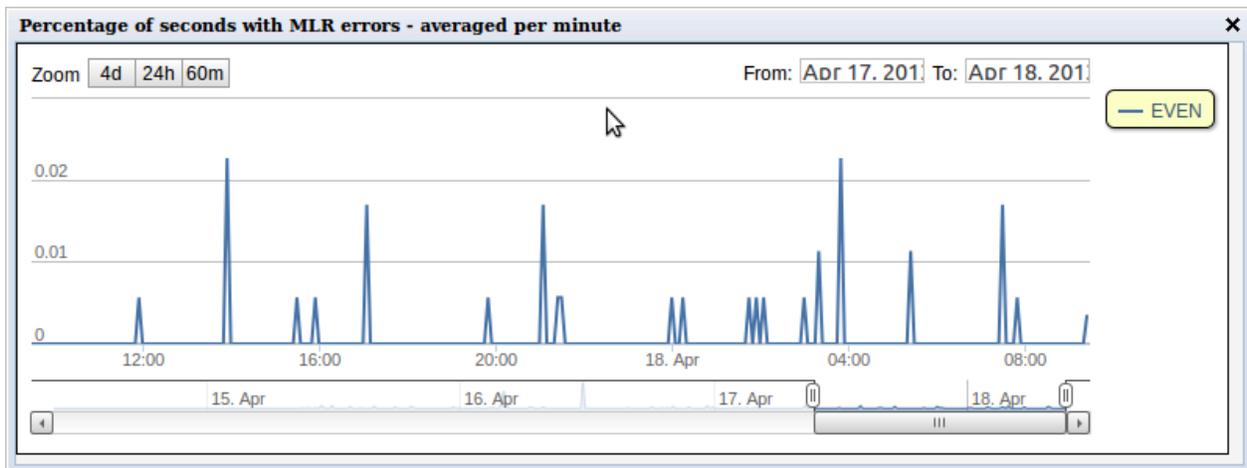


The detailed graph window displays up to 4 days of history.

## Trending

Clicking the **Trending last 60m** button will present at-a-glance trending graphs for each parameter for the last 60 minutes.

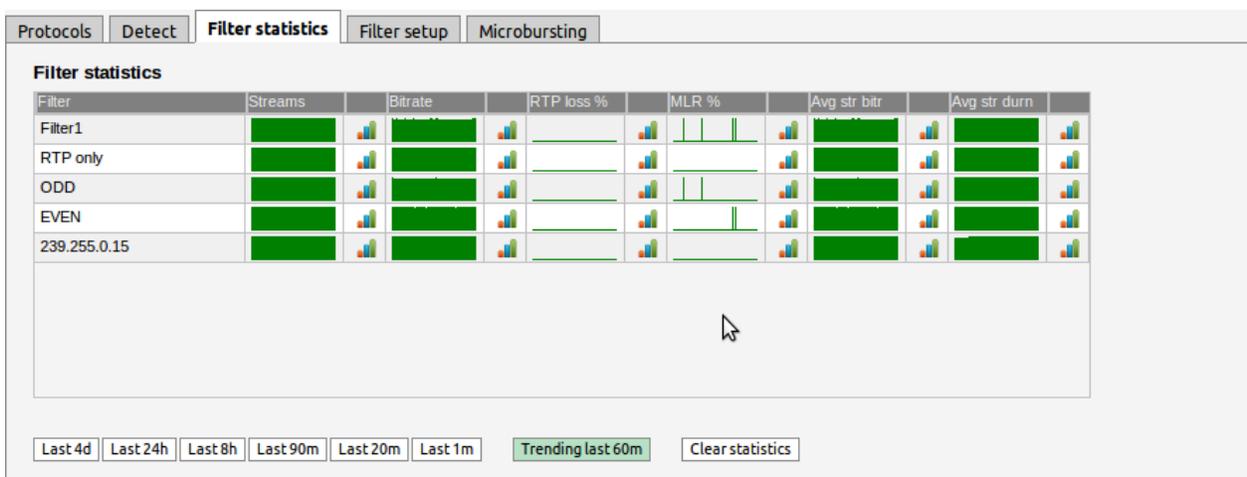

Clicking a graph icon displays the corresponding detailed graph for the selected filter. Clicking the trend graphs itself will bring up the same detailed graph but will plot all the filters so that they can easily be compared.

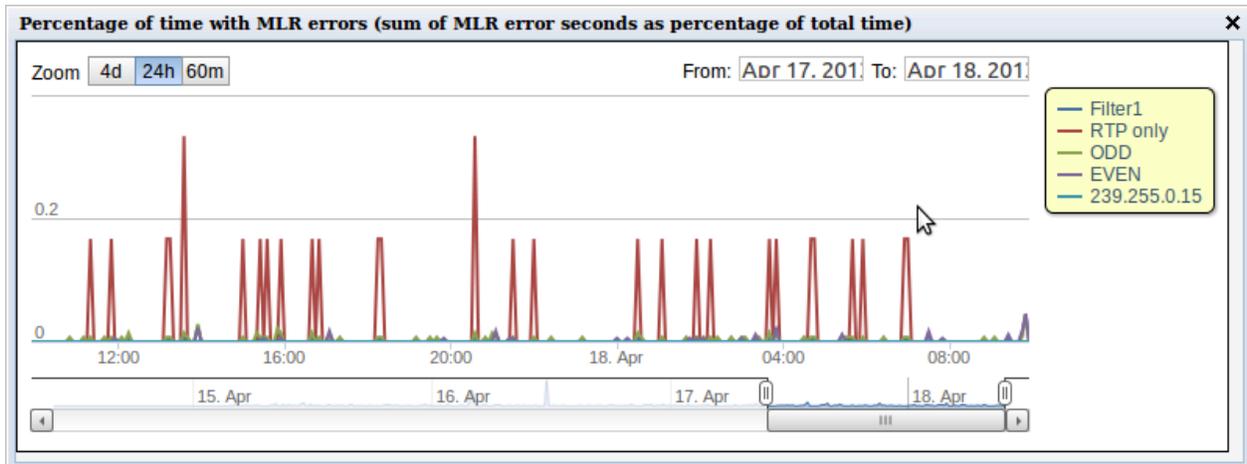

The detailed trending graph above displays MLR errors for all filters.

## 6.7.4 Traffic — Filter setup

Name	Enabled	Streams	Cast	RTP	VLAN	IP dst	IP src	UDP dst	UDP src	UDP payload	Edit
Filter1222	<input checked="" type="checkbox"/>	0	Only unicasts	-	-	-	-	-	-	-	<a href="#">Edit</a>
RTP only	<input checked="" type="checkbox"/>	0	-	Only with RTP	-	-	-	-	-	-	<a href="#">Edit</a>
ODD	<input checked="" type="checkbox"/>	47	-	-	-	Require match	-	-	-	-	<a href="#">Edit</a>
EVEN	<input checked="" type="checkbox"/>	44	-	-	-	Require match	-	-	-	-	<a href="#">Edit</a>
239.255.0.15	<input checked="" type="checkbox"/>	1	-	-	-	Require match	-	-	-	-	<a href="#">Edit</a>
Coolstuff	<input checked="" type="checkbox"/>	91	-	-	-	Require match	-	-	-	-	<a href="#">Edit</a>
Filter7	<input type="checkbox"/>	0	-	-	Only untagged	-	-	-	-	-	<a href="#">Edit</a>
Filter8	<input type="checkbox"/>	0	-	-	-	-	-	-	-	-	<a href="#">Edit</a>
Filter9	<input type="checkbox"/>	0	-	-	-	-	-	-	-	-	<a href="#">Edit</a>
multicast_monitorin	<input type="checkbox"/>	0	Only multicast	-	-	-	-	-	-	N TS/UDP	<a href="#">Edit</a>

Filters:10  
[Edit selected](#)

The **Traffic — Filter setup** view makes it possible to define stream filter requirements affecting the **Traffic — Detect** and **Traffic — Filter statistics** views. Ten filters can be defined and enabled by the user.

### *Statfilter settings:*

**Name:** A text string defining the filter

**Enabled:** Only enabled filters are in use


**Streams:** The number of streams matching filter requirements

**Cast:** The type of stream: *No filtering*, *Only unicasts* or *Only multicasts*

**RTP:** The RTP mode: *No filtering*, *Only with RTP header* or *Only without RTP header*

**VLAN:** VLAN selection mode: *No filtering*, *Only tagged traffic*, *Only untagged traffic* or *Require matching specified value* (a specific VLAN ID).

<b>IP dst:</b>	The IP destination address mode: <i>No filtering</i> or <i>Require matching specified value</i> (a specific IP address/netmask)
<b>IP src:</b>	The IP source address mode: <i>No filtering</i> or <i>Require matching specified value</i> (a specific IP address/netmask)
<b>UDP dst:</b>	The UDP destination mode: <i>No filtering</i> or <i>Require matching specified value</i> (a specific UDP port number)
<b>UDP src:</b>	The UDP source mode: <i>No filtering</i> or <i>Require matching specified value</i> (a specific UDP port number)
<b>UDP payload:</b>	The UDP payload mapping type: <i>No filtering</i> , <i>7 TS/UDP</i> or <i>N TS/UDP</i> (any integer number of TS to UDP mapping)
<b>Edit:</b>	Click the Edit link to edit filter settings.

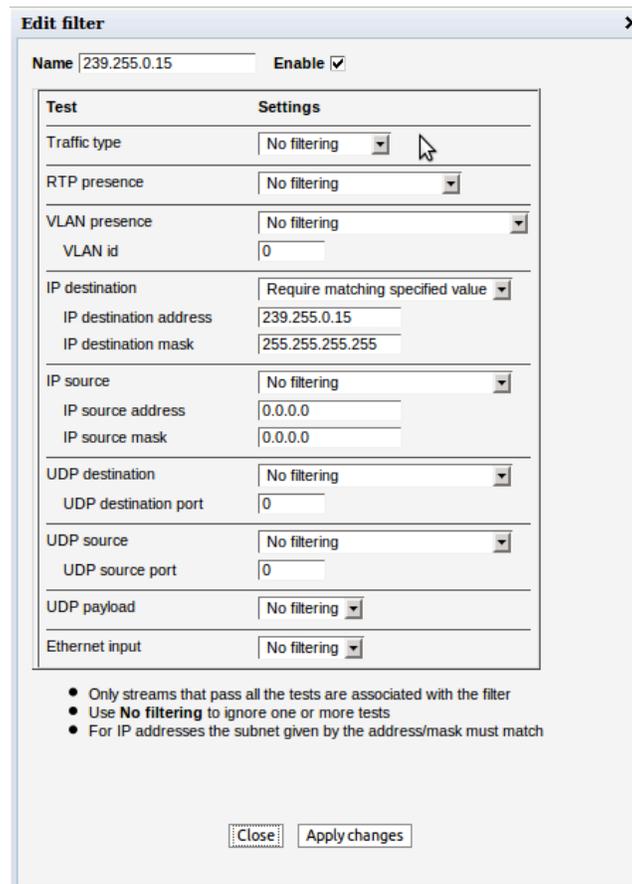

**Edit filter** [X]


Name: 239.255.0.15    Enable:

Test	Settings
Traffic type	No filtering
RTP presence	No filtering
VLAN presence	No filtering
VLAN id	0
IP destination	Require matching specified value
IP destination address	239.255.0.15
IP destination mask	255.255.255.255
IP source	No filtering
IP source address	0.0.0.0
IP source mask	0.0.0.0
UDP destination	No filtering
UDP destination port	0
UDP source	No filtering
UDP source port	0
UDP payload	No filtering
Ethernet input	No filtering

- Only streams that pass all the tests are associated with the filter
- Use **No filtering** to ignore one or more tests
- For IP addresses the subnet given by the address/mask must match

[Close]    [Apply changes]

## 6.7.5 Traffic — Microbitrate

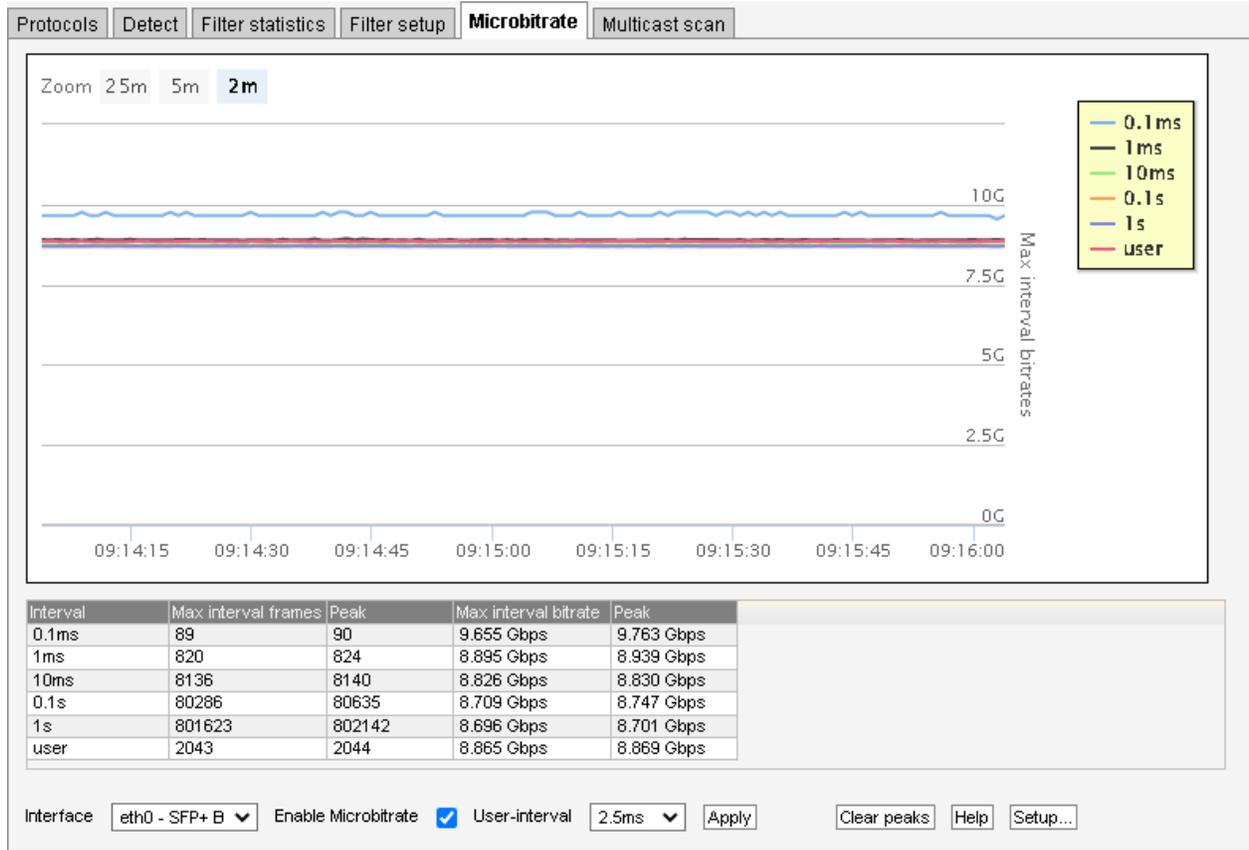

The Microbitrate feature allows sampling of bitrate at various sampling intervals. When enabling this feature, each Ethernet frame is timestamped in hardware on probe ingress. This timestamp is used to calculate bitrates at various sampling intervals. Due to quantisation error, the 0.1ms interval may show higher peak values than the theoretical maximum.

The **Interval** is the sampling interval of each bitrate calculation. There are six intervals tracked simultaneously, the five pre-defined intervals and the **user-interval**. The **User-interval** is a user-given sampling interval shown in the graph and used for microbitrate alarming.

The **Max interval frames** is the max number of frames within one interval last second. The **Max interval bitrate** is the max sum of Ethernet frame sizes inside one interval last second converted to bits per second. This number should always be bigger or equal for shorter intervals.

Click the legends in the graph to show or hide graphs.

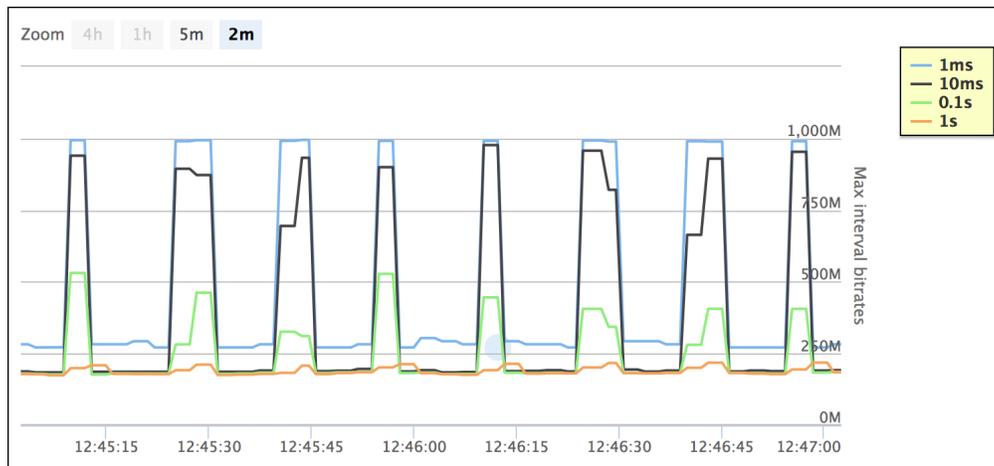


Figure 6.2: OTT traffic example

Figure 6.2 is a typical OTT traffic graph where the client periodically requests limited amounts of data at maximum speed resulting in traffic that is bursting near line-speed for short intervals while the average bitrate for larger intervals is only a fraction. This traffic shape is challenging for network equipment since it demands all remaining capacity up to line speed.

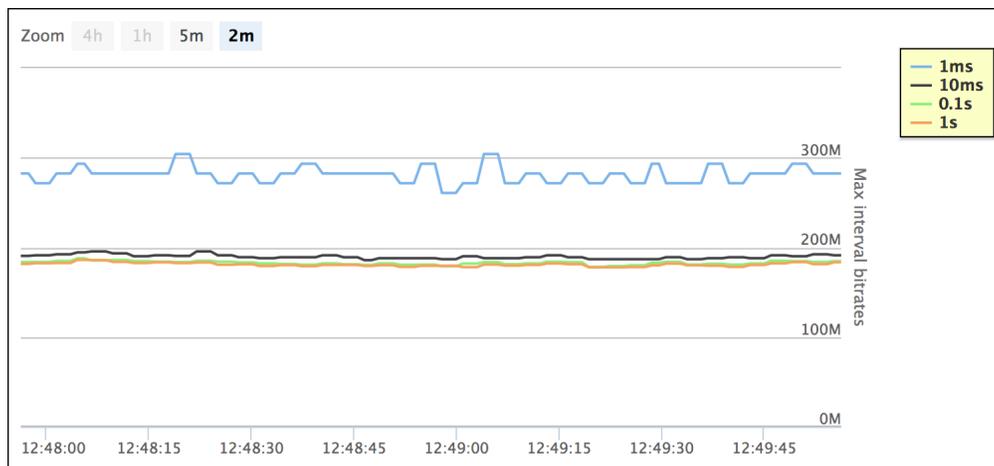


Figure 6.3: Multicast traffic example

For multicast type traffic the traffic pattern will look more like the graph in figure 6.3. Here the bitrate is much more steady even for short intervals. The network never experiences near line-speed bursting since each stream is bitrate controlled by the sender.

## Microbitrate Setup

Protocols
Detect
Filter statistics
Filter setup
Microbitrate
Multicast scan

**Microbitrate bursting alarm setting**

Burst threshold  Bitrate required (Mbps) to trigger alarm

**Microbitrate excessive ES bursting alarm settings**

ES Alarm window  Error second window (seconds) to count burst errors

ES threshold  Number of ES required in window to trigger alarm

These alarms are based on the sampling interval specified for the user-graph.

There are two alarms defined for Microbitrate:

- Microbitrate bursting
- Microbitrate excessive ES bursting

These alarms are both associated with the user-interval, which is a user-specified graph sampling interval.

If the bitrate of the user-interval exceeds the **Burst threshold** setting, the **Microbitrate bursting** alarm will be raised.

Sometimes this will yield a lot of alarms, so a second alarm has been defined. Whenever the bitrate of the user-interval exceeds the **Burst threshold** for **ES threshold** number of seconds during the **last ES Alarm window** seconds, the **Microbitrate excessive ES bursting** alarm is raised.

## 6.7.6 Traffic — Multicast scan

	Dst address	Src address	Name	Interface	Joined	Session ID	CPU
i	239.255.0.2:5500	10.0.81.13:5500		eth0	no		2
i	239.255.0.3:5500	10.0.81.13:5500		eth0	no		2
i	239.255.0.4:5500	10.0.81.13:5500		eth0	no		2
i	239.255.0.5:5500	10.0.81.13:5500		eth0	no		2
i	239.255.0.6:5500	10.0.81.13:5500		eth0	no		2
i	239.255.0.7:5500	10.0.81.13:5500		eth0	no		2
i	239.255.0.8:5500	10.0.81.13:5500		eth0	no		2
i	239.255.0.9:5500	10.0.81.13:5500		eth0	no		2
i	239.255.0.10:5500	10.0.81.14:5500		eth0	no		2
i	239.255.0.12:5500	10.0.81.16:5500		eth0	no		2
i	239.255.0.20:5500	10.0.81.16:1234		eth0	no		2
i	239.255.0.23:5500	10.0.81.14:5500		eth0	no		2
i	239.255.0.24:5500	10.0.81.14:5500		eth0	no		2
i	239.255.0.27:5500	10.0.81.14:5500		eth0	no		2
i	239.255.0.33:5500	10.0.81.13:5500		eth0	no		2
i	239.255.0.35:5500	10.0.81.13:5500		eth0	no		2
i	239.255.0.38:5500	10.0.81.14:5500		eth0	no		2

Multicasts detected: 105 Range complete: 79.1 % Current: 239.255.0.202

Buttons: Begin scan, Stop scan, Exit scan mode, Add selected to stream list, Add all to stream list, Export...

The **Multicast scan** feature is useful for scanning an IPv4 multicast interval to see which multicasts are available in the network. Detected multicasts can easily be added to the stream list. The parameters displayed are the same as in the **Traffic — Detect** view, please see chapter 6.7.2 for details.

Configure the scan interval and other scan parameters in the **Setup** view.

Protocols Detect Filter statistics Filter setup Microbitrate **Multicast scan**

Results **Setup**

Multicast range: 239.255.0.1 to 239.255.0.255

All UDP ports:

UDP port range: 1024 to 65535

Simultaneous joins: 1

Expect traffic within (s): 3

Select input: eth0 - Data RJ45

Apply settings

### Setup

**Multicast range:** The multicast range to scan (IPv4 addresses).

**All UDP ports:** Check this to disable filtering on UDP port.

**UDP port range:** Filter to be used for UDP port unless **All UDP ports** is checked.

**Simultaneous joins:** Number of joins performed simultaneously.

**Expect traffic within (s):** The probe will wait this long to determine if the multicasts joined actually exist.

**Select input:** Input interface to scan.

In fast networks it is useful to increase the **Simultaneous joins** to a larger number.

Please note that the **Multicast scan** and the **Detect** features are mutually exclusive, so it is necessary to click the **Exit scan mode** to resume population of the **Detect** list.

## 6.8 Ethernet

### 6.8.1 Ethernet — FSM

Full Service Monitoring (FSM) allows easy validation of any server reachable by the probe via Ethernet. The servers may be probed by either sending an ICMP Echo Request packet (also known as Ping) or performing an HTTP Get request.

Up to 10 services may be defined and each service will be checked at regular intervals. Any errors will be logged. An error is defined as no reply within 5 seconds for the Ping option or no, or incorrect, reply within 5 seconds for the HTTP option. If there are more consecutive errors than a fails threshold value an alarm will be raised.

#### 6.8.1.1 Ethernet — FSM — Monitor

The screenshot shows the 'Ethernet' configuration page with the 'FSM' tab selected. Under 'FSM', the 'Monitor' sub-tab is active. It displays a table of monitored services with columns for Status, Name, Protocol, Device, Hostname, OK, Fail, Max, Min, Current, Timer, and State. Below the table are controls for 'Clear all', a 'Ping' input field with '172.20.0.10', a 'Response: 0.5 ms' indicator, and a 'Traceroute...' button.

Status	Name	Protocol	Device	Hostname	OK	Fail	Max	Min	Current	Timer	State
■	Jenkins eth1	PING	eth1	172.16.0.1	1190	0	2.5 ms	0.1 ms	0.3 ms	Reset	Waiting to se...
■	Jenkins eth0	PING	eth0	10.0.31.142	1190	0	1.6 ms	0.1 ms	0.3 ms	Reset	Waiting to se...
■	Slave1 eth1	PING	eth1	172.16.0.2	1190	0	3.2 ms	0.1 ms	0.3 ms	Reset	Waiting to se...
■	Slave1 eth0	PING	eth0	10.0.31.143	1190	0	2.0 ms	<0.1 ms	0.2 ms	Reset	Waiting to se...
■	Slave2 eth1	PING	eth1	172.16.0.3	1190	0	1.2 ms	0.1 ms	0.3 ms	Reset	Waiting to se...
■	Slave2 eth0	PING	eth0	10.0.31.144	1190	0	2.7 ms	0.1 ms	0.3 ms	Reset	Waiting to se...
■	VB288 eth1	PING	eth1	172.16.0.4	1190	0	1.3 ms	<0.1 ms	0.1 ms	Reset	Got reply
■	VB288 eth0	PING	eth0	10.0.30.144	1189	0	1.1 ms	<0.1 ms	0.1 ms	Reset	Waiting to se...
■	VM host	PING	Default	10.0.31.140	1189	0	3.0 ms	<0.1 ms	0.1 ms	Reset	Waiting to se...
■	CIMC host	PING	Default	10.0.31.141	-	-	-	-	-	Reset	Disabled

The following parameters are continuously monitored for each service:

- 
- Status:** Red = active alarm, Green = no alarm

---

  - Name:** User defined service name

---

  - Protocol:** Type of protocol. HTTP or Ping

---

<b>IP address:</b>	IP address. Must be numeric, host name is not accepted
<b>OK:</b>	Total number of valid checks
<b>Fail:</b>	Total number of invalid checks
<b>Max:</b>	Maximum response time recorded
<b>Min:</b>	Minimum response time recorded
<b>Current:</b>	The current (most recent) response time
<b>Timer:</b>	Button to reset and immediately restart the service
<b>State:</b>	Current state of the service. The states are: 'Disabled', 'Waiting to send', 'Waiting for reply', 'Got reply' and 'Reset'.

For convenience a manual ping field is located below the status table. By entering a valid IP address or host name and clicking the **Ping** button an arbitrary server may be pinged.

The **Clear all** button will clear accumulated data for all enabled FSM services, but active alarms will not be removed.

Clicking the **Traceroute** button will open a new window, allowing the user to trace the network route to a specified IP address.



## 6.8.1.2 Ethernet — FSM — Setup

Full Service Monitoring Setup					
Name	Protocol	Hostname	Device	Enabled	Edit
Jenkins eth1	PING	172.16.0.1	eth1	✓	<a href="#">Edit</a>
Jenkins eth0	PING	10.0.31.142	eth0	✓	<a href="#">Edit</a>
Slave1 eth1	PING	172.16.0.2	eth1	✓	<a href="#">Edit</a>
Slave1 eth0	PING	10.0.31.143	eth0	✓	<a href="#">Edit</a>
Slave2 eth1	PING	172.16.0.3	eth1	✓	<a href="#">Edit</a>
Slave2 eth0	PING	10.0.31.144	eth0	✓	<a href="#">Edit</a>
VB288 eth1	PING	172.16.0.4	eth1	✓	<a href="#">Edit</a>
VB288 eth0	PING	10.0.30.144	eth0	✓	<a href="#">Edit</a>
VM host	PING	10.0.31.140	Default	✓	<a href="#">Edit</a>
CLMC host	PING	10.0.31.141	Default		<a href="#">Edit</a>

Each of the 10 FSM services may be defined or edited by clicking on the corresponding **Edit** button in the left hand table.

The probe supports ping and generic HTTP GET protocols for online status verification of arbitrary targets. After completing configuration of the selected service **Apply changes** must be pressed to save and apply the changes.

These fields are common for both the ping and the HTTP GET protocols:

---

**Enable:** Enable by checking toggle button.


---

<b>Name:</b>	User-defined name of service
<b>Protocol:</b>	Select between ping and HTTP.
<b>Device:</b>	Ethernet interface to use for this service.
<b>Probe cycle:</b>	Time interval in seconds to wait between each activation. A value below 30 is not recommended.
<b>Fails threshold:</b>	The number of consecutive errors needed to raise an alarm
<b>Hostname:</b>	The IP address for the target. Host names are supported for HTTP.
<b>Comment:</b>	Optional comment field – maximum 100 characters

These fields are specific for the HTTP GET protocol:

<b>http://&lt;IP address&gt;:</b>	The request to send to the target, for example index.html
<b>Expect word reply:</b>	A case sensitive word or sentence to be expected in the reply. To find a suitable string, use the Show content link. Leave this field empty to let the probe ignore the contents of the reply.
<b>Last reply:</b>	The last reply Show content link points to the last HTML file that was generated by this service.
<b>Port:</b>	The port used by the target server, often 80 for HTTP requests
<b>Support cookies:</b>	If enabled, the HTTP GET request will remember cookies returned by the target and provide them in subsequent requests.

### 6.8.1.3 Ethernet — FSM — Syslog

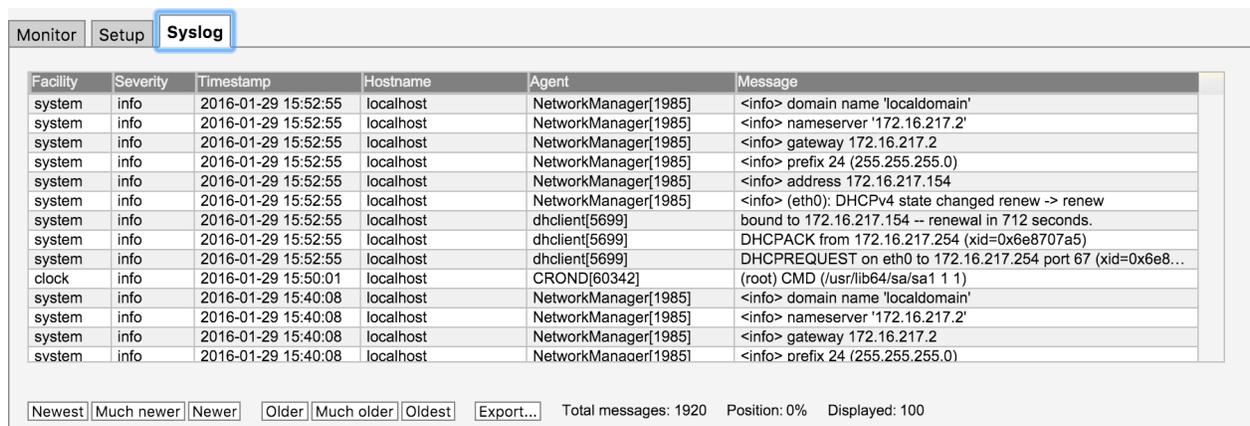

The screenshot shows the 'Syslog' tab selected in a monitoring interface. Below the tabs is a table with the following columns: Facility, Severity, Timestamp, Hostname, Agent, and Message. The table contains 15 rows of log entries. At the bottom of the interface, there are navigation buttons: Newest, Much newer, Newer, Older, Much older, Oldest, and Export... The status bar at the bottom indicates 'Total messages: 1920', 'Position: 0%', and 'Displayed: 100'.

Facility	Severity	Timestamp	Hostname	Agent	Message
system	info	2016-01-29 15:52:55	localhost	NetworkManager[1985]	<info> domain name 'localdomain'
system	info	2016-01-29 15:52:55	localhost	NetworkManager[1985]	<info> nameserver '172.16.217.2'
system	info	2016-01-29 15:52:55	localhost	NetworkManager[1985]	<info> gateway 172.16.217.2
system	info	2016-01-29 15:52:55	localhost	NetworkManager[1985]	<info> prefix 24 (255.255.255.0)
system	info	2016-01-29 15:52:55	localhost	NetworkManager[1985]	<info> address 172.16.217.154
system	info	2016-01-29 15:52:55	localhost	NetworkManager[1985]	<info> (eth0): DHCPv4 state changed renew -> renew
system	info	2016-01-29 15:52:55	localhost	dhclient[5699]	bound to 172.16.217.154 -- renewal in 712 seconds.
system	info	2016-01-29 15:52:55	localhost	dhclient[5699]	DHCPACK from 172.16.217.254 (xid=0x6e8707a5)
system	info	2016-01-29 15:52:55	localhost	dhclient[5699]	DHCPREQUEST on eth0 to 172.16.217.254 port 67 (xid=0x6e8...
clock	info	2016-01-29 15:50:01	localhost	CROND[60342]	(root) CMD (/usr/lib64/sa/sa1 1 1)
system	info	2016-01-29 15:40:08	localhost	NetworkManager[1985]	<info> domain name 'localdomain'
system	info	2016-01-29 15:40:08	localhost	NetworkManager[1985]	<info> nameserver '172.16.217.2'
system	info	2016-01-29 15:40:08	localhost	NetworkManager[1985]	<info> gateway 172.16.217.2
system	info	2016-01-29 15:40:08	localhost	NetworkManager[1985]	<info> prefix 24 (255.255.255.0)

The VB330 has a built-in syslog server which captures all incoming messages (UDP, port 514). Messages are displayed in a pageable grid with the following columns: Facility, Severity, Timestamp, Hostname, Agent and Message. Currently displayed page can be exported as an XML-document.

Since the syslog server typically stores about 100 pages of messages there is a group of buttons for a fast navigation:

<b>Newest</b>	Move to the first page
<b>Much newer</b>	Move 10 pages backwards
<b>Newer</b>	Move 1 page backwards
<b>Older</b>	Move 1 page forwards
<b>Much older</b>	Move 10 pages forwards
<b>Oldest</b>	Move to the last page

Syslog server has a limited capacity which is usually enough to store the latest 10,000 messages depending on the size of the syslog messages. When a new message arrives and no storage space remains the oldest messages are removed.

Note that the syslog server is very sensible to time settings, so it is strongly recommended to have a time synchronization enabled.

## 6.8.2 Ethernet — IGMP

FSM		IGMP	PCAP			
No	Time	Source	Destination	Code	Message	Group
4833	Feb 01 09:22:32.872	10.0.31.145 (local)	239.255.0.152	0	IGMPV2 host membership report (0x16)	239.255.0.152
4834	Feb 01 09:23:24.646	10.0.30.1	224.0.0.1	100	IGMP host membership query (0x11)	
4835	Feb 01 09:23:25.844	10.0.31.145 (local)	239.255.0.151	0	IGMPV2 host membership report (0x16)	239.255.0.151
4836	Feb 01 09:23:29.576	10.0.31.145 (local)	239.255.0.152	0	IGMPV2 host membership report (0x16)	239.255.0.152
4837	Feb 01 09:23:31.192	10.0.31.145 (local)	239.255.0.150	0	IGMPV2 host membership report (0x16)	239.255.0.150
4838	Feb 01 09:24:24.689	10.0.30.1	224.0.0.1	100	IGMP host membership query (0x11)	
4839	Feb 01 09:24:27.808	10.0.31.145 (local)	239.255.0.152	0	IGMPV2 host membership report (0x16)	239.255.0.152
4840	Feb 01 09:24:28.016	10.0.31.145 (local)	239.255.0.151	0	IGMPV2 host membership report (0x16)	239.255.0.151
4841	Feb 01 09:24:32.360	10.0.31.145 (local)	239.255.0.150	0	IGMPV2 host membership report (0x16)	239.255.0.150
4842	Feb 01 09:25:24.752	10.0.30.1	224.0.0.1	100	IGMP host membership query (0x11)	
4843	Feb 01 09:25:27.400	10.0.31.145 (local)	239.255.0.152	0	IGMPV2 host membership report (0x16)	239.255.0.152
4844	Feb 01 09:25:30.536	10.0.31.145 (local)	239.255.0.150	0	IGMPV2 host membership report (0x16)	239.255.0.150
4845	Feb 01 09:25:31.592	10.0.31.145 (local)	239.255.0.151	0	IGMPV2 host membership report (0x16)	239.255.0.151
4846	Feb 01 09:26:24.807	10.0.30.1	224.0.0.1	100	IGMP host membership query (0x11)	
4847	Feb 01 09:26:29.608	10.0.31.145 (local)	239.255.0.152	0	IGMPV2 host membership report (0x16)	239.255.0.152
4848	Feb 01 09:26:30.120	10.0.31.145 (local)	239.255.0.150	0	IGMPV2 host membership report (0x16)	239.255.0.150
4849	Feb 01 09:26:31.304	10.0.31.145 (local)	239.255.0.151	0	IGMPV2 host membership report (0x16)	239.255.0.151

Live view View list offline Clear list Export...


The IGMP view shows all IGMP (version 2 or 3) messages detected by the probe. This includes IGMP query messages sent by routers, IGMP reply messages sent by the probe itself and IGMP reply messages sent by other probes and devices on the same subnet.

The live IGMP page can be paused by clicking the **View list offline** button. The IGMP messages can be exported as XML by clicking the **Export...** button, and the list is cleared by clicking the **Clear list** button.

: Click the blue information icon to open the IGMP record pop-up view

<b>No:</b>	The message number since the list was cleared
<b>Time:</b>	The probe time when the message occurred
<b>Millisec:</b>	The milliseconds timestamp
<b>Source:</b>	The source IP address
<b>Destination:</b>	The destination IP address
<b>Code:</b>	The timeout code
<b>Message:</b>	The interpreted IGMP message
<b>Group:</b>	The IGMP group address

### 6.8.3 Ethernet — PCAP

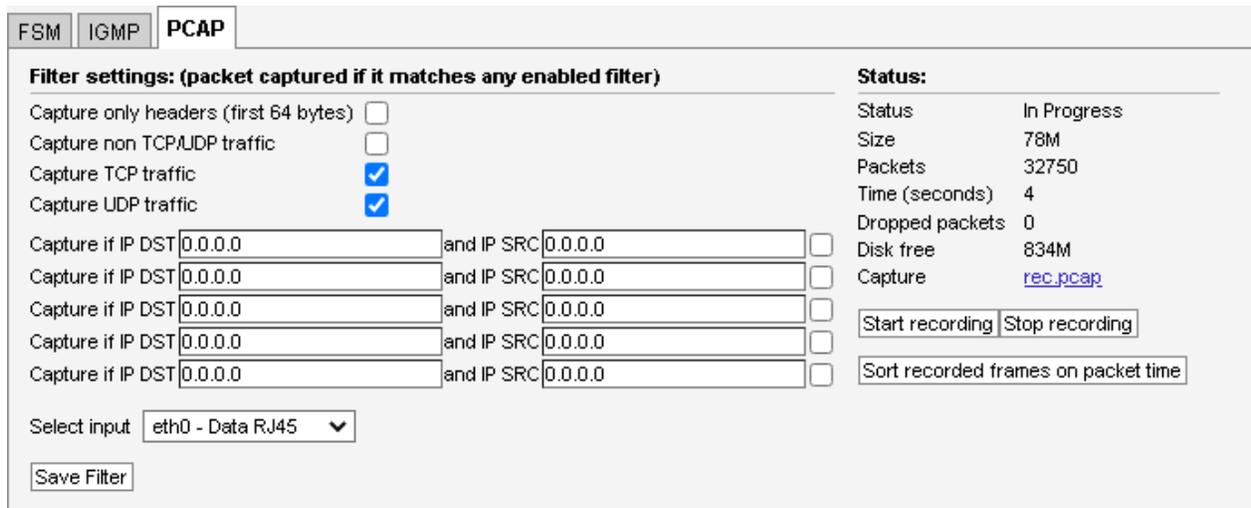

The VB330 can make PCAP recordings on the data interface of up to approximately 2 Gbyte (depending on the amount of free disk) based on simple user configurable filters. If the FLASH option is available, the recorded PCAP files can be moved to a 32 Gbyte flash card using the **Data — Storage** view. The PCAP format supports microsecond timing accuracy.

Incoming traffic is recorded if it matches one or more of the enabled filters while outgoing traffic is always recorded. So for instance, to record all OTT traffic on the data interface it is sufficient to enable the “Capture all TCP traffic” filter (since OTT uses the HTTP protocol which is always TCP).

In order to be able to create a PCAP recording, the VB330 must temporarily enable extended analysis of all incoming data. Under some circumstances, this might cause packet drops due to the system becoming overloaded. If this happens, please try to reduce the load by temporarily unjoining multicasts and then try again.

---

#### *Filter settings*

---

<b>Capture only header (first 64 bytes):</b>	If enabled, only 64 first bytes of Ethernet frame is captured. This allows higher bitrate traffic to be recorded and over longer time
<b>Capture all non TCP/UDP traffic:</b>	Check to record non-IPv4 traffic such as ARP, PIM or IPv6
<b>Capture all TCP traffic:</b>	Check to capture all IPv4 TCP traffic
<b>Capture all UDP traffic:</b>	Check to capture all IPv4 UDP traffic
<b>IP DST and IP SRC filters:</b>	Check to activate test. Will capture stream if IP destination address matches. If SRC is specified it has to match too
<b>Select input:</b>	Chooses the network interface to capture traffic on
<i>Status</i>	
<b>Status:</b>	Show the current recording status
<b>Size:</b>	Size of current recording
<b>Packets:</b>	Number of packets in the recording
<b>Time (seconds):</b>	Duration of the current recording
<b>Dropped packets:</b>	Number of dropped packets due, usually caused by running temporarily out of buffer due to too high traffic. To allow higher bitrate recordings <b>Capture only headers</b> may be enabled.
<b>Disk free:</b>	Remaining disk size
<b>Capture:</b>	Link to download the recorded capture. May be invalid if recording is still in progress.
<b>Start recording:</b>	Click to start a new recording. This will clear the current rec.pcap file.
<b>Stop recording:</b>	Click to stop the current recording.
<b>Sort recorded frames on packet time:</b>	At high bitrates, some Ethernet frames may be recorded out of order as a result of the multi-core architecture. Click to sort frames in recording according to time-stamp.

## 6.9 ETR 290 (Option)

The ETR 290 tab and all sub-views will only be present in the user interface provided that the probe is licensed with the ETR 290 option.


The ETR 290 views show information as reported by the ETSI TR 101 290 monitoring engines.

If ETR 290 analysis has been configured for multiple Ethernet streams to be monitored by a particular Ethernet ETR engine (refer to **Multicasts — Streams — Edit**), they will be analyzed in a round-robin fashion by the engine. A maximum of 2000 Ethernet streams may be analyzed in total.

The number of ETR 290 analysis engines depends on the license. The SW currently support up to 400 engines. More engines make it possible to reduce the analysis round-trip time or allowing simultaneous full-time ETR analysis of many multicasts. The ETR 290 analysis engines operate in parallel.

It is possible to hide disabled inputs from being displayed in the various **ETR 290** sub-views. This setting is found in the **Setup — ETR** view.

## 6.9.1 ETR 290 — Overview

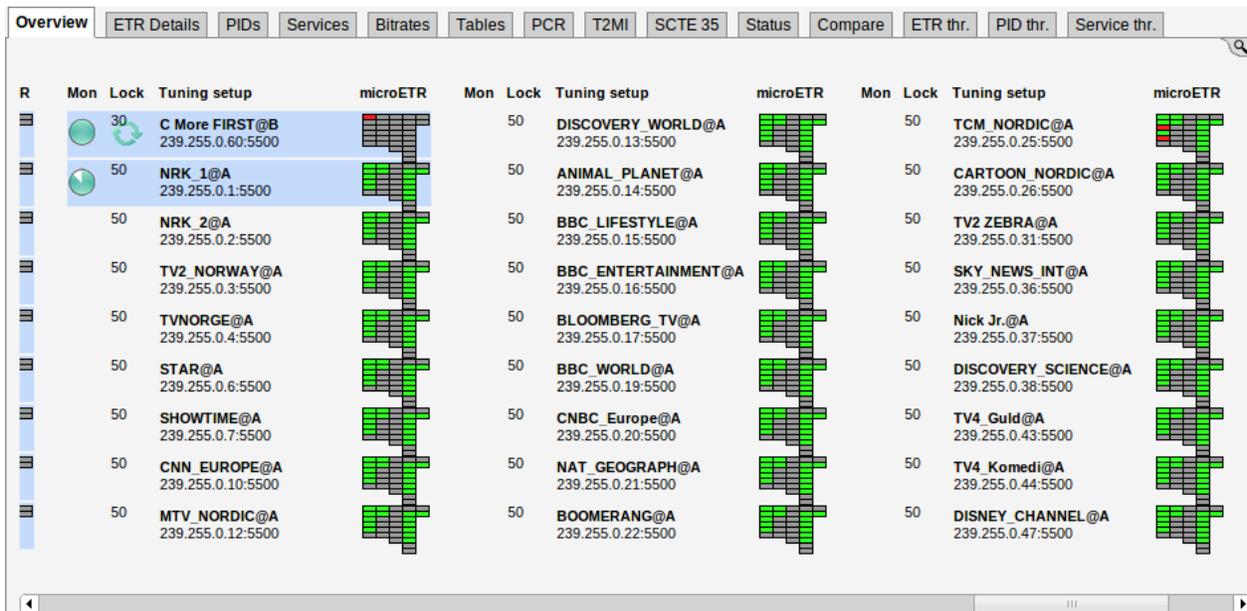

The **ETR 290 — Overview** view will show ETR 290 status for ETR 290 monitored streams. ETR 290 monitoring may be enabled for Ethernet streams in the **Multicasts — Streams — Edit** view.

The streams currently being analyzed are highlighted and a circular progress icon shows the monitoring progress.

The analysis time for each stream is set as part of the **ETR thresholds** parameters list in the **ETR 290 — ETR thr. — Edit** view.

The result of the different ETR 290 tests are shown as table entries in a condensed view called MicroETR, a scaled down version of the regular ETR display, one icon representing one stream. Green color indicates status OK whereas red color indicates an active alarm for that particular test. A white field shows that a check has not yet been performed, usually due to lack of measurement data, and grey indicates that a check is disabled. Tool-tip functionality allows the user to view the name of an individual check in the MicroETR display. Let the mouse pointer hover over the field for a moment to view the tool-tip.

When clicking one of the MicroETR icons the detailed ETR 290 status for that stream is displayed in the **ETR 290 — ETR Details** view. By entering this view through the MicroETR, the view will


remain static irrespective of the round-robin looping, thus making it easy to examine one stream in detail without interruptions. The round-robin looping and associated alarm handling will continue in the background. Click the magnifying glass icon to open a search field, making it possible to filter the list of monitored streams.

Note that it is possible to deactivate individual ETR 290 alarms by defining appropriate **ETR thresholds**.

To examine one particular Ethernet stream in more detail, lock the ETR 290 analysis to that stream by clicking the lock field at that stream. The round-robin operation of the ETR 290 engine will then be stopped and a lock icon will appear as an indication that the monitoring is locked to that stream. If a time limit has been set for the time lock (**Setup — ETR** view), a clock icon will be superimposed on the lock icon. To re-activate the round-robin cycling the lock icon should be clicked. Note that locking the ETR 290 processing to one stream will affect alarm handling and all ETR 290 views. Active alarms for streams that are not currently being analyzed will freeze (remain active) until the processing lock is deselected and ETR 290 analysis eventually shows that the error state is cleared.

The user can select one input to be displayed exclusively by clicking the corresponding **Show only this input** button. This does not affect ETR 290 processing or alarming. Click **Show all inputs** to again display information about all inputs.

## 6.9.2 ETR 290 — ETR Details

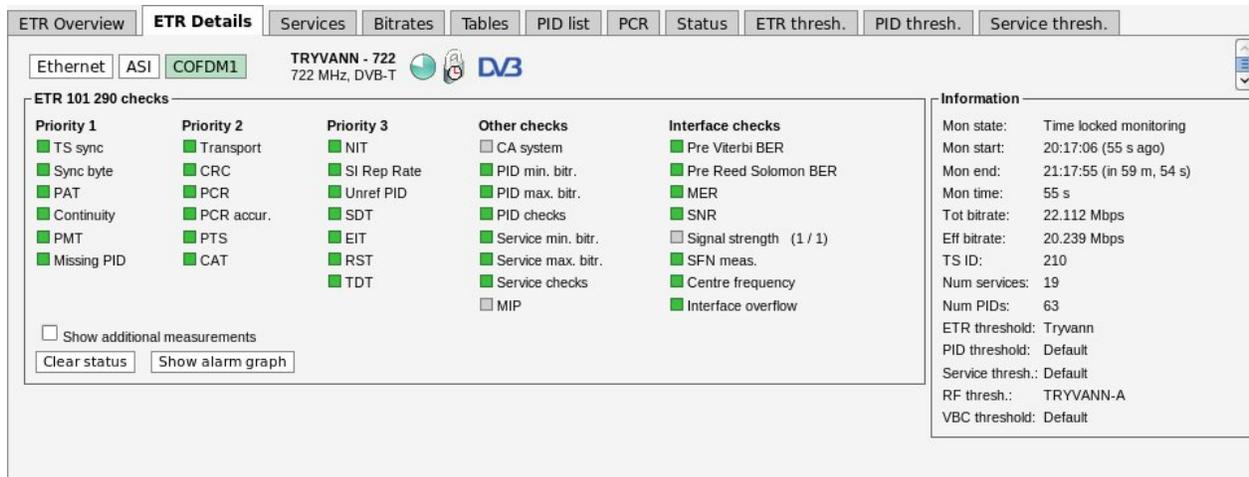

The screenshot displays the 'ETR Details' window for a stream named 'TRYVANN - 722 722 MHz, DVB-T'. The interface includes several tabs: Ethernet, ASI, COFDM1, Services, Bitrates, Tables, PID list, PCR, Status, ETR thresh., PID thresh., and Service thresh. The main content area is divided into two sections: 'ETR 101 290 checks' and 'Information'.

**ETR 101 290 checks:**

- Priority 1:** TS sync, Sync byte, PAT, Continuity, PMT, Missing PID.
- Priority 2:** Transport, CRC, PCR, PCR accur., PTS, CAT.
- Priority 3:** NIT, SI Rep Rate, Unref PID, SDT, EIT, RST, TDT.
- Other checks:** CA system, PID min. bitr., PID max. bitr., PID checks, Service min. bitr., Service max. bitr., Service checks, MIP.
- Interface checks:** Pre Viterbi BER, Pre Reed Solomon BER, MER, SNR, Signal strength (1 / 1), SFN meas., Centre frequency, Interface overflow.

**Information:**

- Mon state: Time locked monitoring
- Mon start: 20:17:06 (55 s ago)
- Mon end: 21:17:55 (in 59 m, 54 s)
- Mon time: 55 s
- Tot bitrate: 22.112 Mbps
- Eff bitrate: 20.239 Mbps
- TS ID: 210
- Num services: 19
- Num PIDs: 63
- ETR threshold: Tryvann
- PID threshold: Default
- Service thresh.: Default
- RF thresh.: TRYVANN-A
- VBC threshold: Default


The **ETR Details** view shows the ETR 290 status for the current stream of the user-selected input. The name of the current stream is displayed in addition to the two round-robin indicator icons when relevant: the time cycle icon and the lock icon. By clicking the lock icon the round-robin tuning process is stopped (locked to the current frequency) or resumed. A DVB, ATSC or ISDB icon indicates the analysis mode. The analysis mode is defined as part of the ETR threshold template.

The ETR 290 parameters are grouped into five different categories. The first three groups are defined in the ETSI TR 101 290 guidelines. The fourth category contains checks defined by Sencore

allowing CA system checks, custom PID and service checks and the Gold TS reference checks. The last category contains checks of the input interfaces.

For each check a bulb indicates the current status of that parameter check: green indicates status OK whereas red indicates an active alarm. When the probe has not yet received data relevant for a particular check, the corresponding bulb is white. Grey color indicates that the check has been deactivated (as set in **ETR 290 — ETR thr. — Edit**).

When clicking one of the ETR 290 parameters, details about the current status can be viewed for that item.

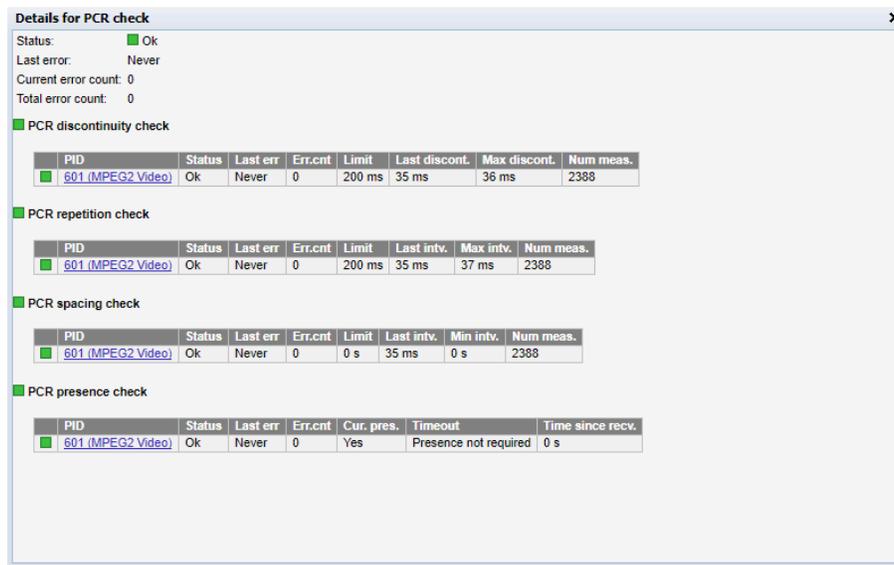

**Details for PCR check**

Status: ■ Ok  
 Last error: Never  
 Current error count: 0  
 Total error count: 0

**PCR discontinuity check**

PID	Status	Last err	Err.cnt	Limit	Last discont.	Max discont.	Num meas.
<span style="color: green;">■</span> 601 (MPEG2 Video)	Ok	Never	0	200 ms	35 ms	36 ms	2388

**PCR repetition check**

PID	Status	Last err	Err.cnt	Limit	Last invt.	Max invt.	Num meas.
<span style="color: green;">■</span> 601 (MPEG2 Video)	Ok	Never	0	200 ms	35 ms	37 ms	2388

**PCR spacing check**

PID	Status	Last err	Err.cnt	Limit	Last invt.	Min invt.	Num meas.
<span style="color: green;">■</span> 601 (MPEG2 Video)	Ok	Never	0	0 s	35 ms	0 s	2388

**PCR presence check**

PID	Status	Last err	Err.cnt	Cur. pres.	Timeout	Time since recv.
<span style="color: green;">■</span> 601 (MPEG2 Video)	Ok	Never	0	Yes	Presence not required	0 s

Enable the **Show additional measurements** checkbox to view additional measurements that are performed but which are ignored when determining the alarm status. These will appear with a ‘half-bulb’ icon indicating that the check is disabled whilst also showing the status of this element. As an example this can be used to view the BAT section repetition interval and section gap, or to view a list of PIDs with CC errors including the PIDs for which this check has been manually disabled.

Click a PID in a PID list to view PID details. Similarly you can click on a service to view service details.

If the **Clear status** button is clicked the error counts are reset and the ETR 290 analysis restarts.

The details of the individual ETR 290 measurements are described in a separate document called **Sencore VideoBRIDGE ETR 290 Details — Extended ETSI TR 101 290 Testing**.


Clicking the **Show alarm graph** button opens the Alarm graph pop-up view.




The alarm graph shows the ETR alarm status over time in the form of a status timeline. The timeline bar shows the stream status for a time span of 90 minutes, 8 hours or 24 hours as selected by clicking the time selection buttons below the timelines. The stream bar reveals any alarm that has been present during the selected time period. The bar color is either green for OK or colored in accordance with the alarm severity if an alarm has occurred. Refer to **section 6.2.2** for a description of the alarm color representation. Periods of time when the stream has not been ETR monitored due to round-robin operation are represented by grey. By using the arrow buttons it is possible to view alarm occurrences up to 24 hours back in time even if the highest graph time resolution is selected.

If alarms have occurred during the selected time period, the status timeline will not be all green. In this case it is possible to expand the timeline tree by clicking the plus sign at the timeline. Individual timelines for different ETR priorities and for different alarms may be viewed as the tree is expanded into several levels. Tool-tips reveals details about an error incident such as which PIDs have had CC errors.

By default the 'Show only errors' mode is selected, and only timelines that are not all green will be displayed.

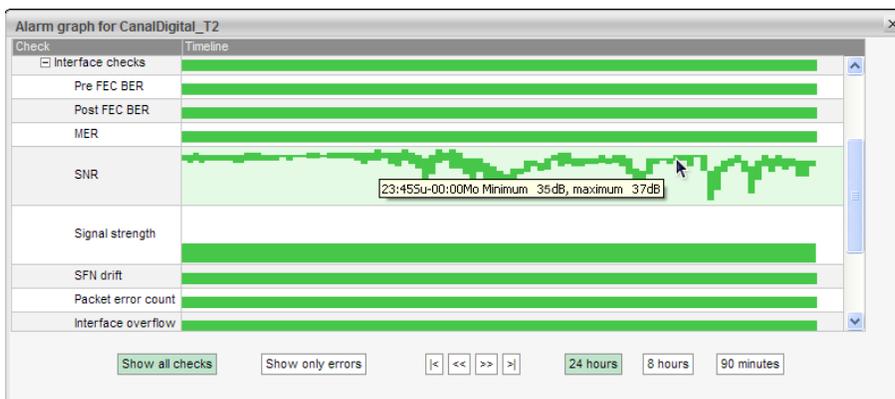

### 6.9.3 ETR 290 — PIDs

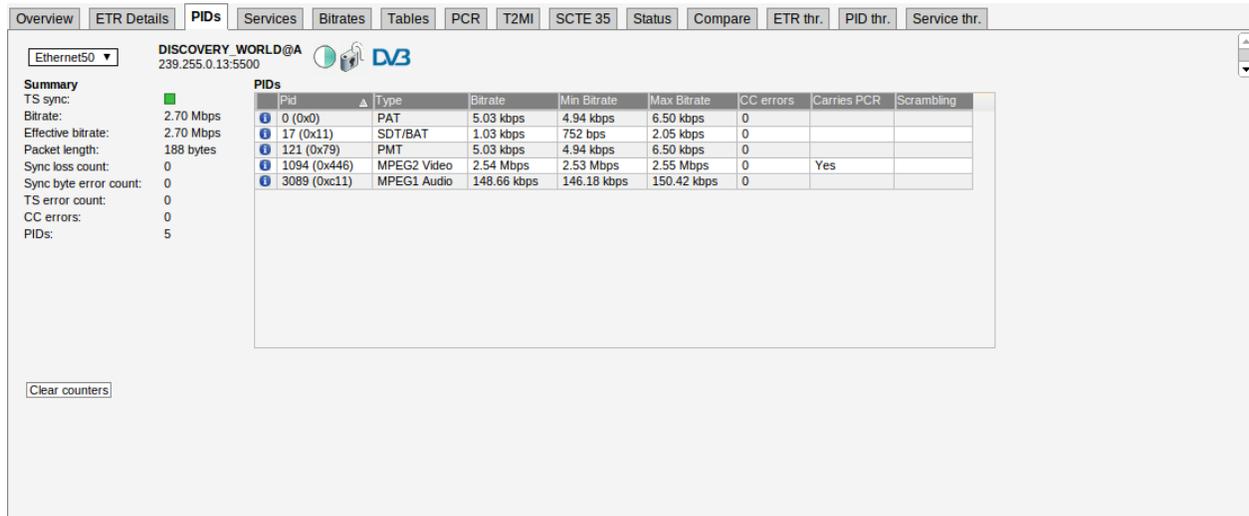


This view lists the PIDs of the currently active stream of the selected input. The PID list can be sorted by clicking a table column header.

The name of the current stream is displayed in addition to the two round-robin indicator icons when relevant: the time cycle icon and the lock icon. By clicking the lock icon the round-robin cycling is stopped or resumed. A DVB, ATSC or ISDB icon indicates the analysis mode. The analysis mode is defined as part of the ETR thresholds.

By clicking the button **Clear counters** the minimum and maximum bitrates and the CC error counters will be reset. Note that this cannot be undone.

When clicking the blue information icon associated with a PID details concerning that PID will be displayed. All services referring to the PID are listed, and scrambling information is shown.

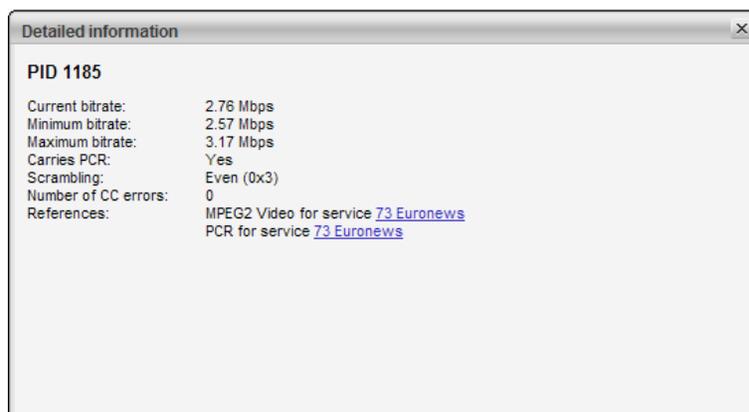


The following PID details are displayed:

*PID Details:*

<b>PID:</b>	The PID for which the following parameters apply
<b>Current bitrate:</b>	The current bitrate measurement for this PID. The bitrate is averaged over 1 second.
<b>Minimum bitrate:</b>	The minimum bitrate measurement for this PID since the start of the monitoring period. (I.e. when the probe tuned to the frequency or when the monitoring of this frequency was restarted by the user clicking on <b>Clear status</b> in the <b>ETR 290 — ETR Details</b> view.)
<b>Maximum bitrate:</b>	The maximum bitrate measurement for this PID since the start of the monitoring period.
<b>Carries PCR:</b>	If the PID carries Program Clock Reference information, this field will be set to Yes. If PCR analysis is enabled in the ETR threshold template a link will be shown to bring up the PCR histogram data for this PID.
<b>Scrambling:</b>	If the PID is scrambled, this field will show if it is scrambled with Odd or Even control word.
<b>Number of CC errors:</b>	The number of CC errors for the specified PID. For the Ethernet interface the number of CC errors is measured from when the probe started to monitor the multicast or when the user clicked <b>Clear counters</b> in the <b>Multicasts — Parameters</b> view.
<b>References:</b>	All the references for this PID in the PSI/SI/PSIP tables. This will show the reference type and the service that refers the PID (if applicable). The service can be clicked to show the detailed service information.

## 6.9.4 ETR 290 — Services

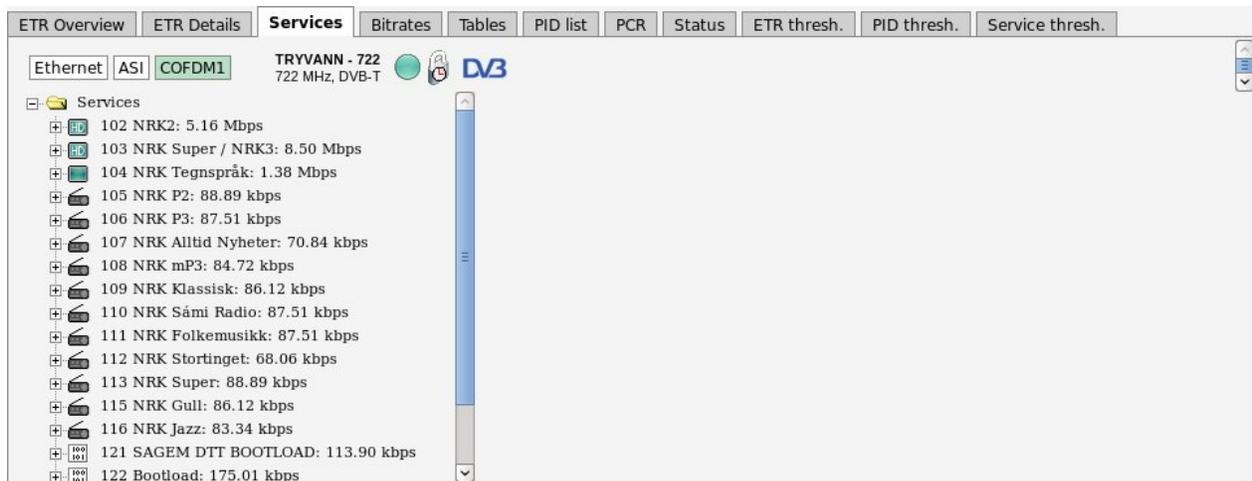


The **ETR290 — Services** view lists the services and service components of the current stream of the selected input.

The name of the current stream is displayed in addition to the two round-robin indicator icons when relevant: the time cycle icon and the lock icon. By clicking the lock icon, the round-robin cycling is

stopped or resumed. A DVB, ATSC or ISDB icon indicates the analysis mode. The analysis mode is defined as part of the ETR thresholds.

When tree nodes are selected, detailed information will be displayed on the right hand side of the view.

If the service tree ‘Services’ top node is clicked, a summary list of stream services and PIDs is displayed. Each service’s service ID and each component’s PID value and bitrate are displayed together with individual PID and service bitrates.

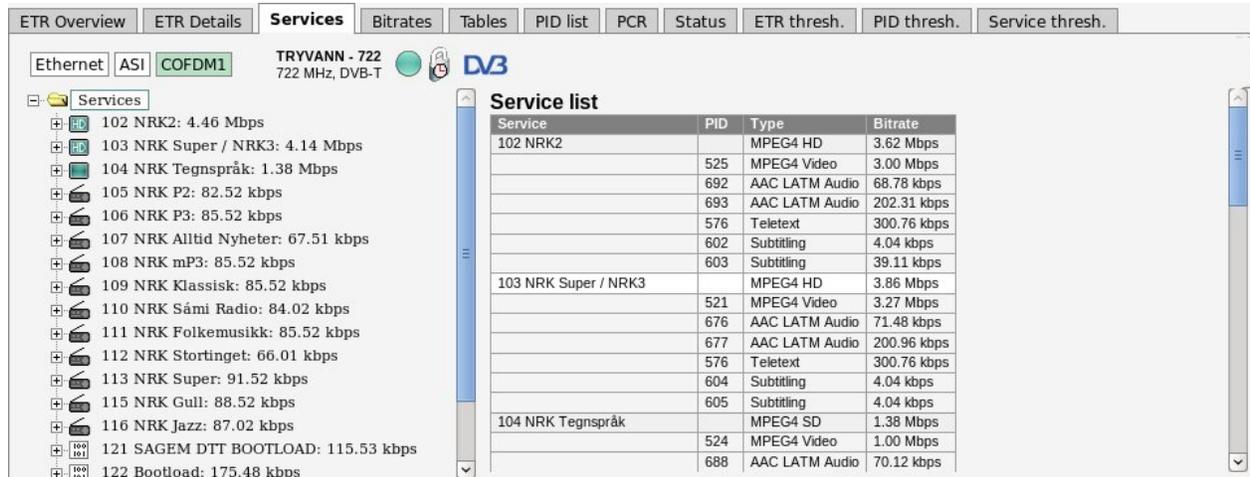

Service	PID	Type	Bitrate
102 NRK2		MPEG4 HD	3.62 Mbps
	525	MPEG4 Video	3.00 Mbps
	692	AAC LATM Audio	68.78 kbps
	693	AAC LATM Audio	202.31 kbps
	576	Teletext	300.76 kbps
	602	Subtitling	4.04 kbps
	603	Subtitling	39.11 kbps
103 NRK Super / NRK3		MPEG4 HD	3.86 Mbps
	521	MPEG4 Video	3.27 Mbps
	676	AAC LATM Audio	71.48 kbps
	677	AAC LATM Audio	200.96 kbps
	576	Teletext	300.76 kbps
	604	Subtitling	4.04 kbps
	605	Subtitling	4.04 kbps
104 NRK Tegnspråk		MPEG4 SD	1.38 Mbps
	524	MPEG4 Video	1.00 Mbps
	688	AAC LATM Audio	70.12 kbps

### *Services top node*

<b>Service:</b>	Service name and service ID
<b>PID:</b>	Service component PID value
<b>Type:</b>	Service and component encoding format
<b>Bitrate:</b>	Individual current bitrate of services and components

When clicking a service, details about the service and service components will be displayed.

If a PID is scrambled this is indicated in the service tree by the color green or blue (for even and odd scrambling respectively). A missing PID is indicated by the color red. Click on the PID to show more details.


Click the Show thumbnail button to view a thumbnail of the selected service. Thumbnails can only be shown for services that are not scrambled.

### *Service node*

<b>Service name:</b>	Name of the highlighted service, as signaled in SDT or VCT
<b>Service ID:</b>	Service ID number
<b>Service type:</b>	Service type as signaled in SDT
<b>Service provider name:</b>	The name of the service provider as signaled in SDT. Not applicable for ATSC streams.
<b>Current bitrate:</b>	The current bitrate measurement for this service. The bitrate is averaged over 1 second.
<b>Minimum bitrate:</b>	The minimum bitrate measurement for this service since the start of the monitoring period. (I.e. when the probe tuned to the frequency or when the monitoring of this frequency was restarted by the user clicking <b>Clear status</b> in the <b>ETR 290 — ETR Details</b> view.)
<b>Maximum bitrate:</b>	The maximum bitrate measurement for this service since the start of the monitoring period.
<b>PMT PID:</b>	The service's PMT PID
<b>PCR PID:</b>	The service's PCR PID
<b>ECM PIDs:</b>	The service's ECM PID(s) and name of CA system(s). This information will only be displayed if ECM PIDs are signaled in the PMT table, usually only done when one or more service components are scrambled.

<b>Components:</b>	A list of the component PIDs and reference types. For PIDs which have a language descriptor (typically audio PIDs) the language code is also shown.
<b>EPG:</b>	If DVB EIT is present in the stream, the EIT check is enabled in the ETR template used by the stream and EIT table IDs are configured in the <b>Setup — ETR</b> view, EIT present/following is displayed. For ATSC streams, EIT present/following is displayed if there are EITs present in the stream. If EIT schedule is present in the stream, a blue ‘Show full EPG’ link is displayed. By clicking the link it is possible to view the EIT schedule information.
<b>Show thumbnail</b>	Opens the <b>Thumbnail view</b> for this service. Thumbnails are only decoded automatically if the <b>Extract thumbnails</b> option has been enabled in the associated multicast setup. The same pop-up details are displayed as when opened from the <b>Content — Thumbnails</b> view.

When clicking a service component, associated key parameters and references will be displayed.

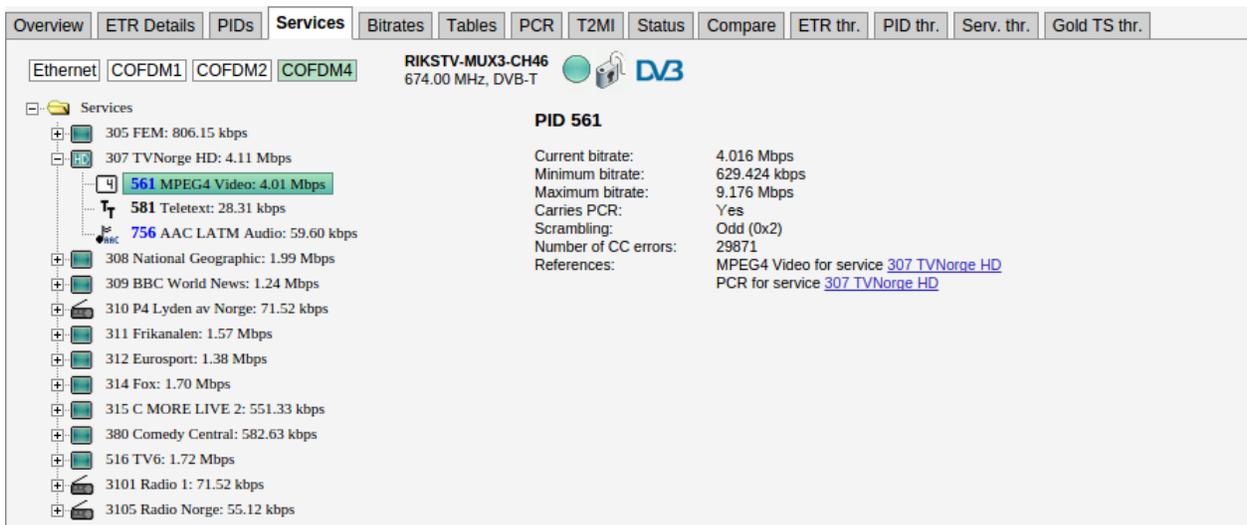

For PIDs carrying PCR it is possible to view a PCR jitter histogram by clicking the blue ‘show histogram’ link. If one of the blue service links is clicked, service details are shown.

### *Service component node*

<b>Current bitrate:</b>	The current bitrate measurement for this PID. The bitrate is averaged over 1 second.
-------------------------	--

**Minimum bitrate:** The minimum bitrate measurement for this PID since the start of the monitoring period. (I.e. when the probe tuned to the frequency or when the monitoring of this frequency was restarted by the user clicking **Clear status** in the **ETR 290 — ETR Details** view.)


**Maximum bitrate:** The maximum bitrate measurement for this PID since the start of the monitoring period.

**Carries PCR:** An indication of whether the PID carries PCR or not. The value may be ‘Yes’ or ‘No’. If PCR is carried by the PID, a blue ‘show histogram’ link is displayed. By clicking this link it is possible to view the PCR jitter histogram.


**Scrambling:** An indication of whether the PID is scrambled or not. If the PID is not scrambled, the value will be ‘No’. If the PID is scrambled, information about the current control word is displayed: ‘Even 0x3’ or ‘Odd 0x2’.

**Number of CC errors:** The number of CC errors detected during the monitoring period

**References:** A list of PSI/SI references to the component PID. When one of the blue service links is clicked, detailed service information is displayed.

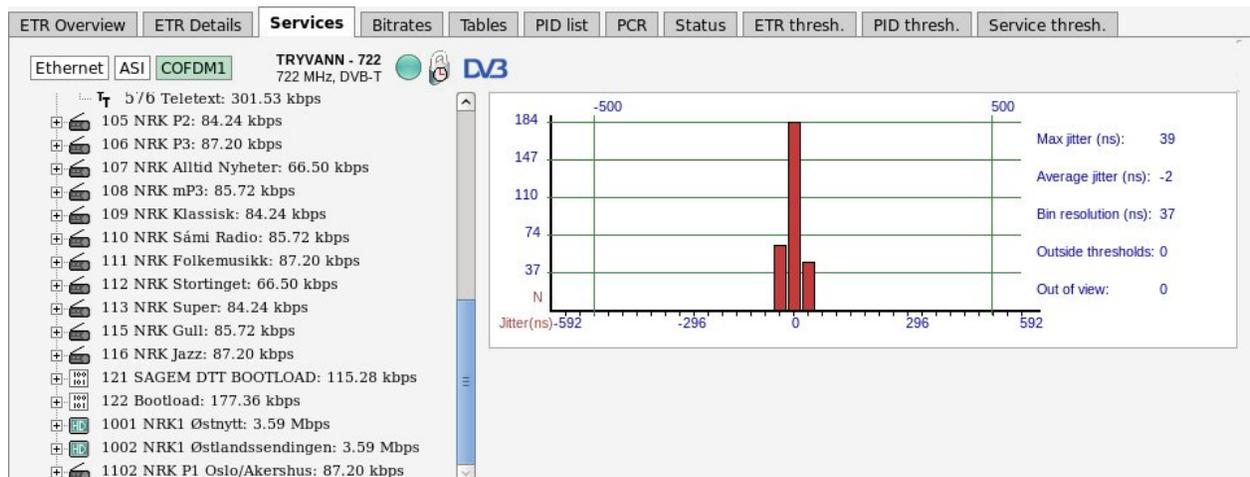

## 6.9.5 ETR 290 — Bitrates

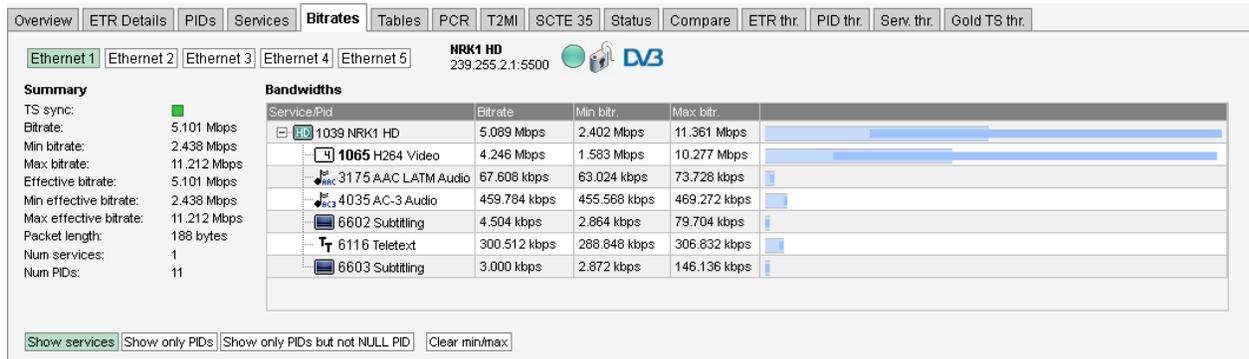


This view shows a graphical representation of service and PID bitrates. The current bitrate is shown as the length of the light blue bar whereas the dark blue bar represents bitrate variation, spanning from minimum to maximum measured bitrate.

The name of the current stream is displayed in addition to the two round-robin indicator icons when relevant: the time cycle icon and the lock icon. By clicking the lock icon the round-robin tuning process is stopped (locked to the current frequency) or resumed. A DVB, ATSC or ISDB icon indicates the analysis mode. The analysis mode is defined as part of the ETR thresholds.

The user may select to view a list of services and component PIDs, to view PIDs only or to view PIDs without the null PID. This is selected by clicking the **Show Services**, **Show only PIDs** or **Show only PIDs but not NULL PID** button respectively.

Click **Clear min/max** to reset the minimum and maximum bitrate measurements.

## 6.9.6 ETR 290 — Tables

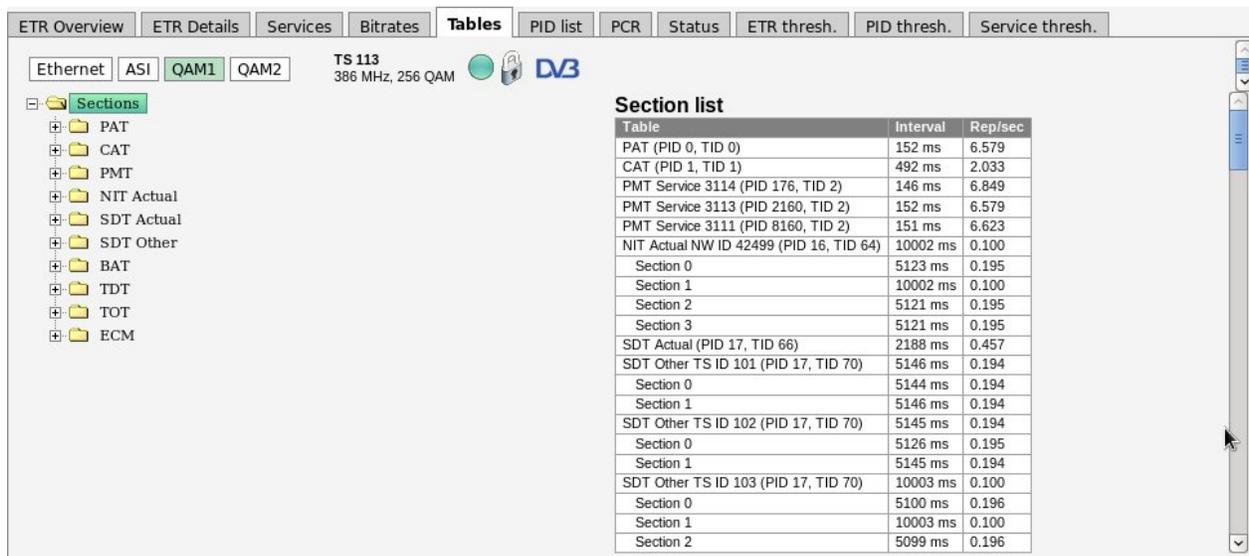

This view lists the PSI and SI or ATSC tables and table contents of the currently active stream of the selected input.

The name of the current stream is displayed in addition to the two round-robin indicator icons when relevant: the time cycle icon and the lock icon. By clicking the lock icon the round-robin cycling is stopped or resumed. A DVB, ATSC or ISDB icon indicates the analysis mode. The analysis mode is defined as part of the ETR thresholds.

Clicking the ‘Sections’ node displays detected tables and associated repetition rates.

Clicking a table enables viewing the table contents in a readily readable format.

Version number	21 (0x15)
Section number	0
Last section number	0

**PCR PID: 181 (0x00b5)**

**CA System ECM List:**


CA System	ECM PID
NDS	182 (0x00b6)

**Components:**

PID	Component type	Language	Comp-ECMs
181 (0x00b5)	MPEG-4 Video		
180 (0x00b4)	Private data PES (ITU-T Rec. H.222.0   ISO/IEC 13818-1 PES packets containing private data)	nor	
179 (0x00b3)	Private data PES (ITU-T Rec. H.222.0   ISO/IEC 13818-1 PES packets containing private data)	swe	
178 (0x00b2)	Private data PES (ITU-T Rec. H.222.0   ISO/IEC 13818-1 PES packets containing private data)	dan	
177 (0x00b1)	Private data PES (ITU-T Rec. H.222.0   ISO/IEC 13818-1 PES packets containing private data)	fin	

By clicking the plus-icon at a table the table contents is displayed in detail.

Clicking one of the table entries will allow viewing the table contents as a hexadecimal dump for detailed inspection.

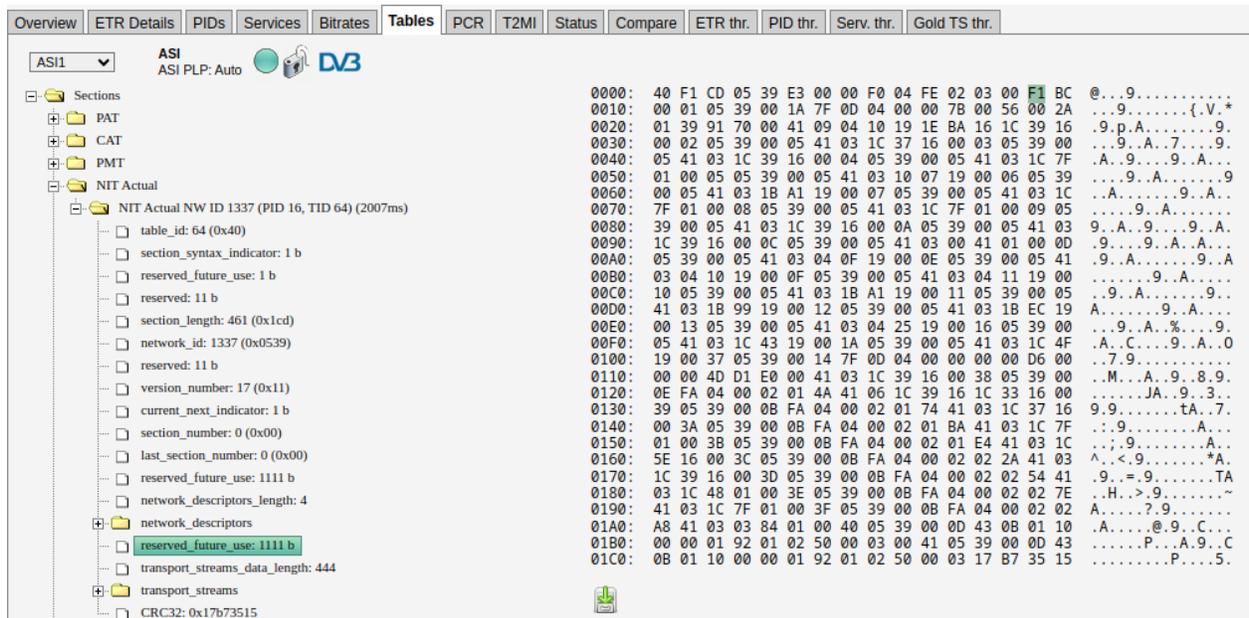

The screenshot shows the 'Tables' tab in the Sencore software. The left pane shows a tree view of sections, with 'NIT Actual' expanded to show 'NIT Actual NW ID 1337 (PID 16, TID 64) (2007ms)'. Under this, 'network\_descriptors' is expanded, and 'reserved\_future\_use: 1111 b' is highlighted in green. The main area shows a hex dump of the table data, with the line corresponding to the highlighted entry (01A0) also highlighted in green. The hex dump shows the following data:

```

0000: 40 F1 CD 05 39 E3 00 00 F0 04 FE 02 03 00 F1 BC @...9.....
0010: 00 01 05 39 00 1A 7F 0D 04 00 00 7B 00 56 00 2A ...9.....{.V.*
0020: 01 39 91 70 00 41 09 04 10 19 1E BA 16 1C 39 16 .9.p.A.....9.
0030: 00 02 05 39 00 05 41 03 1C 37 16 00 03 05 39 00 ...9.A.7.....9.
0040: 05 41 03 1C 39 16 00 04 05 39 00 05 41 03 1C 7F .A.9.....9.A..
0050: 01 00 05 05 39 00 05 41 03 10 07 19 00 06 05 39 ...9.A.....9
0060: 00 05 41 03 1B A1 19 00 07 05 39 00 05 41 03 1C .A.....9.A..
0070: 7F 01 00 08 05 39 00 05 41 03 1C 7F 01 00 09 05 ...9.A.....
0080: 39 00 05 41 03 1C 39 16 00 0A 05 39 00 05 41 03 .9.A.9.....9.A.
0090: 1C 39 16 00 0C 05 39 00 05 41 03 00 41 01 00 0D ...9.A.....9.A..
00A0: 05 39 00 05 41 03 04 0F 19 00 0E 05 39 00 05 41 .9.A.....9.A..
00B0: 03 04 10 19 00 0F 05 39 00 05 41 03 04 11 19 00 ...9.A.....9.A..
00C0: 10 05 39 00 05 41 03 1B A1 19 00 11 05 39 00 05 ...9.A.....9.A..
00D0: 41 03 1B 99 19 00 12 05 39 00 05 41 03 1B EC 19 A.....9.A.....
00E0: 00 13 05 39 00 05 41 03 04 25 19 00 16 05 39 00 ...9.A.%.9..9.
00F0: 05 41 03 1C 43 19 00 1A 05 39 00 05 41 03 1C 4F .A.C.9.A.A..A..0
0100: 19 00 37 05 39 00 14 7F 0D 04 00 00 00 00 D6 00 ...7.9.....
0110: 00 00 4D D1 E0 00 41 03 1C 39 16 00 38 05 39 00 ..M...A.9..8.9.
0120: 0E FA 04 00 02 01 4A 41 06 1C 39 16 1C 33 16 00 ...JA.9..3..
0130: 39 05 39 00 0B FA 04 00 02 01 74 41 03 1C 37 16 9.9.....tA..7.
0140: 00 3A 05 39 00 0B FA 04 00 02 01 BA 41 03 1C 7F ...9.....A..
0150: 01 00 38 05 39 00 0B FA 04 00 02 01 E4 41 03 1C .A.C.....A..
0160: 5E 16 00 3C 05 39 00 0B FA 04 00 02 02 2A 41 03 .A.<.9.....*A.
0170: 1C 39 16 00 3D 05 39 00 0B FA 04 00 02 02 54 41 .9.=.9.....TA
0180: 03 1C 48 01 00 3E 05 39 00 0B FA 04 00 02 02 7E ...H...>.9.....~
0190: 41 03 1C 7F 01 00 3F 05 39 00 0B FA 04 00 02 02 A.....?9.....
01A0: A8 41 03 03 84 01 00 40 05 39 00 0B 04 03 08 01 10 .A.....e.9..C..
01B0: 00 00 01 92 01 02 50 00 03 00 41 05 39 00 0D 43 .....P..A.9..C
01C0: 0B 01 10 00 00 01 92 01 02 50 00 03 17 B7 35 15 .....P.....5.

```

The selected table entry is highlighted in the table dump. Note that values shown in the table list may not correspond directly to the highlighted hex dump byte(s), because some of the table entries do not add up to whole bytes.

By hovering the cursor over the items in the tree a tool-tip is displayed showing the start position of the data in the hexadecimal dump and the length of data. Press the save icon to download and save the raw table data on your computer.

A description of each PSI/SI table is beyond the scope of this manual, please refer to the specifications for more information about PSI/SI.

If you get “Unknown descriptor” in the table parsing it could be that the stream contains additional descriptors that can be enabled. Make a note of the descriptor\_tag and go to **Setup — ETR** to enable the parsing of the descriptor.

Overview | ETR Details | PIDs | Services | Bitrates | **Tables** | PCR | T2MI | Status | Compare | ETR thr. | PID thr. | Serv. thr. | Gold TS thr.

Ethernet | COFDM1 | COFDM2 | **COFDM4** | RIKSTV-MUX3-CH46 | 674.00 MHz, DVB-T |

Sections

- PAT
- PMT
- NIT Actual
- SDT Actual
- SDT Other
- EPG**
- TDT
- TOT
- ECM
- MIP
- CAT

**EIT Present/Following**

TS ID 231 original network ID 8770

Service	Current event	Next event	Full EPG
201 TV 2	<p>13:00 (01:00:00)</p> <p><b>Tid for hjem</b></p> <p>Norsk livsstilsserie. (4:8/s10). Denne gangen tar "Tid for hjem" turen bort fra Bergen, til vakre Voss. Med seg har de en helt ny designer, norske Kirsten Visdal.</p> <p>(Event type: Leisure hobbies-general) </p>	<p>14:00 (01:00:00)</p> <p><b>Bolighjelpen UK</b></p> <p>Britisk livsstilsserie fra 2018. (8:8/s3). Det nygifte paret Nikki og Andy har bodd sammen noen år før de giftet seg. Nikky har begynt å hate den treroms terrasseboligen deres og vil flytte.</p> <p>(Event type: Leisure hobbies-general) </p>	<p><a href="#">Show EIT schedule</a></p>
204 TV 2 Nyhetkanalen	<p>13:45 (00:15:00)</p> <p><b>Sportsnyhetene</b></p> <p>De siste nyhetene innen sport.</p> <p>(Event type: Sports-sports magazines) </p>	<p>14:00 (00:30:00)</p> <p><b>Nyhetene</b></p> <p>Siste nytt fra TV2s nyhetsredaksjon.</p> <p>(Event type: News/Current affairs-news/weather report) </p>	<p><a href="#">Show EIT schedule</a></p>
210 TV 2 Sport 1	<p>13:00 (02:00:00)</p> <p><b>Premier League: Cardiff - Bournemouth</b></p> <p>Britisk fotball. Fra Cardiff City Stadium og kampen mellom Cardiff og Bournemouth i 25. runde i Premier League. Kommentator: Espen Ween.</p> <p>(Event type: Sports-football/soccer) </p>	<p>15:00 (02:00:00)</p> <p><b>Tippekampen: Chelsea - Huddersfield</b></p> <p>Britisk fotball. Fra Stamford Bridge og kampen mellom Chelsea og Huddersfield i 25. runde i Premier League. Kommentator: Peder Mørtvedt.</p> <p>(Event type: Sports-football/soccer) </p>	<p><a href="#">Show EIT schedule</a></p>

For streams which have electronic program guide (EPG) information in the EIT table and the extraction of this information is enabled (in **ETR thresholds** and in **Setup — ETR**) the tree will show the text **EPG** (for ATSC streams EPG will be displayed regardless if EITs are present in the stream). Clicking on this will bring up the list of present/following events (the current program and the next program to be broadcast) for the current stream will be displayed. If the stream has EIT p/f other information (and this table is enabled in **Setup — ETR**) then the list will also contain EPG present/following for other streams (not available for ATSC). If the stream has EIT schedule information for the actual and/or other streams (and these tables are enabled in **Setup — ETR**) then the list will also contain the link **Show EIT schedule**. Clicking this will show the full schedule for the selected service. The amount of data shown depends on the signal. A common practice is to send EPG for 7 days ahead.

Overview ETR Details PIDs Services Bitrates **Tables** PCR T2MI Status Compare ETR thr. PID thr. Serv. thr. Gold TS thr.

Ethernet COFDM1 COFDM2 **COFDM4** RIKSTV-MUX3-CH46 674.00 MHz, DVB-T DVB

**EIT Schedule for service 307 TVNorge HD in stream with TS ID 231 original network ID 8770**  
[Go back to EIT Present/Following for all streams](#)

**2019.02.04**

Start time	Duration	Event
00:10	01:45:00	<b>Hot Pursuit</b> Amerikansk actionkomedie fra 2015. Reese Witherspoon, Sofia Vergara. (Event type: Movie/Drama-adventure/western/war) <span>⏏</span>
01:55	01:00:00	<b>Første date</b> Norsk realityserie fra 2018. (2:12/s2). På Første date-restauranten møtes single fra hele landet på blind date. (Event type: Show/Game show-general) <span>⏏</span>
02:55	00:30:00	<b>Hundepatruljen NZ</b> Vet Clinic - Jonti. Newzealandsk dokumentarserie fra 2016. (13:13/s5). (Event type: Show/Game show-general) <span>⏏</span>
03:25	00:25:00	<b>Hundepatruljen NZ</b> Episode 4. Newzealandsk dokumentarserie. (4:10/s7). Whanganui Delta-teamet Jason og Farris trekker en innbruddstyv fram fra skjulestedet sitt, og narkotikahunden Oscar varslar hundepasser Bill om problemer ved Mt Eden fengs.. (Event type: Show/Game show-general) <span>⏏</span>
03:50	00:30:00	<b>Hundepatruljen NZ</b> Episode 5. Newzealandsk dokumentarserie. (5:10/s7). Politihunden Hades gir ikke opp jakten på en innbruddstyv. Biosikkerhetslaboradoren Ebony sniffer seg fram til noe som kravler på postbåndet. (Event type: Show/Game show-general) <span>⏏</span>

To get detailed information about one event, click the binary symbol ⏏. This will open a popup window with parsing of the underlying EIT table. The information can be displayed either in detailed hex mode:

**Table parsing**

Show summary Show hex

- event
  - event\_id: 10503 (0x2907)
  - start\_time: 2019.02.04 14:02:19
  - duration: 00:29:06
  - running\_status: running (0x4)
  - free\_CA\_mode: 0 (0 b) (0x0)
  - descriptors\_loop\_length: 233 (000011101001 b) (0x0c9)
  - descriptors
    - short event descriptor
      - descriptor\_tag: 77 (0x4d)
      - descriptor\_length: 181
      - ISO\_639\_language\_code: nor
      - event\_name\_length: 29
      - event\_name: Et år på tur med Lars Monsen
      - short\_descr\_length: 147
      - short\_descr: Norsk opplevelsesserie fra 2007. Lars Monsen har vært på langtur og har tilbrakt et år
    - content descriptor
    - parental rating descriptor
    - Unknown descriptor
- CRC32: 0x18f2650c

```

0000: 4F F1 04 03 EA ED 00 01 00 D2 22 42 01 4F 29 07 0....."B.0).
0010: E4 96 14 02 19 00 29 06 80 E9 4D B5 6E 6F 72 1D .....).M.nor.
0020: 05 45 74 20 E5 72 20 70 E5 20 74 75 72 20 6D 65 .Et .r p. tur me
0030: 64 20 4C 61 72 73 20 4D 6F 6E 73 65 6E 93 05 4E d Lars Monsen..N
0040: 6F 72 73 6B 20 6F 70 70 6C 65 76 65 6C 73 65 73 orsk opplevelses
0050: 73 65 72 69 65 20 66 72 61 20 32 30 30 37 2E 20 serie fra 2007.
0060: 4C 61 72 73 20 4D 6F 6E 73 65 6E 20 68 61 72 20 Lars Monsen har
0070: 76 E6 72 74 20 70 E5 20 6C 61 6E 67 74 75 72 20 v.rt p. langtur
0080: 6F 67 20 68 61 72 20 74 69 6C 62 72 61 6B 74 20 og har tilbrakt
0090: 65 74 20 E5 72 20 6E 6F 72 64 20 66 6F 72 20 70 et .r nord for p
00A0: 6F 6C 61 72 73 69 72 6B 65 6C 65 6E 20 69 20 4E olarsirkelen i N
00B0: 6F 72 67 65 2C 20 53 76 65 72 69 67 65 20 6F 67 orge, Sverige og
00C0: 20 46 69 6E 6C 61 6E 64 2E 28 31 3A 38 29 28 52 Finland.(1:8)(R
00D0: 70 54 A7 A1 8A 55 A4 6E 6E 77 81 76 26 A4 11 2E IT ll nor v6. /
  
```

Or in summary mode:

Table parsing x

[Show summary](#) [Show hex](#)

**Event Information Table Present/Following Other**

Version number	22 (0x16)
Section number	0
Last section number	1
Service ID	1002 (0x03ea)
Transport Stream ID	210 (0x00d2)
Original Network ID	8770 (0x2242)

**Event list:**

Event ID	10503 (0x2907)
Start time	2019.02.04 14:02:19
Duration	00:29:06
Content type	Leisure hobbies-tourism/travel
Event name	Language Value nor Et år på tur med Lars Monsen
Short description	Language Value nor Norsk opplevelsesserie fra 2007. Lars Monsen har vært på langtur og har tilbrakt et år nord for polarsirkelen i Norge, Sverige og Finland.(1:8)(R)

## 6.9.7 ETR 290 — PCR

ETR Overview ETR Details Services Bitrates Tables PID list **PCR** Status ETR thresh. PID thresh. Service thresh.

Ethernet ASI QAM1 QAM2
TS 113
386 MHz, 256 QAM

Pid	Current	Overall max	Threshold
181	14 ns	74 ns	500 ns
2162	49 ns	74 ns	500 ns
8165	14 ns	74 ns	500 ns

**Histogram for PCR PID: 2162** Logging since: Mar 7 17:44:29 Stream info. Null PID: Present CBR: ■

Max jitter (ns): -62

Average jitter (ns): -12

Bin resolution (ns): 37

Outside thresholds: 0

Out of view: 0

PCR-AC PCR-OJ Zoom in Zoom out Clear

The PCR jitter histogram displays PCR jitter as measured by the probe. A list of detected PCR PIDs in the selected stream is shown together with their current and maximum PCR jitter values. A PCR PID is selected for histogram presentation by clicking the associated table entry. The histogram shows the number of received PCR values versus jitter. PCR jitter is by default measured as PCR-AC for all interfaces. By creating an ETR threshold template that enables PCR-OJ and assigning this template to a stream it is possible to select PCR-OJ measurement mode by clicking the **PCR\_OJ** button. The PCR\_OJ measurement is not relevant for Ethernet streams.

Please note PCR analysis will be disabled if none of the PCR-AC, PCR-OJ, PCR Accuracy or PCR Jitter checks are enabled in the **ETR thresholds**. So to use the **ETR 290 — PCR** functionality this needs to be enabled.

The name of the current stream is displayed in addition to the two round-robin indicator icons when relevant: the time cycle icon and the lock icon. By clicking the lock icon the round-robin cycling is

stopped or resumed. The push-buttons **Zoom in** and **Zoom out** enables rescaling of the graph. This makes it possible to view PCR jitter values that are outside the range defined by the auto-scaling. Clicking the **Clear** button will clear historical data from the histogram.

Tool-tip functionality provides information about each histogram bar: the number of samples, the percentage of total number of samples and the jitter interval represented by the bar. For PCR measurements to be valid it is essential that the signal be stuffed with null packets (PID 8191) to obtain an absolutely constant bitrate. The stream info above the histogram shows if the analyzed stream contains null packets or not. A color indicator above the PCR jitter histogram indicates whether the signal is of constant bitrate or not, as perceived by the PCR filter in the processing engine. Green indicates OK, red indicates that the PCR jitter measurements are not valid due to the bitrate not being constant.

Note that PCR jitter measurements for Ethernet streams are very sensitive to packet loss, and packet loss results in a large jitter values – often for all PCR PIDs of an MPTS.

The PCR PID list displays the following parameters:

<b>PID:</b>	The PID for which the following parameters apply.
<b>Current:</b>	The last PCR jitter value measured.
<b>Overall max:</b>	The maximum PCR jitter value measured since transport stream sync was obtained. Note that this may not correspond to the maximum value for PCR jitter in the histogram, as the histogram displays values measured from the time when a PCR PID was selected.
<b>Threshold:</b>	The PCR jitter threshold currently valid for the stream, as defined in the associated ETR threshold template.

In addition to the histogram itself, the following parameters are displayed:

<b>Max jitter (ns):</b>	The maximum jitter value measured from the time the PID was selected.
<b>Average jitter (ns):</b>	The average jitter in nanoseconds.
<b>Bin resolution (ns):</b>	The width of the jitter interval spanned by each histogram bar.
<b>Outside thresholds:</b>	The number of PCR values that are outside the PCR jitter thresholds (defined by the user as part of the ETR threshold template).
<b>Out of view:</b>	The number of PCR values that are out of the currently displayed view.

## 6.9.8 ETR 290 — T2MI (requires T2MI-OPT)

T2MI monitoring is a licensed option available for transport streams over Ethernet. T2MI is enabled on a per stream basis, most of the information is found in this GUI extracted from the L1 current packets in the T2MI streams. The full parsing of this information table is found in the ‘Tables’ section.

Please note that the T2MI stream needs to have either a relative or an absolute T2 Timestamp to be received properly. Signals without timing information can not be received.

### Overview:

<b>T2 timestamp:</b>	The last received T2 timestamp. The probe supports both relative and absolute timestamps.
<b>Super frame index:</b>	The last received superframe index.
<b>Frame index:</b>	The index of the last received frame.
<b>Input streams:</b>	Indicates whether Single or Multiple Input Streams are used.
<b>Coding and modulation:</b>	Whether the stream uses Constant Coding and Modulation or Adaptive Coding and Modulation.
<b>Input stream sync:</b>	The Input Stream Synchronizer (ISSY) value.
<b>Input stream format:</b>	The format of the input stream. Will normally be ‘TS’.
<b>Input stream identifier:</b>	The input stream identifier for the current stream.
<b>Num TS pkt. last T2MI frame:</b>	The number of transport stream packets that was in the last T2MI frame.
<b>Null packet deletion:</b>	Whether null packet deletion is in use or not.
<b>High efficiency mode:</b>	Whether high efficiency mode is active or not.

<b>Crc Errors BB header:</b>	The number of CRC errors on the BB header detected since the monitoring of the stream started.
<b>Crc Errors whole packet:</b>	The number of CRC errors calculated over the whole T2MI packet since the monitoring of the stream started.

---

*L1 information:*

---


<b>T2 version:</b>	The version of the T2 spec used. Up to version 1.3.1 is supported including T2 lite.
<b>Type:</b>	The type of data carried in the Transport stream.
<b>T2 lite profile used:</b>	Set to true if the T2 lite profile is used for sending power efficient broadcasts to portable clients.
<b>BW ext:</b>	The carrier mode (normal or extended).
<b>S1:</b>	T2-SISO, T2-MISO or Non-T2.
<b>S2:</b>	FFT mode and guard interval.
<b>PAPR:</b>	The PAPR reduction mode (if any).
<b>Pilot pattern:</b>	Pilot pattern PP1 to PP8.
<b>TX ID availability:</b>	Should always be set to 'No transmitter identification signals are used'.
<b>Cell id:</b>	The cell ID for the transmitter.
<b>Network id:</b>	The network id for this DVB-T2 network.
<b>T2 system id:</b>	The T2 system id.
<b>L1 post scrambling:</b>	Says whether post scrambling is used or not.
<b>L1 modulation:</b>	The L1 modulation type used. BPSK, QPSK, 16-QAM or 64-QAM.
<b>L1 FEC type:</b>	The L1 fec type in use. Only 'LDPC 16K' is currently supported in DVB-T2.
<b>L1 repetition:</b>	Shows if dynamic signaling is provided.
<b>L1 post size:</b>	The L1 post size.
<b>L1 post info size:</b>	The L1 post info size.
<b>L1 post extension:</b>	Shows if extension field is provided.
<b>L1 change counter:</b>	The value of the L1 change counter.
<b>Guard interval:</b>	The guard interval used for the transmission. 1/32, 1/16, 1/8 or 1/4.
<b>Num T2 frames:</b>	The number of T2 frames signaled.
<b>Num data symbols:</b>	The number of data symbols signaled.
<b>Sub slices per frame:</b>	How many sub slices are used per T2 frame.
<b>Num aux:</b>	The number of auxiliary channels transmitted.
<b>Aux config rfu:</b>	The aux config rfu number.

<b>Number of RF:</b>	The number of RF frequencies used to transmit the signal.
<b>Frequencies:</b>	The list of frequencies used to transmit the signal. Normally only one frequency will be used.
<b>Current RF index:</b>	The index of the frequency currently being used for the transmission.
<b>Start RF idx:</b>	The starting RF index.
<b>Frame idx:</b>	The frame index.
<b>Sub slice interval:</b>	The interval between sub slices.
<b>Type 2 start:</b>	The value of the type 2 start parameter.
<b>Regen flag:</b>	The value of the regen flag.

***PLP (Physical Layer Pipes) information:***

<b>Current PLP:</b>	The PLP currently being received. If a specific PLP was configured the interface settings T2MI extraction ( <b>Multicasts — Streams</b> ), this will be used. If auto mode is used the first PLP detected will be used.
<b>Detected PLPs:</b>	The detected PLP ids in the T2MI stream. In some error situations this may differ from the list of Signaled PLPs show below.
<b>Signaled PLPs:</b>	Lists the PLPs signaled in the stream.
<b>PLP type:</b>	The signaled type of the PLP. Data PLP Type 1 is the most common, some signals can have a common PLP as well as well as other PLP types.
<b>Payload:</b>	Payload type of this PLP. Will typically be the Transport Stream format
<b>PLP Group:</b>	The group signaled for this PLP. The PLPs in a group shares one common PLP and when analyzing a PLP both the data in the specified PLP and the common PLP in the same group (if present) are extracted. The PLP contains PIDs which are shared such as PAT, SDT, NIT, CAT and EMMs. In the example above , analyzing PLP 0 will also analyze PLP 2.
<b>Code:</b>	The FEC coding scheme used for this PLP.
<b>Modulation:</b>	Modulation for the PLP.
<b>Rotation:</b>	Specifies if IQ rotation is enabled.
<b>FEC:</b>	Specifies the FEC coding type for this PLP.

Clicking the blue information symbol in the PLP list will bring up more detailed information for that PLP.

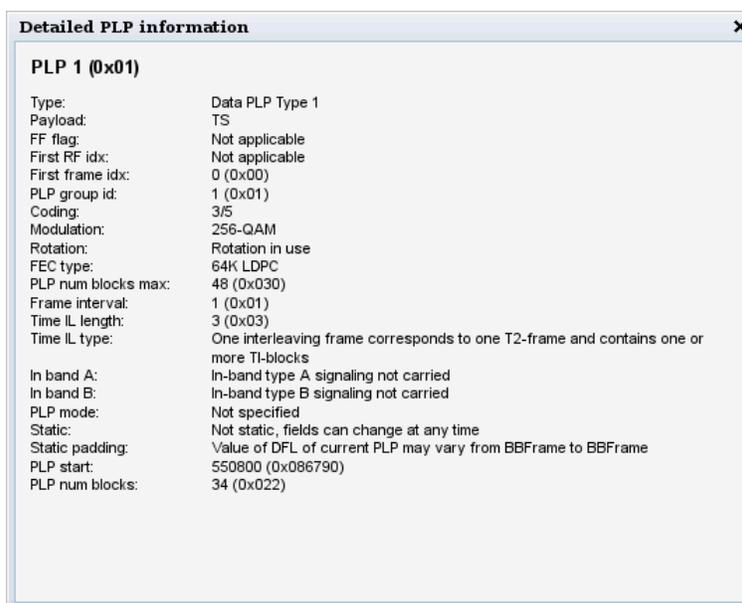


### *Detailed PLP information:*

<b>PLP:</b>	The ID of the signaled PLP.
<b>Type:</b>	The signaled type of the PLP. Data PLP Type 1 is the most common, some signals can have a common PLP as well as other PLP types.
<b>Payload:</b>	Payload type of this PLP. Will typically be the Transport Stream format
<b>FF flag:</b>	The FF flag value.
<b>First RF idx:</b>	The first RF index used for transmitting this PLP.
<b>First frame idx:</b>	The first frame index used to transmit this PLP.
<b>PLP group id:</b>	The group signaled for this PLP. The PLPs in a group shares one common PLP and when analyzing a PLP both the data in the specified PLP and the common PLP in the same group (if present) are extracted. The PLP contains PID which are shared such as PAT, SDT, NIT, CAT and EMMs.
<b>Coding:</b>	The FEC coding scheme used for this PLP.
<b>Modulation:</b>	Modulation used for transmitting this PLP.
<b>Rotation:</b>	Specifies if IQ rotation is enabled for this PLP.
<b>FEC type:</b>	Specifies the FEC coding type for this PLP.
<b>PLP num blocks max:</b>	The maximum number of blocks which can be used by this PLP.
<b>Frame interval:</b>	The frame interval for this PLP.
<b>Time IL length:</b>	The length of the time interleaver.
<b>Time IL type:</b>	The time interleaving type in use.
<b>In band A:</b>	Says if in-band type A signaling is used for this PLP.

<b>In band B:</b>	Says if in-band type B signaling is used for this PLP.
<b>PLP mode:</b>	The PLP mode for this PLP.
<b>Static:</b>	Says whether the PLP bandwidth is static or not static.
<b>Static padding:</b>	Says whether the padding is static or can change between each BB frame.
<b>PLP start:</b>	The start value for the PLP in the stream.
<b>PLP num blocks:</b>	The number of blocks used for this PLP.

## 6.9.9 ETR 290 — Status

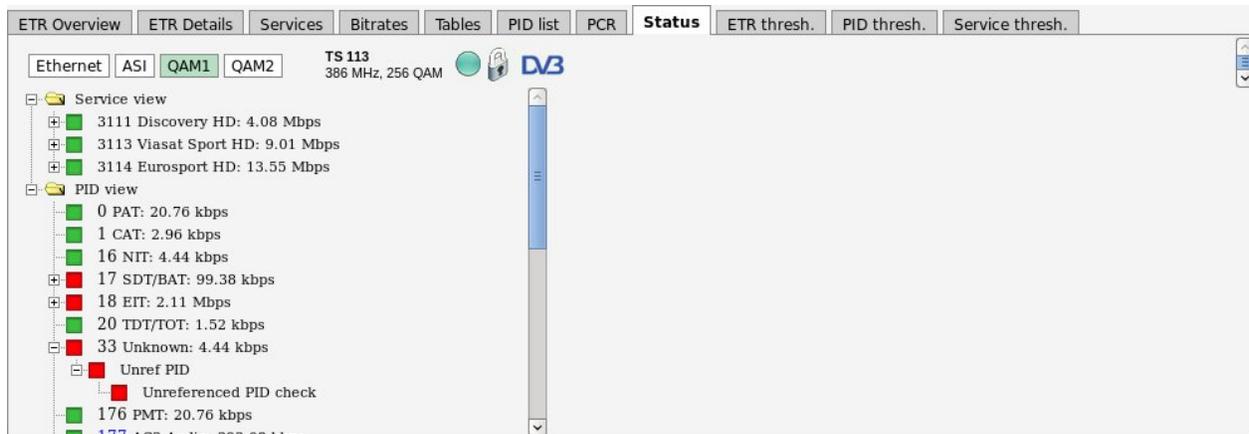

The **ETR 290 — Status** view shows a stream content overview linked to current alarms, making it easy to view what services and PIDs are currently affected by errors.

By clicking any of the ‘view’, service or PID nodes, more information will be displayed on the right hand side of the table. This information is described in **ETR 290 — Services**.

## 6.9.10 ETR 290 — Compare

Overview | ETR Details | PIDs | Services | Bitrates | Tables | PCR | Status | **Compare** | ETR thr. | PID thr. | Service thr.

Select streams and services for comparison

Stream/Service	Input	Details	Min bitr.	Max bitr.
NRK 1	Ethernet	239.255.0.1:5500	3.52 Mbps	8.50 Mbps
NRK 2	Ethernet	239.255.0.2:5500	4.80 Mbps	7.73 Mbps
TV 2 (N)	Ethernet	239.255.0.3:5500	2.10 Mbps	4.96 Mbps
TVNorge	Ethernet	239.255.0.4:5500	2.37 Mbps	4.93 Mbps
TV 2 Sport	Ethernet	239.255.0.5:5500	2.81 Mbps	8.22 Mbps
Star	Ethernet	239.255.0.6:5500	4.41 Mbps	4.42 Mbps
Showtime	Ethernet	239.255.0.7:5500	4.26 Mbps	4.29 Mbps
Discovery World	Ethernet	239.255.0.13:5500	3.58 Mbps	3.61 Mbps
MTV	Ethernet	239.255.0.12:5500	4.27 Mbps	4.30 Mbps
CNN International	Ethernet	239.255.0.10:5500	2.24 Mbps	4.28 Mbps
ASI Input 1	ASI	ASI	N/A	N/A

Show streams | Show services | Compare selected

The **Compare** view is based on analysis performed by the ETSI TR 101 290 engine and only the streams monitored by ETR will be listed.

The **Compare** view allows comparison of services or transport streams across different probe interfaces. Clicking **Show streams** results in a list of selectable transport streams and services, and clicking **Show services** results in a list of selectable services. Note that the screen is not auto-refreshed, click the **Compare** tab to perform an active refresh.

Overview | ETR Details | PIDs | Services | Bitrates | Tables | PCR | Status | **Compare** | ETR thr. | PID thr. | Service thr.

Select streams and services for comparison

Service	Input	Stream name	Details	Min bitr.	Max bitr.
1 CNN International	Ethernet	CNN International	239.255.0.10:5500	1.24 Mbps	4.29 Mbps
1 Discovery World	Ethernet	Discovery World	239.255.0.13:5500	3.57 Mbps	3.61 Mbps
1 MTV	Ethernet	MTV	239.255.0.12:5500	4.25 Mbps	4.29 Mbps
1 NRK1	Ethernet	NRK 1	239.255.0.1:5500	3.42 Mbps	8.91 Mbps
1 NRK2	Ethernet	NRK 2	239.255.0.2:5500	2.72 Mbps	8.90 Mbps
1 Showtime	Ethernet	Showtime	239.255.0.7:5500	4.25 Mbps	4.28 Mbps
1 Star	Ethernet	Star	239.255.0.6:5500	4.39 Mbps	4.42 Mbps
1 TV 2 (N)	Ethernet	TV 2 (N)	239.255.0.3:5500	1.19 Mbps	7.16 Mbps
1 TV 2 Sport	Ethernet	TV 2 Sport	239.255.0.5:5500	1.76 Mbps	8.22 Mbps
1 TVNorge	Ethernet	TVNorge	239.255.0.4:5500	1.32 Mbps	4.97 Mbps

Show streams | Show services | Compare selected

One or more services or transport streams are selected by clicking and later *Ctrl* + clicking items from the list. Clicking the **Compare selected** button will launch a condensed overview page that allows status parameters for services or streams to be viewed side by side. Key parameters are

presented in one column for each service/stream, and it is easy to recognize differences in signal contents or alarm status. The number of streams that can be compared depends on screen size.

The compare column consists of several sub-views:

### Stream overview

Stream overview shows a number of key parameters for the selected stream/service.

#### *Stream overview*

**TS ID:** The transport stream ID of the selected stream or the stream containing the selected service

**NW ID:** The network ID of the selected stream or the stream containing the selected service

**Orig NW ID:** The original network ID of the selected stream or the stream containing the selected service

<b>Min. eff. bitr:</b>	The minimum effective bitrate (null packets removed) measured for the selected stream or the stream containing the selected service
<b>Max. eff. bitr:</b>	The maximum effective bitrate (null packets removed) measured for the selected stream or the stream containing the selected service
<b>Min. tot. bitr:</b>	The minimum total bitrate (including null packets) measured for the selected stream or the stream containing the selected service
<b>Max. tot. bitr:</b>	The maximum total bitrate (including null packets) measured for the selected stream or the stream containing the selected service
<b>Last update:</b>	The time since the last update. The information will be updated when the round robin ETR engine stops monitoring a stream or once every minute for streams which are permanently monitored.

### *Error statistics*

<b>Total monitoring time:</b>	The total time the stream has been monitored by the ETR engine
<b>ETR Priority 1:</b>	The time the stream has been affected by ETSI TR 101 290 Priority 1 errors
<b>ETR Priority 2:</b>	The time the stream has been affected by ETSI TR 101 290 Priority 2 errors
<b>ETR Priority 3:</b>	The time the stream has been affected by ETSI TR 101 290 Priority 3 errors
<b>No signal:</b>	The time the stream has been affected by 'No signal' alarm
<b>CC errors:</b>	The time the stream has been affected by 'CC error' alarm
<b>Interface errors:</b>	The time the stream has been affected by 'Interface error' alarm
<b>Other checks:</b>	The time the stream has been affected by miscellaneous 'Other' alarms

Pie charts indicate for how long the stream has been affected by errors compared to the total monitoring time, green color representing 'OK' and red color 'Error'.

### Service alarm

Service alarms (SAT1 / Viacom (11.727 GHz))	
Service/Alarm	Pid
<input checked="" type="checkbox"/> 28651 Nickelodeon HD	
<input checked="" type="checkbox"/> 28652 Nickelodeon Turkey	
<input checked="" type="checkbox"/> 28654 MTV Hits	
<input checked="" type="checkbox"/> 28655 MTV Dance	
<input checked="" type="checkbox"/> 28656 VH1	
<input type="checkbox"/> <input checked="" type="checkbox"/> 28657 VH1 Classic	
<input checked="" type="checkbox"/> Program Clock Reference error	1220 MPEG4 Vi...
<input checked="" type="checkbox"/> 28659 MTV ROCKS	

If a transport stream is selected for comparison the **Service alarms** sub-view displays a list of services present in the stream. If there is one or more active alarms for a service this will be indicated by a red ‘bulb’ whereas a green ‘bulb’ indicates no active alarms. If a service is affected by one or more active alarms these alarms may be viewed by expanding the service tree. If relevant the PIDs affected by alarms are also displayed. Note that only alarms detected during the last monitoring period are displayed.

If a service is selected for comparison this sub-view simply shows the selected service and any active alarms affecting the service.

## Services


Services (SAT2 / C More (11.372 GHz))				
Service/Pid	Min bitrate	Max bitrate	CC	Max PCR
[-] HD 6901 C More Live HD	11.538 M...	11.575 M...	0	
[180] 404 PMT	7.440 kbps	7.576 kbps	0	
[MP3] 4214 MPEG1 Audio	261.128 ...	263.856 ...	0	
[MP3] 3325 MPEG1 Audio	261.128 ...	263.856 ...	0	
[181] 7116 ECM	14.880 k...	16.608 k...	0	
[4] 1278 MPEG4 Video	11.008 M...	11.040 M...	0	N/A
[+] HD 7441 Kunskapskanalen HD	10.552 M...	10.599 M...	0	
[+] HD 7725 TV 2 Charlie HD	9.922 Mbps	9.955 Mbps	0	

If a transport stream is selected for comparison the **Services** sub-view displays a list of services present in the stream. Clicking the plus icon at a service will expand the service tree, displaying the service’s individual components. The minimum and maximum effective bitrates of a service/-component are also shown, in addition to the number of continuity counter errors and the maximum measured PCR jitter (if relevant).

Colored PIDs indicate scrambling; blue and green representing odd and even scrambling respectively.


Note that all references to a PID will result in a PID entry, i.e. one PID may be displayed several times in the list.

## Alarm graph

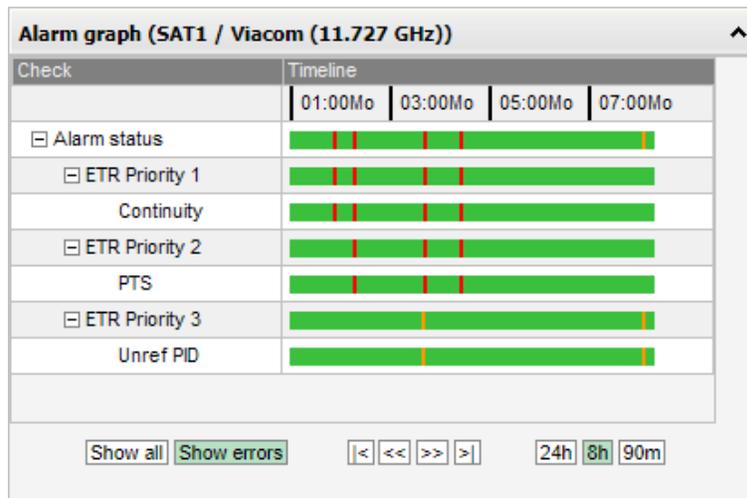

The Alarm graph sub-view shows similar alarm graphs as the **ETR 290 — ETR Details — Alarm graph popup** view. Please refer to the **ETR 290 — ETR Details** section of this User’s Manual for a comprehensive description of this view.

### ETR Details

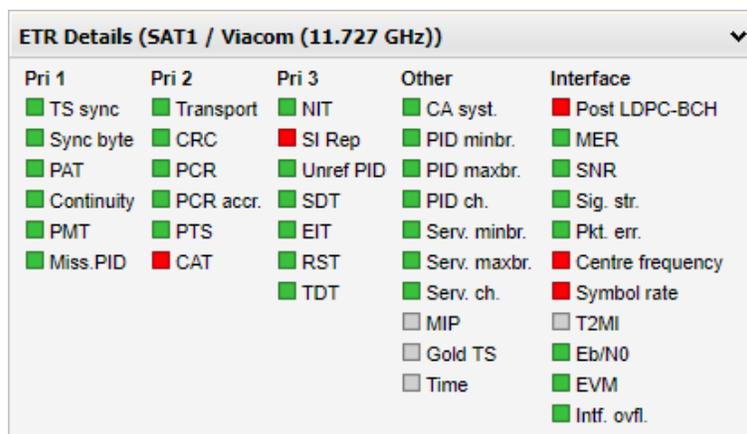

The ETR details sub-view shows the same alarm overview as the **ETR 290 — ETR Details** view. Clicking a check will open a pop-up view displaying alarm details. Please refer to the **ETR 290 — ETR Details** section of this user’s manual for a comprehensive description of this view.

## 6.9.11 ETR 290 — ETR threshold

Overview
ETR Details
PIDs
Services
Bitrates
Tables
PCR
Status
Compare
ETR thr.
PID thr.
Serv. thr.
Gold TS thr.

**ETR Thresholds** 🔔

These thresholds are used to define detailed conditions for ETR 290 alarm triggering on a per-stream basis.

Name	Refs	Description	Tuning duration	Mode	Edit
ETSI TR 101 290	0	Settings according to TR 101 290. Some advanced features are disabled	70	DVB	<a href="#">Edit</a>
Full ETR 290	131	Settings according to TR 101 290. Some advanced features are disabled	70	DVB	<a href="#">Edit</a>
ATSC Default	0	ATSC template based on TR 101 290. Some advanced features are disabled	70	ATSC	<a href="#">Edit</a>
Optimised	0	Optimised settings with additional checks enabled	70	DVB	<a href="#">Edit</a>
IP-SPTS	0	Settings adapted to IP streaming of Single Program Transport Streams	20	DVB	<a href="#">Edit</a>
CMTS downlink	0	Used to verify CMTS downlink traffic	20	DVB	<a href="#">Edit</a>
Analog carrier	0	For monitoring analog frequencies	15	DVB	<a href="#">Edit</a>
Default	4	Default template used for new streams. Only important alarms are raised.	70	DVB	<a href="#">Edit</a>
PCR testing	3		70	DVB	<a href="#">Edit</a>
ASI	1		70	DVB	<a href="#">Edit</a>
DVB-T2	1		70	DVB	<a href="#">Edit</a>
DVB-T1	1		70	DVB	<a href="#">Edit</a>
SAT 1.2 GHz	1		70	DVB	<a href="#">Edit</a>

**ETR thresholds: 13**

The **ETR thresholds** make it possible to define detailed conditions for ETR 290 alarm triggering on a per-stream basis. There are seven predefined ETR threshold templates that are write-protected and cannot be edited by the operator:


- Default
- ETSI TR 101 290
- ATSC Default
- Optimised
- IP-SPTS
- CMTS downlink
- Analog carrier

These predefined thresholds may be used when defining a monitoring configuration, but it is a good idea to create editable copies of these threshold templates and use these copies rather than the originals. Doing so will allow fine-tuning of parameters later on.

There are two different ways of creating user-defined thresholds. To create a new threshold template from scratch the operator should click the **Add new threshold** button. A pop-up window will appear allowing the user to define alarm conditions and set the round-robin cycling time. The default values of the different parameters settings are in accordance with the template **Default**. Another way of creating a user-defined threshold template is by highlighting one of the threshold templates already defined and then click the **Duplicate highlighted** button. The copy created this way may be edited during the fine-tuning phase of system configuration.

Deleting an ETR threshold template is done by highlighting the threshold template that should be removed and clicking **Delete highlighted**. Note that if the deleted threshold template is assigned to a stream currently being monitored, the new threshold for that stream will default to the predefined **Default** threshold template.

It is possible to perform multi-editing of existing threshold templates by selecting several threshold templates (using the regular *Ctrl + click* or *Shift + click* functionality) and clicking **Edit selected**. Parameters that differ between the threshold templates will be represented by an asterisk in the **Edit ETR threshold** view. Changes made will affect all selected threshold templates.

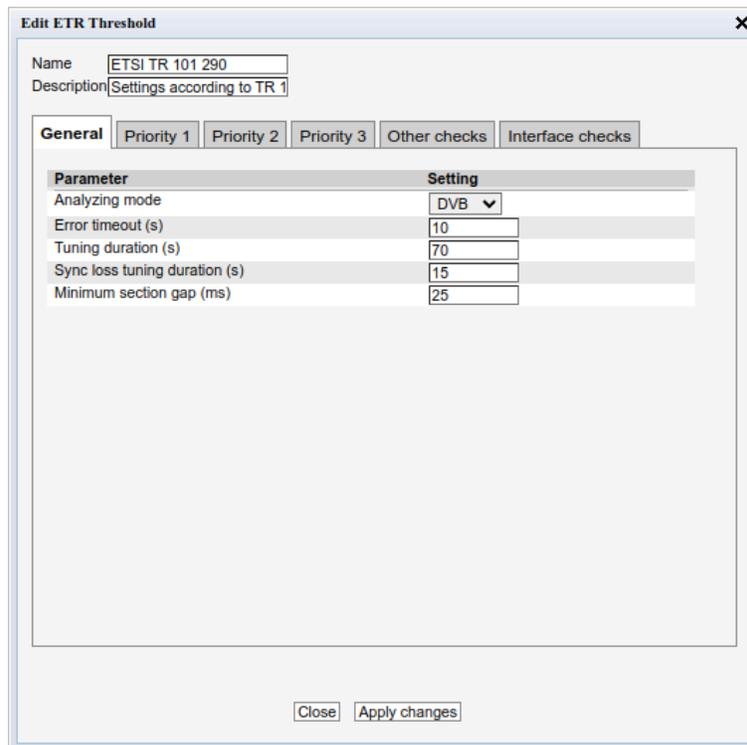

The ETR threshold dialog is divided into tabs for easier access to the relevant settings and has the following settings:

---

***ETR Thresholds — Parameters:***

---

**Name:** A text field with the name of the ETR threshold template

**Description:** Text field that should contain a meaningful description of the threshold

---



---

***ETR Thresholds — General:***

---

**Analyzing mode:** The mode of table analysis. DVB, ATSC or ISDB may be selected.

---

---

**Error timeout (s):** The number of seconds an alarm stays active before it is cleared, if no new alarms are generated. For all table related alarms the actual alarm timeout used is the sum of the Error timeout parameter and the maximum table repetition period. E.g. the TDT (Time Date Table) with table repetition set to 30 seconds will have an effective error timeout of 40 seconds. This avoids toggling of alarms for tables that are sent infrequently. Default value: 10 s

---


**Tuning duration (s):** The time (in seconds) the probe will stay tuned to a frequency/multicast during the round-robin loop. For setting the tuning duration, use the following expression:  $\text{max\_table\_rep} * 2 + 10$   
Use the maximum table repetition, multiply it by 2 and then add 10 seconds.  
E.g. with TDT repetition set to 30 seconds, use  $30 * 2 + 10 = 70$  seconds tuning duration.  
In order to speed up the tuning process tables should be transmitted more frequently. For instance if TDT, which is usually the least frequently transmitted table, is sent every 10 seconds, a tuning duration of 30 seconds may be used. For signals without TDT (common in SPTS) the TDT check can be disabled and the tuning duration may be reduced. If the tuning duration is set too low the checks for tables with long table repetition periods will still be in an unknown state as the probe does not have enough measurements to determine the state for these. Tuning duration should never be set to less than 10 seconds for Ethernet streams and 15 seconds for all other streams (the minimum for RF streams depends on the setup). Default value: 70 s

---

**Sync loss tuning duration (s):** The time (in seconds) the probe will stay tuned to a frequency/multicast with TS Sync loss during the round-robin tuning process. Usually there is no need to stay tuned to a frequency/multicast once the probe has established that there is no signal on the tuning setup. When monitoring a tuning setup with signal loss, the probe will use the lowest value of 'Tuning duration' and 'Sync loss tuning duration', e.g. if the former is set to 60 seconds and the latter to 1000 seconds, 60 seconds will be used. Default value: 15 s

---

**Minimum section gap (ms):** The minimum allowed gap between transmission of two consecutive sections with the same table ID. If the sections are transmitted too rapidly the STB may not be able to process the data in time and various problems can occur. However newer STBs can normally handle lower section gaps than the default value of 25ms. The section gap time is measured as the time between reception of the last TS packet of two consecutive (complete) sections. This section gap setting is used for PAT, PMT, CAT, NIT, RST, TDT, MGT, VCT, PIM/PNM, RRT, ATSC EIT, ETT and STT. There are separate gap settings for SDT and EIT. Default value: 25 ms

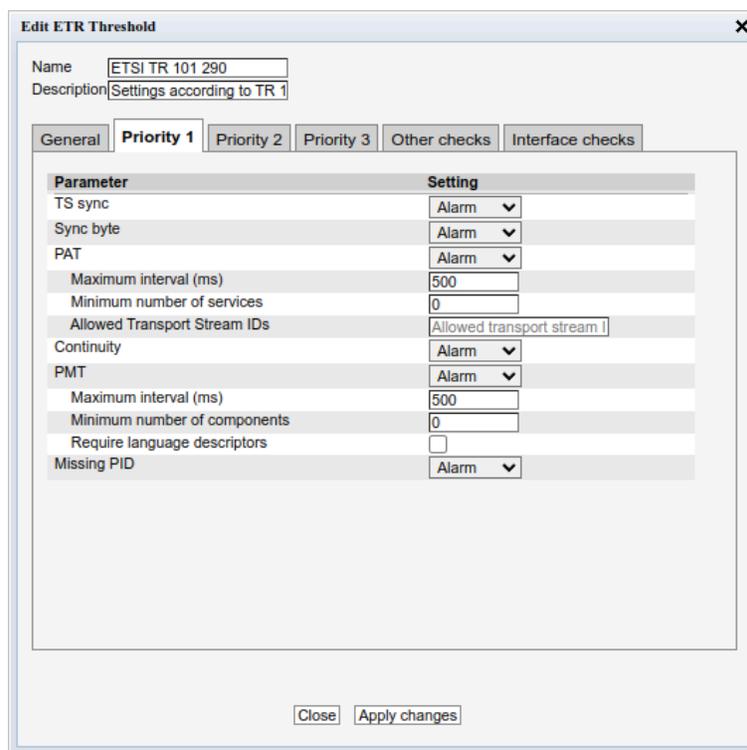

### *ETR Thresholds — Priority 1:*

**TS sync:** Enable or disable alarming of no signal error (TS sync loss)

**Sync byte:** Enable or disable alarming of sync byte errors


**PAT:** Enable or disable alarming of Program Association Table errors

**PAT – Maximum interval (ms):** The maximum allowed section repetition interval for the PAT table. Default according to ETSI TR 101 290: 500 ms

**PAT – Minimum number of services:** The minimum number of services that must be present in the PAT. Set to 0 to disable this check. Default: 0

<b>PAT – Allowed Transport Stream IDs:</b>	When this field is left blank all TS IDs are considered valid. If one or more TS IDs are specified (separated by commas or as a range) only these IDs are considered valid, and any other TS ID will trigger an alarm. Example of a valid field: ‘100-120, 300,320’
<b>Continuity:</b>	Enable or disable alarming of Continuity Counter errors
<b>PMT:</b>	Enable or disable alarming of Program Map Table errors
<b>PMT – Maximum interval (ms):</b>	The maximum allowed section repetition interval for the PMT tables. Default according to ETSI TR 101 290: 500 ms
<b>PMT – Minimum number of components:</b>	The minimum number of components that must be present in all services. Set to 0 to disable this check. Default: 0
<b>PMT – Require language descriptors:</b>	If enabled it requires a language descriptor to be present for all audio components signaled in the PMT. Default: Disabled
<b>Missing PID:</b>	Enable or disable alarming of missing PID errors

Note that errors affecting individual PIDs may be effectively masked by creating suitable PID threshold templates that are associated with these PIDs. This is particularly useful for PIDs affected by continuity counter errors, missing PID errors and unreferenced PID errors.

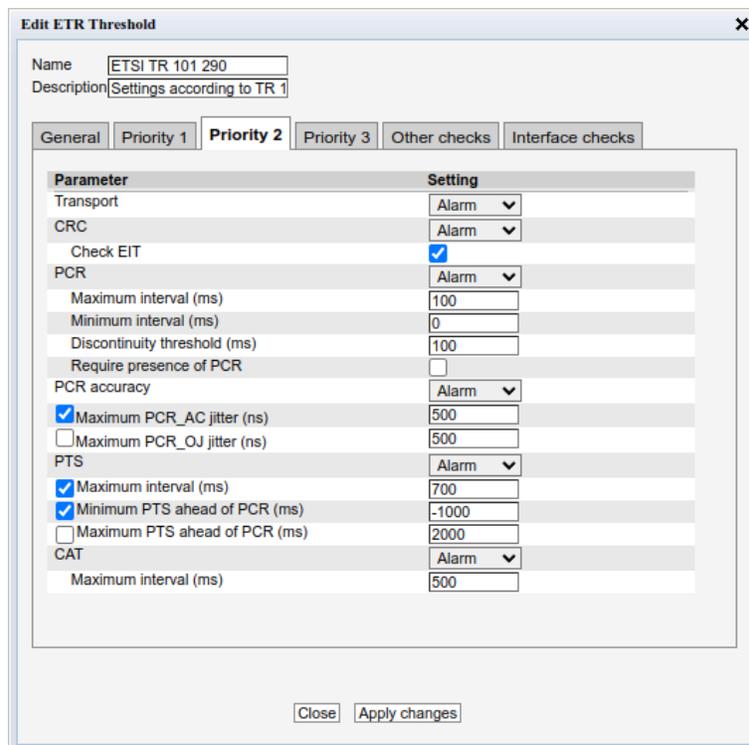


<i>ETR Thresholds — Priority 2:</i>	
<b>Transport:</b>	Enable or disable alarming of Transport error indicator errors
<b>CRC:</b>	Enable or disable alarming of checksum errors for tables
<b>CRC – Check EIT:</b>	When enabled alarming of CRC errors in the EIT tables will be performed. Default: Enabled
<b>CRC – Check AIT:</b>	When enabled alarming of CRC errors in the AIT tables will be performed. Default: Enabled
<b>PCR:</b>	Enable or disable alarming of Program Clock Reference errors
<b>PCR – Maximum interval (ms):</b>	The maximum interval between reception of PCR values. Default according to ETSI TR 101 290: 40 ms
<b>PCR – Minimum interval (ms):</b>	The minimum interval between reception of PCR values. Normally this setting should be 0. Default: 0 ms
<b>PCR – Discontinuity threshold (ms):</b>	The maximum change in the PCR value between two adjoining PCR values (where the discontinuity indicator flag has not been set). Default according to ETSI TR 101 290: 100 ms
<b>PCR – Require presence of PCR:</b>	When enabled an alarm will be raised if a PID signaled as PCR in the PMT does not carry PCR information
<b>PCR Accuracy:</b>	Enable or disable alarming of PCR Accuracy (PCR Jitter) errors for OCR_AJ and PCR_OJ. PCR_OJ is not relevant for Ethernet streams.
<b>PCR Accuracy – Maximum PCR_AC jitter (ns):</b>	The maximum allowed PCR jitter for PCR_AC measurements. Checking of this value will be performed if the checkbox is enabled. Default according to ETSI TR 101 290: 500 ns
<b>PCR Accuracy – Maximum PCR_OJ jitter (ns):</b>	The maximum allowed PCR jitter for PCR_OJ measurements. PCR_OJ measurement does not apply to IP streams. Checking of this value will be performed if the checkbox is enabled and the stream is received on an ASI or RF interface. Default according to ETSI TR 101 290: 500 ns
<b>PTS:</b>	Enable or disable alarming of Presentation Time Stamp errors
<b>PTS – Maximum interval (ms):</b>	The maximum allowed interval between the reception of two PTS values. Checking of this measurement will be performed for all PTS PIDs if the checkbox is enabled in the ETR Thresholds template. When the checkbox is disabled the measurement will only be checked for the PIDs that have this measurement enabled in the <b>PID threshold template</b> . Default threshold according to ETSI TR 101 290: 700 ms

**PTS – Minimum PTS ahead of PCR (ms):** The minimum allowed value for the measurement of the signaled PTS versus the current PCR clock. If the PTS value sent refers to a PCR clock time that have already passed the measurement will be negative. Checking of this measurement will be performed for all PTS PIDs if the checkbox is enabled in the ETR Thresholds template. When the checkbox is disabled the measurement will only be checked for the PIDs that have this measurement enabled in the **PID threshold template**. Default: -1000 ms

**PTS – Maximum PTS ahead of PCR (ms):** The maximum allowed value for the measurement of the signaled PTS versus the current PCR clock. Checking of this measurement will be performed for all PTS PIDs if the checkbox is enabled in the ETR Thresholds template. When the checkbox is disabled the measurement will only be checked for the PIDs that have this measurement enabled in the **PID threshold template**. Default: 2000 ms

**CAT:** Enable or disable alarming of Conditional Access Table errors

**CAT – Maximum interval (ms):** The maximum allowed section repetition interval for the CAT table. Default according to ETSI TR 101 290: 500 ms

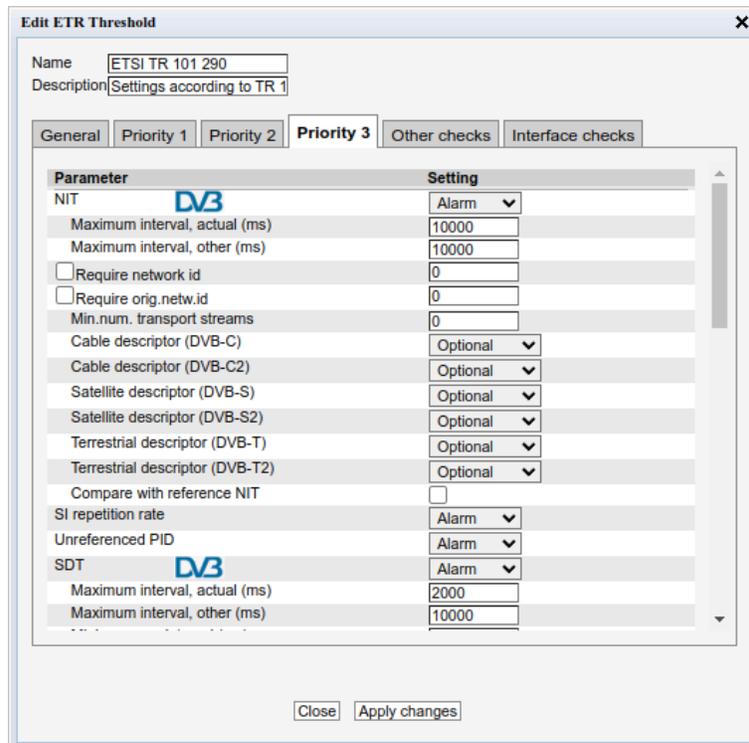

Parameter	Setting
NIT	Alarm
Maximum interval, actual (ms)	10000
Maximum interval, other (ms)	10000
<input type="checkbox"/> Require network id	0
<input type="checkbox"/> Require orig.netw.id	0
Min.num. transport streams	0
Cable descriptor (DVB-C)	Optional
Cable descriptor (DVB-C2)	Optional
Satellite descriptor (DVB-S)	Optional
Satellite descriptor (DVB-S2)	Optional
Terrestrial descriptor (DVB-T)	Optional
Terrestrial descriptor (DVB-T2)	Optional
Compare with reference NIT	<input type="checkbox"/>
SI repetition rate	Alarm
Unreferenced PID	Alarm
SDT	Alarm
Maximum interval, actual (ms)	2000
Maximum interval, other (ms)	10000

---

*ETR Thresholds — Priority 3:*

---

<b>NIT:</b>	Enable or disable alarming of Network Information Table errors. Only relevant when DVB mode is selected.
<b>NIT – Maximum interval actual (ms):</b>	The maximum allowed section repetition interval for the NIT actual table. Default according to ETSI TR 101 290: 10 s
<b>NIT – Maximum interval other (ms):</b>	The maximum allowed section repetition interval for the NIT other table. Default according to ETSI TR 101 290: 10 s
<b>NIT – Require network id:</b>	If enabled the probe will require that the network ID found in the NIT matches the configured value. Default: Disabled
<b>NIT – Require orig. netw. id:</b>	If enabled the probe will require that the original network ID found in the NIT matches the configured value. Default: Disabled
<b>NIT – Min. num. transport streams:</b>	The minimum number of transport streams that must be present in the NIT. Set to 0 to disable this check. Default: 0
<b>NIT – Cable descriptor (DVB-C):</b>	If set to ‘Required’ an alarm will be generated if a DVB-C Cable descriptor is not present in the NIT for the monitored frequency. Similarly if set to ‘Not allowed’, an alarm will be generated if the DVB-C Cable descriptor is present. Default: Optional
<b>NIT – Cable descriptor (DVB-C2):</b>	If set to ‘Required’ an alarm will be generated if a DVB-C2 Cable descriptor is not present in the NIT for the monitored frequency. Similarly if set to ‘Not allowed’, an alarm will be generated if the DVB-C2 Cable descriptor is present. Default: Optional
<b>NIT – Satellite descriptor (DVB-S):</b>	If set to ‘Required’ an alarm will be generated if a DVB-S Satellite descriptor is not present in the NIT for the monitored frequency. Similarly if set to ‘Not allowed’, an alarm will be generated if the DVB-S Satellite descriptor is present. Default: Optional
<b>NIT – Satellite descriptor (DVB-S2):</b>	If set to ‘Required’ an alarm will be generated if a DVB-S2 Satellite descriptor is not present in the NIT for the monitored frequency. Similarly if set to ‘Not allowed’, an alarm will be generated if the DVB-S2 Satellite descriptor is present. Default: Optional


---

<b>NIT – Terrestrial descriptor (DVB-T):</b>	If set to ‘Required’ an alarm will be generated if a DVB-T Terrestrial descriptor is not present in the NIT for the monitored frequency. Similarly if set to ‘Not allowed’, an alarm will be generated if the DVB-T Terrestrial descriptor is present. Default: Optional
<b>NIT – Terrestrial descriptor (DVB-T2):</b>	If set to ‘Required’ an alarm will be generated if a DVB-T2 Terrestrial descriptor is not present in the NIT for the monitored frequency. Similarly if set to ‘Not allowed’, an alarm will be generated if the DVB-T2 Terrestrial descriptor is present. Default: Optional
<b>NIT – Compare with reference NIT:</b>	If enabled the NIT will be compared with the NIT on the reference frequency, and an alarm will be generated if a mismatch is found. The first frequency in the tuning list will be used as the reference frequency. Both the CRC values of the different sections and the number of sections must be identical. Default: Disabled
<b>SI Repetition Rate:</b>	Enable or disable alarming of SI Repetition Rate errors.
<b>Unreferenced PID:</b>	Enable or disable alarming of Unreferenced PID errors. To mask Unreferenced PID alarms for a PID create a <b>PID threshold template</b> where this error is masked.
<b>SDT:</b>	Enable or disable alarming of Service Description Table errors. Only relevant when DVB mode is selected.
<b>SDT – Maximum interval actual (ms):</b>	The maximum allowed section repetition interval for the SDT actual table. Default according to ETSI TR 101 290: 2 000 ms
<b>SDT – Maximum interval other (ms):</b>	The maximum allowed section repetition interval for the SDT other table. Default according to ETSI TR 101 290: 10 000 ms
<b>SDT – Minimum gap interval (ms):</b>	The minimum allowed section gap interval for the SDT table. Default according to ETSI TR 101 290: 25 ms
<b>SDT – Verify SDT against PAT:</b>	If enabled an alarm will be generated if a service found in the PAT is not listed in the SDT. Default: Disabled
<b>SDT – Require service name:</b>	If enabled an alarm will be generated if a service found in the PAT does not have a service name or if the service name is empty. Default: Disabled
<b>SDT – Require BAT Presence:</b>	If enabled an alarm will be generated if BAT is not present in the stream. Default: Disabled
<b>EIT:</b>	Enable or disable alarming of Event Information Table errors. Only relevant when DVB mode is selected.

<b>EIT – Maximum interval actual (ms):</b>	The maximum allowed section repetition interval for the EIT actual table. Default according to ETSI TR 101 290: 2 000 ms
<b>EIT – Minimum gap interval (ms):</b>	The minimum allowed section gap interval for the EIT tables. Default according to ETSI TR 101 290: 25 ms
<b>EIT – Required Table IDs:</b>	If one or more table IDs are specified an alarm will be generated if these table IDs are not present in the stream on the EIT PID. Entries should be separated by commas, or a range may be specified. Example: ‘78,79,80-85’ Default: Disabled
<b>EIT – Verify that present event is transmitted</b>	If enabled, an alarm will be raised if one or more services don’t have a present event transmitted in the EIT (i.e. no EPG for the current program)
<b>EIT – Check valid time for present event</b>	If enabled, an alarm will be raised if time signaled for the present event (the current program) is not correct. The maximum offset from the current time can be configured.
<b>EIT – Maximum timing error for present event(s)</b>	The maximum timing error to allow for the present event. If the current time is not inside the program start/stop times by this margin then an alarm will be raised.
<b>EIT – Verify that following event is transmitted</b>	If enabled, an alarm will be raised if one or more services don’t have a following event transmitted in the EIT (i.e. no EPG for the next program)
<b>RST:</b>	Enable or disable alarming of Running Status Table errors. Only relevant when DVB mode is selected.
<b>RST – Maximum interval (ms):</b>	The maximum allowed section repetition interval for the RST table. Default according to ETSI TR 101 290: 20 s
<b>TDT:</b>	Enable or disable alarming of Time Date Table errors. Only relevant when DVB mode is selected.
<b>TDT – Maximum interval (ms):</b>	The maximum allowed section repetition interval for the TDT and TOT tables. Default according to ETSI TR 101 290: 30 000 ms
<b>TDT – Require TOT presence:</b>	Check this checkbox if TOT presence is required. Default: disabled
<b>MGT:</b>	Enable or disable alarming of Master Guide Table errors. Only relevant when ATSC mode is selected.

<b>MGT – Maximum interval (ms):</b>	The maximum allowed section repetition interval for the MGT table. Default: 150ms
<b>VCT:</b>	Enable or disable alarming of Virtual Channel Table errors. Only relevant when ATSC mode is selected.
<b>VCT – Require TVCT:</b>	Require presence of the Terrestrial Virtual Channel Table.
<b>VCT – Require CVCT:</b>	Require presence of the Cable Virtual Channel Table.
<b>VCT – Maximum interval (ms):</b>	The maximum allowed section repetition interval for the VCT table. Default: 400ms
<b>PIM/PNM:</b>	Enable or disable alarming of Program Information Message and Program Name Message tables. Only relevant when ATSC mode is selected.
<b>PIM/PNM – Require PIM:</b>	Require presence of the Program Information Message table.
<b>PIM/PNM – Maximum interval PIM (ms):</b>	The maximum allowed section repetition interval for the PIM table. Default: 500ms
<b>PIM/PNM – Require PNM:</b>	Require presence of the Program Name Message table.
<b>PIM/PNM – Maximum interval PNM (ms):</b>	The maximum allowed section repetition interval for the PNM table. Default: 1000ms
<b>RRT:</b>	Enable or disable alarming of Rating Region Table errors. Only relevant when ATSC mode is selected.
<b>RRT – Maximum interval (ms):</b>	The maximum allowed section repetition interval for the RRT table. Default: 30000ms
<b>STT:</b>	Enable or disable alarming of System Time Table errors. Only relevant when ATSC mode is selected.
<b>STT – Maximum interval (ms):</b>	The maximum allowed section repetition interval for the STT table. Default: 1000ms
<b>ATSC EIT:</b>	Enable or disable alarming of ATSC Event Information Table errors. Only relevant when ATSC mode is selected.
<b>ATSC EIT – Maximum interval EIT-0 (ms):</b>	The maximum allowed section repetition interval for the ATSC EIT-0 table. Default: 500ms

<b>ATSC EIT – Maximum interval EIT–1 to EIT–3 (ms):</b>	The maximum allowed section repetition interval for the ATSC EIT–1 to EIT–3 tables. Default: 5000ms
<b>ATSC EIT – Maximum interval EIT–4 to EIT–127 (ms):</b>	The maximum allowed section repetition interval for the ATSC EIT–4 to EIT–127 tables. Default: 30000ms
<b>ETT:</b>	Enable or disable alarming of Extended Text Table errors. Only relevant when ATSC mode is selected.
<b>ETT – Maximum interval ETT–0 (ms):</b>	The maximum allowed section repetition interval for the ATSC ETT–0 table. Default: 2000ms
<b>ETT – Maximum interval ETT–1 to ETT–3 (ms):</b>	The maximum allowed section repetition interval for the ATSC ETT–1 to ETT–3 tables. Default: 5000ms
<b>ETT – Maximum interval ETT–4 to ETT–127 (ms):</b>	The maximum allowed section repetition interval for the ATSC ETT–4 to ETT–127 tables. Default: 30000ms

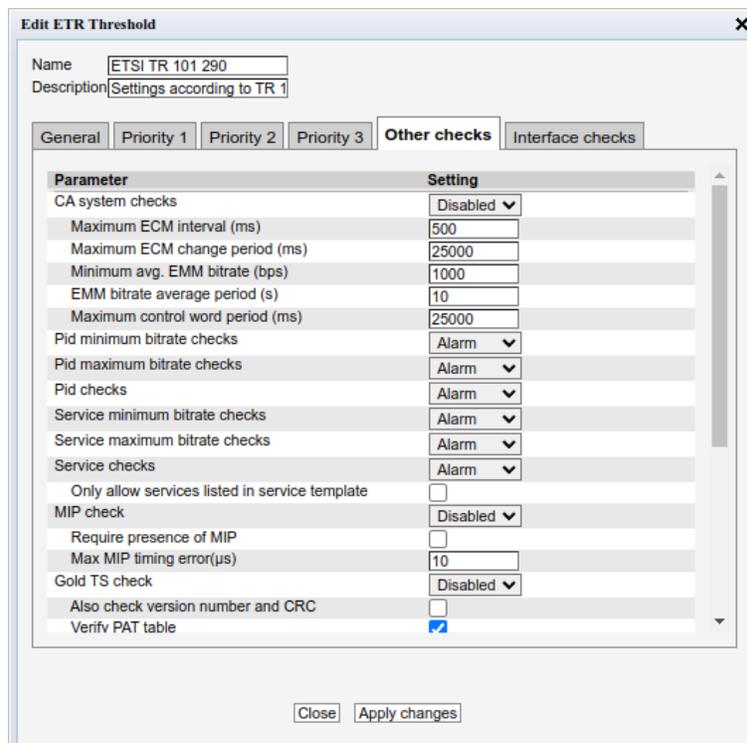


<i>ETR Thresholds — Other checks:</i>	
<b>CA system checks:</b>	Enable or disable alarming of Conditional Access System errors.
<b>CA system checks – Maximum ECM interval (ms):</b>	The maximum allowed ECM repetition interval. Default: 500 ms
<b>CA system checks – Maximum ECM change period (ms):</b>	The maximum time allowed between ECM changes. Default: 25000ms
<b>CA system checks – Minimum avg. EMM bitrate (bps):</b>	The minimum allowed average EMM bitrate. Default: 1000 bps
<b>CA system checks – EMM bitrate average period (s):</b>	The averaging period used to calculate EMM bitrate. Note that the average period must be at least 20s less than the round-robin tuning period, e.g. with a round-robin tuning period of 70s the maximum EMM bitrate average period is 50s. Default: 10s
<b>CA system checks – Maximum control word period (ms):</b>	The maximum allowed control word period (the maximum time that can go by without a change in the scrambling control bits for scrambled PIDs). Default: 25 000 ms
<b>PID minimum bitrate checks:</b>	Enable or disable alarming of PID minimum bitrate. The bitrates are set in the <b>PID threshold template</b> .
<b>PID maximum bitrate checks:</b>	Enable or disable alarming of PID maximum bitrate. The bitrates are set in the <b>PID threshold template</b> .
<b>PID checks:</b>	Enable or disable alarming of PID presence errors, scrambling/clear requirements and PID type checks. The checks are set in the <b>PID threshold template</b> .
<b>Service minimum bitrate checks:</b>	Enable or disable alarming of service minimum bitrate errors. Requirements are specified in the <b>service threshold</b> template associated with the stream.
<b>Service maximum bitrate checks:</b>	Enable or disable alarming of service maximum bitrate errors. Requirements are specified in the <b>service threshold</b> template associated with the stream.
<b>Service checks:</b>	Enable or disable alarming of service presence, scrambling/clear required, service type, service name and service ID errors. Requirements are specified in the <b>service threshold</b> template associated with the stream.

<b>Service checks – Only allow services listed in service template:</b>	Check this box to enable service ID checks against the service ID list specified in the <b>service threshold</b> template associated with the stream.
<b>MIP check:</b>	Enable or disable alarming of errors related to the Megaframe Insertion Packet.
<b>MIP checks – Require presence of MIP:</b>	Check this box to enable an alarm if the MIP table is missing for the stream.
<b>MIP checks – Max MIP timing error(<math>\mu</math>s):</b>	The maximum MIP timing error before raising an alarm. The unit is $\mu$ s. Default: 10 $\mu$ s
<b>Gold TS check:</b>	Enable or disable alarming for tables failing Gold TS reference checking.
<b>Gold TS check – Also check version number and CRC:</b>	When enabled an alarm will be raised for any change, including a change in the table version number and CRC.
<b>Gold TS check – Verify PAT table:</b>	Do verification of the PAT table against the stored reference PAT table.
<b>Gold TS check – Verify PMT tables:</b>	Do verification of the PMT tables against the stored reference PMT tables.
<b>Gold TS check – Verify CAT table:</b>	Do verification of the CAT table against the stored reference CAT table.
<b>Gold TS check – Verify SDT actual table:</b>	Do verification of the SDT actual table against the stored reference SDT actual table.
<b>Gold TS check – Verify SDT other tables:</b>	Do verification of the SDT other tables against the stored reference SDT other tables.
<b>Gold TS check – Verify BAT table:</b>	Do verification of the BAT table against the stored reference BAT table.
<b>Gold TS check – Verify NIT actual table:</b>	Do verification of the NIT actual table against the stored reference NIT actual table.
<b>Gold TS check – Verify NIT other tables:</b>	Do verification of the NIT other tables against the stored reference NIT other tables.

<b>Time information check:</b>	Enable or disable alarming if there are errors in the time information sent in the streams. Probe should use NTP time sync to use this functionality.
<b>Time information check – Check TDT:</b>	Check the time in the TDT table and alarm if it is wrong.
<b>Time information check – Check TOT:</b>	Check the time in the TOT table and alarm if it is wrong.
<b>Time information check – Check LTC:</b>	Check the time in the Logical Time Code table and alarm if it is wrong.
<b>Time information check – Max time offset:</b>	The maximum number of seconds the time information provided in the stream can deviate from the probe time before an alarm is raised.
<b>Time information check – Max repetition time:</b>	The maximum time without any time information before an alarm is raised.

## 6.9.12 ETR 290 — PID thresholds

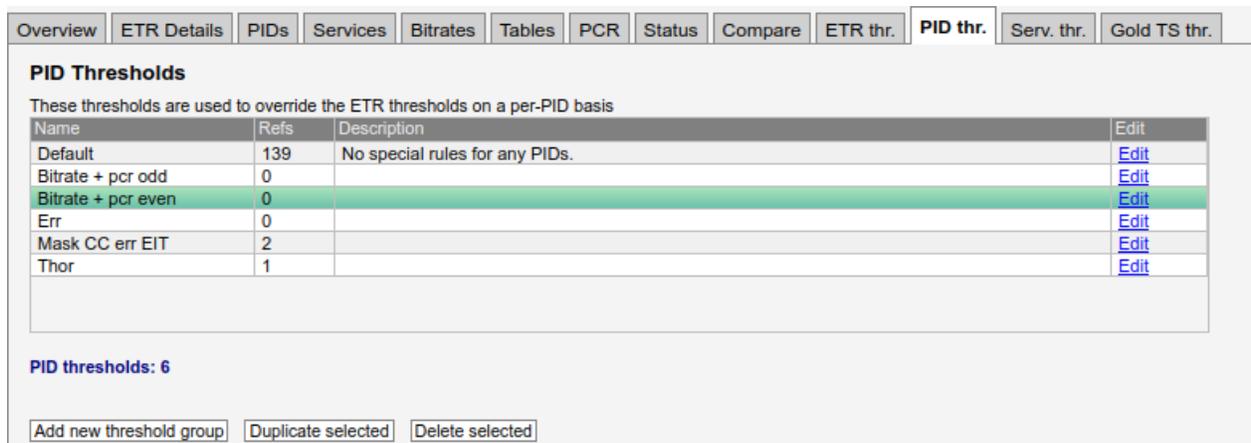

Name	Refs	Description	Edit
Default	139	No special rules for any PIDs.	<a href="#">Edit</a>
Bitrate + pcr odd	0		<a href="#">Edit</a>
Bitrate + pcr even	0		<a href="#">Edit</a>
Err	0		<a href="#">Edit</a>
Mask CC err EIT	2		<a href="#">Edit</a>
Thor	1		<a href="#">Edit</a>


PID thresholds: 6

The **PID thresholds** make it possible to define detailed conditions for alarm triggering on a PID or PID type basis. There is one predefined PID threshold template that cannot be edited by the operator: ‘Default’. The ‘Default’ PID threshold template contains no PID definitions and will therefore not alter alarming for any service.

By associating scheduling templates to checks it is possible to disable alarming at pre-selected time intervals. Scheduling templates are defined in the **Setup — Scheduling** view and will be available from a selection drop-down menu for some of the checks.

In the ‘PID Thresholds’ table, the ‘Refs’ column shows how many streams are associated with each threshold template.

There are two different ways of creating user-defined thresholds. To create a new threshold template from scratch the operator should click the **Add new threshold** template button. A pop-up window will appear allowing the user to define alarm conditions. Another way of creating a user-defined threshold template is by highlighting one of the templates already defined and then click the **Duplicate highlighted** button.

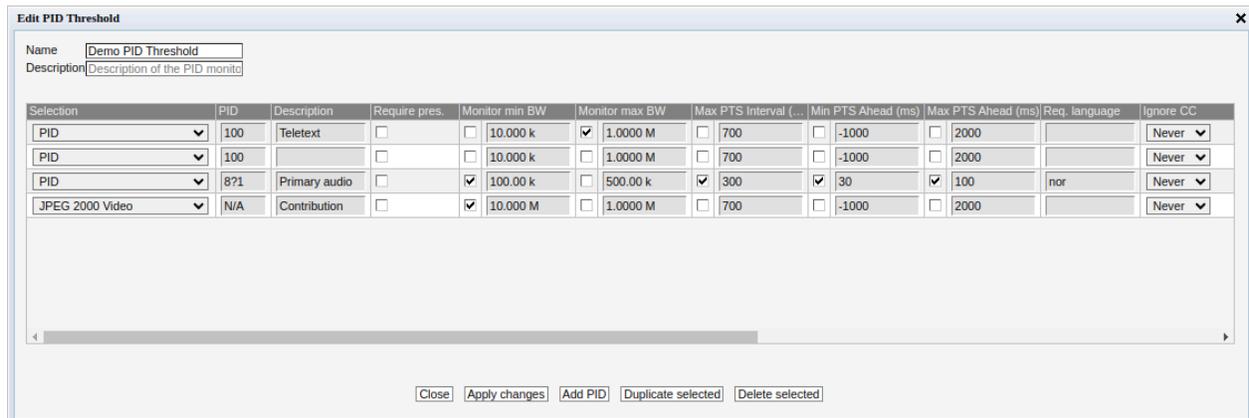

Selection	PID	Description	Require pres.	Monitor min BW	Monitor max BW	Max PTS Interval (...)	Min PTS Ahead (ms)	Max PTS Ahead (ms)	Req. language	Ignore CC
PID	100	Teletext	<input type="checkbox"/>	<input type="checkbox"/> 10.000 k	<input checked="" type="checkbox"/> 1.0000 M	<input type="checkbox"/> 700	<input type="checkbox"/> -1000	<input type="checkbox"/> 2000		Never
PID	100		<input type="checkbox"/>	<input type="checkbox"/> 10.000 k	<input type="checkbox"/> 1.0000 M	<input type="checkbox"/> 700	<input type="checkbox"/> -1000	<input type="checkbox"/> 2000		Never
PID	871	Primary audio	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/> 100.00 k	<input type="checkbox"/> 500.00 k	<input checked="" type="checkbox"/> 300	<input checked="" type="checkbox"/> 30	<input checked="" type="checkbox"/> 100	nor	Never
JPEG 2000 Video	N/A	Contribution	<input type="checkbox"/>	<input checked="" type="checkbox"/> 10.000 M	<input type="checkbox"/> 1.0000 M	<input type="checkbox"/> 700	<input type="checkbox"/> -1000	<input type="checkbox"/> 2000		Never

Deleting a PID threshold template is done by highlighting the threshold template that should be removed and clicking **Delete highlighted**. Note that if the deleted threshold template was assigned to a stream being monitored, the new threshold for that stream will default to the predefined **Default** threshold template.

The PID threshold template has the following settings:

---

#### *Edit PID Threshold:*

---

**Name:** The name of the PID threshold template

**Description:** Text field that should contain a meaningful description of the threshold template

---



---

#### *PID Threshold Parameters:*

---

**Selection:** The user selects if the requirements should apply for a specific PID or for all PIDs of a specified type. Note that the PID type detection depends on correct PSI/SI/PSIP signaling.

**PID:** The PID for which the specified requirements apply. If a PID type is selected in the 'Selection' column, this field will update to read N/A when the **Apply changes** button is clicked. A question mark can be used as a wild card to represent one digit. Example: The PID value 8?1 will match 3 digit PID numbers such as 801, 811 and 891. It will not match PID 81 or 8001.

**Description:** A text field describing the PID or PID type requirement.

**Require pres.:** If this field is checked an alarm will be raised provided that the specified PID is not present in the transport stream. Note that this check is only available for specified PIDs and not for PID types.

---


<b>Monitor min BW:</b>	An alarm is raised if the PID bandwidth goes below the specified minimum bandwidth (bandwidth in kbit/s or Mbit/s) and monitoring is enabled.
<b>Monitor max BW:</b>	An alarm is raised if the maximum PID bandwidth specified is exceeded (bandwidth in kbit/s or Mbit/s) and monitoring is enabled.
<b>Max PTS interval (ms):</b>	If the checkbox is enabled, the PTS interval measurement will be enabled for this PID and use the configured threshold. This will override the setting in the <b>ETR thresholds</b> template. An alarm is raised if the PTS repetition interval exceeds the configured limit.
<b>Min PTS ahead (ms):</b>	If the checkbox is enabled, the measurement of minimum PTS ahead will be enabled for this PID and use the configured threshold. This will override the setting in the <b>ETR thresholds</b> template. An alarm is raised if the PTS ahead measurement is lower than the the configured limit. The PTS ahead measurement measures the PTS value relative to the current PCR clock.
<b>Max PTS ahead (ms):</b>	If the checkbox is enabled, the measurement of maximum PTS ahead will be enabled for this PID and use the configured threshold. This will override the setting in the <b>ETR thresholds</b> template. An alarm is raised if the PTS ahead measurement is higher than the the configured limit. The PTS ahead measurement measures the PTS value relative to the current PCR clock.
<b>Req. language:</b>	If the PID need to have a certain language code signaled in the language descriptor it can be set here. An alarm will be raised if a wrong language is signaled or if the language is not signaled.
<b>Ignore CC:</b>	Select a scheduling template different from 'Never' for the probe to ignore CC errors for the specified PID or PID type.
<b>Ignore missing:</b>	Select a scheduling template different from 'Never' for the probe to ignore that the specified PID or PID type is signaled in PSI but missing in the stream.
<b>Ignore PCR:</b>	Select a scheduling template different from 'Never' for the probe to ignore any PCR errors for this PID or PID type.
<b>Ignore unref.:</b>	Select a scheduling template different from 'Never' for the probe to ignore that the specified PID is present in the stream but unreferenced in PSI.
<b>Ignore all:</b>	Select a scheduling template different from 'Never' for the probe to ignore all errors for a specified PID or PID type.

---

**Scrambling:** An alarm will be raised provided that the specified PID is scrambled when ‘require clr’ has been selected. Similarly an alarm will be raised if the specified PID is clear when ‘require scr’ has been selected. The default setting is to ignore whether the PID or PID type is scrambled or not.

---

### 6.9.13 ETR 290 — Service thresh.

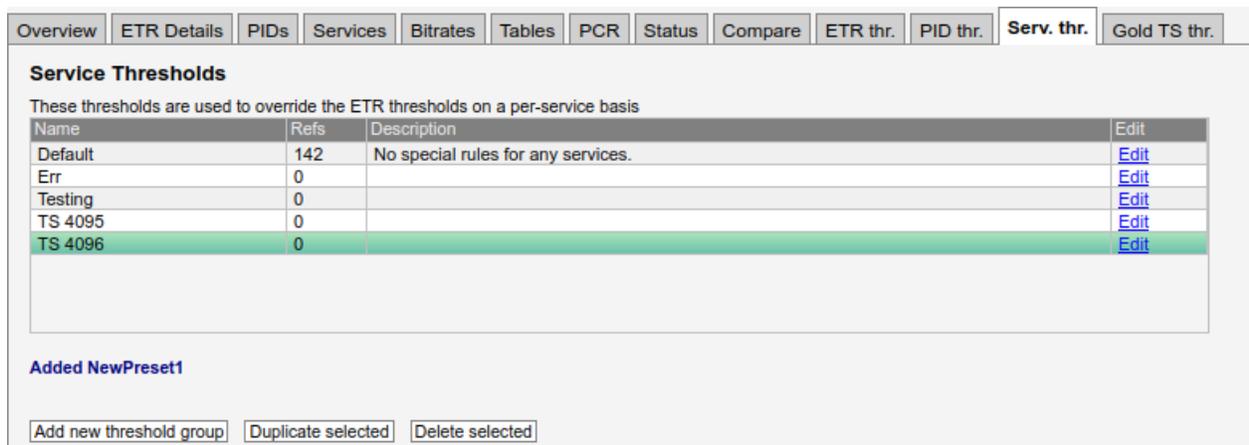

**Service Thresholds**

These thresholds are used to override the ETR thresholds on a per-service basis

Name	Refs	Description	Edit
Default	142	No special rules for any services.	<a href="#">Edit</a>
Err	0		<a href="#">Edit</a>
Testing	0		<a href="#">Edit</a>
TS 4095	0		<a href="#">Edit</a>
TS 4096	0		<a href="#">Edit</a>

Added NewPreset1

The **Service thresholds** make it possible to define detailed conditions for alarm triggering on a per-service basis. There is one predefined service threshold template that cannot be edited by the operator: **Default**. The Default service threshold template contains no service definitions and will therefore not alter alarming for any service.


By associating scheduling templates to service threshold templates it is possible to disable alarming at pre-selected time intervals. Scheduling templates are defined in the **Setup — Scheduling** view and will be available from the schedule drop-down menu.

In the ‘Service Thresholds’ table, the ‘Refs’ column shows how many streams are associated with each threshold template. Thresholds are associated with each stream in the **Multicasts — Streams — Edit** view.

There are two different ways of creating user-defined thresholds. To create a new threshold template from scratch the operator should click the **Add new threshold group** button. A pop-up window will appear allowing the user to assign a name and value to the new threshold and define the alarm conditions. Another way of creating a user-defined threshold template is by highlighting one of the templates already defined and then click the **Duplicate selected** button.

Deleting a service threshold template is done by highlighting the template that should be removed and clicking **Delete selected**. Note that if the deleted threshold template was assigned to a stream being monitored, the new threshold template for that stream will default to the **Default** template.

The settings **Service minimum bitrate checks**, **Service minimum bitrate checks** and **Service checks** in the ETR threshold template controls whether or not to report alarms based on the service threshold template parameters.

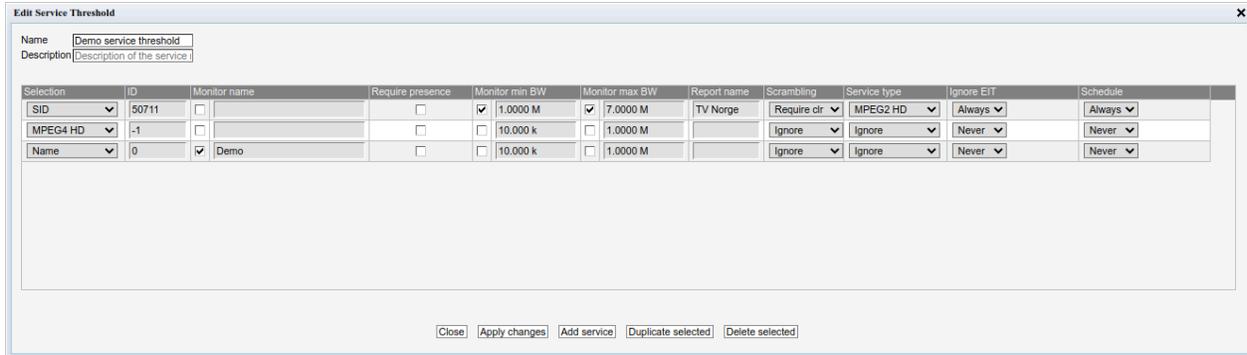

Selection	ID	Monitor name	Require presence	Monitor min BW	Monitor max BW	Report name	Scrambling	Service type	Ignore EIT	Schedule
SID	50711		<input type="checkbox"/>	<input checked="" type="checkbox"/> 1.0000 M	<input checked="" type="checkbox"/> 7.0000 M	TV Norge	Require clr	MPEG2 HD	Always	Always
MPEG4 HD	-1		<input type="checkbox"/>	<input type="checkbox"/> 10.000 k	<input type="checkbox"/> 1.0000 M		Ignore	Ignore	Never	Never
Name	0	Demo	<input type="checkbox"/>	<input type="checkbox"/> 10.000 k	<input type="checkbox"/> 1.0000 M		Ignore	Ignore	Never	Never

### *Edit Service Threshold*

**Name:** A text string that identifies the service threshold group

**Description:** Text field that should contain a meaningful description of the threshold

### *Service Threshold Parameters*

**Selection:** The user selects if the requirements should apply for a specific service ID (as specified in the **ID** column), for all services of a specified type or for a service with a specified service name (as specified in the **Monitor name** column). Note that the service type detection depends on correct PSI/SI/PSIP signaling.

**ID:** The service ID for which the associated thresholds should apply. For an SPTS the service ID will generally be 1; adding several list entries with different service IDs allows different thresholds to apply for different services within an MPTS.  
This value only applies if 'SID' is selected in the **Selection** column.

**Monitor name:** A text string may be specified that should match the service name of the associated service ID, as analyzed from the received SDT. Note that the check is case sensitive. An alarm will be raised if there is not a perfect match.

**Require presence:** If this field is checked an alarm will be raised provided that the specified service is not present in the stream. This check only requires that the service is present in the PAT, the other ETR checks will give alarms if there are other problems with the service, such as missing PMT or missing components. Note that this check is only available for specified services and not for service types.

**Monitor min BW:** If enabled an alarm is raised provided that the minimum service bandwidth goes below the specified bandwidth (in kbit/s or Mbit/s).

---

<b>Monitor max BW:</b>	If enabled an alarm is raised provided that the maximum service bandwidth specified (in kbit/s or Mbit/s) is exceeded.
------------------------	--

---

<b>Report name:</b>	<p>It is possible to define the service name that should be used for alarm traps and for alarm reporting to the VideoBRIDGE Controller. This can be convenient to be able to track a service that changes name (as signaled in PSI/SI) in the signal chain, when services within an MPTS are unnamed (no service names in the SDT) or when services should be recognized by the VideoBRIDGE Controller under a different name than indicated in the SDT.</p> <p>Note that this functionality will only work for services specified by service ID or by name (specified in the Selection column).</p>
---------------------	--

---

<b>Scrambling:</b>	If a value different from 'Ignore' is selected an alarm will be raised if the service scrambling status differs from the requirement. A service is considered scrambled if one of its components is scrambled.
--------------------	--

---

<b>Service type:</b>	If a value different from 'Ignore' is selected it should match the service type detected by analyzing the received SDT. An alarm will be raised if the service types differ.
----------------------	--

---

<b>Ignore EIT:</b>	Ignore missing EIT errors for this service. This is used for services which does not have EIT data. By ignoring EIT alarms on these services, false EIT alarms are avoided.
--------------------	---


---

<b>Schedule:</b>	<p>The Schedule drop-down menu allows the user to associate a scheduling scheme to a service, in effect masking alarms during selected intervals. Scheduling templates are defined in the <b>Setup — Scheduling</b> view. The predefined scheduling templates 'Never' and 'Always' will always be selectable, and these will result in service alarms never and always being masked, respectively.</p> <p>Note that if a PID is shared between several services and alarm masking is defined for one of the services, no alarms will be raised due to errors affecting this service.</p>
------------------	--

---

Note that it is possible to create a service threshold template that allows probe alarming if a new service appears in a stream. This is done by creating a threshold template listing the service IDs that are allowed to be present in a stream, and associating it to the stream. A complementary ETR threshold template should be created, that has the 'Only allow services listed in service template' check enabled. This ETR threshold template should also be associated with the stream.

## 6.9.14 ETR 290 — Gold TS thresholds

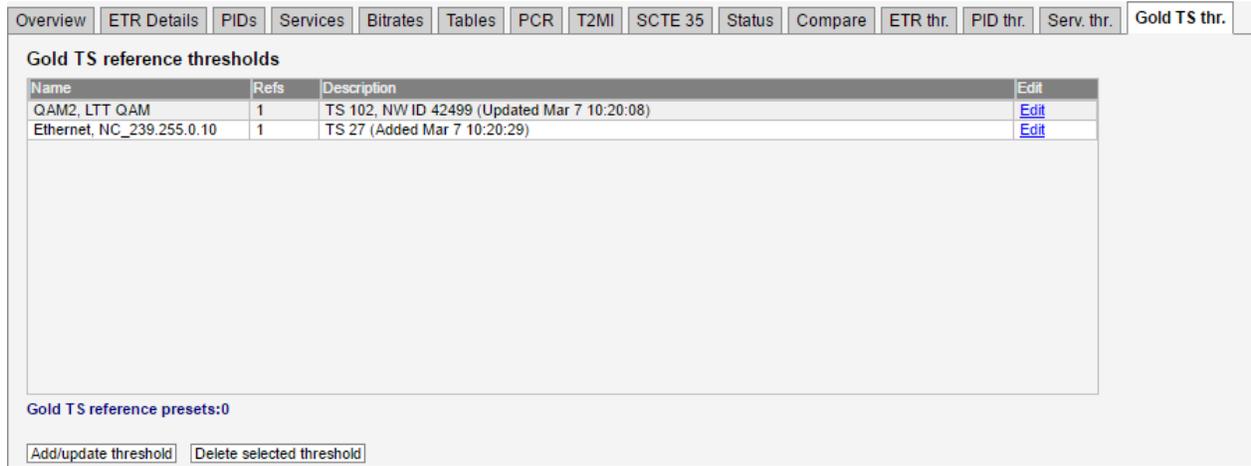

Name	Refs	Description	Edit
OAM2, LTT QAM	1	TS 102, NW ID 42499 (Updated Mar 7 10:20:08)	<a href="#">Edit</a>
Ethernet, NC_239.255.0.10	1	TS 27 (Added Mar 7 10:20:29)	<a href="#">Edit</a>

Gold TS reference presets:0


The Gold TS reference feature is used to compare the tables in the transport stream with a set of stored reference tables. This allows the operator to be notified of any changes in the PSI/SI tables such as:

- A service disappearing
- A new service being added
- Language descriptors suddenly changing
- Changes in service names
- Changes in frequencies used to transmit the signals
- And lots of misconfigurations in multiplexers

To use the Gold TS reference functionality, first store away tables for a stream or a set of streams. Go to **ETR 290 — Gold TS thr.**

Here you can see the reference thresholds currently stored on the probe and they can be renamed or edited.

To add new reference thresholds or update the existing thresholds click on the button named **Add/update threshold**. The following dialog is then shown:

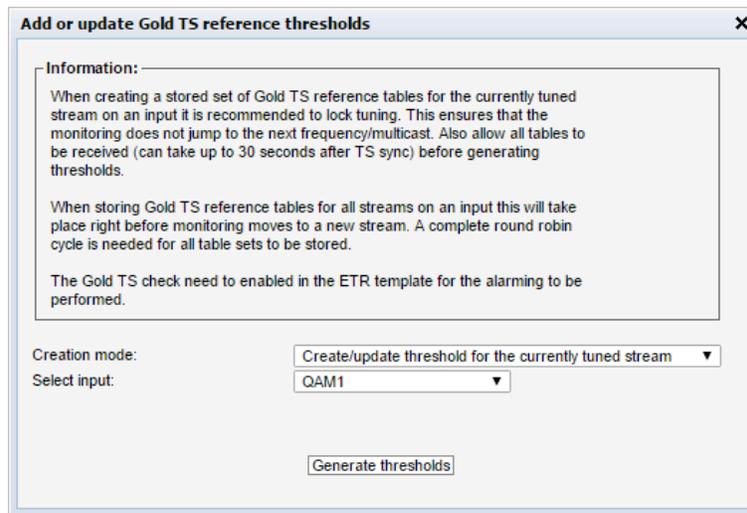

There are two different ways of creating a Gold TS reference template:

- Creating a template for the currently tuned stream on a specific input
- Creating a template for all streams on a specific input (or all inputs)


When creating a template for a specific stream the table set is saved immediately. It is therefore recommended that the ETR tuning is locked to this stream to avoid the round-robin operation from tuning to a new frequency just before the table set is stored. It can take 30 seconds after tuning to receive all tables.

When creating templates for all streams on an input this is done as a part of the round robin cycle at the end of the tuning period. It can then take a while for all thresholds to be generated (or updated) depending on the number of streams on that input.

When the reference template have been created it is automatically associated with the stream for which it was generated.

The operation of the Gold TS reference thresholds are controlled by the ETR threshold template associated with the stream. No settings are changed here when creating the reference templates so this needs to be done manually by going to **ETR 290 — ETR thr.**

If needed a new template can be created and associated with the stream(s). Or the existing template(s) can be changed.

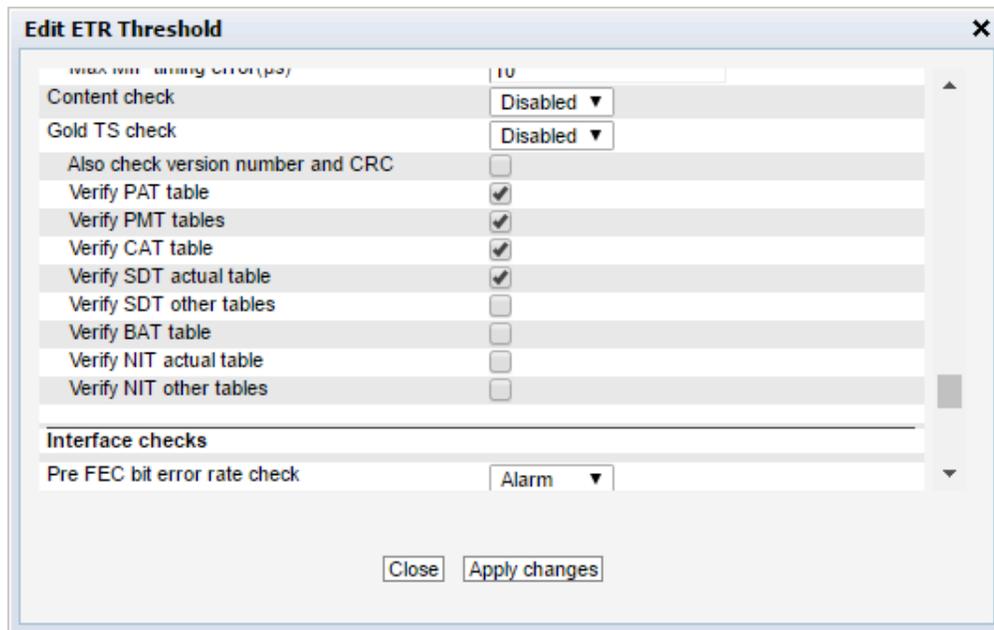

The reference check needs to be set to alarm if the Gold TS reference checking are to be performed.

The settings are as follows:

<b>Also check version number and CRC</b>	By default the version number and the original CRC of the tables are not checked. In many systems the version number can be updated even if no other changes are performed (for instance if a multiplexer is rebooted). So for most cases this should be left disabled.
<b>Verify PAT table</b>	When enabled the Program Association Table will be checked. This allows the operator to catch addition and removal of services as well as changes to the PMT PIDs used for the different services.
<b>Verify PMT table</b>	<p>When enabled the Program Map Table will be checked. This allows the operator to catch lots of changes to the different services:</p> <ul style="list-style-type: none"> <li>• Addition or removal of the various components such as audio and video PIDs.</li> <li>• Changes in language descriptors</li> <li>• Changed PCR PIDs</li> <li>• Changed or removed ECM PID</li> <li>• Lots of changes in the descriptors can be detected</li> </ul>

<b>Verify CAT table</b>	When enabled the Conditional Access Table will be checked. This allows the operator to catch errors related to the signaling for the CA Systems such as EMM PID disappearing or the CA System ID being changed
<b>Verify SDT actual table</b>	When enabled the SDT table for the current stream will be checked. This allows the operator to catch changes is service and operator names, service types and the various descriptors, both DVB defined and private descriptors
<b>Verify SDT other tables</b>	When enabled the SDT tables for the other streams will be checked. Checking is not enabled as default. This allows the operator to catch changes is service and operator names, service types and the various descriptors, both DVB defined and private descriptors
<b>Verify BAT table</b>	When enabled the Bouquet Association Table will be checked. The BAT table is not checked as default.
<b>Verify NIT actual table</b>	When enabled the Bouquet Association Table will be checked. The BAT table is not checked as default When enabled the Network Information Table for the current network will be checked. This allows the operator to catch changes such as: <ul style="list-style-type: none"> <li>• Changes in frequency</li> <li>• Changes in modulation parameters</li> <li>• Network name</li> <li>• Changes in service lists per transport stream</li> <li>• Changes in private as well as MPEG/DVB defined descriptors</li> </ul>
<b>Verify NIT actual tables</b>	When enabled the Network Information Tables for the other networks will be checked. This is disabled as default. This allows the operator to catch changes such as: <ul style="list-style-type: none"> <li>• Changes in frequency</li> <li>• Changes in modulation parameters</li> <li>• Network name</li> <li>• Changes in service lists per transport stream</li> <li>• Changes in private as well as MPEG/DVB defined descriptors</li> </ul>

The Gold TS reference checking is performed by the ETR engines and can be performed in round

robin. To view the status go to the ETR Details page for the stream and click the Reference check:

The screenshot shows the 'ETR 101 290 checks' interface. A 'Details for Gold TS check' window is open, displaying a table of monitored tables and sections. The table has columns for PID, Table, Section, Status, Last err, Err.cnt, Cur. value, Req. value, and Last wrong CRC. The table lists various tables like PAT, CAT, NIT, and PMT Service, with their respective sections and current status. A 'Gold TS (2 / 51)' indicator is visible at the top of the table.

PID	Table	Section	Status	Last err	Err.cnt	Cur. value	Req. value	Last wrong CRC
0	PAT (PID 0, TID 0)	0	Ok	Never	0	1ae32718	1ae32718	-
1 (CAT)	CAT (PID 1, TID 1)	0	Ok	Never	0	d90ff6c0	d90ff6c0	-
16 (NIT)	NIT Actual NW ID 42499 Section 0 (PID 16, TID 64)	0	Ok	Never	0	e1457d10	Not configured	-
16 (NIT)	NIT Actual NW ID 42499 Section 1 (PID 16, TID 64)	1	Ok	Never	0	0de15bbb	Not configured	-
16 (NIT)	NIT Actual NW ID 42499 Section 2 (PID 16, TID 64)	2	Ok	Never	0	4bc01115	Not configured	-
17 (SDT/BAT)	BAT Bouq.ID 25276 Section 1 (PID 17, TID 74)	0	Alarm	Now	50	df668b63	88478ad4	df668b63
208	PMT Service 12 (PID 208, TID 2)	0	Ok	Never	0	7bca67ac	7bca67ac	-
288	PMT Service 17 (PID 288, TID 2)	0	Ok	Never	0	be8261b7	be8261b7	-
672	PMT Service 41 (PID 672, TID 2)	0	Alarm	Now	1	b43f4834	2e304378	b43f4834
816	PMT Service 50 (PID 816, TID 2)	0	Ok	Never	0	074f179e	074f179e	-
928	PMT Service 57 (PID 928, TID 2)	0	Ok	Never	0	ca2f3221	ca2f3221	-
1696	PMT Service 105 (PID 1696, TID 2)	0	Ok	Never	0	3fc182fe	3fc182fe	-
5680	PMT Service 354 (PID 5680, TID 2)	0	Ok	Never	0	db5d4720	db5d4720	-
5696	PMT Service 355 (PID 5696, TID 2)	0	Ok	Never	0	993755b9	993755b9	-
5712	PMT Service 356 (PID 5712, TID 2)	0	Ok	Never	0	db486d27	db486d27	-
5728	PMT Service 357 (PID 5728, TID 2)	0	Ok	Never	0	4d15664d	4d15664d	-
5744	PMT Service 358 (PID 5744, TID 2)	0	Ok	Never	0	27047fb7	27047fb7	-
5760	PMT Service 359 (PID 5760, TID 2)	0	Ok	Never	0	b7f23562	b7f23562	-
5776	PMT Service 360 (PID 5776, TID 2)	0	Ok	Never	0	e033de40	e033de40	-

All the different tables and sections monitored are listed here. If there have been any changes to the tables the check will turn red and alarms be sent.

When the ETR engine is tuned to a stream it is possible to compare the tables for this stream with the stored reference tables by clicking on the entry in the list. This opens up a new window where the table data can be compared, both as a tree-breakdown and as a hexadecimal dump:

Show summary
Show hex

Current table:

- table\_id: 2 (0x02)
  - section\_syntax\_indicator: 1 b
  - reserved\_future\_use: 0 b
  - reserved: 11 b
  - section\_length: 150 (0x096)
  - program\_number: 41 (0x0029)
  - reserved: 0x3
  - version\_number: 6 (0x06)
  - current\_next\_indicator: 1 b
  - section\_number: 0
  - last\_section\_number: 0
  - reserved: 111 b
  - PCR PID: 673 (0x02a1)
  - reserved: 1111 b
  - program\_info\_length: 6
  - program\_info
    - components
      - component
        - component
        - component
        - component
        - component
        - component
          - stream\_type: MPEG-2 Audio
          - reserved: 111 b
          - elementary\_PID: 675 (0x02a3)
          - reserved: 1111 b
          - ES\_info\_length: 6
          - ES descriptors
            - language descriptor
              - descriptor\_tag: 10 (0x0a)
              - descriptor\_length: 4
              - languages
                - language
                  - ISO 639 language code: nor
                  - audio\_type: Undefined

CRC32: 0xb43f4834

```

0000: 02 B0 96 00 29 CD 00 00 E2 A1 F0 06 09 04 09 26 .....&
0010: E2 A8 02 E2 A1 F0 00 06 E2 A7 F0 2F 56 2D 65 6E ...../V-en
0020: 67 09 00 73 77 65 09 01 73 77 65 11 99 6E 6F 72 g..swe..swe..nor
0030: 0A 01 6E 6F 72 12 99 64 61 6E 00 01 64 61 6E 15 ..nor..dan..dan.
0040: 99 66 69 6E 0E 01 66 69 6E 16 99 04 E2 A5 F0 06 ..fin..fin.....
0050: 0A 04 73 77 65 00 04 E2 A4 F0 06 0A 04 64 61 6E ..swe.....dan
0060: 00 04 E2 A3 F0 06 0A 04 BE 6F 72 00 04 E2 A2 F0 .....nor.....
0070: 06 0A 04 66 69 6E 00 06 E2 A6 F0 19 0A 14 65 6E ...fin.....en
0080: 67 00 66 69 6E 00 73 77 65 00 6E 6F 72 00 64 61 g..fin.swe.nor.da
0090: 6E 00 6A 01 00 B4 3F 48 34 n..j...?H4

```

Stored reference table:

- table\_id: 2 (0x02)
  - section\_syntax\_indicator: 1 b
  - reserved\_future\_use: 0 b
  - reserved: 11 b
  - section\_length: 150 (0x096)
  - program\_number: 41 (0x0029)
  - reserved: 0x3
  - version\_number: 6 (0x06)
  - current\_next\_indicator: 1 b
  - section\_number: 0
  - last\_section\_number: 0
  - reserved: 111 b
  - PCR PID: 609 (0x0261)
  - reserved: 1111 b
  - program\_info\_length: 6
  - program\_info
    - components
      - component
        - component
        - component
        - component
        - component
        - component
          - stream\_type: MPEG-2 Audio
          - reserved: 111 b
          - elementary\_PID: 675 (0x02a3)
          - reserved: 1111 b
          - ES\_info\_length: 6
          - ES descriptors
            - language descriptor
              - descriptor\_tag: 10 (0x0a)
              - descriptor\_length: 4
              - languages
                - language
                  - ISO 639 language code: swe
                  - audio\_type: Undefined

CRC32: 0x2e304378

```


0000: 02 B0 96 00 29 CD 00 00 E2 61 F0 06 09 04 09 26 .....a.....&
0010: E2 A8 02 E2 A1 F0 00 06 E2 A7 F0 2F 56 2D 65 6E ...../V-en
0020: 67 09 00 73 77 65 09 01 73 77 65 11 99 6E 6F 72 g..swe..swe..nor
0030: 0A 01 6E 6F 72 12 99 64 61 6E 00 01 64 61 6E 15 ..nor..dan..dan.
0040: 99 66 69 6E 0E 01 66 69 6E 16 99 04 E2 A5 F0 06 ..fin..fin.....
0050: 0A 04 73 77 65 00 04 E2 A4 F0 06 0A 04 64 61 6E ..swe.....dan
0060: 00 04 E2 A3 F0 06 0A 04 73 77 65 00 04 E2 A2 F0 .....swe.....
0070: 06 0A 04 66 69 6E 00 06 E2 A6 F0 19 0A 14 65 6E ...fin.....en
0080: 67 00 66 69 6E 00 73 77 65 00 6E 6F 72 00 64 61 g..fin.swe.nor.da
0090: 6E 00 6A 01 00 2E 30 43 78 n..j...0Cx

```

If the tables are inspected and the change found to be OK the operator can then go back to **ETR 290 — Gold TS thr.** and update the stored table set to the new version.

## 6.10 Content

### 6.10.1 Content — Thumbnails

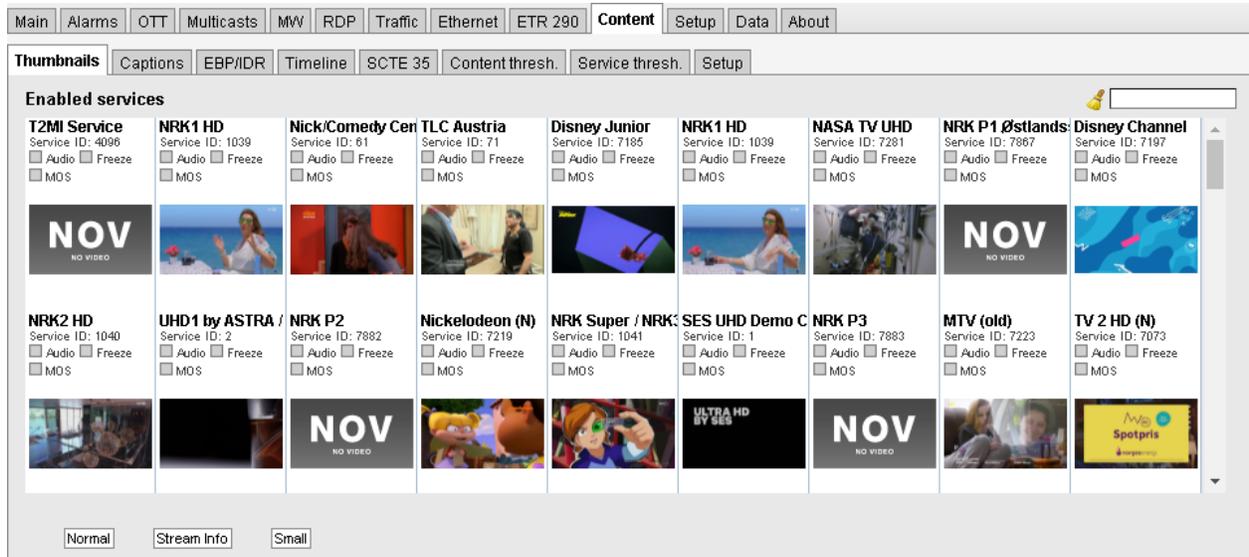

The **Thumbnails** view displays a mosaic of all decoded thumbnails. By default the **Normal** mode is used. Placeholder images will be displayed if thumbnail generation has not been enabled in the **Setup — Params** view, indicating the type of stream being received.

If the **Small** button is clicked, the **Thumbnails** view will display service names and thumbs only, allowing more thumbnails to be displayed in a view. To display the stream address and name (as defined in the **Multicasts — Streams** and **OTT — Channels** views) click the **Stream info** button.

The following information is displayed for each stream:

---

#### *Thumbnails*

---

**Service name:** Shows the name defined for the TV service in the SI service descriptor. If no SI is present in the stream the service id will be shown.

---

**Service ID:** For TS services, the ID of the selected service within a transport stream.

---

**Type:** For non-TS services, the service type is displayed.

---

---

**Freeze-frame status:** Status bulbs are displayed indicating the current freeze-frame and color-freeze status for the streams.

The freeze-frame error timeout values are set as part of the content threshold template associated with each multicast or OTT channel (refer to the **Content – Content thresh.** view). The different bulb colors are:

**White:** Unknown (typically due to the VB330 being unable to decode video)

**Grey:** freeze-frame detection is disabled.

**Green:** freeze-frame detection is enabled, no freeze-frame is detected.

**Yellow:** freeze-frame detection is enabled. Two consecutive equal frames have been detected, but the freeze-frame error timeout value has not been exceeded.

**Red:** freeze-frame is enabled. Freeze-frame has been detected and the freeze-frame error timeout value has been exceeded, thus resulting in an alarm.

---

**SCTE 35 status:** If the probe has been licensed with the SCTE 35 Signaling Analysis and Logging option, status bulbs are displayed indicating the current SCTE 35 alarm status for the streams.

The SCTE 35 alarming threshold values are set as part of the content threshold template associated with each multicast or OTT channel (refer to the **Content – Content thresh.** view). The different bulb colors are:

**Grey:** SCTE 35 alarming thresholds are disabled.

**Green:** SCTE 35 alarming thresholds are enabled, and no SCTE 35 alarms are active.

**Red:** SCTE 35 alarming thresholds are enabled, and one or more SCTE 35 alarms are active.

Additionally, if the service is currently in SCTE 35 cue out mode, the words “CUE OUT” are displayed under the thumbnail.

---

The **Thumbs Details** pop-up view is accessed by clicking a thumb in the **Thumbnails** view. For more information about the details displayed in the **Thumbs Details** pop-up see chapter 6.4 for multicast streams, and chapter 6.3.2 for OTT channels. Note that thumbnails are only decoded automatically if the **Extract thumbnails** option has been enabled in the associated OTT or multicast setup, or if freeze-frame or color-freeze alarming (Content Extraction and Alarming option) has been enabled in the Content threshold template. The same pop-up details are displayed as when opened from the **ETR 290 — Services** view.

Clicking the **Close** button will close the view.

## 6.10.2 Content — SCTE 35 (requires SCTE35-OPT)

The screenshot displays the 'SCTE 35/104 - Event information' window. At the top, a summary table shows service details:

| SID | Service name | Stream name  | Interface | Events | Time since last event | Time since last place... |
|-----|--------------|--------------|-----------|--------|-----------------------|--------------------------|
| 65  | DELUXE MUSIC | DELUXE MUSIC | IPTV      | 826    | 30s                   | 160s                     |

Below this is a detailed 'Event list SCTE 35/104' table with columns: Time, SID, Service name, PID, Type, Splice command, Cmd id, Event ID, Pre-roll, Cd, Inrm, Switch mode, Seg. type, Type id, Duration, and Tier. The table lists numerous 'Splice insert' events for 'DELUXE MUSIC' with various timestamps and event IDs.

SCTE 35 is a specification which allows equipment to splice in local content at specific times, SCTE 35 is basically just the signaling mechanism the equipment uses to know when to switch from the master transmission to insert local content. It can be used to allow insertion of local advertising at certain points in time or to allow the local operator to insert their own programs such as local news transmission.

SCTE 104 specifies carriage of these events in uncompressed streams.

The SCTE 35 option enables monitoring of SCTE 35 and SCTE 104 events of all streams and OTT channels monitored by the probe.

### *Service list parameters*

|                                   |   |
|-----------------------------------|---|
| <b>SID:</b>                       | The ID of the service for which SCTE 35 or SCTE 104 data has been received.               |
| <b>Service name:</b>              | The name of the service for which SCTE 35 or SCTE 104 data has been received.             |
| <b>Stream name:</b>               | Name specified by the user when adding a multicast or tuning.                             |
| <b>Interface:</b>                 | The input source of the transport stream.   |
| <b>Events:</b>                    | The number of SCTE 35 or SCTE 104 events seen for the service.                            |
| <b>Time since last event:</b>     | The time since the last SCTE 35 event specified in seconds, minutes, hours or days.       |
| <b>Time since last placement:</b> | The time since the last SCTE 35 placement opportunity in seconds, minutes, hours or days. |

To monitor SCTE 35 and SCTE 104 information, enable the **Monitor SCTE 35** checkbox in

**Content — Content thresh.** and configure the transport stream or OTT channel to use that content threshold. If it contains SCTE 35 or SCTE 104 information, the stream will be added to the list in the SCTE 35 view. By pressing the blue information button a new pop-up will show up, the pop-up will give specific information about events in the specified transport stream or OTT channel.

*Event information list parameters:*

| <i>Parameter</i>       | <i>Description</i>   |
|------------------------|--|
| <b>Time:</b>           | When the event occurred.   |
| <b>SID:</b>            | The ID of the service for which the event applies.   |
| <b>Service name:</b>   | The name of the service for which the event applies.   |
| <b>PID:</b>            | The PID carrying the SCTE 35 or SCTE 104 information. A service can have multiple SCTE 35 or SCTE 104 PIDs signaled in the PMT table(s).   |
| <b>Type:</b>           | Indicates whether the received event was SCTE 35 or SCTE 104.  |
| <b>Splice command:</b> | The type of the splice command.  |
| <b>Cmd id:</b>         | The hex value of the command.  |
| <b>Event ID:</b>       | Id of the specific event.  |
| <b>Pre-roll:</b>       | Number of seconds before a splice the event was received.  |
| <b>Cxl:</b>            | Canceled indicator, if set it indicates that this splice message cancels a previously sent splice message.   |
| <b>Imm:</b>            | Immediate mode, if set it indicates that this message should take effect immediately.  |
| <b>Switch mode:</b>    | Specifies whether it is a splice in (switch to local content/ads) or splice out event (switch back to the audio/video in the stream). For messages with the splice command type 'Time signal' the Switch mode parameter will be empty and the Segment type parameter will contain the details. |
| <b>Seg. type:</b>      | The segmentation type found in the segmentation descriptor (if found).   |
| <b>Type id:</b>        | The hex value of the segmentation type parameter.  |
| <b>Duration:</b>       | The time when a splice occurred to its end.  |
| <b>Tier:</b>           | Specifies which tier group are to use this splice message. Multiple splice messages can be sent addressed to different tier groups to allow switching at different times.  |

Use the drop-down at the top of the event list dialog to switch between displaying all events (default) or to display only SCTE 35 or only SCTE 104 events.

When pressing the information button for a specific event a new window will pop-up with detailed information about the event. The pop-up will show a log of the SCTE 35 or SCTE 104 events signaled for the specified transport stream or OTT channel. Splice NULL messages are not logged.

SCTE 35 - Event details

Show summary Show hex

- table\_id: 252 (0xfc)
- section\_syntax\_indicator: 0 b
- reserved\_future\_use: 0 b
- reserved: 11 b
- section\_length: 32 (0x020)
- protocol\_version: 1
- encrypted\_packet: Not encrypted
- encryption\_algorithm: 0 (0x00)
- pts\_adjustment: 0 (0x000000000)
- cw\_index: 0 (0x00)
- reserved: 0xff
- splice\_command\_length: 4095 (0xffff)
- splice\_command\_type: splice\_insert
- splice\_insert
  - descriptor\_loop\_length: 0
  - descriptors
  - CRC32: 0xbb929b55

**SCTE 35 Splice Information Table**

|                            |                                      |
|----------------------------|--------------------------------------|
| Encryption                 | Not encrypted                        |
| PTS adjustment             | 0 (0x000000000)                      |
| CW index                   | 0 (0x00)                             |
| Tier                       | NA                                   |
| Splice command type        | splice_insert                        |
| Splice event ID            | 1538790662 (0x5bb81506)              |
| Cancel indicator           | Not canceled                         |
| Out of network indicator   | Program out point                    |
| Program splice flag        | Program slice mode                   |
| Duration flag              | Duration present                     |
| Splice immediate flag      | Splice immediate mode                |
| Break duration auto return | Auto return after specified duration |
| Break duration             | 10.00 s                              |
| Unique program ID          | 55233                                |
| Avail num.                 | 1                                    |
| Avails exp.                | 1                                    |

Please note that for some OTT manifest formats, the SCTE 35 message is not transmitted in binary form, and the message shown in the **Event details** view is then synthesized from the available input.

### 6.10.3 Content — Content thresh.

Thumbnails **Content thresh.** Service thresh.

**Content threshold presets**

These thresholds are used to generate content alarms and to determine when an error-second has occurred

| Name         | Refs | Freeze-frame  | Freeze timeout | Edit                 |
|--------------|------|---------------|----------------|----------------------|
| Default      | 18   | Disabled      | 10 min         | <a href="#">Edit</a> |
| Freeze-frame | 18   | Trigger often | 10 min         | <a href="#">Edit</a> |

**Thresholds: 2**

Add new threshold Duplicate selected Delete selected Edit selected

Thresholds are used to determine when to actually raise an alarm upon detection of an error. The Content thresholds are used for generating content alarms as well as for calculating error-seconds. Error seconds and content alarms are issued whenever measurements exceed the defined threshold levels for a parameter. The alarm level of each of these alarms is set in the **Alarms — Alarm setup** view. Note that it is also possible to disable alarms in the **Alarms — Alarm setup** view.

The **Content — Content thresh.** view makes it possible to define threshold values that operate at stream level. Thresholds are associated with each stream in the **Multicasts — Streams — Edit** and **OTT — Channels** views. There are two different ways of creating user-defined thresholds. To create a new threshold template from scratch the operator should click the **Add new threshold** button. A pop-up window will appear allowing the user to define alarm conditions. Another way of


creating a user-defined threshold template is by highlighting one of the threshold templates already defined and then click the **Duplicate highlighted** button.

Deleting a threshold template is done by highlighting the threshold template that should be removed and clicking **Delete selected**. It is possible to delete or edit several entries simultaneously. Several entries are selected by using the regular *Ctrl + click* or *Shift + click* functionality. Click the **Edit** button to edit one or more selected threshold templates. Note that the predefined ‘Default’ threshold template cannot be deleted or changed.

In the threshold presets list the ‘Refs’ column displays how many streams are associated with each stream threshold template.

The available thresholds depend on the currently active license. Applying content analysis on many concurrent streams can introduce a performance penalty, please refer to appendix B.5 for more details.

The **Sources** column indicates which of the different threshold settings are supported where.

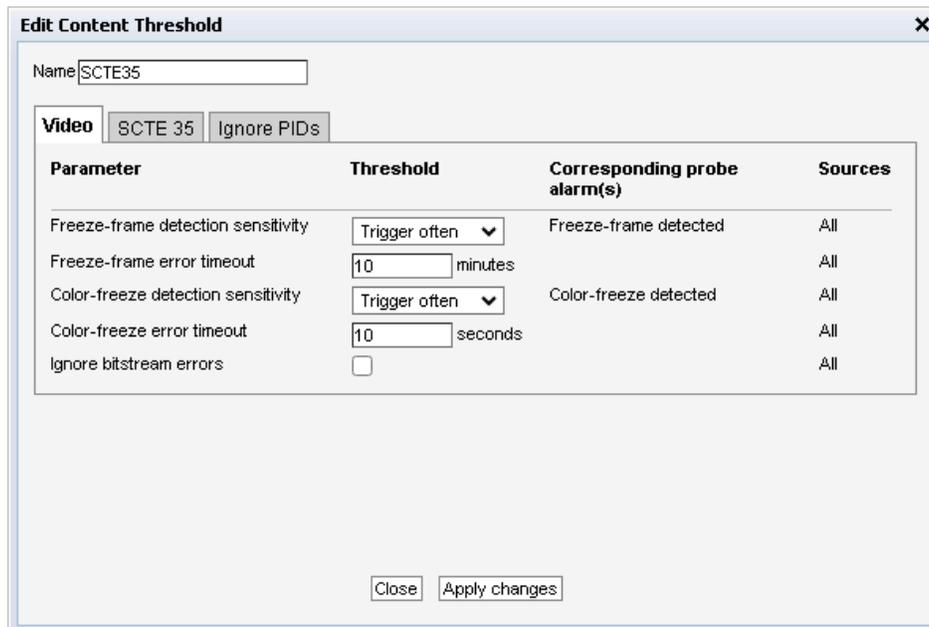

| Parameter                          | Threshold                | Corresponding probe alarm(s) | Sources |
|------------------------------------|--------------------------|------------------------------|---------|
| Freeze-frame detection sensitivity | Trigger often            | Freeze-frame detected        | All     |
| Freeze-frame error timeout         | 10 minutes               |                              | All     |
| Color-freeze detection sensitivity | Trigger often            | Color-freeze detected        | All     |
| Color-freeze error timeout         | 10 seconds               |                              | All     |
| Ignore bitstream errors            | <input type="checkbox"/> |                              | All     |

---


*Video*

---

---

|  |  |
|--|--|
| <b>Freeze-frame detection sensitivity:</b> | <p>Picture matching in video streams is not an exact science, as noise can be introduced in many of the stages the stream goes through. This setting makes it possible to define the amount of noise to be allowed when performing freeze-frame detection.</p> <p>When set to <b>Disabled</b>, the freeze-frame detection is disabled. When set to <b>Trigger seldom</b>, only a small amount of noise is allowed when deciding whether the picture has changed or not. This means that the pictures have to be close to identical before the freeze-frame alarm is raised. <b>Normal</b> is the recommended setting and should be used in most cases. <b>Trigger often</b> allows a high amount of noise. This means that it allows pictures to be quite different while still classifying them as identical, which may result in too many freeze-frame alarms.</p> |
| <b>Freeze-frame error timeout:</b>         | <p>The time (in minutes) a freeze-frame error should persist before the probe will raise an alarm</p>  |
| <b>Color-freeze detection sensitivity:</b> | <p>This setting makes is possible to define the amount of noise to be allowed when performing color-freeze detection.</p> <p>When set to <b>Disabled</b>, the color-freeze detection is disabled. When set to <b>Trigger seldom</b>, only a small amount of noise is allowed when comparing to the list of solid colors. <b>Normal</b> is the recommended setting, whereas <b>Trigger often</b> allows a high amount of noise, which may result in too many color-freeze alarms.</p>   |
| <b>Color-freeze error timeout:</b>         | <p>The time (in seconds) a color-freeze error should persist before the probe will raise an alarm.</p>   |
| <b>Ignore bitstream errors:</b>            | <p>In some cases, the video codec reports errors in the bitstream while still being able to generate thumbnails or partial thumbnails. If the stream shows a “Bitstream Errors” icon, you can try to ignore this by enabling this setting.</p>   |

---

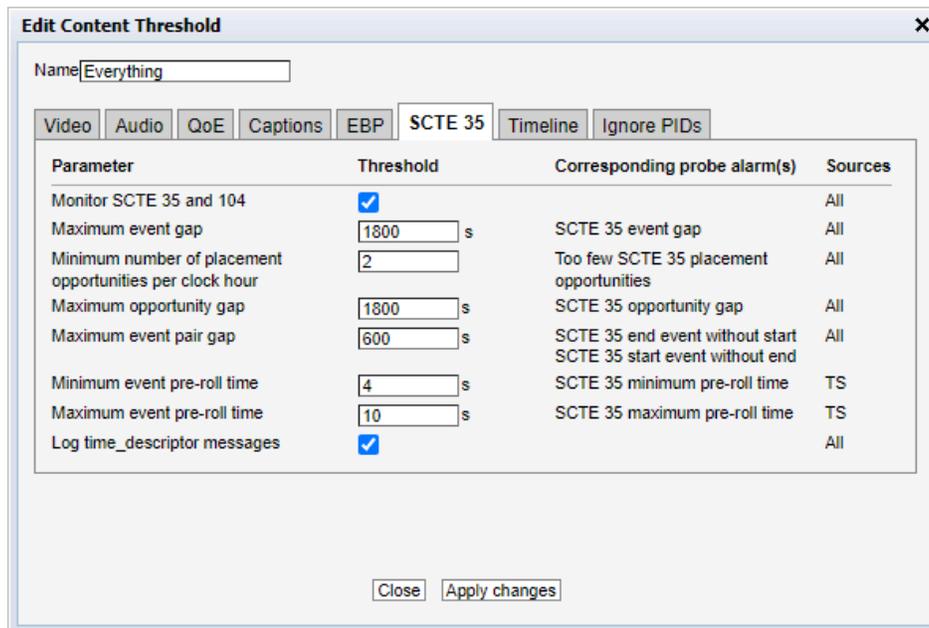

### *SCTE 35*

**Monitor SCTE 35:** If enabled, SCTE 35 and SCTE 104 events are captured and displayed in the **Content – SCTE 35** view

**Maximum SCTE 35 event gap:** Specifies the maximum number of seconds allowed between two SCTE 35 or SCTE 104 events before an alarm is raised. Set to –1 to disable the alarm.

**Minimum number of placement opportunities per clock hour:** Specifies the minimum number of placement opportunities that must be signaled for a full clock hour. An alarm will be raised at the top of the hour if the previous hour had fewer than this number of opportunities. Set to –1 to disable the alarm.

**Maximum SCTE 35 opportunity gap:** Specifies the maximum number of seconds allowed between two SCTE 35 or SCTE 104 placement opportunities before an alarm is raised. Set to –1 to disable the alarm.

**Maximum event pair gap:** Specifies the maximum number of seconds allowed between the a SCTE 35 or SCTE 104 start and end segmentation descriptor messages in Time signal events. An alarm will be raised for five seconds when this is detected. Additionally, an alarm will be raised if an end segmentation message was received without the corresponding start message. Set to –1 to disable these alarms.

---

**Minimum event pre-roll time:** Specifies the minimum number of seconds allowed between when the SCTE 35 event is received and when the splice is supposed to happen. An alarm will be raised for five seconds when this is detected. Set to -1 to disable these alarms.


---

**Maximum event pre-roll time:** Specifies the maximum number of seconds allowed between when the SCTE 35 event is received and when the splice is supposed to happen. An alarm will be raised for five seconds when this is detected. Set to -1 to disable these alarms.

---

**Log time\_descriptor messages** Determines whether the SCTE 35 or SCTE 104 messages containing nothing else than a time\_descriptor should be included in the message log. In some systems there are a lot of these messages (they can be used as keep alive messages to ensure that there always is some traffic on the SCTE 35 or SCTE 104 PID). If the message log is filled up with the time\_descriptor messages, disable logging of these messages

---

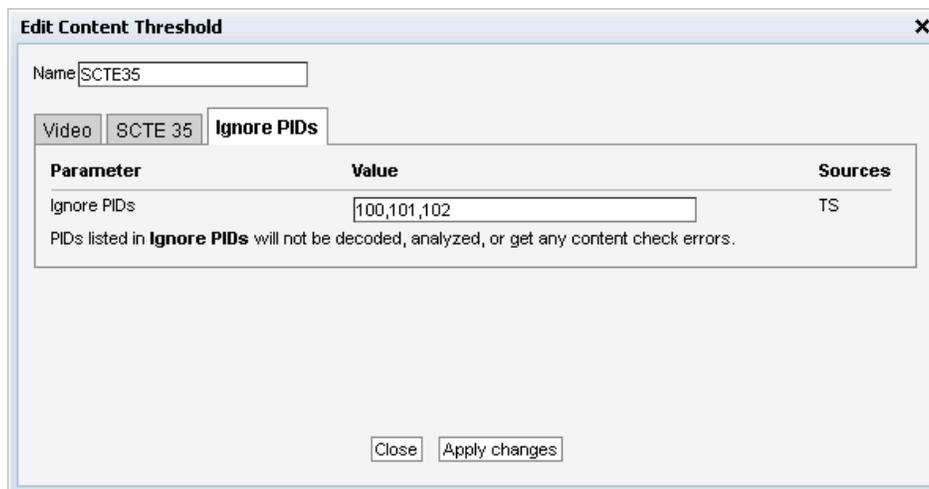


---

### *Ignore PIDs*

---

**Ignore PIDs:** *Not applicable to OTT channels:* A comma separated list of PIDs for which the probe should not decode, analyze or report any content check errors. No thumbnails, loudness or captions will be decoded on these PIDs.

---

## 6.10.4 Content — Service thresh.

Thumbnails
Captions
EBP
Timeline
Content thresh.
**Service thresh.**
Setup

**Content service thresholds**

These thresholds are used to override the Content thresholds on a service basis

| Name         | Refs | Description                        | Edit                 |
|--------------|------|------------------------------------|----------------------|
| Default      | 11   | No special rules for any services. | <a href="#">Edit</a> |
| Service 1039 | 1    | Override service 1039              | <a href="#">Edit</a> |
| MPTS         | 0    | Service-specific rules             | <a href="#">Edit</a> |

**Service thresholds: 3**

Add new threshold group

Duplicate selected

Delete selected

Thresholds are used to determine when to actually raise an alarm upon detection of an error. The **Content — Service thresh.** view makes it possible to define detailed conditions for alarm triggering on a per-service basis. This is particularly useful to specify individual alarm handling rules for services in a multi-program transport stream (MPTS). Note that if there is a stream and service threshold mismatch, the service threshold will apply. This may be the case if QoE or scheduling requirements are set differently in the stream threshold template and service threshold template associated with a stream. There is one predefined service threshold template that cannot be edited by the operator: **Default**. The Default service threshold template contains no service definitions and will therefore not alter alarming for any service.

By associating scheduling templates to service threshold templates it is possible to disable alarming at pre-selected time intervals. Scheduling templates are defined in the **Setup — Scheduling** view and will be available from the schedule drop-down menu.

In the ‘Service Thresholds’ table, the ‘Refs’ column shows how many streams are associated with each threshold template. Thresholds are associated with each stream in the **Multicasts — Streams — Edit** view.

There are two different ways of creating user-defined thresholds. To create a new threshold template from scratch the operator should click the **Add new threshold group** button. A pop-up window will appear allowing the user to assign a name and value to the new threshold and define the alarm conditions. Another way of creating a user-defined threshold template is by highlighting one of the templates already defined and then click the **Duplicate selected** button.

Deleting a service threshold template is done by highlighting the template that should be removed and clicking **Delete selected**. Note that if the deleted threshold template was assigned to a stream being monitored, the new threshold template for that stream will default to the **Default** template.

**Edit Content Service Threshold** ✕

Name

Description

| ID   | Content thresholds | Schedule         |
|------|--------------------|------------------|
| 100  | 100:MPTS ▼         | Same as stream ▼ |
| 101  | 101:MPTS ▼         | Same as stream ▼ |
| 917  | 917:MPTS ▼         | Same as stream ▼ |
| 3837 | 3837:MPTS ▼        | Same as stream ▼ |

---

### Edit Service Threshold

---

**Name:** A text string that identifies the service threshold group

**Description:** Text field that should contain a meaningful description of the threshold

---

### Service Threshold Parameters

---

**ID:** The service ID for which the associated thresholds should apply. For an SPTS the service ID will generally be 1; adding several list entries with different service IDs allows different thresholds to apply for different services within an MPTS.

**Content thresholds:** This settings defines the content threshold settings that should be applied to this stream. The entire content threshold setting, with the exception for the ‘Ignore PIDs’ setting, will be applied to the service. Please refer to chapter 6.10.3 for the specific meaning of the settings. Set this to *Same as stream* to apply the default content thresholds for this service.

**Schedule:** The Schedule drop-down menu allows the user to associate a scheduling scheme to a service, in effect masking alarms during selected intervals. Scheduling templates are defined in the **Setup — Scheduling** view. The predefined scheduling templates ‘Never’ and ‘Always’ will always be selectable, and these will result in service alarms never and always being masked, respectively. When *Same as stream* is selected, the requirement defined in the stream threshold will apply. Note that alarm masking only affects alarm lists and SNMP traps; other alarm indications in the GUI will remain visible.

---

## 6.11 Redundancy (requires IP-SWITCH-OPT)

The IP redundancy switching feature enables the VB330 to function as a control unit for an external redundancy switching device. The VB330 integrates easily by specifying a few parameters. Then the VB330 can be configured to send switching commands based on the alarm settings. The actual distribution and switching will be done by the external device. IP redundancy switching is currently supported on the DMG 4000.

Each redundancy switch is coupled with two specific ETR engines. The pairs are 1 and 2, 3 and 4 etc. The number of ETR engines depends on the ETR290-OPT of the VB330. More information about the ETR290-OPT is found in section 6.9. The number of switches available will adjust automatically to the number of ETR engines.

The multicasts must be assigned to the ETR engines using the **Multicasts — Streams** view. A step by step description of how to do this can be found in section 6.11.5.

A single multicast must be monitored per engine for the switching to work as intended. Round-robin monitoring (multiple multicasts monitored sequentially on the same ETR engine) is NOT supported for redundancy switching.

The redundancy switch status and settings are available using the Eii. Setup changes through the Eii is also possible. See section 6.13.5 for more information about the Eii.

### 6.11.1 Redundancy — Status

The screenshot displays the 'Status' view of the Eii interface. It is divided into several sections:

- Redundancy switch list:** A table with columns for ETR#, Name A, Active, Name B, and Mode. It lists various channels like TVNorge HD, C More Golf HD, Nat Geo HD, Nasa TV UHD, TLC Norge HD, TV 2 Sport 2 HD, Disney Channel, FOX HD, Kanal 4 HD, ID Investigation D..., Nickelodeon (D), BBC BRIT HD, Nickelodeon (N), Viasat 4 HD, MTV, VH1 Classic, NickToons, MOTORVISION TV, and Disney Junior.
- Switch details:** Shows ETR engines (29/30), Active input (A), Mode (SuperLocal), and a description: 'In SuperLocal mode the input switching can only be performed using the buttons in the probe web interface'. It includes a diagram with two inputs (A and B) and an Output.
- Status of input A: Viasat 4 HD:** A grid of checkboxes for parameters like TS sync, Transport, NIT, CA syst, T2MI, Sync byte, CRC, SI Rep, PID minbr, IAT, PAT, PCR, Unref PID, PID maxbr, MLR, Continuity, PCR accr, SDT, PID ch, RTP, PMT, PTS, EIT, Serv. minbr, Intf. ovfl, Miss PID, CAT, RST, Serv. maxbr, Intf. ovfl, TDT, Serv. ch, MIP, Cont. ch, Gold TS, and Time.
- Status of input B: Viasat 4 HD: backup:** A similar grid of checkboxes for the same parameters as input A.
- Setup:** Includes a Mode dropdown (SuperLocal) and a Return delay (s) field (30).
- Manual control:** Contains buttons for 'Switch to input A' and 'Switch to input B'.

The **Status** view displays the status of the redundancy switches. The Redundancy switch list on the left side gives an overview of all the switches.

---

*Redundancy switch list*

---

|                |   |
|----------------|---|
| <b>ETR#:</b>   | The ETR engines coupled with the switch. <input A>:<input B>  |
| <b>Name A:</b> | <p>Displays the name of the stream on input A (odd numbered ETR engine). To the right of the name is a bulb showing the ETR290 alarm status.</p> <p>The field also provides the following information:</p> <ul style="list-style-type: none"> <li>• <b>Bold</b> text indicates that the stream is the currently selected as the output.</li> <li>• Displaying “<i>switch inactive</i>” together with an empty Name B field means that one or both of the ETR engines are not in use.</li> <li>• “<i>setup error</i>” is displayed if there is a setup error. Opening the respective switch information will give more details.</li> </ul> |
| <b>Active:</b> | The arrow indicates which input is currently selected as the output.  |
| <b>Name B:</b> | <p>Displays the name of the stream on input B (even numbered ETR engine). To the left of the name is a bulb showing the ETR290 alarm status.</p> <p>The field also provides the following information:</p> <ul style="list-style-type: none"> <li>• <b>Bold</b> text indicates that the stream is the currently selected as the output.</li> <li>• An empty field together with Name A displaying “<i>switch inactive</i>” means that one or both of the ETR engines are not in use.</li> <li>• “<i>setup error</i>” is displayed if there is a setup error. Opening the respective switch information will give more details.</li> </ul> |
| <b>Mode:</b>   | <p>The operation mode, described in section 6.11.4, set for the switch</p> <p>A = Auto, M = Manual, S = SuperLocal</p>  |

To the right of the Redundancy switch list, more detailed information about a switch is displayed. This is information about the redundancy switch currently selected in the switch list. A switch can be selected by clicking the respective list entry. The following information is displayed:

---

*Switch information frames*


---

|                           |   |
|---------------------------|---|
| <b>Switch details:</b>    | <p><b>ETR engines:</b> The ETR engines coupled with the switch. &lt;input A&gt;:&lt;input B&gt;</p> <p><b>Active input:</b> The input selected to be output from the switch.</p> <p><b>Mode:</b> The operation mode, described in section 6.11.4, set for the switch</p> <p><b>Description:</b> A description of the switch’s current operation. After a switch, the return delay countdown will be shown here. The switch details frame includes a figure with a visual representation of the switch’s status.</p> |
| <b>Status of input A:</b> | The header text is followed by the name of the stream. The frame shows the full ETR290 alarm status of the stream on input A of the selected switch. The content of this frame is described in section 6.9.2.   |
| <b>Status of input B:</b> | This shows the same information as <b>Status for input A</b> , but for input B.   |

**Setup:** Allows for quick access to the currently selected switch's setup. The setup parameters are described in section 6.11.2.

**Manual control:** Buttons in this frame are used to select which input should be the output from the switch. These are only available in modes Manual and SuperLocal.

## 6.11.2 Redundancy — Switch setup

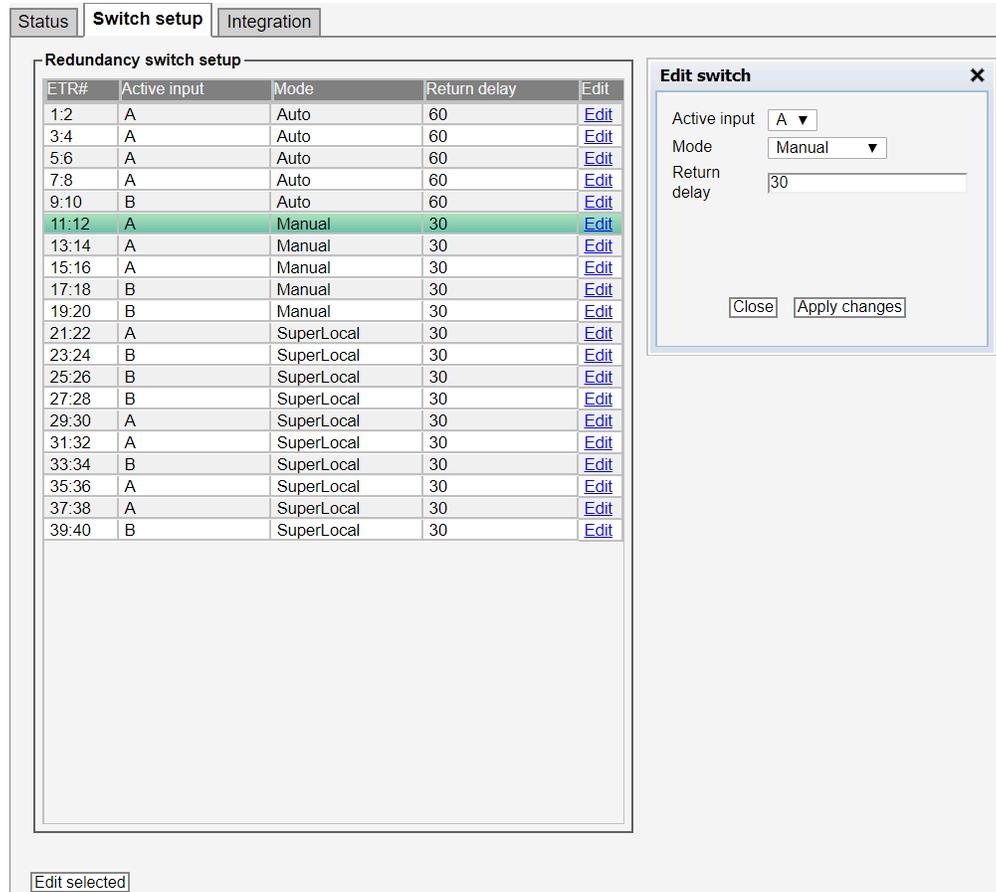

The screenshot displays the 'Redundancy switch setup' interface. At the top, there are tabs for 'Status', 'Switch setup', and 'Integration'. The main area contains a table with the following data:

| ETR#  | Active input | Mode       | Return delay | Edit                 |
|-------|--------------|------------|--------------|----------------------|
| 1:2   | A            | Auto       | 60           | <a href="#">Edit</a> |
| 3:4   | A            | Auto       | 60           | <a href="#">Edit</a> |
| 5:6   | A            | Auto       | 60           | <a href="#">Edit</a> |
| 7:8   | A            | Auto       | 60           | <a href="#">Edit</a> |
| 9:10  | B            | Auto       | 60           | <a href="#">Edit</a> |
| 11:12 | A            | Manual     | 30           | <a href="#">Edit</a> |
| 13:14 | A            | Manual     | 30           | <a href="#">Edit</a> |
| 15:16 | A            | Manual     | 30           | <a href="#">Edit</a> |
| 17:18 | B            | Manual     | 30           | <a href="#">Edit</a> |
| 19:20 | B            | Manual     | 30           | <a href="#">Edit</a> |
| 21:22 | A            | SuperLocal | 30           | <a href="#">Edit</a> |
| 23:24 | B            | SuperLocal | 30           | <a href="#">Edit</a> |
| 25:26 | B            | SuperLocal | 30           | <a href="#">Edit</a> |
| 27:28 | B            | SuperLocal | 30           | <a href="#">Edit</a> |
| 29:30 | A            | SuperLocal | 30           | <a href="#">Edit</a> |
| 31:32 | A            | SuperLocal | 30           | <a href="#">Edit</a> |
| 33:34 | B            | SuperLocal | 30           | <a href="#">Edit</a> |
| 35:36 | A            | SuperLocal | 30           | <a href="#">Edit</a> |
| 37:38 | A            | SuperLocal | 30           | <a href="#">Edit</a> |
| 39:40 | B            | SuperLocal | 30           | <a href="#">Edit</a> |

Below the table is an 'Edit selected' button. To the right, an 'Edit switch' dialog box is open, showing the configuration for the selected switch (ETR# 11:12):

- Active input: A
- Mode: Manual
- Return delay: 30

The dialog box includes 'Close' and 'Apply changes' buttons.

The **Switch setup** view shows the current setup of all the switches. Using this view is the most effective way to edit the setups of the redundancy switches. Multi-edit functionality makes it possible to edit several setups simultaneously. Highlight the setup list entries that should be edited and click the **Edit selected** button. The link in the Edit column can be used to edit the setup on that specific row.

Any setting can be set from the setup page regardless of current mode etc. The probe does not have a way to read the status from the external device. The **Setup** view can be used to manually sync the VB330 probe's switch settings to the settings of the external device.

---


*Switch setup list*

---

|                      |   |
|----------------------|---|
| <b>ETR#:</b>         | The ETR engines coupled with the switch. <input A>:<input B>  |
| <b>Active input:</b> | The input selected to be the output from the switch.  |
| <b>Mode:</b>         | The operation mode, described in section 6.11.4, set for the switch.  |
| <b>Return delay:</b> | The return delay specifies a time period following an automatic switch where a new switch cannot be triggered. This only applies if the <b>Mode</b> is set to Auto. |
| <b>Edit:</b>         | Click this column to edit the switch's setup parameters.  |

---

### 6.11.3 Redundancy — Integration

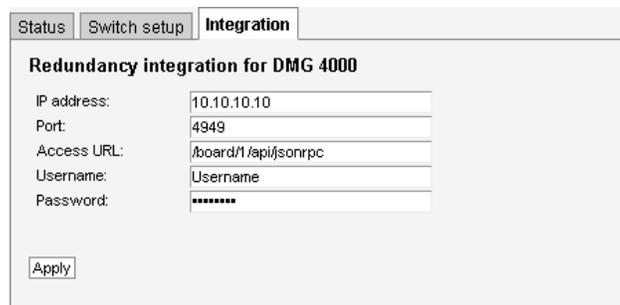

The **Integration** view is used to set the parameters needed to integrate with the external switching device. IP redundancy switching is currently supported on the DMG 4000. The following parameters are supported:

---

*Integration parameters*

---

|                    |  |
|--------------------|--|
| <b>IP address:</b> | IP address used to reach the external switching device.    |
| <b>Port:</b>       | Port used to connect to the external device.               |
| <b>Access URL:</b> | Path to control API.                                       |
| <b>Username:</b>   | Username used to authenticate against the external device. |
| <b>Password:</b>   | Password used to authenticate against the external device. |

---

### 6.11.4 Redundancy switch operation modes

The redundancy switches have three different modes of operation: Auto, Manual and SuperLocal. The mode can be set for each switch independently. The modes are described below:

---

*Modes*

---

---

|                    |   |
|--------------------|---|
| <b>Auto:</b>       | Switching between the inputs is done automatically based on the user defined alarm setup. A switch is triggered when the active stream has an active alarm while the inactive stream is alarm free. The return delay specifies a period of time following an automatic switch where a new automatic switch cannot be triggered. |
| <b>Manual:</b>     | An action from the user is required to switch. The switching can be performed using the Manual control buttons in <b>Redundancy — Status</b> , editing the setup in <b>Redundancy — Switch setup</b> or through the Eii.  |
| <b>SuperLocal:</b> | The redundancy switches can only be controlled through the web GUI. Control through Eii is disabled. Use this mode to disable externally triggered switches.  |

---

## 6.11.5 Setup guide

### Coupling multicasts to a redundancy switch


As mentioned at the start of the Redundancy section, each switch is coupled with a specific pair of ETR engines. The number of the ETR engines coupled with a switch are two consecutive numbers starting with the odd number (i.e. 1 and 2, 3 and 4, ...).

The multicasts are assigned to ETR engines using the **Multicasts — Streams** view. Figures and a full description of this view can be found in section 6.4.8.

1. Go to the **Multicasts — Streams** view.
2. Open the edit popup of the multicast you want to couple with a redundancy switch.
3. Join the multicast:  
Under **General**, check **Join stream**.
4. Enable ETR monitoring:  
Under **ETR**, check **Enable ETR**.
5. Assign the multicast to the ETR engine of the switch you want it to be coupled with:  
Under **ETR**, set **Selected ETR engine** to the number of the ETR engine. Only a single multicast can be assigned to ETR engines used for redundancy switching.
6. If the switch will use the Auto mode, set the ETR thresholds:  
Under **ETR**, select the ETR thresholds using the **ETR thresholds** drop-down. How to set up the ETR thresholds for redundancy switching is described in the next section (ETR thresholds for automatic switching).
7. The multicasts will be listed in the **Redundancy — Status** view's Redundancy switch list. If the name of the multicast is not in the list, make sure that the options mentioned in points 3–5 are set correctly. Redundancy switch list error texts are described in chapter 6.11.1.

## ETR thresholds for automatic switching

Switches that operate in Auto mode will switch automatically based on the ETR alarm state of the input streams. The ETR thresholds are used to configure which alarms that will be reported, and the limits (i.e. thresholds) for when they will be triggered. A detailed description of the ETR thresholds is given in section 6.9.11. When the IP-SWITCH-OPT is installed, the ETR thresholds will also have a redundancy checkbox for each alarm. The ETR thresholds edit popup with redundancy can be seen below.

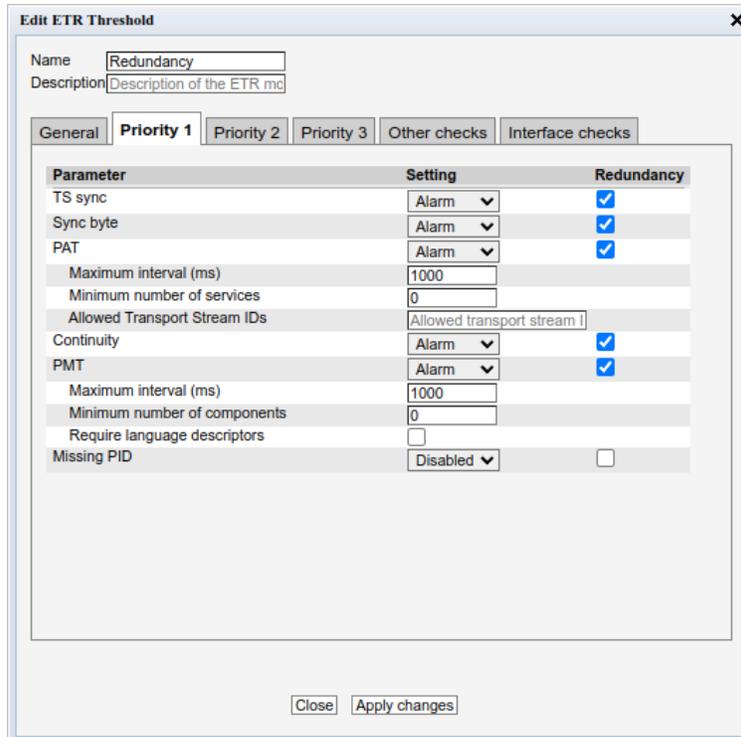

| Parameter                    | Setting                    | Redundancy                          |
|------------------------------|----------------------------|-------------------------------------|
| TS sync                      | Alarm ▼                    | <input checked="" type="checkbox"/> |
| Sync byte                    | Alarm ▼                    | <input checked="" type="checkbox"/> |
| PAT                          | Alarm ▼                    | <input checked="" type="checkbox"/> |
| Maximum interval (ms)        | 1000                       |                                     |
| Minimum number of services   | 0                          |                                     |
| Allowed Transport Stream IDs | Allowed transport stream I |                                     |
| Continuity                   | Alarm ▼                    | <input checked="" type="checkbox"/> |
| PMT                          | Alarm ▼                    | <input checked="" type="checkbox"/> |
| Maximum interval (ms)        | 1000                       |                                     |
| Minimum number of components | 0                          |                                     |
| Require language descriptors | <input type="checkbox"/>   |                                     |
| Missing PID                  | Disabled ▼                 | <input type="checkbox"/>            |

An automatic switch can be triggered by an alarm when the alarm is enabled and has the Redundancy checkbox checked in the ETR threshold. If an alarm should be reported, but not trigger a switch, it should then be enabled with the drop-down menu and not have the Redundancy checkbox checked.


Setting up ETR thresholds:

1. Go to the **ETR 290 — ETR thr.** view.
2. Create a new threshold or open an existing one for editing.  
This will open the pop-up seen above.
3. Enable the alarms that should be reported for the stream:  
Select **Alarm** in the **Setting** column of the alarms.
4. Allow automatic switching on alarms:  
Check the checkbox in the **Redundancy** column of the alarms.

5. To assign the ETR thresholds to multicasts, follow the steps describing how to couple multicasts to redundancy switches in the previous section.

## 6.12 Setup

### 6.12.1 Setup — Params

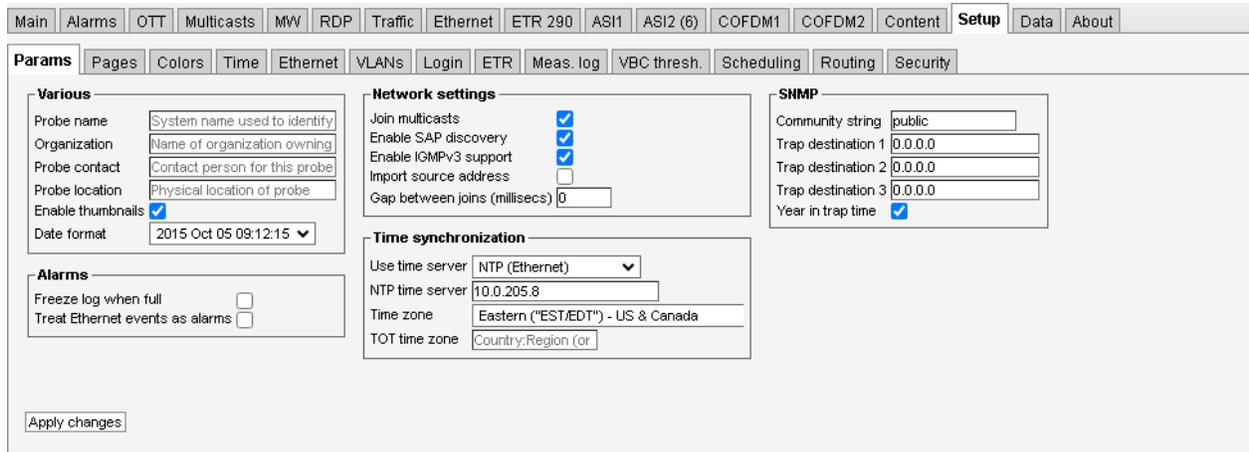

The **Setup — Params** view is used to configure basic parameters for the 10G Probe. This page is displayed by default when accessing the web interface, until the configuration has been saved by clicking the **Apply changes** button.

---

#### *Various*

---

**Probe name:** Each probe can be assigned a user defined name. It is part of the probe's MIB. The name is shown in the **Main — Summary** view, which is the probe default page, as well as in the browser's title line. The name is also used for identifying the system when activating the license on-line, see E Appendix: On-line License Activation for more details.

**Organization:** The name of the organization (usually the company name) that is running the probe. This name is only used for identifying the system when activating the license on-line.

**Probe contact:** The probe contact is part of the probe's MIB, and this parameter is relevant for SNMP use only. It is used to identify the contact person responsible for this probe.

**Probe location:** The probe location is part of the probe's MIB. It is used to identify the physical location of the probe. The probe location is also shown in the **Main — Summary** view and in the browser's title line. This name is also used for identifying the system when activating the license on-line.

---

---

|                           |  |
|---------------------------|--|
| <b>Enable thumbnails:</b> | Enable or disable thumbnail generation globally. When enabled, thumbnails are only decoded automatically if the <b>Extract thumbnails</b> option has been enabled in the associated OTT or multicast setup. If freeze-frame or color-freeze alarming has been enabled in the Content threshold template, the video frames are investigated regardless of this setting. For high bitrates (above 700 Mbit/sec) the probe may feel more responsive if thumbnail picture generation is switched off. This does not affect the accuracy of the measurements. |
|---------------------------|--|

---

|                     |  |
|---------------------|--|
| <b>Date format:</b> | The date format used in the user interface can be changed here. Dates exported through machine-readable interfaces are not affected by this setting. |
|---------------------|--|

---



---

### *Alarms*

---

|                              |  |
|------------------------------|--|
| <b>Freeze log when full:</b> | When enabled the alarm list will freeze when full (an event will show that it is full). When the list is full new alarms are ignored until <b>Clear alarms</b> is pressed.<br>This can sometimes be useful if a unit is placed unattended. |
|------------------------------|--|

---

|   |  |
|---|--|
| <b>Treat Ethernet events as alarms:</b> | When enabled each event is treated as an alarm that is active for ten seconds. This may be useful when reporting to external systems that do not support events but only active or cleared alarms. This setting affects the local alarm list and SNMP traps. |
|---|--|

---



---

### *Network settings*

---

|                         |   |
|-------------------------|---|
| <b>Join multicasts:</b> | If switched off probe will not send IGMP messages which is useful if connected to a trunk port and there is no need to join multicasts. |
|-------------------------|---|

---

|                              |   |
|------------------------------|---|
| <b>Enable SAP discovery:</b> | When enabled, the 10G Probe makes streams announced using the Session Announcement Protocol available through the <b>Multicasts — SAP</b> view. |
|------------------------------|---|

---

|                               |  |
|-------------------------------|--|
| <b>Enable IGMPv3 support:</b> | Required for probe to support the IGMP v3 protocol. Should always be enabled in networks that support IGMP v3. |
|-------------------------------|--|

---

|                               |   |
|-------------------------------|---|
| <b>Import source address:</b> | When enabled, the detected source address is added to the configuration when importing streams from <b>Traffic — Detect</b> or <b>Traffic — Multicast scan</b> . This instructs the probe to request the stream as a source specific multicast. |
|-------------------------------|---|

---

---

**Gap between joins (milliseconds):** When monitoring a lot of multicasts, sending join requests for all of them at the same time may overload the network infrastructure. This setting specifies the minimum time, in milliseconds, between join requests.

---



---

### *Time synchronization*

---

**Use time server:** Select between *Off* and *NTP* (Ethernet).  
When NTP is selected the probe will synchronize with an upstream NTP server as often as is needed to maintain accurate timekeeping on the probe. If Off is selected, or NTP is selected and no NTP server is configured, the probe will try to synchronize with the VBC server.

---

**NTP time server:** The IP address or host name of the time server.

---

**Time zone:** By setting the time zone the probe time can be offset from the reference NTP time. Time zone definitions come from the IANA Time Zone Database.

---

**TOT time zone:** The local time zone to be used when TOT is selected as clock reference source. This is a three letter country code that should match a country code present in the received TOT. Note that this parameter is case sensitive. If the TOT time zone field is left blank the first time zone specified in the TOT will be used, and this time zone will also be used if the probe is unable to find the specified country code in the TOT. For countries with more than one time zone the region ID is specified by adding a colon and the region ID to the country code (e.g. 'USA:2' for country USA and region ID 2).

---



---

### *SNMP*

---

**Community string:** The probe SNMP community string can be changed.

---

**Trap destination 1–3:** SNMP traps will be sent to the specified destinations.  
Set all three destinations to 0.0.0.0 to disable SNMP trap transmission.  
This will also disable storing of traps accessible through SNMP queries.

---

**Year in trap time:** If enabled, dates in SNMP traps include the year number.

---

## 6.12.2 Setup — Pages

Params **Pages** Colors Time Ethernet VLANs VBC Login ETR VBC thresh. Scheduling Routing Security

**Page names**

|        |                        |         |                        |         |                        |         |                        |
|--------|------------------------|---------|------------------------|---------|------------------------|---------|------------------------|
| Page 1 | P1                     | Page 6  | Info                   | Page 11 | Edit name to be associ | Page 16 | Edit name to be associ |
| Page 2 | P2                     | Page 7  | Edit name to be associ | Page 12 | Edit name to be associ | Page 17 | Edit name to be associ |
| Page 3 | Edit name to be associ | Page 8  | Edit name to be associ | Page 13 | Edit name to be associ | Page 18 | Edit name to be associ |
| Page 4 | Edit name to be associ | Page 9  | Edit name to be associ | Page 14 | Edit name to be associ | Page 19 | Edit name to be associ |
| Page 5 | Edit name to be associ | Page 10 | Edit name to be associ | Page 15 | Edit name to be associ | Page 20 | Edit name to be associ |

Apply changes

The **Setup — Pages** view allows names to be associated with different pages. Individual multicasts can be assigned to different pages in the **Multicasts — Streams** view, to facilitate easier navigation in the different **Multicasts** views.

The page names for OTT channels are configured using the **OTT — Settings** view.

## 6.12.3 Setup — Colors

Params Pages **Colors** Time Ethernet VLANs VBC Login ETR VBC thresh. Scheduling Routing Security

**Color list**

| Name       | Value  | Col | Description | Edit                 |
|------------|--------|-----|-------------|----------------------|
| Green      | 00FF00 |     |             | <a href="#">Edit</a> |
| NewPreset1 | 408080 |     |             | <a href="#">Edit</a> |

Color:2

Add new color Delete selected

**Edit Color** [X]

**Edit**

Name

Description

Color

Close Apply changes

The **Setup — Colors** view allows the user to define colors that should be recognized if a color-freeze condition should occur. A mono-colored freeze frame condition may in some cases indicate what equipment is failing, resulting in the color-freeze.

A freeze color is defined by clicking the **Add new color** button and assigning an RGB value to a name. A maximum of four colors may be defined. An existing color may be modified by clicking the associated **Edit** link.

*Edit color*

|                     |  |
|---------------------|--|
| <b>Name:</b>        | The color name. This name will be part of a color alarm description and the associated SNMP trap.  |
| <b>Description:</b> | A description of the color or an error indication.   |
| <b>Color:</b>       | The RGB color on the format #XX(Red)XX(Green)XX(Blue) where XX represents a hexadecimal figure spanning 0-255 in decimal notation. If supported by the browser, clicking the color should pop up a color selection dialog. |

### 6.12.4 Setup — Time

The time of the probe is used to timestamp events in the **alarm list**. The local time is always presented just below the **alarm list**.

The probe time should not be set manually if the probe is synchronizing against a time server (refer to the **Setup — Params** view).

If supported by the browser, you should be able to set the time and date using a calendar and time control by clicking the input box.

### 6.12.5 Setup — Ethernet

The **Setup — Ethernet** view defines the Ethernet setup parameters for the management interface (eth1) and the data/video interface (SFP+B/eth0). If the license for the second data interface is enabled, it will show up as SFP+A/eth2. The link statuses for the interfaces are updated live to reflect the current settings. Rebooting the probe from this page is achieved by clicking the **Reboot** button after changes have been confirmed by clicking the **Apply** button. Click the **IPv6 Settings** button to access the IPv6 view.

Connecting a data/video port is mandatory. The probe will only be able to join multicasts on the data ports. For management, the probe supports both in-band management (i.e. using eth0 for both data/video and management) and separate management (i.e. using eth1 for management). In any case make sure that the subnets configured for the network interfaces do not overlap – otherwise the probe will not work properly. If the IP addresses for network interfaces are configured so that the subnets overlap, the settings will be automatically reverted by the probe.

Dual stack functionality enables the probe to support both IPv4 and IPv6 for management.

A valid DNS configuration is required for parts of the probe functionality. Configure a valid DNS under the **Global settings** heading, or use a publicly available DNS such as Google Public DNS (8.8.8.8 or 8.8.4.4) or OpenDNS (208.67.222.22 or 208.67.220.220).

---

***IP settings – data/video SFP+ B (eth0)***

---

|                           |  |
|---------------------------|--|
| <b>Enable DHCP:</b>       | If enabled, IP address (eth0), netmask (eth0) and gateway are updated by a remote DHCP server next time the probe boots. |
| <b>IPv4 address:</b>      | IPv4 IP address of management interface  |
| <b>IPv4 netmask:</b>      | IPv4 netmask of management interface   |
| <b>Enable management:</b> | If enabled a web server will be started on eth0 next time the probe boots.   |

---



---

***IP settings – data/video SFP+ A (eth2)***

---

|                           |  |
|---------------------------|--|
| <b>Enable DHCP:</b>       | If enabled, IP address (eth2), netmask (eth2) and gateway are updated by a remote DHCP server next time the probe boots. |
| <b>IPv4 address:</b>      | IPv4 IP address of management interface  |
| <b>IPv4 netmask:</b>      | IPv4 netmask of management interface   |
| <b>Enable management:</b> | If enabled a web server will be started on eth2 next time the probe boots.   |

---



---

***IP settings – management (eth1)***

---


|                           |  |
|---------------------------|--|
| <b>Enable DHCP:</b>       | If enabled, IP address (eth1), netmask (eth1) and gateway are updated by a remote DHCP server next time the probe boots. |
| <b>IPv4 address:</b>      | IPv4 address of the data/video interface   |
| <b>IPv4 netmask:</b>      | IPv4 netmask of data/video interface   |
| <b>Enable management:</b> | If enabled a web server will be started on eth2 next time the probe boots.   |

---

## *Global settings*

- 
- Default interface:** The default interface determines which interface is used for out-going probe traffic, unless specified otherwise in the **Setup — Routing** view.
- 
- Host name:** The host name is displayed when logging in to the probe over the USB serial port and is also visible in LLDP broadcasts.
- 
- DNS Server:** If DHCP is not enabled, this field can be used to define the IP address of the DNS server. If DHCP is enabled, this field is disabled, and the gateway provided by the DHCP server is used.
- 

### 6.12.5.1 Setup — Ethernet — IPv6 Settings

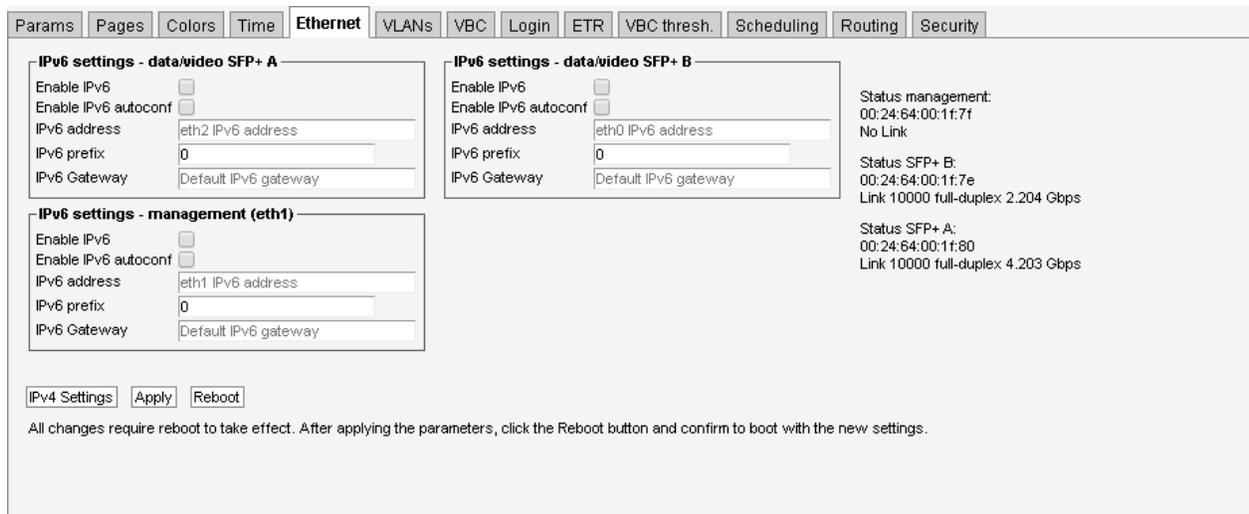

#### *IPv6 settings – data/video SFP+ B (eth0)*

- 
- Enable IPv6:** If IPv6 is enabled, the probe will use IPv6 for management on eth0.
- 
- Enable IPv6autoconf:** If IPv6 auto-configuration is enabled, the probe will receive IPv6 address, IPv6 prefix and gateway address from a network router when booting.
- 
- IPv6 address:** If IPv6 auto-configuration is not enabled, this field is used to define the IPv6 address of the probe.
- 
- IPv6 prefix:** If IPv6 auto-configuration is not enabled, this field is used to define the IPv6 prefix of the probe (corresponding to netmask for IPv4).
- 
- IPv6 Gateway:** Required to allow clients with an address outside the probe subnets to access the probe (HTTP, FTP, SSH, TELNET, SNMP). It is also required for the probe to access an NTP server or DNS server with IPv6 address outside the probe's subnets. If IPv6 auto-configuration is enabled, this field is disabled.
-

Note that auto-configuration should only be enabled for one of the Ethernet ports to avoid possible conflicts.

---

*IPv6 settings – data/video SFP+ A (eth2)*

---

|                             |   |
|-----------------------------|---|
| <b>Enable IPv6:</b>         | If IPv6 is enabled, the probe will use IPv6 for management on eth2.   |
| <b>Enable IPv6autoconf:</b> | If IPv6 auto-configuration is enabled, the probe will receive IPv6 address, IPv6 prefix and gateway address from a network router when booting.   |
| <b>IPv6 address:</b>        | If IPv6 auto-configuration is not enabled, this field is used to define the IPv6 address of the probe.  |
| <b>IPv6 prefix:</b>         | If IPv6 auto-configuration is not enabled, this field is used to define the IPv6 prefix of the probe (corresponding to netmask for IPv4).   |
| <b>IPv6 Gateway:</b>        | Required to allow clients with an address outside the probe subnets to access the probe (HTTP, FTP, SSH, TELNET, SNMP). It is also required for the probe to access an NTP server or DNS server with IPv6 address outside the probe's subnets. If IPv6 auto-configuration is enabled, this field is disabled. |

---



---

*IPv6 settings – management (eth1)*

---

|                             |   |
|-----------------------------|---|
| <b>Enable IPv6:</b>         | If IPv6 is enabled, the probe will use the management port for IPv6 management  |
| <b>Enable IPv6autoconf:</b> | If IPv6 auto-configuration is enabled, the probe will receive IPv6 address, IPv6 prefix and gateway address from a network router when booting.   |
| <b>IPv6 address:</b>        | If IPv6 auto-configuration is not enabled, this field is used to define the IPv6 address of the probe.  |
| <b>IPv6 prefix:</b>         | If IPv6 auto-configuration is not enabled, this field is used to define the IPv6 prefix of the probe (corresponding to netmask for IPv4).   |
| <b>IPv6 Gateway:</b>        | Required to allow clients with an address outside the probe subnets to access the probe (HTTP, FTP, SSH, TELNET, SNMP). It is also required for the probe to access an NTP server or DNS server with IPv6 address outside the probe's subnets. If IPv6 auto-configuration is enabled, this field is disabled. |

---

### 6.12.5.2 Example 1 – Separate Management IPv4

This model is useful if the management traffic is to be separated from the data/video traffic by utilizing two completely disjointed networks. In this example the management subnet is defined as 192.168.0.0/16 and the data/video subnet is 10.0.30.0/24.

| Parameter                | Management (eth1) | Data/video (eth0) | Explanation   |
|--------------------------|-------------------|-------------------|---|
| <b>Enable DHCP</b>       | Optional          | Optional          | Use DHCP to configure the eth1 and/or eth0 interface automatically                                  |
| <b>IP address</b>        | 192.168.7.5       | 10.0.30.5         | The IP addresses of each interface  |
| <b>Netmask</b>           | 255.255.0.0       | 255.255.255.0     | The netmasks – 16 and 24 bits   |
| <b>Enable management</b> | Yes               | No                | Only run web server on the management interface   |
| <b>Gateway</b>           | 192.168.0.1       | –                 | The default gateway is required for the probe to connect to devices that are not on the same subnet |

### 6.12.5.3 Example 2 – In-Line Management IPv4

This model is useful if there is no separate management network and both data/video and management traffic are to use the same network. In this configuration the probe's management network may not even be connected. Even if the probe's management port is not to be used it must be configured carefully so that it does not interfere with the data/video interface.

In this example there is only one network defined as 10.0.30.0/24.

| Parameter                | Management (eth1) | Data/video (eth0) | Explanation   |
|--------------------------|-------------------|-------------------|---|
| <b>Enable DHCP</b>       | Off               | Optional          | We cannot use DHCP for eth1 since the device is not used  |
| <b>IP address</b>        | 0.0.0.0           | 10.0.30.5         | The IP addresses of each interface – configure eth1 to a non-existing address                       |
| <b>Netmask</b>           | 255.255.255.255   | 255.255.255.0     | The netmasks – the subnet for eth1 contains only one address  |
| <b>Enable management</b> | No                | Yes               | Only run web server on the data/video interface   |
| <b>Gateway</b>           | —                 | 10.0.30.1         | The default gateway is required for the probe to connect to devices that are not on the same subnet |

### 6.12.5.4 Example 3 – Mixed Mode IPv4

This model is similar to the separate management model with the difference that a web server is also run on the data/video management.


Since there is only one default gateway, in this case pointing to the management network, clients accessing the probe via the data/video interface need to be on the same subnet as the probe's data/video interface.

| Parameter                | Management (eth1) | Data/video (eth0) | Explanation                       |
|--------------------------|-------------------|-------------------|-----------------------------------|
| <b>Enable management</b> | Yes               | Yes               | Run web server on both interfaces |

The other settings are the same as in example 1

The principles shown in the previous examples also apply for IPv6 management. IPv4 and IPv6 can be used simultaneously. In theory the probe's web server can be accessed using four different IP addresses, provided that the network architecture allows it.

## 6.12.6 Setup — VLANs

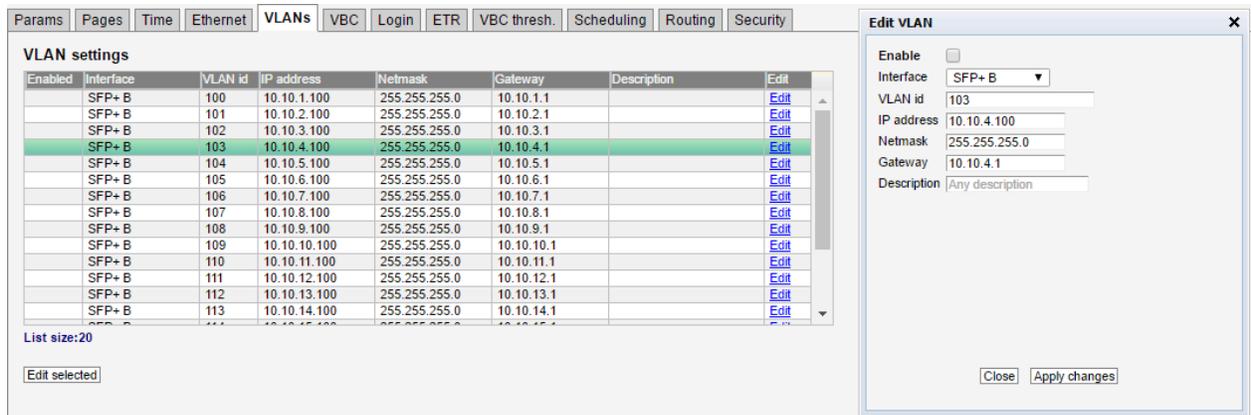

The screenshot shows the 'VLANs' configuration page. On the left, a table lists VLAN settings for various SFP+ B interfaces. The table has columns for Enabled, Interface, VLAN id, IP address, Netmask, Gateway, and Description. The row for VLAN 103 is highlighted in green. On the right, the 'Edit VLAN' dialog box is open, showing configuration options for the selected VLAN (103). The dialog includes fields for Interface (SFP+ B), VLAN id (103), IP address (10.10.4.100), Netmask (255.255.255.0), Gateway (10.10.4.1), and Description (Any description). There are 'Close' and 'Apply changes' buttons at the bottom of the dialog.

The VB330 probe supports a large number of VLAN interfaces. The VLAN interfaces can be associated with any of the physical interfaces. Once enabled, these VLAN interfaces can be used for routing and joining of multicasts.

The VLAN interface can be used to monitor OTT traffic – also if it is associated with the management interface. Multicasts can be joined from any of the VLANs, as long as the VLAN belongs to one of the two physical SFP+ interfaces. The VLAN interfaces are not available for serving the web interfaces.

### *Edit VLANs*

**Enable:** Once enabled the virtual interfaces are created and available.

**Interface:** The physical interface to associate the VLAN with.

**VLAN id:** The VLAN id (1-4095)

**IP address:** The IP address of the interface.

---

**Netmask:** The Netmask of the interface.

---

**Gateway:** The Gateway of the interface.


---

**Description:** A user given description of the interface.

---


Note that editing VLANs should not require a reboot to take effect.

## 6.12.7 Setup — Login

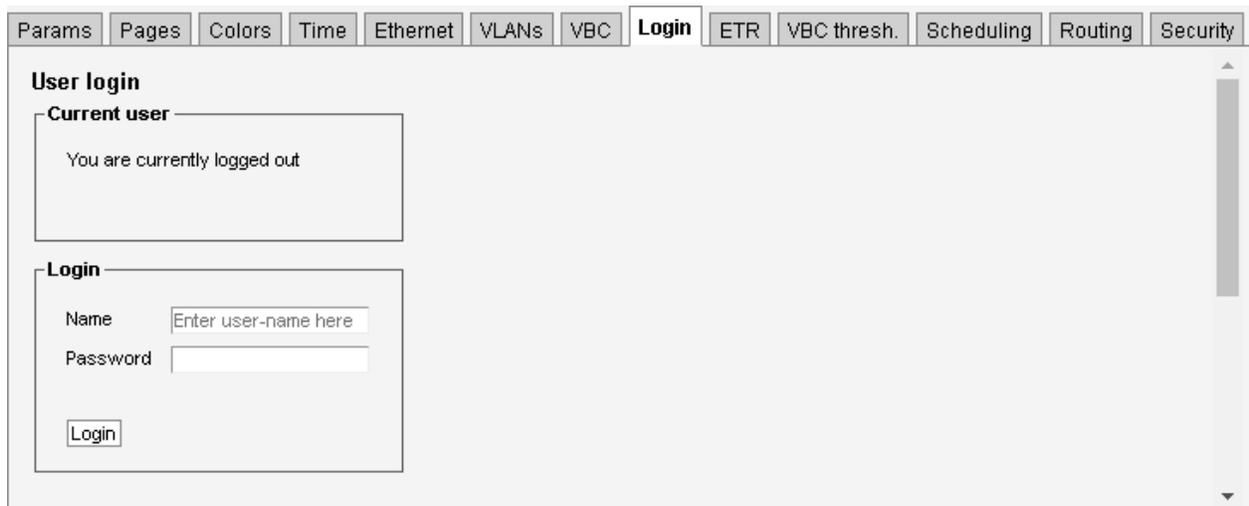

The screenshot shows the 'Login' configuration page. At the top, there is a navigation bar with tabs for Params, Pages, Colors, Time, Ethernet, VLANs, VBC, Login (selected), ETR, VBC thresh., Scheduling, Routing, and Security. The main content area is titled 'User login' and contains two sections: 'Current user' and 'Login'. The 'Current user' section shows 'You are currently logged out'. The 'Login' section has a 'Name' field with the placeholder 'Enter user-name here', a 'Password' field, and a 'Login' button.

By default, there is no access control and all users have access to all features. When access control is activated, anyone with access to the VB330 will first be presented with the login view, requiring the user to log in before being able to access the user interface.

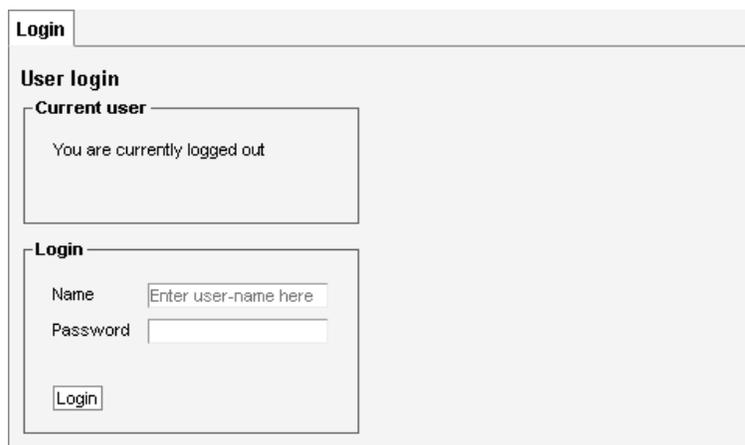

This is another view of the 'Login' configuration page, showing the same 'User login' section with 'Current user' and 'Login' sub-sections. The 'Current user' section displays 'You are currently logged out'. The 'Login' section includes a 'Name' field with the placeholder 'Enter user-name here', a 'Password' field, and a 'Login' button.

Only the **admin** user can change the access control settings. If access control is disabled, you need to log in using this view before accessing any of the settings in **Setup — Security**.

To restrict access, the **Setup — Security — Authentication** view can be used to set up log-in that restricts all access to the user interface.


Use the firewall settings in the **Setup — Security — Access control** view to allow certain addresses.



Log-in is performed by providing the correct username and password. The default user name and password to is **admin** and **elvis**. The operator may define a new password that should be easy to remember. The password for the “admin” user is configured in the **Setup — Security — Password** view.

Note that when logged in from the VBC, the VBC user’s access rights apply.

## 6.12.8 Setup — ETR

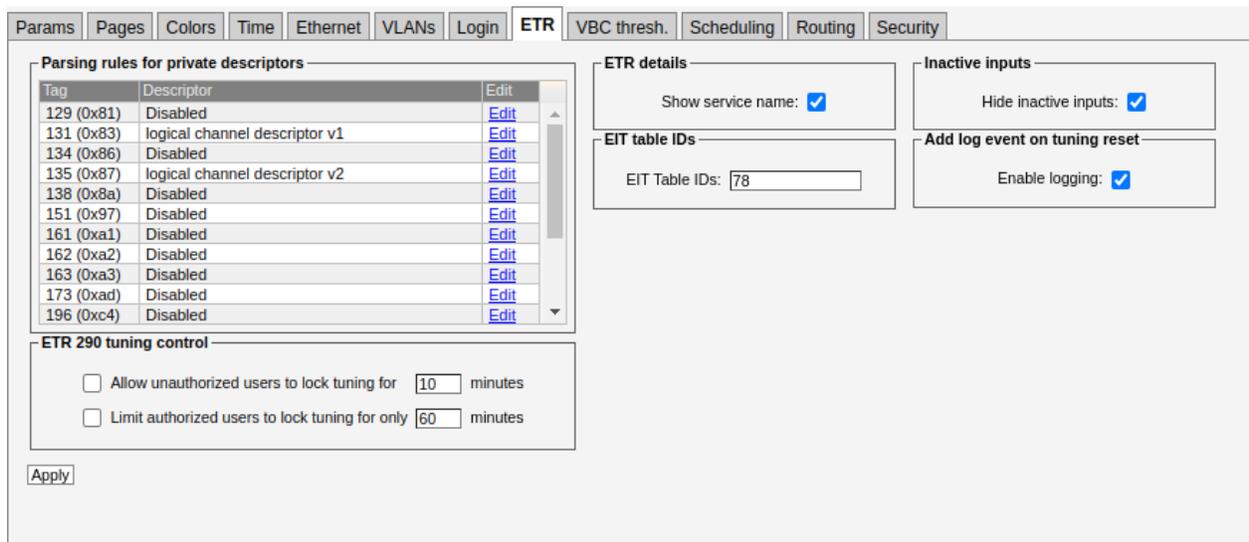

The **Setup — ETR** view allows the user to select miscellaneous ETR handling modes.

### Parsing rules for private descriptors

Probe recognition of a number of selected private descriptors may be defined by the user:

---


**129 (0x81):** ‘Disabled’ or ‘AC-3 audio stream descriptor’

---

**131 (0x83):** ‘Disabled’, ‘Extended video descriptor’ or ‘logical channel descriptor v1’

---

|             |  |
|-------------|--|
| 134 (0x86): | 'Disabled' or 'caption service descriptor'                                   |
| 135 (0x87): | 'Disabled', 'logical channel descriptor v2' or 'content advisory descriptor' |
| 138 (0x8a): | 'Disabled' or 'cue identifier descriptor'                                    |
| 151 (0x97): | 'Disabled' or 'SCTE_adaptation_field_data_descriptor'                        |
| 161 (0xa1): | 'Disabled', 'service location descriptor' or 'etv_bif_platform_descriptor'   |
| 162 (0xa2): | 'Disabled' or 'etv_integrated_signaling_descriptor'                          |
| 163 (0xa3): | 'Disabled' or 'Component name descriptor'                                    |
| 173 (0xad): | 'Disabled' or 'ATSC private information descriptor'                          |
| 196 (0xc4): | 'Disabled' or 'Anc data descriptor'  |
| 201 (0xc9): | 'Disabled' or 'download_content_descriptor'                                  |
| 206 (0xce): | 'Disabled' or 'extended_broadcaster_descriptor'                              |
| 215 (0xd7): | 'Disabled' or 'SI_parameter_descriptor'                                      |
| 231 (0xe7): | 'Disabled' or 'private cable delivery system descriptor'                     |
| 233 (0xe9): | 'Disabled' or 'EBP descriptor'   |
| 239 (0xef): | 'Disabled' or 'evertz_descriptor'  |

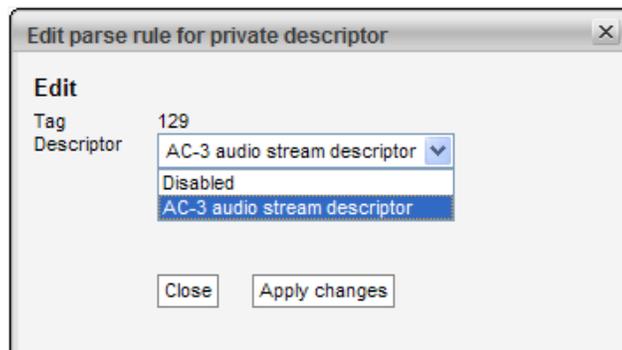

The default value for private descriptors is 'Disabled'. To change this value, select a new descriptor interpretation from the drop-down menu and click the **Apply changes** button.

### ETR 290 tuning control

By default authorized users will be allowed to lock the ETR 290 analysis to one stream for an infinite length of time and unauthorized users will not be allowed to lock the analysis. The **Setup — ETR** view makes it possible to time limit the locking for authorized users and unauthorized users can be granted permission to lock to a stream for a selectable time period.



If the locking mechanism works in a time limited mode a clock icon (see image above) is superimposed on the regular lock icon in the different **ETR 290** sub-views. When the specified lock time is out the round-robin cycling will resume. When ETR tuning control parameters have been changed, click the **Apply** button for changes to take effect.

### ETR details

The user selects if service names should be displayed in the **ETR 290 — ETR Details** view. Note that a large screen size is required for proper service name displaying.

### EIT table IDs

The user defines which DVB EIT table IDs should be analyzed by the probe. By default only table ID 78 (EIT p/f actual) is analyzed.

It is possible to extend EIT analysis to include EIT schedule, however this is not recommended except for ad-hoc troubleshooting, as analysis of EIT schedule can be extremely demanding on probe processing resources. If full-time monitoring of all EIT information is required, dedicated probes should be used for this task.

Table IDs are specified as a comma separated list, or alternatively an ID range can be defined, e.g. 78, 80–95.

| <i>EIT table IDs:</i> |                        |
|-----------------------|------------------------|
| <b>78</b>             | P/F for Actual TS      |
| <b>79</b>             | P/F for Other TS       |
| <b>80–95</b>          | Schedule for Actual TS |
| <b>96–111</b>         | Schedule for Other TS  |

### Inactive inputs

It is possible to hide disabled inputs from the **ETR 290** views. This is convenient when one ore more inputs are never used, and therefore have been disabled. Check the **Hide inactive inputs** checkbox to hide disabled inputs.

### Add log event on tuning reset


When the **Enable logging** checkbox is enabled, the probe will log events that cause monitoring of a ETR monitored stream to be reset, or when ETR measurements are cleared:

- Tuning reset from the GUI
- Min/max measurements for a stream reset from the GUI

- Min/max measurements for a specific measurement for a stream reset from the GUI
- Tuning reset from the Eii interface
- Min/max measurements for a stream reset from the Eii interface
- Min/max measurements for a specific measurement for a stream reset from the Eii interface
- Monitoring of a stream was restarted due to a configuration change (templates changed etc.)
- Monitoring of the stream was started due to round robin tuning between frequencies or multicasts

The events logged are shown in the **Alarms — Event log** view.

### 6.12.9 Setup — VBC thresh.

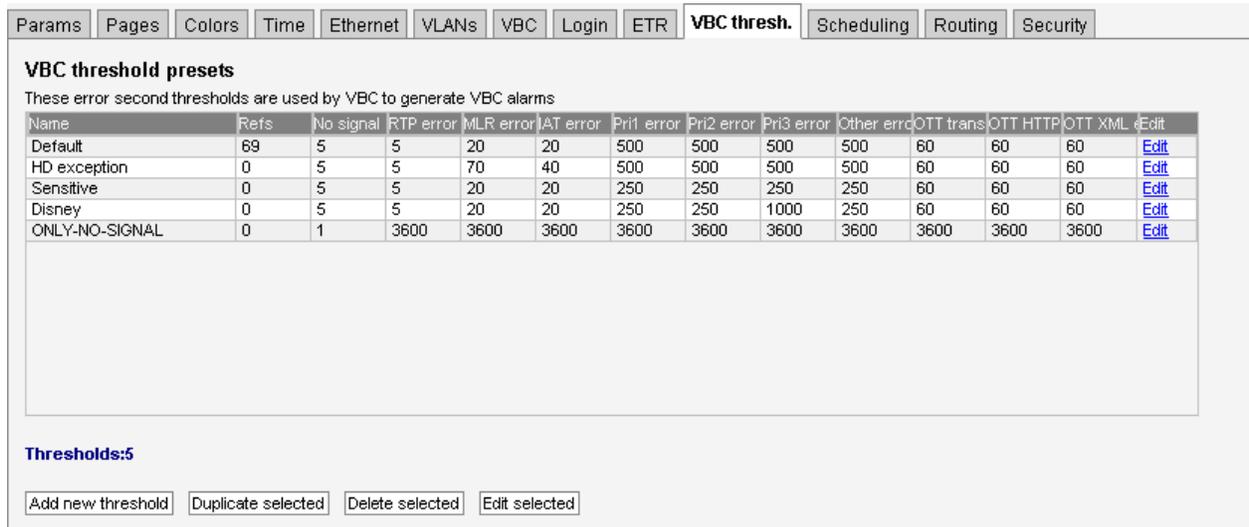

**VBC threshold presets**  
These error second thresholds are used by VBC to generate VBC alarms

| Name           | Refs | No signal | RTP error | MLR error | AT error | Pri1 error | Pri2 error | Pri3 error | Other error | OTT trans | OTT HTTP | OTT XML | Edit                 |
|----------------|------|-----------|-----------|-----------|----------|------------|------------|------------|-------------|-----------|----------|---------|----------------------|
| Default        | 69   | 5         | 5         | 20        | 20       | 500        | 500        | 500        | 500         | 60        | 60       | 60      | <a href="#">Edit</a> |
| HD exception   | 0    | 5         | 5         | 70        | 40       | 500        | 500        | 500        | 500         | 60        | 60       | 60      | <a href="#">Edit</a> |
| Sensitive      | 0    | 5         | 5         | 20        | 20       | 250        | 250        | 250        | 250         | 60        | 60       | 60      | <a href="#">Edit</a> |
| Disney         | 0    | 5         | 5         | 20        | 20       | 250        | 250        | 1000       | 250         | 60        | 60       | 60      | <a href="#">Edit</a> |
| ONLY-NO-SIGNAL | 0    | 1         | 3600      | 3600      | 3600     | 3600       | 3600       | 3600       | 3600        | 3600      | 3600     | 3600    | <a href="#">Edit</a> |

**Thresholds:5**

The VBC error second thresholds are used by the VideoBRIDGE Controller to issue VBC specific alarms. The VBC will raise an alarm when the number of error seconds exceeds the error seconds threshold. The VBC thresholds are only relevant when a VideoBRIDGE Controller is part of the monitoring system.

The reason for using error second thresholds is to avoid alarms that toggle on and off, which for a large monitoring system might otherwise lead to an unintelligible user interface. The VBC thresholds will allow masking of minor error incidences thus resulting in a control system GUI that presents persistent alarms only.

The VBC error second thresholds are specified as the number of seconds affected by an error situation. These thresholds refer to a monitoring window of one hour, meaning that if the number of error seconds summed over any one-hour period exceeds the associated error second threshold an alarm will be raised by the VBC.

If a monitoring window different from one hour is selected by the VBC user, the threshold values will be automatically recalculated to proportional values.

In the 'VBC threshold presets' table the 'Refs' column shows how many streams are associated with each VBC threshold template.

By clicking the **Add new threshold** button the user will enter a VBC thresholds edit view enabling definition of a new threshold template. It is possible to copy or delete an existing threshold template by clicking the **Duplicate selected** or **Delete selected** button respectively. To edit a highlighted threshold template, the **Edit selected** button should be clicked.

Multi-edit functionality allows editing several VBC thresholds simultaneously. Highlight the list entries that should be edited and click the **Edit selected** button.

**Edit VBC threshold** ✕

Name

| Parameter                  | Threshold                        | Corresponding VBC alarm |
|----------------------------|----------------------------------|-------------------------|
| <i>Ethernet:</i>           |                                  |                         |
| No signal                  | <input type="text" value="5"/>   | No signal               |
| RTP drops                  | <input type="text" value="5"/>   | RTP drops               |
| MLR error                  | <input type="text" value="20"/>  | MLR error               |
| IAT error                  | <input type="text" value="20"/>  | IAT error               |
| Max bitrate error          | <input type="text" value="20"/>  | Bitrate overflow        |
| Min bitrate error          | <input type="text" value="20"/>  | Bitrate underflow       |
| <i>ETR:</i>                |                                  |                         |
| ETR pri one errors         | <input type="text" value="250"/> | ETR pri one error       |
| ETR pri two errors         | <input type="text" value="250"/> | ETR pri two error       |
| ETR pri three errors       | <input type="text" value="250"/> | ETR pri three error     |
| ETR pri other errors       | <input type="text" value="250"/> | ETR pri other error     |
| ETR interface errors       | <input type="text" value="250"/> | ETR interface error     |
| <i>OTT:</i>                |                                  |                         |
| OTT transport error        | <input type="text" value="60"/>  | OTT transport errors    |
| OTT HTTP error             | <input type="text" value="60"/>  | OTT HTTP errors         |
| OTT XML error              | <input type="text" value="60"/>  | OTT XML errors          |
| <i>QoE &amp; captions:</i> |                                  |                         |
| QoE video                  | <input type="text" value="60"/>  | QoE video               |
| QoE audio                  | <input type="text" value="60"/>  | QoE audio               |
| Captions availability      | <input type="text" value="60"/>  | Captions availability   |
| Captions quality           | <input type="text" value="60"/>  | Captions quality        |

The thresholds are used by VBC and specify how many error-seconds are required during an alarm window of 60 minutes to raise the corresponding alarm.

VBC will automatically adjust these error second numbers according to the alarm window specified on the VBC. There is one error-window per alarm.

So 30 error-seconds specified here will be scaled to 10 seconds for error windows of 20 minutes etc.

---

### VBC thresholds

---

**Name:** The name of the VBC threshold template

**No signal:** Number of seconds with 'No signal'

**RTP error:** Number of seconds with RTP packet drops. This measurement will be zero unless the stream is encapsulated in RTP headers

---

|                               |  |
|-------------------------------|--|
| <b>MLR error:</b>             | Number of seconds with packet drops in the TS layer (seconds when media loss rate is non-zero). This is equal to the number of error seconds with CC errors. |
| <b>IAT error:</b>             | Number of seconds when the inter-packet arrival time exceeds the threshold   |
| <b>Max bitrate error:</b>     | Number of seconds the bitrate can exceed the error-threshold before a VBC alarm is generated   |
| <b>Min bitrate error:</b>     | Number of seconds the bitrate can fall below the error-threshold before a VBC alarm is generated   |
| <b>ETR Pri 1 errors:</b>      | Number of seconds with ETSI TR 101 290 Priority 1 alarms before a VBC alarm is generated   |
| <b>ETR Pri 2 errors:</b>      | Number of seconds with ETSI TR 101 290 Priority 2 alarms before a VBC alarm is generated   |
| <b>ETR Pri 3 errors:</b>      | Number of seconds with ETSI TR 101 290 Priority 3 alarms before a VBC alarm is generated   |
| <b>ETR other errors:</b>      | Number of seconds with ETR ‘other’ alarms before a VBC alarm is generated  |
| <b>ETR interface errors:</b>  | ETR error seconds are not relevant for the VB330 10G Probe   |
| <b>OTT transport errors:</b>  | Number of seconds with OTT transport related alarms  |
| <b>OTT HTTP errors:</b>       | Number of seconds with OTT HTTP related alarms   |
| <b>OTT XML errors:</b>        | Number of seconds with OTT XML related alarms  |
| <b>QoE video:</b>             | Number of seconds with QoE video-related alarms, such as freeze-frame and MOS below average  |
| <b>QoE audio:</b>             | Number of seconds with QoE audio-related alarms, such as audio silence or out of phase   |
| <b>SCTE 35:</b>               | Number of seconds with SCTE 35-related alarms, such as event gap or number of placement opportunities  |
| <b>EBP / IDR:</b>             | Number of seconds with EBP/IDR-related alarms, such as EBP PTS gap outside of threshold or EBP and IDR PTS unaligned   |
| <b>Captions availability:</b> | Number of seconds with captions availability alarms  |
| <b>Captions quality:</b>      | Number of seconds with captions quality alarms   |

## 6.12.10 Setup — Scheduling

Params
Pages
Colors
Login
ETR
VBC thresh.
**Scheduling**
Routing
Security

**Schedule list**

These schedules can be used to define when alarms are to be ignored, or when streams should be recorded

| Name        | Refs | All days  | Mon | Tue | Wed       | Thu | Fri | Sat | Sun | Edit                 |
|-------------|------|-----------|-----|-----|-----------|-----|-----|-----|-----|----------------------|
| Never       | 18   |           |     |     |           |     |     |     |     | <a href="#">Edit</a> |
| Always      | 0    | 0000-2400 |     |     |           |     |     |     |     | <a href="#">Edit</a> |
| Maintenance | 0    |           |     |     | 0500-0600 |     |     |     |     | <a href="#">Edit</a> |

**Schedules: 3**

Add new schedule
Duplicate selected
Delete selected
Edit selected

The **Setup — Scheduling** view enables definition of schedules. These schedules can be used to mask alarms during selected time intervals, e.g. due to maintenance. To mask ETR 290 alarms, schedules can be assigned to a PID threshold or service threshold. To mask content alarms, schedules can be assigned to a multicast or OTT channel, or to a specific service using a content service threshold.

In the Schedule list table the ‘Refs’ column shows how many references exist for each scheduling template. References to scheduling templates may be found in the places mentioned above.

The search field in the upper right corner of the view allows the user to type a text string and the schedule list is updated to display only scheduling templates matching the specified text.

The predefined scheduling templates **Never** and **Always** result in alarms being masked never or always, respectively. A new scheduling template is created by clicking the **Add new schedule** button. It is also possible to copy an existing scheduling template by highlighting a schedule template and clicking the **Duplicate selected** button. The alarm masking intervals are defined for individual week days or for all week days. Intervals are specified on the form hhmm–hhmm, for instance the interval 1200–1400 means that the schedule starts at noon and finish at 2 pm. Several alarm masking intervals may be specified for each day using comma separation. To edit an existing scheduling template, highlight it and click the **Edit selected** button. To delete a template, highlight it and click the **Delete selected** button.

When a scheduling template has been modified, click the **Apply changes** button. Defined scheduling templates become available as selections in the **Multicasts — Streams — Edit — Content, OTT — Channels — Edit, ETR 290 — PID thresh. — Edit, ETR 290 — Service thresh. — Edit** and **Content — Service thresh. — Edit** views.

**Edit schedule** x

| Name         | Schedule  | Timing                       |
|--------------|-----------|------------------------------|
| Midnight Wed | All days  | Common schedule for all days |
|              | Monday    | Schedule for Mondays         |
|              | Tuesday   | 2330-2400                    |
|              | Wednesday | 0000-0030                    |
|              | Thursday  | Schedule for Thursday        |
|              | Friday    | Schedule for Friday          |
|              | Saturday  | Schedule for Saturday        |
|              | Sunday    | Schedule for Sunday          |

Schedules are used to define when alarms are to be filtered (i.e. ignored) and to define when streams are to be recorded.  
 Times are specified as hhmm-hhmm in 24-hour format and can be comma separated. Example: "0000-0258,2350-2400" (from midnight to two minutes before three o'clock, and ten minutes before midnight to midnight).

## 6.12.11 Setup — Routing

Params Pages Colors Time Ethernet VLANs Login ETR VBC thresh. Scheduling **Routing** Security

**- Routing setup**

Default:

IP monitoring (default):

OTT monitoring (default):

NTP date:

SNMP:

VBC auto-detect:

For each of the listed services traffic will be forced on the selected interface.

**The probe must be rebooted for any changes to take effect.**

**Auto-detect**

Enable VBC auto-detect of this device:

VBC server (DNS-name or IP-address):

Resolved IP-address of the VBC server: 10.0.30.39

The **Setup — Routing** view allows configuring the default interface for out-going probe traffic, and VBC detection. System networking configuration is configured using the **Setup — Ethernet** view.

**Note:** When monitoring both multicast (UDP) and OTT (TCP) traffic, we recommend using different network interfaces. Mixing the two traffic types on the same network can have unwanted impact on the monitored signals.

The VideoBRIDGE Controller can automatically detect the 10G Probe and add it to the VBC equipment list, provided that the auto-detect functionality is enabled and the VBC server address is known to the VB330. Note that the network must be transparent to traffic between the VBC server and 10G Probes for auto-detection to work.

When changes have been made in the **Setup — Routing** view, click the **Apply** button for changes to take effect.

---

*Routing setup*

---

|                        |  |
|------------------------|--|
| <b>Default</b>         | This setting determines the default interface, and is configured through the <b>Setup — Ethernet</b> view.   |
| <b>IP monitoring</b>   | Defines the interface to use for the multicasts specified in the <b>Multicasts — Streams</b> view. The available interfaces depend on the probe license. |
| <b>OTT</b>             | Interface to use for OTT channels specified in the <b>OTT — Channels</b> view.   |
| <b>NTP date</b>        | Interface to use to connect to the NTP server defined in the <b>Setup — Params</b> view.   |
| <b>SNMP</b>            | Interface to use for SNMP traps.   |
| <b>VBC auto-detect</b> | Interface to use for VBC auto-detect, as specified in the <b>Auto-detect</b> column.   |

Note that routing for Full Service Monitoring (FSM) is selected in the **Ethernet — FSM — Setup — Edit** view.

---

*Auto-detect*

---

|  |   |
|--|---|
| <b>Enable VBC auto-detect of this device</b> | Check this box to enable auto-detect  |
| <b>VBC server</b>                            | Enter the host name name or IP address of the VBC   |
| <b>Resolved IP address</b>                   | The IP address associated with the DNS name will be displayed here. If host name lookup fails, it is necessary to type the VBC server's IP address instead. Host name lookup is only performed if auto-detect is enabled. |


### 6.12.12 Setup — Security

The **Setup — Security** view is a restricted section where only the administrator should have access, making it possible to disable selected communication protocols to increase safety against unauthorized access to the 10G Probe. It is also possible to have the probe disregard IP packets with source address outside the Ethernet interface's subnet.

To access this view, you have to be logged in. If probe access control has been disabled, you will need to visit **Setup — Login** first. The default user name and password to enter this view is **admin** and **elvis**. The password is changed in the **Setup — Security — Password** sub-view.

To change the parameters in this view, you need to access the VB330 user interface directly, they are not available when logged in through the VBC.

## 6.12.12.1 Setup — Security — Ports

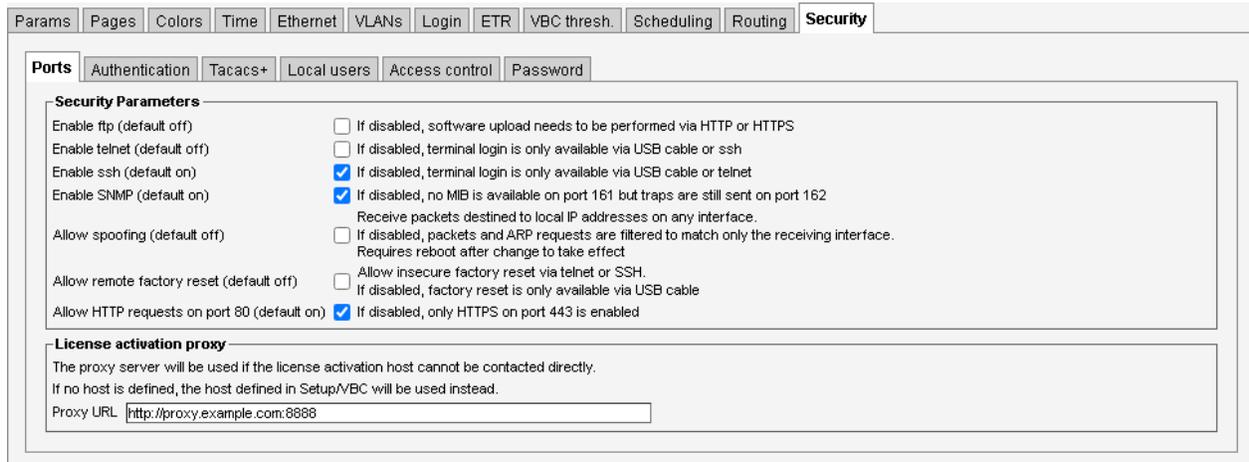

Params Pages Colors Time Ethernet VLANs Login ETR VBC thresh. Scheduling Routing **Security**

Ports Authentication Tacacs+ Local users Access control Password

**Security Parameters**

Enable ftp (default off)  If disabled, software upload needs to be performed via HTTP or HTTPS

Enable telnet (default off)  If disabled, terminal login is only available via USB cable or ssh

Enable ssh (default on)  If disabled, terminal login is only available via USB cable or telnet

Enable SNMP (default on)  If disabled, no MIB is available on port 161 but traps are still sent on port 162

Allow spoofing (default off)  Receive packets destined to local IP addresses on any interface.  
If disabled, packets and ARP requests are filtered to match only the receiving interface.  
Requires reboot after change to take effect

Allow remote factory reset (default off)  Allow insecure factory reset via telnet or SSH.  
If disabled, factory reset is only available via USB cable

Allow HTTP requests on port 80 (default on)  If disabled, only HTTPS on port 443 is enabled

**License activation proxy**

The proxy server will be used if the license activation host cannot be contacted directly.  
If no host is defined, the host defined in Setup/VBC will be used instead.

Proxy URL

The **Setup – Security — Ports** view makes it possible to enable and disable a number of protocol ports used by the VB330. To disable a protocol, deselect it by removing the associated check-mark and click the **Apply changes** button. Available security parameters are:

### *Security parameters*

|                                       |  |
|---------------------------------------|--|
| <b>Enable ftp</b>                     | Enables support for uploading software update images using ftp, which might be useful if uploading through the the regular web interface (from the <b>Data — Software</b> view) fails.<br>Defaults to <b>off</b> .   |
| <b>Enable telnet</b>                  | Enables text-based remote login using the plain-text telnet protocol.<br>Defaults to <b>off</b> .  |
| <b>Enable ssh</b>                     | Enables text-based remote login using the encrypted ssh (secure shell) protocol.<br>Defaults to <b>on</b> .  |
| <b>Enable SNMP</b>                    | If SNMP is disabled, no MIB is available on port 161. However SNMP traps are sent as usual on port 162.<br>Defaults to <b>on</b> .   |
| <b>Allow spoofing</b>                 | If disabled, IP packets received on the data interface are dropped if they are spoofed and would be replied to on the management interface.<br>Defaults to <b>off</b> .  |
| <b>Allow remote factory reset</b>     | If enabled, factory reset (see appendix H) is available remotely using telnet or ssh (if these protocols are enabled above). If disabled, it can only be accessed from the USB interface using the method described in chapter 4.8.2.<br>Defaults to <b>off</b> .            |
| <b>Allow HTTP requests on port 80</b> | If disabled, the VB330 is only available through encrypted HTTPS communication. If enabled, it is also available through plain-text HTTP.<br>It is not possible to disable disable VB330 access via HTTPS port 443 since it is considered secure.<br>Defaults to <b>on</b> . |

---

*License activation proxy*

---

**Proxy URL** When using on-line activation, the 10G Probe needs to be able to connect to the license activation server. If the 10G Probe is not connected directly to the Internet, you can add the URL to a proxy server that it can use here. If not configured, the 10G Probe will try to use the proxy installed on the VBC host, as configured in the **Setup — Routing** view; see E Appendix: On-line License Activation for more details

---


If both telnet and ssh are disabled, terminal login is only available via USB cable, i.e. remote login is disabled. Please refer to section 4.8.2 for information on how to connect to the probe using a USB cable.

The VB330 will create a self-signed SSL certificate and use this when clients access the user interface via HTTPS (port 443). Since the certificate is not signed by a certificate authority, the web browser will display an error message saying that the connection towards the probe may not be secure.

The certificate is used to encrypt the communication between the client (usually a web browser) and the VB330. The VB330 can also be accessed via HTTPS from the VideoBRIDGE Controller (requires version 5.5 or later). Choosing the HTTPS protocol over HTTP will cause a small and, in almost all cases, insignificant additional load on the probe since the communication must be encrypted by the web server.

Changing settings for spoofing should be followed by a probe reboot for changes to take effect. Reboot is performed from the **Setup — Ethernet** view.

Clicking the **Routing** button will open a new window, allowing the user to display or modify the probe's routing table.

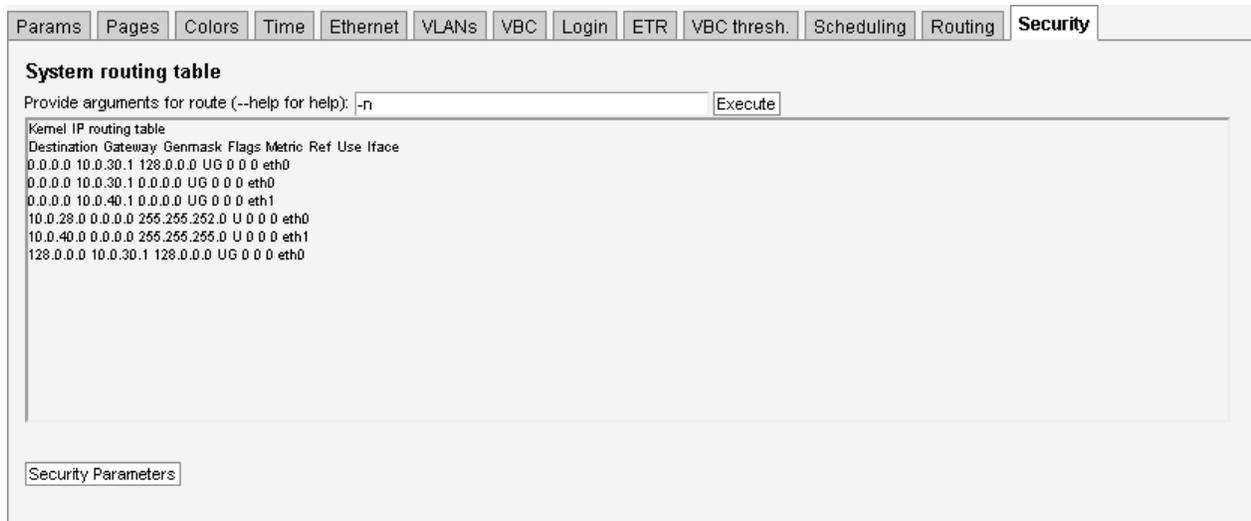


**System routing table**

Provide arguments for route (--help for help):

| Kernel IP routing table | Destination | Gateway   | Genmask       | Flags | Metric | Ref | Use | Iface |
|-------------------------|-------------|-----------|---------------|-------|--------|-----|-----|-------|
|                         | 0.0.0.0     | 10.0.30.1 | 128.0.0.0     | UG    | 0      | 0   | 0   | eth0  |
|                         | 0.0.0.0     | 10.0.30.1 | 0.0.0.0       | UG    | 0      | 0   | 0   | eth0  |
|                         | 0.0.0.0     | 10.0.40.1 | 0.0.0.0       | UG    | 0      | 0   | 0   | eth1  |
|                         | 10.0.28.0   | 0.0.0.0   | 255.255.252.0 | U     | 0      | 0   | 0   | eth0  |
|                         | 10.0.40.0   | 0.0.0.0   | 255.255.255.0 | U     | 0      | 0   | 0   | eth1  |
|                         | 128.0.0.0   | 10.0.30.1 | 128.0.0.0     | UG    | 0      | 0   | 0   | eth0  |

Please note that any modifications to the routing table that is made in this dialog will be lost when the probe is rebooted.

## 6.12.12.2 Setup — Security — Authentication

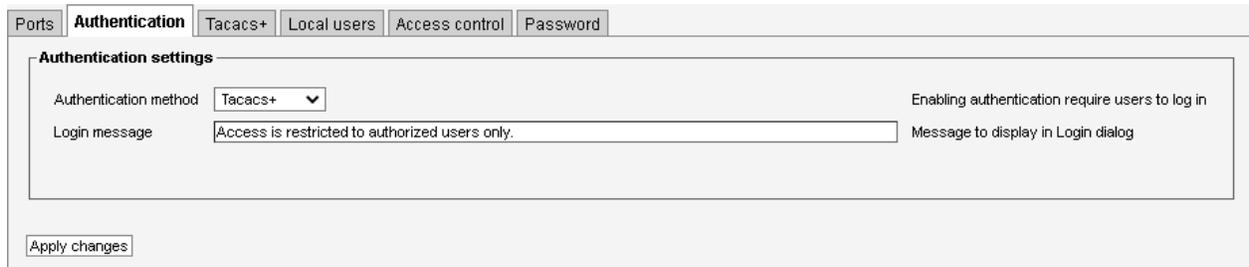

The **Setup — Security — Authentication** view makes it possible to restrict access to the VB330 user interface by requiring the user to log in first.

### *Authentication method*

**Disabled** VB330 authentication is disabled, and no login is required when accessing the VB330 from a web browser. The 10G Probe is seamlessly accessible from the VideoBRIDGE Controller. This is the default setting.

**Tacacs+** VB330 authentication is enabled. When accessing the VB330 with a web browser, users need to authenticate themselves with a username and password. These need to match the pre-defined **admin** user, a user available on the Tacacs+ server configured through the **Setup — Security — Tacacs+** view, or any of the users configured in the **Setup — Security — Local users** view.

**Local users** VB330 authentication is enabled. When accessing the VB330 with a web browser, users need to authenticate themselves with a username and password. These need to match either the pre-defined **admin** user, or any of the users configured in the **Setup — Security — Local users** view.

If authentication has been enabled when accessing the VB330 through the VideoBRIDGE Controller, the local VB330 user will be “admin”, but with restrictions imposed by the user account. If the password has been changed from the default, the same password needs to be configured in the **Edit device** popup in the **VBC Equipment** view.

The message entered in the **Login message** text field will be displayed to the user in the **Login** view before logging in.

### 6.12.12.3 Setup — Security — Tacacs+

Ports
Authentication
Tacacs+
Local users
Password

**Tacacs+ parameters**

|                    |  |  |
|--------------------|--|--|
| Server IP address  | <input type="text" value="10.0.28.118"/>                                     | Tacacs+ server IP address  |
| Secret             | <input type="password" value="*****"/>                                       | Used to encrypt communication - must match setting on Tacacs+ server             |
| Default local user | <input type="text" value="TAC"/> ▼   | This user account will be used by default for all Tacacs+ authenticated users    |
| Auth-key           | <input type="text" value="VBUserLevel"/>                                     | Key to be used to authorize user access level if enabled on Tacacs+ server       |
| Access level 1     | <input type="text" value="Admin"/> ▼ <input type="text" value="admin"/> ▼    | Select local user account to match value assigned by Tacacs+ server for Auth-key |
| Access level 2     | <input type="text" value="Read/Write"/> ▼ <input type="text" value="TAC"/> ▼ | Select local user account to match value assigned by Tacacs+ server for Auth-key |
| Access level 3     | <input type="text" value="ReadOnly"/> ▼ <input type="text" value="demo"/> ▼  | Select local user account to match value assigned by Tacacs+ server for Auth-key |

This view is used to configure a Tacacs+ server for user authentication. For this to be used, Tacacs+ authentication must be selected in the **Setup — Security — Authentication** view.

To use Tacacs+ authentication, the IP address of the Tacacs+ server must be specified, along with the secret key used to encrypt the communication between the Tacacs+ server and the VB330 server. The same key must also be specified as part of the Tacacs+ server configuration.

We recommend using HTTPS when using authentication, as this combines authentication with encryption. Using authentication with HTTP is not considered very secure since it is possible to sniff the un-encrypted communication and possibly reverse engineer the scrambling of login details.

---


#### *Tacacs+ parameters*

---

|                           |  |
|---------------------------|--|
| <b>Server IP address</b>  | IP address of the Tacacs+ server used for authentication.  |
| <b>Secret</b>             | Configures a fixed string used to encrypt the communication with the server.   |
| <b>Default local user</b> | Defines the local user ID that should be used on successful Tacacs+ authentication.  |
| <b>Auth-key</b>           | Defines which key in the Tacacs+ authentication response to use to determine the user access level. The value of this key is compared to the <b>Access level</b> below.  |
| <b>Access level 1–3</b>   | Up to three different Tacacs+ access levels can be configured to map to different local user accounts, allowing different authenticated users to have different access levels.<br>The value configured here is matched with the value of the <b>Auth-key</b> configured above. |

---

### 6.12.12.4 Setup — Security — Local users

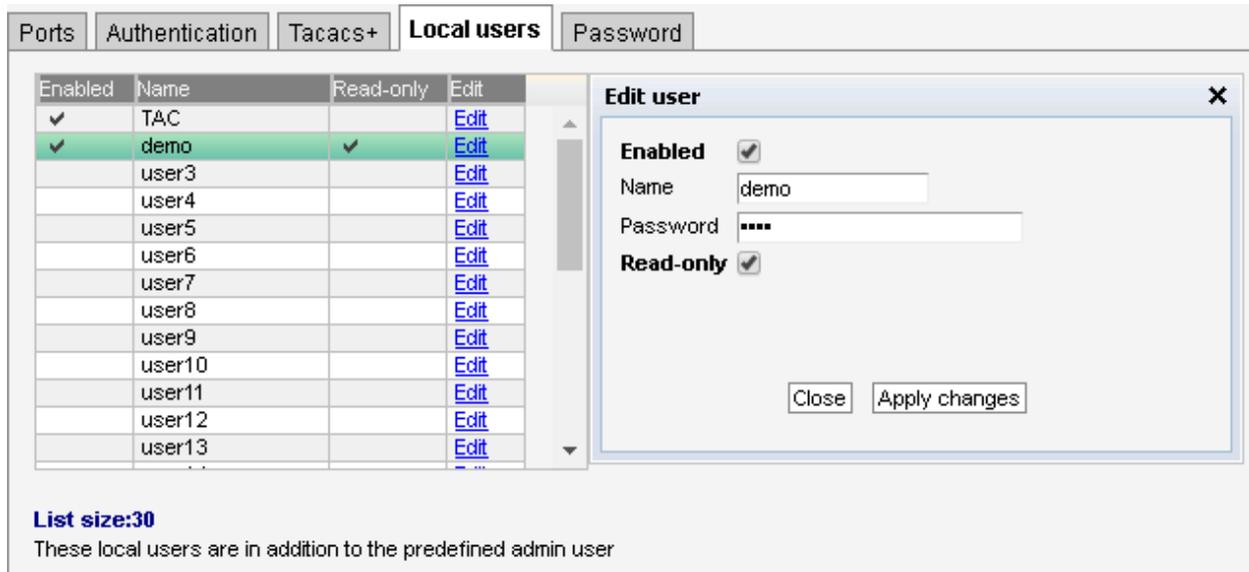

| Enabled                             | Name   | Read-only                           | Edit                 |
|-------------------------------------|--------|-------------------------------------|----------------------|
| <input checked="" type="checkbox"/> | TAC    |                                     | <a href="#">Edit</a> |
| <input checked="" type="checkbox"/> | demo   | <input checked="" type="checkbox"/> | <a href="#">Edit</a> |
| <input type="checkbox"/>            | user3  |                                     | <a href="#">Edit</a> |
| <input type="checkbox"/>            | user4  |                                     | <a href="#">Edit</a> |
| <input type="checkbox"/>            | user5  |                                     | <a href="#">Edit</a> |
| <input type="checkbox"/>            | user6  |                                     | <a href="#">Edit</a> |
| <input type="checkbox"/>            | user7  |                                     | <a href="#">Edit</a> |
| <input type="checkbox"/>            | user8  |                                     | <a href="#">Edit</a> |
| <input type="checkbox"/>            | user9  |                                     | <a href="#">Edit</a> |
| <input type="checkbox"/>            | user10 |                                     | <a href="#">Edit</a> |
| <input type="checkbox"/>            | user11 |                                     | <a href="#">Edit</a> |
| <input type="checkbox"/>            | user12 |                                     | <a href="#">Edit</a> |
| <input type="checkbox"/>            | user13 |                                     | <a href="#">Edit</a> |

**List size:30**  
These local users are in addition to the predefined admin user

This view is used to configure local users that are allowed to access the VB330 user interface. For these to be used, Local users authentication must be selected in the **Setup — Security — Authentication** view. The VB330 supports up to 30 local users.

In addition to the users defined here, the predefined “admin” user can also log in. The password for the “admin” user is configured in the **Setup — Security — Password** view. Note that the login requirements towards the **Security** tab is independent of the general authentication and always requires the login of the admin user.

It is not possible to see which user is actually logged in to the VB330, as this information is not kept or used by the probe.

#### *Edit user*

|                  |  |
|------------------|--|
| <b>Enabled</b>   | If this is checked, the user is allowed to log in.   |
| <b>Name</b>      | User-name of the account used to log in.   |
| <b>Password</b>  | Password of the account used to log in.  |
| <b>Read-only</b> | If this is checked, the user only has read-only access to the user interface. When read-only access is activated a <b>READ-ONLY access</b> message is displayed under the alarm list. To change any parameters, the user needs to log out and then log in as another user. |

### 6.12.12.5 Setup — Security — Access control

|       |                |         |             |                       |          |
|-------|----------------|---------|-------------|-----------------------|----------|
| Ports | Authentication | Tacacs+ | Local users | <b>Access control</b> | Password |
|-------|----------------|---------|-------------|-----------------------|----------|

**Access control list - all Ethernet interfaces**

|                 |  |
|-----------------|--|
| Enable          | <input checked="" type="checkbox"/>              |
| Allowed sources | <input type="text" value="10.0.30.1,10.0.30.2"/> |
| VBC server      | <input type="text" value="10.0.30.15"/>          |

When the **Access control list** is enabled only clients with IP source address matching the **Allowed sources** will have access to the probe. This means that the client will lose contact with the probe if his IP address is not in the list.

Clicking **Test ACL for 30 seconds** button will apply the settings and automatically switch off ACL after 30 seconds so that the user can verify what happens.

Multiple IP addresses can be entered separated by spaces or comma. Single IP addresses and subnets are supported.  
Example: 10.20.30.40 10.0.30.0/24

If an address has been configured in Setup/VBC, it will be added automatically.

It is possible to disable ACL from a serial port login.

The probe user interface can be protected by a firewall. The firewall is configured in the **Setup — Security — Access control** view.

The firewall settings are remembered across reboots. It is possible to lock oneself completely out of the web and remote login interfaces. In that case a serial port login towards the probe, using a USB cable, is required to disable the firewall, as described below.


The firewall is enabled by checking **Enable** in the dialog. When the firewall is enabled, only clients accessing from IP source addresses listed in the “Allowed sources” field are allowed. In addition, the VBC server will be allowed access if it has been enabled in the **Setup — Routing** view. Please note that the firewall will not be enabled if no VBC server is specified and the “Allowed sources” field is left blank.

We recommend testing the effect of enabling the firewall by clicking the “Test ACL for 30 seconds” button first. Any surprises, such as unintentionally being blocked by the firewall and losing connection to the probe, are then detected before the setting becomes permanent.

To disable the firewall using the USB interface, connect to the VB330 using the method described in chapter 4.8.2 and log in as the **admin** user. The default password is **elvis**, but can be changed as described in chapter 6.12.12.6. Navigate to the `/ewe/probe/core/setup/security/accessList/` menu by selecting **Back, security, accessList** and change the value for **enableACL** to **false**.

The firewall will filter the following ports: ftp(tcp), ssh(tcp), telnet(tcp), web(tcp), snmp(udp), https(tcp).

## 6.12.12.6 Setup — Security — Password

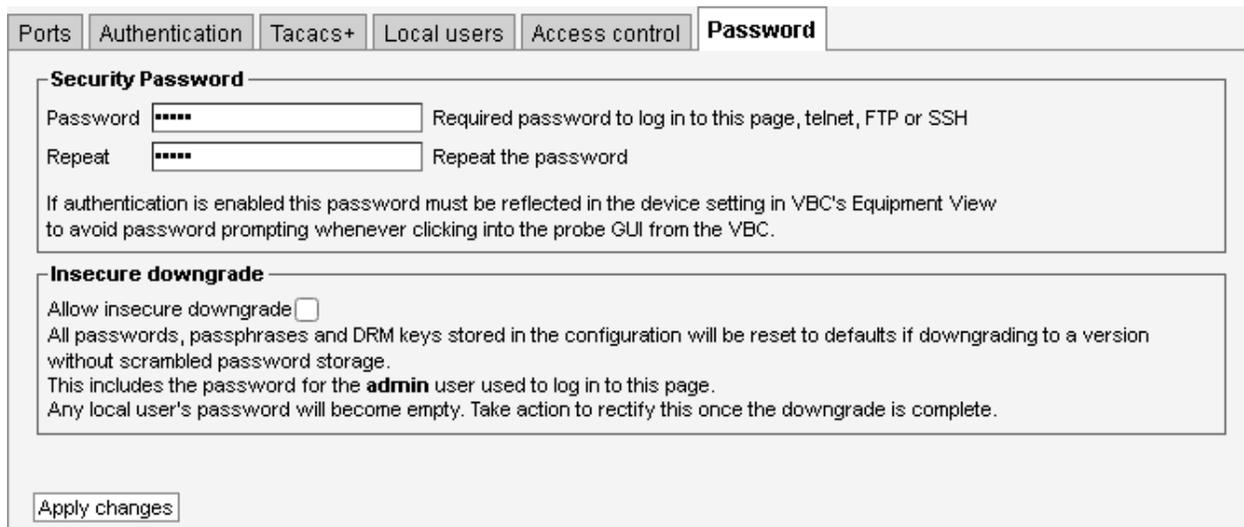

Ports Authentication Tacacs+ Local users Access control **Password**

**Security Password**

Password  Required password to log in to this page, telnet, FTP or SSH

Repeat  Repeat the password

If authentication is enabled this password must be reflected in the device setting in VBC's Equipment View to avoid password prompting whenever clicking into the probe GUI from the VBC.

**Insecure downgrade**

Allow insecure downgrade

All passwords, passphrases and DRM keys stored in the configuration will be reset to defaults if downgrading to a version without scrambled password storage. This includes the password for the **admin** user used to log in to this page. Any local user's password will become empty. Take action to rectify this once the downgrade is complete.

Apply changes

The **Setup — Security — Password** view is used to change the password used to access all of the **Setup — Security** section. The password is changed by entering a new password and clicking the **Apply changes** button. If authentication has been enabled in the **Setup — Security — Authentication** view, the password defined here can be used with the special username “admin”.

This password also applies for the **admin** user when logging in over USB or ssh as described in chapter 4.8.2, as well as for software upload using ftp as described in appendix G.


Note that if the password is lost, the probe will have to be factory reset to access the **Setup — Security** view.

The method for storing passwords in the configuration file changed in version 6.5, making it incompatible with previous versions. The **Allow insecure downgrade** checkbox allows downgrades to a version that is unable to read the passwords from the configuration. Please note that the **admin** user password will be reset to the default, and that you will lose all passwords defined for local users, DRM passphrases and keys configured for OTT channels and SRT passphrases and stream IDs configured for multicasts.

It is possible to downgrade without losing passwords. Versions 6.3.0–12 and 6.4.0–5 and later can read the new password storage, converting to the old format. If you need to downgrade further, make sure the configuration is re-saved in the old format before proceeding, by making an inconsequential change to the configuration before applying another downgrade. You could, for instance, change the **Probe name** in the **Setup — Params** view and press **Apply changes** to save the configuration to disk.

## 6.13 Data

### 6.13.1 Data — Configuration

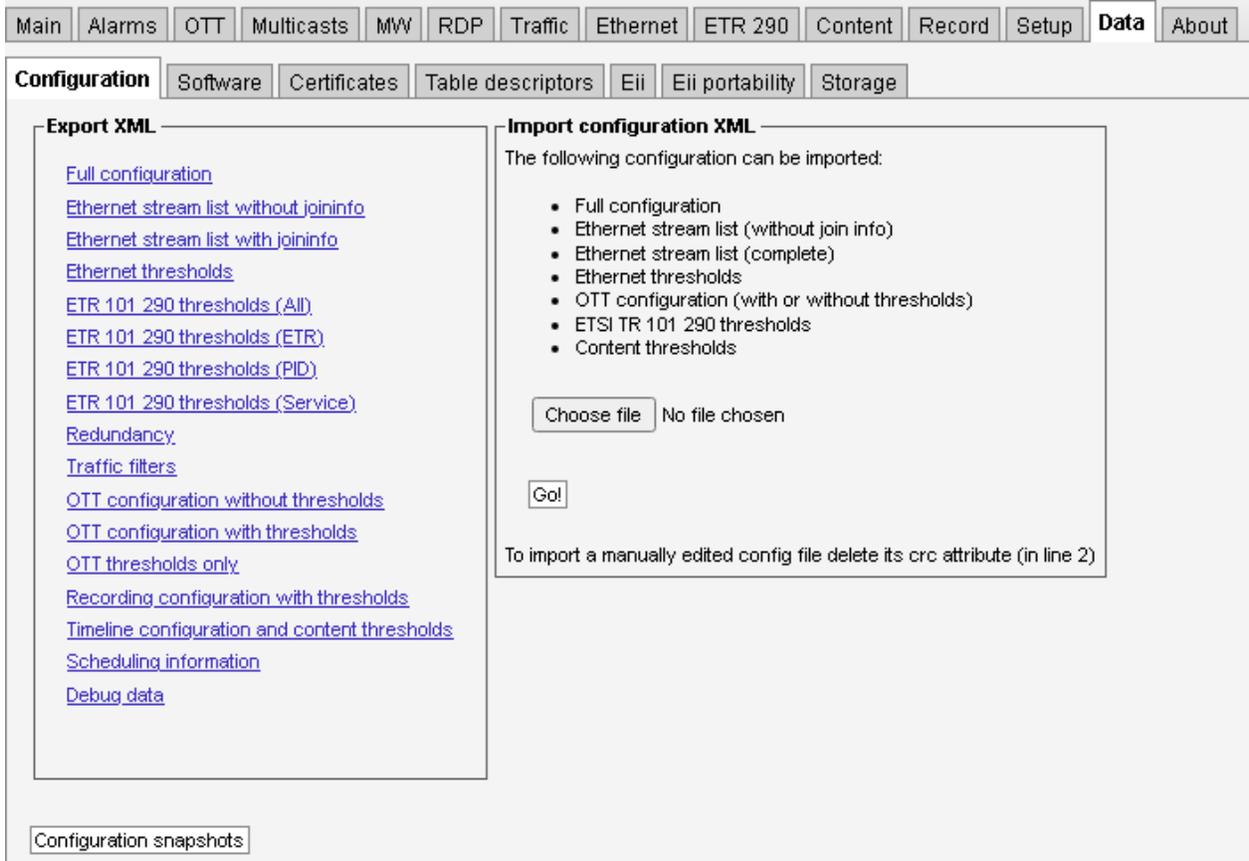

The screenshot shows the configuration interface with the following elements:

- Navigation Tabs:** Main, Alarms, OTT, Multicasts, MW, RDP, Traffic, Ethernet, ETR 290, Content, Record, Setup, **Data**, About.
- Configuration Sub-Tabs:** Configuration (selected), Software, Certificates, Table descriptors, Eii, Eii portability, Storage.
- Export XML Section:**
  - [Full configuration](#)
  - [Ethernet stream list without joininfo](#)
  - [Ethernet stream list with joininfo](#)
  - [Ethernet thresholds](#)
  - [ETR 101 290 thresholds \(All\)](#)
  - [ETR 101 290 thresholds \(ETR\)](#)
  - [ETR 101 290 thresholds \(PID\)](#)
  - [ETR 101 290 thresholds \(Service\)](#)
  - [Redundancy](#)
  - [Traffic filters](#)
  - [OTT configuration without thresholds](#)
  - [OTT configuration with thresholds](#)
  - [OTT thresholds only](#)
  - [Recording configuration with thresholds](#)
  - [Timeline configuration and content thresholds](#)
  - [Scheduling information](#)
  - [Debug data](#)
- Import configuration XML Section:**
  - The following configuration can be imported:
    - Full configuration
    - Ethernet stream list (without join info)
    - Ethernet stream list (complete)
    - Ethernet thresholds
    - OTT configuration (with or without thresholds)
    - ETSI TR 101 290 thresholds
    - Content thresholds
  - No file chosen
  - 
  - To import a manually edited config file delete its crc attribute (in line 2)
- Configuration snapshots:**

Full and partial configuration of the 10G Probe can be exported as XML documents. This is achieved by clicking one of the links inside the **Export XML** frame. A new browser window pops up containing the selected XML document. The browser will allow the contents of the page to be saved to file.

Restoring the 10G Probe configuration, multicast stream list or OTT channel list is just as simple. Just click the **Browse** button and select the file that contains the XML document. Then click the **Go!** button and the information in the XML document will be applied. The configuration, stream list and thresholds exports can all be imported.

Configuration files generated by a probe can be imported by the VB330. Multicast stream lists, OTT channel lists and scheduling information can also be exported to and imported from the VB7880 Advanced Content Extractor.

You can also import and export license and software maintenance keys in XML format from this page.


To import documents that have been manually edited the CRC attribute at the very top of the document must be deleted (i.e. delete `crc="..."` from the file). This will bypass the checksum verification mechanism.

Please refer to the document **Eii External Integration Interface** for detailed information about XML import and export.

Note that the Ethernet setup parameters (IP address, netmask and gateway) and probe name and location are not part of the XML document. Hence exporting the full configuration of one 10G Probe and restoring it on another will make the two 10G Probes identical except for the network settings.

Clicking the Debug data export option will generate a document containing debug information that may be useful if 10G Probe misbehavior is reported. This file should be sent along with a description of the misbehavior.

### 6.13.1.1 Configuration snapshots

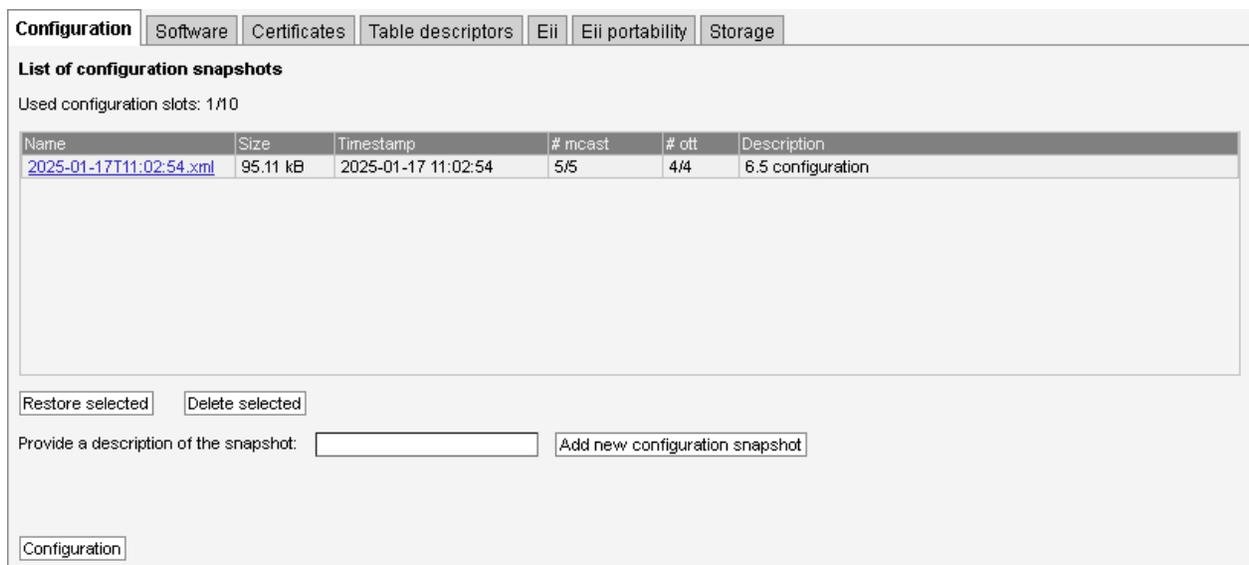

**Configuration** | Software | Certificates | Table descriptors | Eii | Eii portability | Storage

**List of configuration snapshots**  
Used configuration slots: 1/10

| Name                                    | Size     | Timestamp           | # mcast | # olt | Description       |
|---|----------|---------------------|---------|-------|-------------------|
| <a href="#">2025-01-17T11:02:54.xml</a> | 95.11 kB | 2025-01-17 11:02:54 | 5/5     | 4/4   | 6.5 configuration |

Restore selected | Delete selected

Provide a description of the snapshot:  Add new configuration snapshot


Configuration

**Configuration snapshots** allow you to save up to 3 named probe configurations directly on the probe. Each snapshot represents a **Full configuration** XML document and can be used to restore the probe to a previous state, similar to uploading a configuration XML.

Access the **Configuration snapshot** view by clicking the **Configuration snapshots** button below the XML export options in the **Data — Configuration** view. From here you can restore any existing snapshot by selecting it and clicking the **Restore selected** button, and create new snapshots by providing a name and clicking the **Add new configuration snapshot** button. If all snapshot slots are used, you can delete an existing snapshot by selecting it and clicking the **Delete selected** button.

Click the **Configuration** button to return to the **Data — Configuration** view.

## 6.13.2 Data — Software

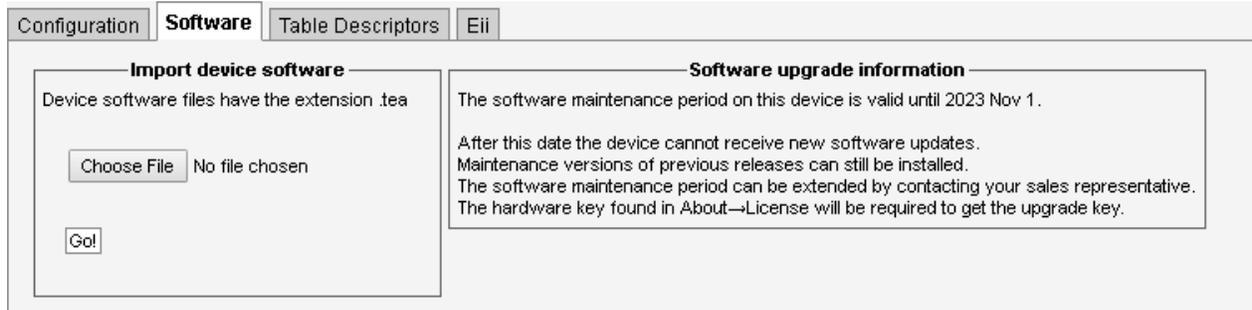

The software section allows the 10G Probe to be upgraded to a newer software version and for timezone definitions to be updated independently from the software. Select the **.tea** file from the local PC and click **Go!** to copy the software to the VB330. When the upload is complete, clicking the **Save flash** button will store the new software to flash. Note that the probe must not be powered down during the flash save process. Flash save progress is indicated by progress bars. Note that the probe will reboot when the new software has been successfully stored in flash, and it will be unresponsive until reboot is completed.

A more detailed description on the software update procedure can be found in G Appendix: Software Upload



# Software update in progress

Writing ...

Erasing:100%

Writing:3%

**-- Do not power off --**

The probe will automatically reboot on completion

Status updated: 2/1/2017, 8:14:38 AM

Upgrading to a new major release requires a valid software maintenance license, please refer to F Appendix: Software Maintenance for more details. If the current software maintenance license does not cover the uploaded software version, the upgrade will be aborted and the current version is kept.

### 6.13.3 Data — Certificates (requires OTT-OPT)

Configuration
Software
Certificates
Table descriptors
Eii
Eii portability
Storage

**Certificate storage**

**Import PKCS #12 certificate**

Import certificates from PKCS #12 archives (file extensions .p12 or .pfx)

**Passphrase**

**Name**

**Type**  Client certificate  CA certificate

No file chosen


| Name                 | Subject                   | Refs | Type   | Uploaded             | Valid from           | Valid until          | Size     |
|----------------------|---------------------------|------|--------|----------------------|----------------------|----------------------|----------|
| old-ca.pem           | Bridge Technologies co as | 0    | CA     | 1956 Aug 15 20:27:40 | 2024 Oct 17 13:43:13 | 2034 Oct 15 13:43:13 | 2.279 kB |
| selfsigned-ca.pem    | Bridge Technologies co as | 2    | CA     | 1956 Aug 15 20:22:10 | 2024 Oct 17 15:20:06 | 2034 Oct 15 15:20:06 | 2.279 kB |
| selfsigned-cli-1.pem | Bridge Technologies co as | 0    | Client | 1956 Aug 15 20:22:58 | 2024 Oct 17 13:52:22 | 2025 Oct 17 13:52:22 | 5.599 kB |
| selfsigned-cli.pem   | Bridge Technologies co as | 2    | Client | 1956 Aug 15 20:22:36 | 2024 Oct 17 15:27:58 | 2034 Oct 15 15:27:58 | 5.602 kB |

This view makes it possible to upload client certificates for mTLS authentication and CA certificates for TLS host verification.

Use **Import PKCS #12 certificate** to upload a certificate. Certificates must be available as a PKCS #12 archive (these files usually have a **p12** or **pfx** file extension). Enter the passphrase used for the PKCS #12 archive, enter a name under which to store the certificate, and select whether the certificate is a client certificate or a CA certificate. Click the **Browse** button to select the file that contains the certificate and then click the **Go!** button and the certificate will be imported.

All imported certificates are displayed in the certificate list in the bottom half of the screen. To remove certificates from the certificate store, select the certificate or certificates to remove and click the **Delete selected** button.


#### 6.13.4 Data — Table Descriptors

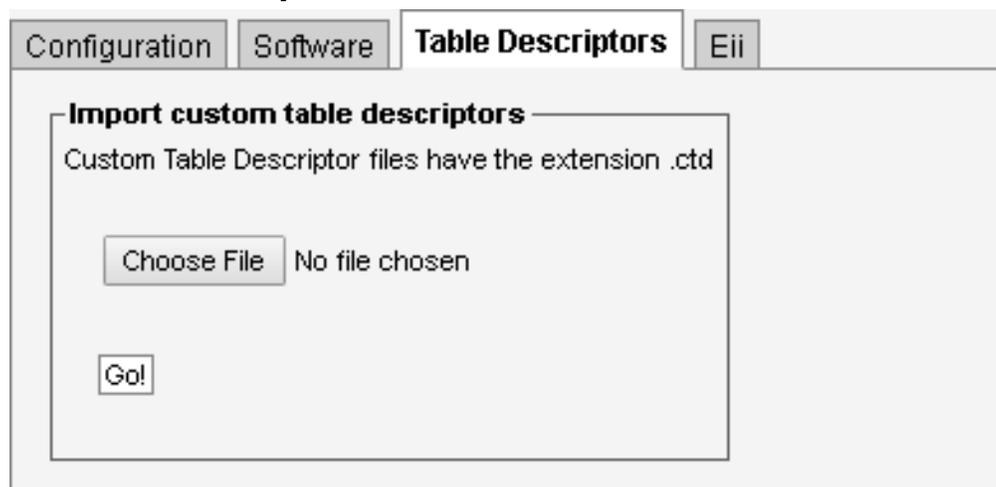

It is possible to upload parser files to the probe adding support for private descriptors. Private descriptors should be enabled (in the **Setup — ETR** view).

Contact Sencore for more information about private descriptors.


### 6.13.5 Data — Eii

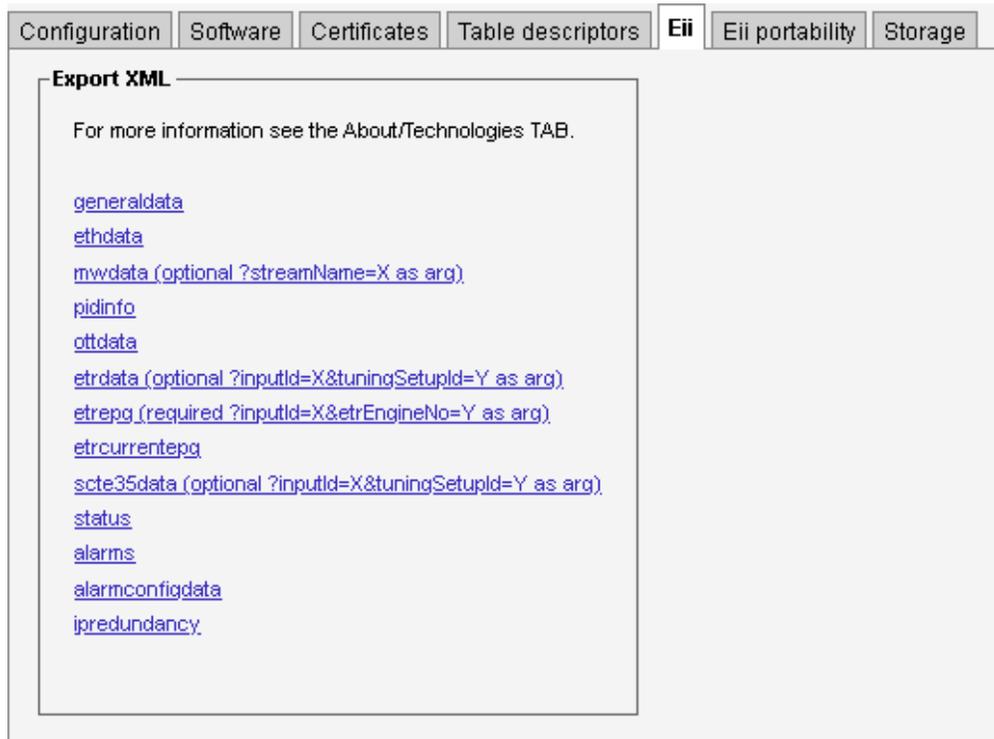

The **External integration interface (Eii)** allows inclusion of Sencore VideoBRIDGE equipment into 3rd party NMS systems. In order to facilitate integration the **Data — Eii** view allows export of XML files containing the data typically being requested by an NMS system via the regular Eii interface.


Please refer to the document **Eii External Integration Interface** for detailed information about Eii.

### 6.13.6 Data — Eii Portability

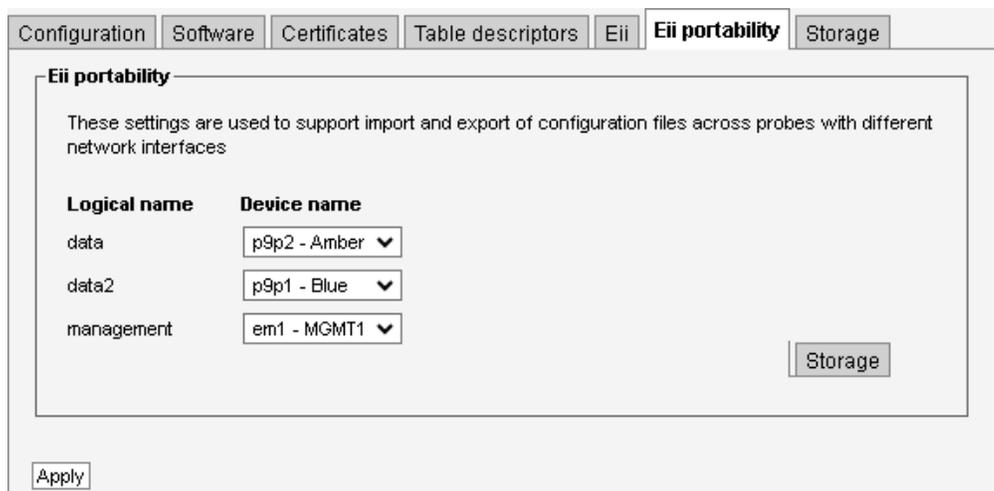

This view makes it possible to map the logical network interface names **data**, **data2** and **management** to the physical network interfaces available on the VB330. These mappings are used when importing and exporting configuration files between probes of different types and when using the **setrdp** Eii interface.

### 6.13.7 Data — Storage (requires FLASH32-OPT)

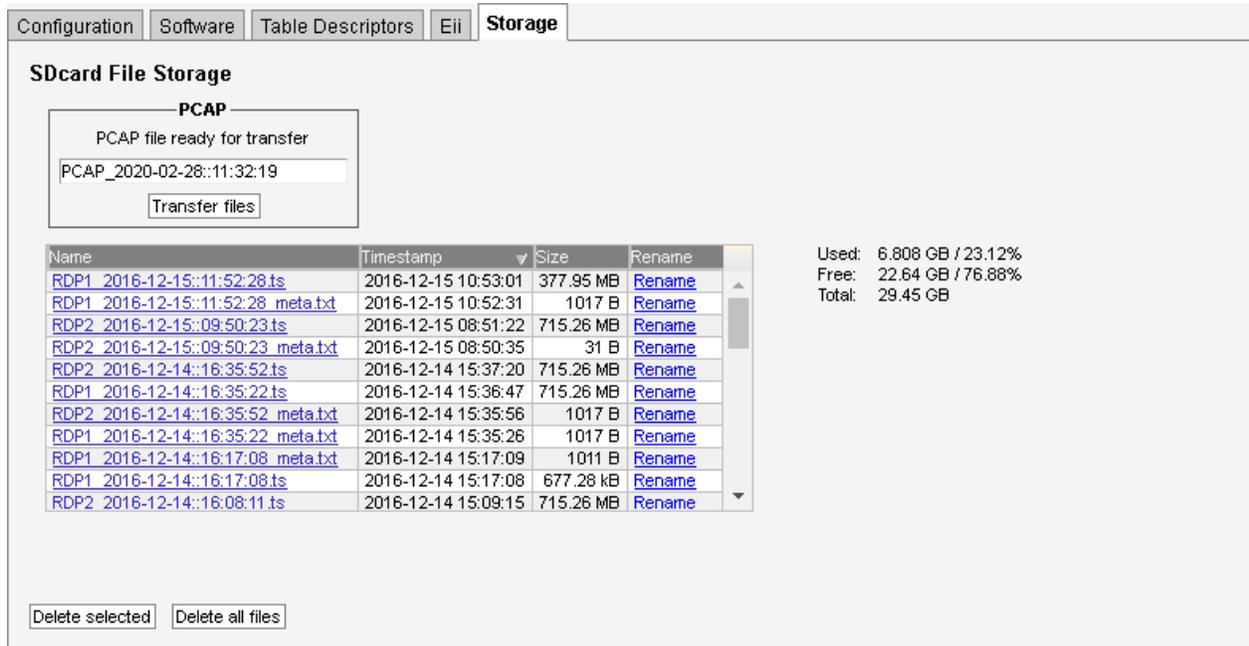

**Storage**

**SDcard File Storage**

**PCAP**

PCAP file ready for transfer

PCAP\_2020-02-28::11:32:19

Transfer files

| Name   | Timestamp           | Size      | Rename                 |
|--|---------------------|-----------|------------------------|
| <a href="#">RDP1_2016-12-15::11:52:28.ts</a>       | 2016-12-15 10:53:01 | 377.95 MB | <a href="#">Rename</a> |
| <a href="#">RDP1_2016-12-15::11:52:28.meta.txt</a> | 2016-12-15 10:52:31 | 1017 B    | <a href="#">Rename</a> |
| <a href="#">RDP2_2016-12-15::09:50:23.ts</a>       | 2016-12-15 08:51:22 | 715.26 MB | <a href="#">Rename</a> |
| <a href="#">RDP2_2016-12-15::09:50:23.meta.txt</a> | 2016-12-15 08:50:35 | 31 B      | <a href="#">Rename</a> |
| <a href="#">RDP2_2016-12-14::16:35:52.ts</a>       | 2016-12-14 15:37:20 | 715.26 MB | <a href="#">Rename</a> |
| <a href="#">RDP1_2016-12-14::16:35:22.ts</a>       | 2016-12-14 15:36:47 | 715.26 MB | <a href="#">Rename</a> |
| <a href="#">RDP2_2016-12-14::16:35:52.meta.txt</a> | 2016-12-14 15:35:56 | 1017 B    | <a href="#">Rename</a> |
| <a href="#">RDP1_2016-12-14::16:35:22.meta.txt</a> | 2016-12-14 15:35:26 | 1017 B    | <a href="#">Rename</a> |
| <a href="#">RDP1_2016-12-14::16:17:08.meta.txt</a> | 2016-12-14 15:17:09 | 1011 B    | <a href="#">Rename</a> |
| <a href="#">RDP1_2016-12-14::16:17:08.ts</a>       | 2016-12-14 15:17:08 | 677.28 kB | <a href="#">Rename</a> |
| <a href="#">RDP2_2016-12-14::16:08:11.ts</a>       | 2016-12-14 15:09:15 | 715.26 MB | <a href="#">Rename</a> |

Used: 6.808 GB / 23.12%  
Free: 22.64 GB / 76.88%  
Total: 29.45 GB

Delete selected Delete all files

The FLASH option allows a 32 Gbyte flash card to be used for storing recordings. RDP recordings made from the **RDP — Control** view are automatically stored and can be retrieved from here.

PCAP recordings made from the **Ethernet — PCAP** view can also be stored for later retrieval. When a PCAP recording is available, clicking the **Transfer files** button copies it to the persistent storage area.

The probe will generate system information messages when the storage has less than 10 % free memory. When the storage is full, a system error is generated. These are configured in the **Alarms — Alarm setup** view.

## 6.14 About

### 6.14.1 About — Release info



This view shows the software version, the software build date and the hardware type of the 10G Probe.

## 6.14.2 About — License

Release info
License
Technologies
Credits
System

**Available options**

| Available | Installed | Option code   | Option name   | Details           |
|-----------|-----------|---------------|---|-------------------|
| ✓         | ✓         | IP-OPT        | IP Monitoring and Analysis (2000 streams)               | <a href="#">i</a> |
| ✓         | ✓         | ETR290-OPT    | ETSI TR 101 290 for Ethernet (400/400 parallel engines) | <a href="#">i</a> |
| ✓         | ✓         | OTT-OPT       | OTT Active Testing (500/500 channels)                   | <a href="#">i</a> |
| ✓         | ✓         | T2MI-OPT      | DVB-T2MI Encapsulation Synchronization Monitoring       | <a href="#">i</a> |
| ✓         | ✓         | SCTE35-OPT    | SCTE35 Signaling Analysis and Logging                   | <a href="#">i</a> |
| ✓         | ✓         | IP-SWITCH-OPT | Redundancy switching for IP based on ETR alarms         | <a href="#">i</a> |
| ✓         | ✓         | VB33010G2-OPT | Additional 10 Gbit SFP+ Input                           | <a href="#">i</a> |
| ✓         | ✓         | FLASH32-OPT   | Flash Storage (32GB)                                    | <a href="#">i</a> |

**Current license details**

Probe status: Activated

Hardware key:

Current license:

Serial:

Production date: 2022 Jan 1

Software maintenance period: Ends 2028 Apr 1

**License key**

Product license key or software maintenance period key:

**Note:** Changing the feature license key (starting with 0330) will reboot the probe!

Adding a demo license (starting with 8330) will reboot the probe now, and when the demo period expires.

Changing the software maintenance period license (starting with 9998) will not reboot the probe.

[Export current license and software maintenance keys](#)

**Manage license activation**

The current license does not require on-line activation. You can still use this interface to switch licenses using an off-line license request.

The **License** view displays the currently active license. The license includes the available 10G Probe options and software maintenance details. By clicking the blue information icon associated with each option it is possible to view option details.

The 10G Probe supports two different licensing schemes, on-line activated licenses and classic licenses. When using a classic license, product and software maintenance license keys are tied to the hardware key, in a non-transferable manner. The license is installed once, and can also be exported in XML format from this page. The classic keys can be imported using the **Data — Configuration** view.

When using an on-line activated license, the license key is activated towards a license server. Depending on the license properties, the activation might need to be updated periodically. The **Current license** field will display information on when the license key was last activated and possibly when it needs to be activated again. Click the **Renew** button to immediately renew the license with the license server.

Click the **Release** button to remove the current license, making it available to another host. Please make sure you have the license key available before you do this, as you must enter it

again on the system you wish to transfer the license to. If you have lost the license key, contact your dealer to retrieve it. Make sure you include all details from this page in your request.

Please refer to E Appendix: On-line License Activation for more information on how to use on-line activated licenses. This appendix also describes how to renew the license when the 10G Probe cannot connect to the Internet.

Please refer to F Appendix: Software Maintenance for more details on software maintenance licenses.

### 6.14.3 About — Technologies

Release info
License
Technologies
Credits






As part of the VBC, the Timeline functionality enables operators to go back and explore, understand, verify and document in complete detail what happened at any given time, or look for patterns over longer periods of time to identify and eliminate problems.

Gold TS Protection makes monitoring for digital services much quicker to set up, and fault-tracking much faster, more accurate and secure. Gold TS Protection includes all the checks specified in the ETR290 standard, but goes much further to include testing for critical conditions missed by ETR290.

External Integration Interface (Eii) is a well defined interface allowing easy integration of Bridgetech probes into a 3rd party network management system (NMS). Measurement data and alarms from the probes can be accessed by the NMS through SNMP traps and/or XML files, enabling development of a customised graphical user interface that could comprise equipment from several manufacturers. The Eii interface is described in a document that is open and available.

Full Service Monitoring (FSM) allows easy validation of any server reachable by the probe via Ethernet. The servers may be probed by either sending an ICMP echo request packet (also known as ping) or performing an HTTP get request. The FSM feature thus allows the operator to verify that vital system components like remote VoD, CA and middleware servers are active, ensuring correct overall system performance. In the event of a server not being reachable, the operator will be notified by an alarm so that the problem may be corrected.

The **Technologies** view lists some of the technologies available in the Sencore VideoBRIDGE product family.

## 6.14.4 About — Credits

| Release info  | License | Technologies | Credits | System |
|---|---------|--------------|---------|--------|
| <p>Contains software licensed under the <a href="#">GNU General Public License</a> version 2. Please contact your dealer to receive copies of the source code for these parts.</p>  |         |              |         |        |
| <p>Contains software licensed under the <a href="#">GNU Lesser General Public License</a> version 2.1.</p>  |         |              |         |        |
| <p>Contains software licensed under the <a href="#">Mozilla Public License</a> version 2.0.</p>   |         |              |         |        |
| <p>Contains software licensed under the <a href="#">Apache License</a> version 2.0.<br/>Contributors: Zhi Li (zli@netflix.com), Todd Goodall (beyondmetis@gmail.com), Zhengxiong Zhang (zhang.zhixiong@gmail.com), Joe Lin (joe.yuchieh.lin@gmail.com), Eddy Wu (chihao.eddy.wu@gmail.com)</p>                |         |              |         |        |
| <p>Contains software from the cURL project licensed under the <a href="#">cURL license</a>.</p>   |         |              |         |        |
| <p>Contains software from the FFmpeg project licensed under the <a href="#">GNU Lesser General Public License</a> version 2.1.</p>  |         |              |         |        |
| <p>This product includes software developed by the <a href="#">OpenSSL Project</a> for use in the OpenSSL Toolkit. This product includes cryptographic software written by Eric Young (eay@cryptsoft.com). OpenSSL is licensed under both the <a href="#">OpenSSL license and original SSLeay license</a></p> |         |              |         |        |
| <p>Contains software based on the <a href="#">json.hpp library</a>. json.hpp is copyright © 2013-2019 Niels Lohmann.</p>  |         |              |         |        |
| <p>Contains the jQuery library from the <a href="#">JS Foundation</a>, licensed under <a href="#">the MIT license</a>. Copyright JS Foundation and other contributors.</p>  |         |              |         |        |
| <p>Contains software from the bitStream project, licensed under <a href="#">the MIT license</a>. Copyright © 2010-2011 VideoLAN.</p>  |         |              |         |        |
| <p>Contains software from the brunsli project, licensed under <a href="#">the MIT license</a>. Copyright © 2019 Google LLC.</p>   |         |              |         |        |
| <p>Contains libebur128, licensed under <a href="#">the MIT license</a>. Copyright © 2011 Jan Kokemüller.</p>  |         |              |         |        |
| <p>Contains software from the libpqxx project, licensed under <a href="#">the BSD license</a>. Copyright © 2001-2017 Jeroen T. Vermeulen.</p>   |         |              |         |        |
| <p>Contains software from the libpcap project licensed under the <a href="#">BSD license</a>.</p>   |         |              |         |        |

This view shows information about the software included with the 10G Probe.

## 6.14.5 About — System

| Process           | Status   | Started             | Usr  | Sys | Memory     |
|-------------------|----------|---------------------|------|-----|------------|
| probe.ewe         | Running  | 2024-03-22 16:48:09 | 5%   | 0%  | 100M       |
| probe.sap         | Running  | 2024-03-22 16:48:10 | 0%   | 0%  | 4M         |
| probe.flashserver | Running  | 2024-03-22 16:47:14 | 0%   | 0%  | 3M         |
| probe.tsosffload  | Running  | 2024-04-21 11:33:28 |      |     |            |
| probe.linkout     | Running  | 2024-04-21 11:33:28 |      |     |            |
| demodd            | Running  | 2024-03-22 16:47:12 | 0%   | 0%  | 4M         |
| vb258             | Disabled |                     |      |     |            |
| backplane         | Running  | 2024-03-22 16:47:11 | 0%   | 0%  | 1M         |
| probe.esyslog     | Running  | 2024-03-22 16:47:14 | 0%   | 0%  | 2M         |
| probe.etr         | Running  | 2024-03-22 16:47:12 | 0%   | 0%  | 55M        |
| probe.relay       | Running  | 2024-03-22 16:47:12 | 0%   | 0%  | 81M        |
| probe.ana         | Running  | 2024-03-22 16:47:12 | 1%   | 0%  | 27M        |
| probe.psi         | Running  | 2024-03-22 16:47:12 | 0%   | 0%  | 5M         |
| probe.vidana      | Running  | 2024-03-22 16:47:12 | 123% | 13% | 125M (+2M) |
| probe.capture     | Running  | 2024-03-22 16:47:12 | 0%   | 0%  | 4M         |
| probe.ott         | Running  | 2024-03-22 16:48:10 | 31%  | 13% | 14M        |
| probe.microbitr   | Running  | 2024-03-22 16:47:12 | 0%   | 0%  | 5M         |
| probe.srtrx       | Running  | 2024-03-22 16:47:12 | 0%   | 0%  | 6M         |
| nginx             | Running  | 2024-03-22 16:48:03 | 0%   | 0%  | 6M         |
| scgi-wrapper      | Running  | 2024-03-22 16:47:12 | 0%   | 0%  | 2M         |
| lldpd             | Running  | 2024-03-22 16:48:03 | 0%   | 0%  | 2M         |

**Disk status**

RAM Disk: **88% free (896M)**  
 Configuration: **94% free (8M)**  
 Flash Alarms: **99% free (32M)**  
 SD storage: **99% free (29G)**

**Server response time**

Static request: 57ms  Jittery values may be caused by browser overhead, network latency or heavy load

**Links**

[Debug...](#)  
[System status \(XML\)...](#)

The **System** view displays a snapshot of the current status of the system, to ensure correct 10G Probe operation.

The **Probe processes** overview displays the VB330 services that are required. All the VB330 services listed should have status *Running* or *Disabled* if the corresponding feature is not licensed or available. The current CPU and memory usage is also displayed.

**Disk status** displays free disk space to give the user some overview of disk resources available.

**Server response time** is determined upon entering the **System** view. When the **Redo** button is clicked, a new request is sent to the web server.

Clicking the **Debug...** link allows the user to generate a document containing debug information that may be useful if VB330 misbehavior is reported. This file should be sent along with a description of the misbehavior.

Clicking the **System status (XML)...** link generates an XML document with a short description of the system status.

## A Appendix: VB330 Versus VBC Alarms

The VB330 10G Probe alarms are independent of the VideoBRIDGE Controller alarms. The 10G Probe has been designed to yield instantaneous alarms based on the current measurements. This typically results in lots of short-lived alarms that would be “too much” for the VBC to report, as the VBC may control a large number of 10G Probes. The VBC therefore generates alarms based on error-second statistics gathered from 10G Probes during a selectable time period (default 60 minutes – sliding window).

Some the VBC alarms map to only one probe alarm type. Other the VBC alarms map to several probe or VB7880 Advanced Content Extractor alarms. As an example, the VBC alarm ETR pri one error does alarming for the following probe alarms:

- TS sync
- Sync byte
- PAT
- Continuity
- PMT
- Missing PID

The VBC GUI has functionality for searching for all 10G Probe alarms that have corresponding VBC alarms. This makes it easier to find the cause of an VBC alarm.

Ethernet measurement data are sent from the VB330 10G Probe together with Ethernet error-second threshold values (as set in the VB330 10G Probe **Setup — VBC thresh.** view). The VBC monitors the error seconds for each parameter and will raise an alarm provided that the error-seconds figure exceeds the threshold value, as monitored during the windowing period.

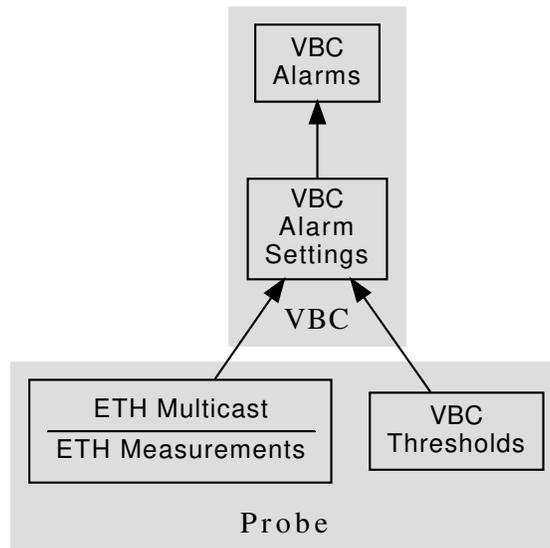


Figure A.1: VBC alarming based on 10G Probe measurements

## B Appendix: Monitoring Practices

This Appendix summarizes a few useful monitoring practices.

### B.1 RTP Monitoring

When running video inside an RTP wrapper it is possible to exactly deduce the number of dropped IP frames due to network issues. This is possible as a result of the 16-bit sequence counter inside the RTP header. When the protocol mapping is nTS/RTP the RTP parameters **RTPdrop**, **RTPdup**, **RTPooo** and **RTPlag** will be updated and the corresponding alarms **Packet drops:N**, **Duplicate packets:N** and **Out of order packets(lag:N)** are fired (if not switched off).

Note that the probe will perform out-of-order corrections before RTP packet loss analysis is performed.


Example of RTP sequences and their effects on monitoring:

| Sequence  | Effect   |
|---|--|
| ..., 10, 11, 12, 13, 14, 17, 18, 19, ...<br>2 dropped packets (15-16)   | Monitoring page: <b>RTPdrop:+2</b><br>Alarms & events: <b>RTP Packet drop: 2</b>   |
| ..., 10, 12, 13, 16, 17, 18, 19, ...<br>1 and 2 dropped packets (11, 14-15)   | Monitoring page: <b>RTPdrop:+3</b><br>Alarms & events: <b>RTP Packet drop: 3</b>   |
| ..., 10, 11, 15, 12, 14, 16, 18, 19, ...<br>2 dropped packets (13, 17)<br>1 out of order packets of order 3 (15 → 12) | Monitoring page: <b>RTPdrop:+2</b><br>Monitoring page: <b>RTPooo:+1</b><br>Monitoring page: <b>RTPlag: 3</b> (at least)<br>Alarms & events: <b>RTP Packet drops: 2</b><br>Alarms & events: <b>RTP out of order packets (lag:3)</b> |


### B.2 Default Multicast Monitoring

When the protocol mapping is nTS/UDP, meaning there is no RTP information in the multicast stream, there is no easy way to isolate and register network-induced errors. Assumptions can be done by performing continuity counter analysis for the content of each received UDP-frame on the fly. The probe will note CC-errors (**CCerr**) and generate corresponding alarms (**CC skips:N**).

Imagine the following MPEG-2 Transport Stream being generated by an encoder. The TS contains two PIDs (50 and 51) and the Continuity Counter (CC) values are continuous for each PID since there are no packets missing.

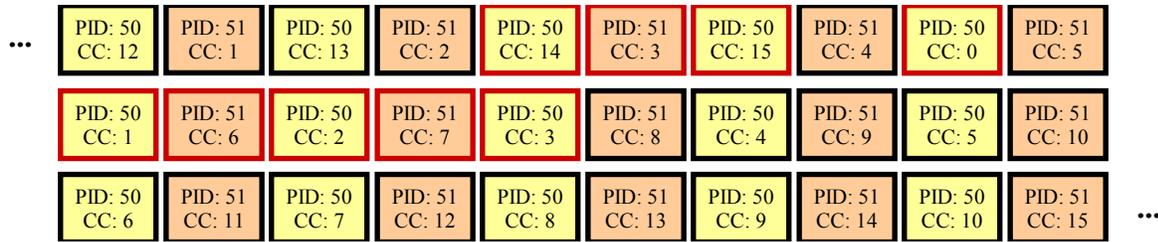

When the Transport Stream reaches our imaginary head-end some packets (those with red frame) have been lost (maybe due to a bad satellite connection). Our IP-Streamer packs 7 and 7 MPEG-2 TS packets into each UDP-frame (mapping is 7TS/UDP) and the resulting frames may look like:

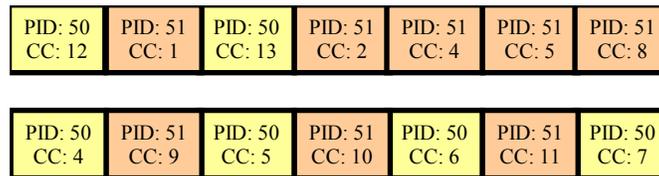

...

The probe's response to this multicast is summarized in the following table:

| Sequence  | Effect  |
|---|---|
| UDP packet #1 (7 MPEG2 TS packets):<br>PID 50: 12, 13, 14, 15<br>PID 51: 1, 2, 4, 5, 8<br>PID 51 has 2 CC discontinuities of 2 (2 → 4)<br>and 3 (5 → 8) | Monitoring page: <b>CCerr:+2</b>  |
| UDP packet #2 (7 MPEG2 TS packets):<br>PID 50: 4, 5, 6, 7<br>PID 51: 9, 10, 11<br>PID 50 has 1 CC discontinuity of 6 (13 → 4)                           | Monitoring page: <b>CCerr:+1</b>  |
| If no more CC-errors for at least 1 second  | Alarms & events:<br><b>CC skips:9 discontinuities:3</b><br>Depending on the thresholds you may also get: <b>MLR</b><br><b>&gt;= warning-threshold (9 &gt;= 1)</b> |

There were 9 TS packets missing (with red frame) and the alarm reflects this.

### B.3 Strategy for MediaWindow Analysis

This section provides further insight into MediaWindow analysis and suggests how the Ethernet threshold settings can be configured to maximize the usefulness of the MediaWindow graphs and alarms.

The MLR value is always calculated using the continuity counter inside the transport stream packets. Since the continuity counter is expected to increase by one for each packet of the same PID it is possible to detect missing TS packets by noting gaps in the continuity counters. Knowing that there are usually 7 transport stream packets inside one UDP packet you expect a continuity counter error of 7 if one UDP packet goes missing. This corresponds to an MLR value of 7. The range of the continuity counter is 4 bits meaning that if you are unlucky and lose exactly 16 packets for the same PID you will not be able to detect the packet loss at all. Losing 16 or more packets of the same PID is very rare and will only happen in networks with plenty of obvious problems.

Not all PIDs carry continuity counters. The null packets (PID 8191) and PIDs carrying PCR (program clock reference) do not carry continuity counters. This is the reason why losing one UDP packet does not necessarily result in an MLR of 7 but maybe 6 or even 5 (assuming the mapping is 7TS/UDP).

Systems typically do not mix the mappings among their streams so there is seldom a need to remember the mapping for streams in order to interpret the exact impact of MLR values.


The range of the MediaWindow graphs can be configured by the user. Even when the graph is updated in “real-time” each bar in the graph will represent a large number of elementary measurements. For a 5Mbit/s stream there will be approximately 500 elementary measurements per second, assuming a mapping of 7 TS packets into each UDP-frame (i.e. there are approximately 500 UDP packets per second). An elementary measurement is generated for each interval between two neighboring UDP frames.

Within each update-interval only the extreme IAT and MLR values are displayed in the graph. For IAT the peak inter-arrival time over the measurement period represents the IAT for that period. For MLR the highest loss ratio within any second represents the MLR for that period.

When the range of the graph is set to larger intervals, even more elementary measurements are merged for each bar-interval.


The rest of this discussion assumes the MediaWindow graph range is set to “running” since that lowers the probability that more packet losses occurred inside the same bar-interval.

The following figure shows how a large number of elementary measurements are represented by one bar in the graph.

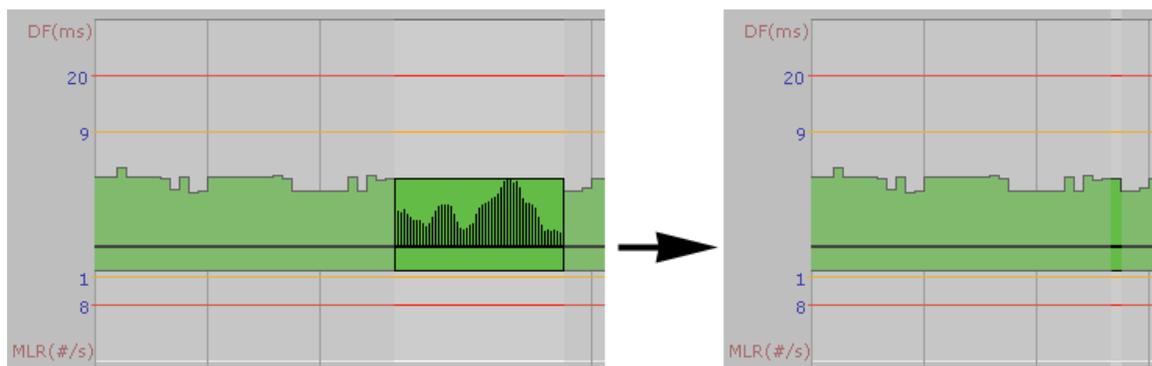


### B.3.1 IAT Before and After Router

Packet-loss that occurs before or inside a router will usually not be visible since the queuing mechanism at the outgoing interface of the router will send out packets in an orderly fashion. If however the packet-loss did occur after the router (due to line noise for example) thus affect the timing between two neighboring packets – effectively doubling it – the packet loss will always affect the IAT component for CBR streams. For VBR streams, that are jittery by default, the extra time gap may have no effect since there may already be other larger gaps within the MediaWindow interval.

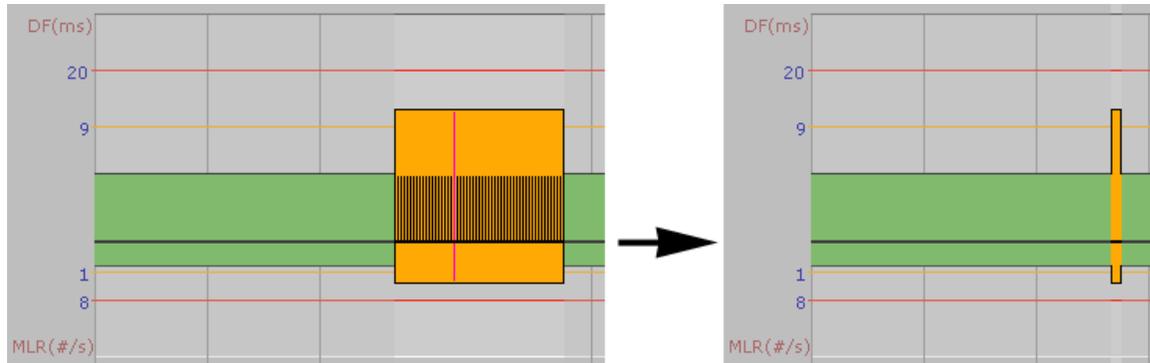

*If a UDP packet goes missing after it has left the router it will visually affect both the IAT and MLR for CBR streams. The pink line represents one elementary measurement.*

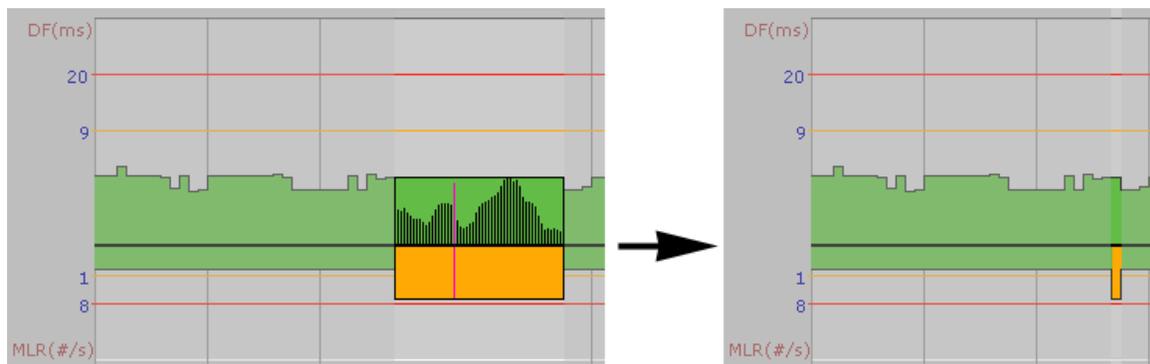


*For VBR streams a similar packet-loss will not necessarily affect the IAT graph even if the time between two neighboring packets doubles. The pink line represents the IAT and MLR value measured for the missing packet.*

### B.3.2 Identifying UDP Packet Loss


This discussion does not apply to streams with TS/RTP mapping since in that case identifying UDP packet loss is straight forward.

There is no fail-safe way to distinguish packet loss caused by dropping UDP packets from packet loss caused by dropping packets inside the TS layer. IP based networks will generally not introduce new errors in the TS layer. As soon as the TS layer is wrapped inside UDP packets all further processing operates on the UDP packets.

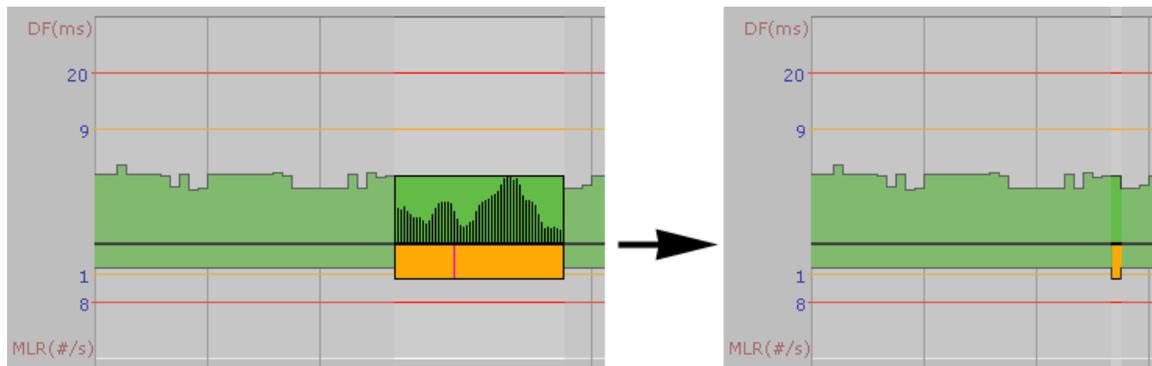

*The pink line indicates a packet loss of 1-4 with no jitter component.*

As a rule of thumb, the co-existence of small MLR readings (1-4) and no IAT readings can be assumed to have been caused by packet loss in the original TS data.

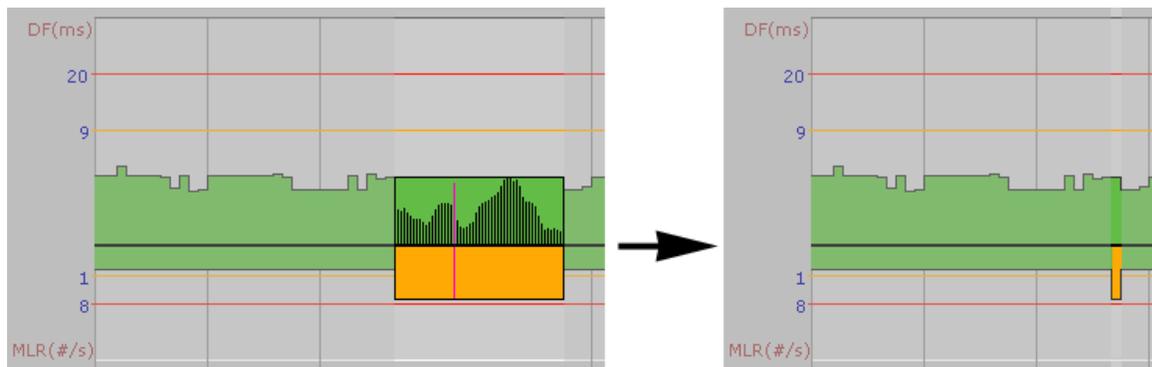

*The pink line indicates a packet loss of 6 or 7 and a doubling of the jitter component.*

A UDP packet-drop will usually show up in the MLR value as a multiple of the mapping value; for a mapping value of 7 TS packets into each UDP packet, the MLR component will be equal to 7, 14, 21 etc.

Slightly lower values such as 6, 13, and 20 can be expected if a missing UDP packet did contain one TS packet without continuity counter (i.e. a PCR packet with no payload).

As we have seen, there is no sure way to distinguish between UDP packet-loss and loss in the underlying TS packets. One way to deal with the situation is to have a probe doing zero readings close to the signal source before the network can introduce UDP packet loss.

## B.4 Multicast Thresholds

It is useful to configure individual threshold settings for IAT for each stream unless they are fixed at the same bit-rate. Streams that are being monitored by several probes should have equal Ethernet thresholds configured on each probe to make it easy to compare measurements for a stream across several probes.

As a rule of thumb the IAT warning threshold could be set to 50% above the max IAT value observed over a considerable period of time, the last 24h or so. The IAT error threshold could be set a little below the maximum jitter the system can tolerate – usually limited by the STB jitter tolerance. STB manufacturers should be able to provide information about how much jitter they can handle. Setting the Ethernet warning-threshold too high results in a graph where almost all plots are close to the x-axis and it becomes less useful to visually compare MediaWindow graphs.

For streams with TS/UDP mapping the default MLR threshold is set so that errors are reported if the number of CC errors exceeds the number of TS packets in one UDP frame (assumed to be 7).

## B.5 Content Thresholds

When enabling the various content analysis options in the **Content — Content thresh.**, a processing overhead is introduced. Some of the options introduce a relatively small performance overhead, whereas some may introduce a greater overhead. The overhead is also relative to the data that is being analyzed, performing picture analysis is heavier on a 4K UHD video stream than on an SD stream.

The **Main — CPU usage** view contains a **Backlog** column that indicate the length of the content analysis queue for each of CPU core. As long as the backlog value is stable, the system should have enough resources to handle the configured load. If the value keeps increasing, try disabling content analysis for a few streams, or filter away PIDs that do not need to be analyzed in the content threshold.

The VB330 will raise a *Content analysis overloaded* system alarm if it detects that it is unable to keep up with the configured load. If the backlog numbers indicate that only a few CPU cores are overloaded, you can try redistributing the streams using the **Main — CPU usage — Advanced** view, or try to reduce the load, as described above.

If the load on the content analysis process becomes extremely high, it might start to drop incoming data that it is unable to process. If this happens, the VB330 will raise a *Data queue overflow (btvidana) – Thumbnailing and freeze-frame analysis paused, SCTE35 data may be lost* system alarm.

## B.6 Dedicated interface for OTT

As a rule of thumb, you should never have OTT traffic on the same network as multicasts. This means that you should either use one 10G Probe for multicast and one for OTT, or you should use different and dedicated interfaces for each.

The interface used for OTT traffic is controlled using the **Setup — Routing** view.

## B.7 Monitoring HTTP Live Streaming (HLS)

In HLS, each profile is identified by its own playlist, whose URL is listed in the master playlist, which in turn is downloaded from the **Manifest URL** as configured in the channel configuration in the **OTT – Channels** view.

By default, the OTT profiles are identified by their URL. Some streaming systems generate profile URLs based on a session ID, and in some cases these session IDs are re-generated every time the master manifest is downloaded. In these cases, the OTT engine will see all profiles as new every round and is unable to retain any profile history. If this happens once, the event *All playlist URLs changed* is flagged, and if it happens repeatedly, the alarm *HLS playlist URLs unstable* will be raised on the channel.

In both cases, the recommendation is to enable the setting **Monitor HLS profile manifests only**. This will keep the downloaded master manifest in memory until the session times out (as indicated by the playlist URLs becoming unavailable), and will also change the way profiles are identified to instead use their position in the master manifest.

To avoid unwanted alarms about the session timing out, and gaps in the monitoring, set the **Reset connection after** timeout value in the **OTT — Settings** view to a value shorter than the session timeout.

## B.8 Monitoring RTMP and SHOUTcast

For RTMP and SHOUTcast, data is transmitted in real-time. To allow time for analysis, the 10G Probe downloads data in chunks of ten seconds and then stops, which means that it cannot continuously monitor streams of these types. Since monitoring blocks the OTT engine, channels of these types should be assigned their own engine or at least not be mixed with channels of other types.

## B.9 OTT descrambling with Verimatrix

If you are using a Verimatrix VCAS 3.7 server to encrypt your OTT stream, you can get the 10G Probe to descramble the segments. It will use the same API to descramble the segments, as the encoder or segmenter uses to encrypt the segments. To achieve this, the 10G Probe needs to be able to reach the VCAS server's private encoder interface.

Since the 10G Probe only uses a single interface for OTT, your network needs to be configured such as the 10G Probe can reach both the VCAS server and your origin server on the same interface.


## B.10 OTT Bandwidth requirements

The recommended available bandwidth for full coverage OTT monitoring is equal to the sum of the profile bitrates monitored plus an estimated overhead of 20 % for manifests and IP, TCP and HTTP headers.

**Note:** The OTT engines will be using all available bandwidth on the interface in spikes while downloading the segments, this is the main reason why it is not a good idea to mix multicasts on the same interface, as it can cause packet drops which multicasts cannot handle.

# C Appendix: OTT Profile Health

## C.1 OTT Profile Health Bar

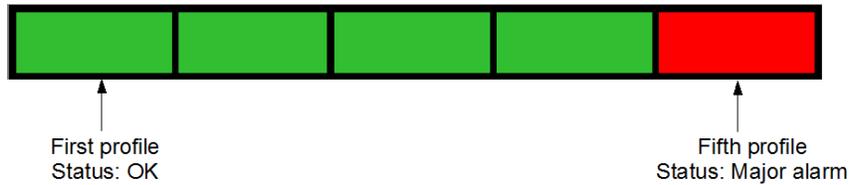


The profile health bar displayed at channel level shows an overview of current status for individual channel profiles. Different colors indicate status:

- Green: OK
- Yellow: Warning
- Orange: Error
- Red: Major
- Black: Fatal

All enabled alarms may affect the profile health bar, and alarm severities can be assigned to each alarm in the **Alarms — Alarm setup** view.

## C.2 OTT Profile Health Timeline

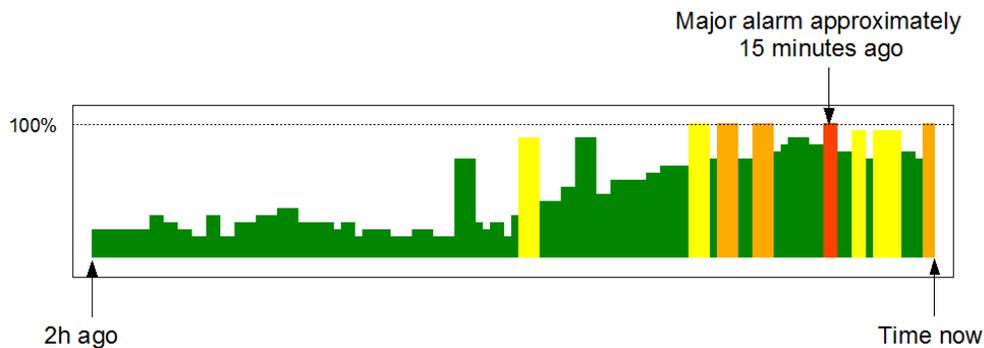

The OTT profile health timeline shows information about channel bitrate and channel alarm status for the last two hours, with a time resolution of one minute. Green parts of the timeline indicate profile download time versus segment length. The graph is scaled so that 100% indicates a segment download time identical to segment length (in seconds), segment length being signaled in the profile manifest. Quick segment download times therefore result in a ‘low’ green graph, as seen in the left hand part of the graph above. When download times exceed the user defined profile bitrate warning and error thresholds the graph is colored yellow and orange respectively.

In addition to profile bitrate indication the graph displays profile status information related to non-bitrate alarms. Active profile alarms are represented in the graph as 100% bars, the color reflecting the severity of the alarm. If several alarms are active within a one minute period the graph color will reflect the most severe alarm. Historical alarms can be examined in more detail by viewing the OTT alarm list.

# D Appendix: SRT Streams

## D.1 Introduction

### D.1.1 Overview

SRT is a user-level transport protocol that ensures *secure, reliable transport* of video and audio across multiple unstable network connections. With the UDP data transfer protocol at its base, SRT introduces several enhancements such as end-to-end encrypted data packets (using AES), improved congestion control and efficient packet loss recovery.

### D.1.2 Reception

The probe currently supports receiving up to 10 concurrent SRT streams. SRT reception is configured by editing a stream in the **Multicasts — Streams** Edit view and providing the necessary SRT parameters. In this manner the received SRT stream is turned into a stream for TS monitoring. More details are provided in section 6.4.8.

The probe can use the SRT protocol to receive streams in three modes of operation:

- **Caller:** the probe sends the connection request to the peer, which must be listener, and this way it initiates the connection.
- **Listener:** the probe waits to be contacted by any peer caller.
- **Rendezvous:** both parties are equivalent and both the probe and the peer attempt to initiate a connection simultaneously. Whichever party happens to start first (or succeeds in punching through the firewall first) is considered to have initiated the connection.

When using the probe in **Listener** mode it is mandatory to specify:

- **Port:** local port to listen for connections on

The **Host** field is ignored in **Listener** mode.

When using the probe in **Caller** or **Rendezvous** mode it is mandatory to specify:

- **Host:** remote IP address to connect to
- **Port:** remote port to connect to

All modes of operation may be encrypted and therefore accept a passphrase to decrypt the stream.

In all modes of operation the probe utilizes the network interface the stream is “joined” on, specified in the **General** tab in the **Multicasts — Streams** Edit view.

### D.1.3 Transmission

The probe supports relaying up to two streams using **RDP (Return Data Path)**, and these may be transmitted using the SRT protocol. SRT transmission is configured in the **RDP — Setup** view.

When mode *Relay over IP* is selected, *Encapsulation* can be set to *SRT*.

*Encapsulation* can be set to *SRT* when the *Relay over IP* mode is selected. It is then possible to specify these SRT Transmit options:

- **Mode:** The SRT mode of operation utilized to transmit.
- **Passphrase:** passphrase to encrypt the forwarded stream. Must be between 10 and 79 characters long.
- **The latency value insisted upon by the sender side as a minimum value for the receiver.** Minimum 120ms.

The probe can use the SRT protocol to transmit streams in three modes of operation:

- **Caller:** the probe sends the connection request to the peer, which must be listener, and this way it initiates the connection.
- **Listener:** the probe waits to be contacted by any peer caller.
- **Rendezvous:** both parties are equivalent and both the probe and the peer attempt to initiate a connection simultaneously. Whichever party happens to start first (or succeeds in punching through the firewall first) is considered to have initiated the connection.

In all modes of operation the probe utilizes the network interface the stream is “relayed” over, specified by the *Relay via interface* configuration option in the RDP Setup page.

The current version of the SRT implementation is based on version 1.4 of the Haivision reference implementation.

# E Appendix: On-line License Activation

## E.1 Introduction

The 10G Probe uses licenses which are activated and updated periodically over the Internet, without the need for human intervention.

When the 10G Probe sends the on-license activation over the Internet, it includes some basic information to verify the 10G Probe. This includes a basic hardware footprint, as well as parts of the SNMP identification data configured in the **Setup — Params** view.

## E.2 Requirements

The VB330 needs to be able to contact the license server either directly or via a proxy server, as described below. If proxy connectivity also is not available, an off-line activation procedure is available as well.

The VB330 must also be configured with a correct date and time. Time synchronization is configured in the **Setup — Params** view. If time synchronization is not possible, set the time manually using the **Setup — Time** view.

### Direct access to activation server

To activate the license automatically, the VB330 needs to be configured with a valid DNS server address in the **Setup — Ethernet** view, which is able to look up the host name `license.microanalytics.org`. The VB330 needs to be able to contact the host this name resolves to using HTTPS on port 443.

### Using the VBC server as a proxy

When installing the VBC software to a server, a proxy is automatically configured to allow its connected blades to connect to (and only to) the licensing system as described in the previous section.

When the VB330 has been configured with the address to the VBC server in the **Setup — Routing** view, the VB330 will automatically attempt to use this proxy if a direct connection fails.

### Using an arbitrary proxy server

The 10G Probe can be configured to use an arbitrary proxy server to connect to the licensing server. By adding the URL to a proxy server in the **Setup — Security — Ports** view, the VB330 will automatically attempt to use this proxy if a direct connection fails.

## Off-line activation procedure

If the VB330 network is completely disconnected from the Internet, it is still possible to activate the license using the off-line activation procedure. Click the **Renew license off-line** button to start the off-line activation procedure. This procedure has to be repeated yearly.

**Renew license off-line**

Perform the following steps to renew the license:

1. Please verify that the system time is set correctly (time is now 2020-11-02 14:37:30 UTC).
2. [Download the license request document to your computer.](#)
3. Upload the license request document to the license activation interface by visiting <https://license.microanalytics.org/offline>
4. Upload the license document received from the license activation interface:

Ingen fil har valts

Please note: If the system is restarted prior to completing step 4, you must start over from step 2.

Follow the steps described in the dialog to renew or activate the license. To abort the procedure, click the **License details** button to return to the previous screen.

First, download the license request document from the 10G Probe to the computer you are browsing from. Once the file has been downloaded, connect the computer to the Internet if not already connected, and open the link to the off-line license manager<sup>1</sup>.

**Activate license**

Please upload the license request document (.bin) here:

No file chosen

If you are activating a new system and need to claim a license, enter the license key here:

Leave empty to renew an existing or pre-allocated license.

<sup>1</sup><https://license.microanalytics.org/offline>



Select the `.bin` file that was downloaded in the first step, and optionally add a license key if the system you are activating did not already have a license attached. Once done, click the **Request license** button and save the license document file to the computer.

If needed, re-connect to the VB330 network, return to the **Renew license off-line** view, select the `.pem` file that was generated by the license manager and press **Go!**

The license should now be added to the system. If this is a new or different license, the 10G Probe will reboot. Use the **License details** view to verify that the license was applied correctly.

## F Appendix: Software Maintenance

Purchasing yearly software maintenance enables future feature protection and guarantees access to the latest software for the 10G Probe.

The software maintenance can be purchased for a two or four year period, typically initially purchased together with the system itself, during which new major releases can be installed.

The current software maintenance period is displayed in the **About — License** view, see chapter 6.14.2 for more details. For an overview of software maintenance periods for multiple units, please refer to the **Equipment** view on the VideoBRIDGE Controller server.

Use the **Data — Software** view to update the VB330 software, please refer to chapter 6.13.2.

# G Appendix: Software Upload

The process of performing a software upload to the probe involves the following steps:

1. Obtain the software image.
2. Export and save the probe configuration.
3. Delete any existing probe stream recordings.
4. Transfer the image to the probe using the software upload functionality in the **Data — Software** view or by using ftp, and save the image to flash.
5. Wait while the software is being saved.
6. Verify the new image.

## G.1 Obtain the software image

The image will have a **.tea** extension and is distributed in a compressed ZIP archive together with the readme file detailing changes for this patch release.

Please study the **readme** file to be aware of any important information related to your current software patch. Subsequent patch details may indicate that significant bugs were identified and resolved after your current version and indicate where special care is recommended.

You can find the current version number under **About — Release**.

When upgrading to a new major version, please also study the release notes and **readme** files for all versions between your currently installed major version and the one you are upgrading to, as there might be important changes that you need to be aware of.

If you require any assistance understanding the release notes or readme files please contact your first line support service.

## G.2 Export and save the probe configuration

Software upgrade should not alter the probe configuration, however for safety is a good idea to export the probe configuration (from the **Data — Configuration** view) and save it to a file. Please refer to chapter 6.13.1.

### G.3 Delete any existing probe stream recordings

If any stream recordings is stored on the probe, this may prevent software upgrade, as there might not be enough internal disk space available for the software image upload to be possible. Therefore delete any recordings prior to software upload – this is done in the **RDP — Control** view.


### G.4 Transfer the image to the probe and save to flash

#### Using the software upload functionality in the Data view

From the **Data — Software** view select the software image file to be uploaded and click the **Go!** button. When the software has been successfully transferred to the probe click the **Save flash** button and confirm.



Progress bars are displayed to show the flash save status.

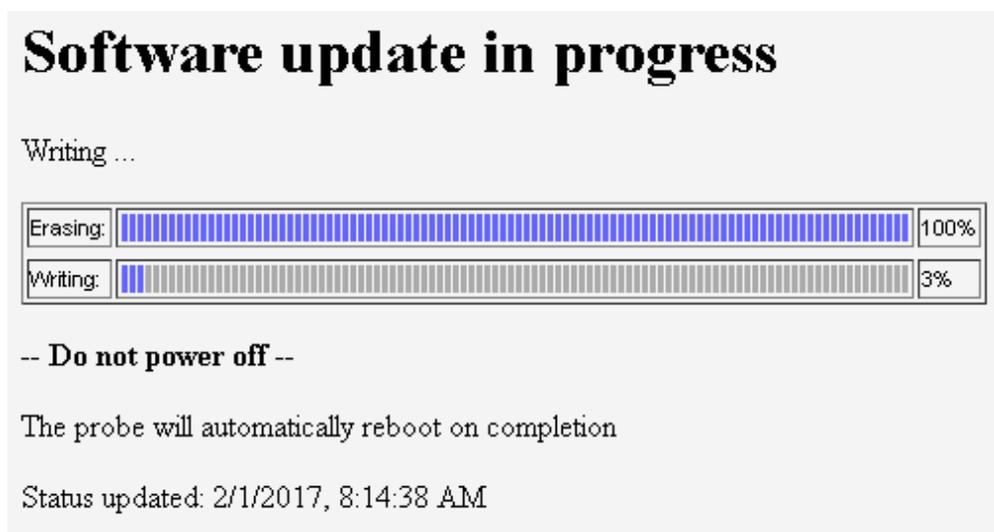

Note that the probe will reboot when the new software is successfully stored in flash, and the probe will be unresponsive until reboot has completed.


## Using ftp and telnet/ssh

This method is only available if the corresponding services have been enabled in the **Setup — Security — Ports** view. The *ftp* service is needed for the file transfer, and either *telnet* or *ssh* for remote login.

### *Step 1, alternative A: Using Windows Explorer*

Open a Windows Explorer window. Click the address field and type `ftp://10.0.20.101` (replace 10.0.20.101 with the probe's IP address) and hit . When asked to log in, enter the User name **admin** and password **elvis** in all lower-case letters (this password can be changed in the **Setup — Security — Password** view).

Then drag the software image onto the empty Windows Explorer window. It may be necessary to retype the string including user and password, as described above. When the file has been copied onto the probe the Windows Explorer window may look as shown below.

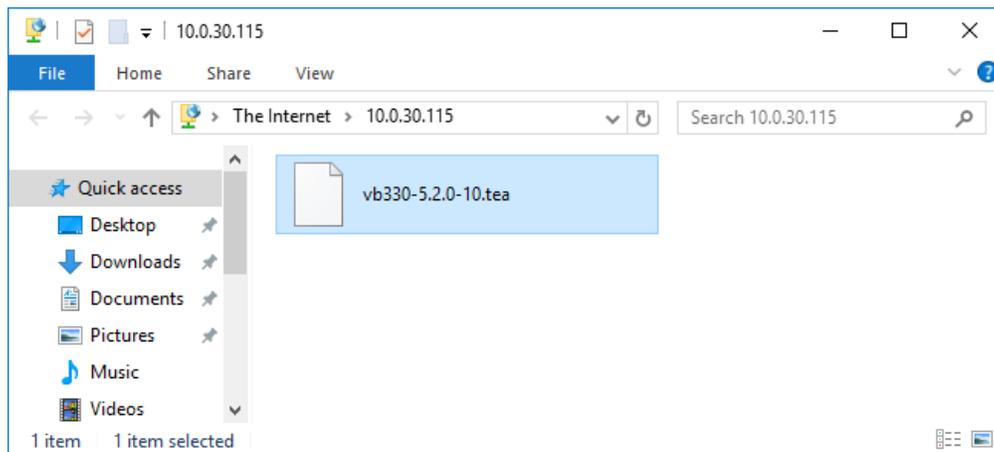

### *Step 1, alternative B: Using a terminal based ftp client*

In a terminal window type the following commands, replacing the software image name with the relevant one (the path to the folder in which the software is located should be specified): When asked to log in, enter the User name **admin** and password **elvis** in all lower-case letters (this password can be changed in the **Setup — Security — Password** view).

```
ftp 10.0.20.101
Connected to 10.0.20.101.
220 bftpd 4.4 at 10.0.20.101 ready.
503 USER expected.
User (10.0.20.101:(none)): admin
331 Password please.
Password: elvis
```

```
230 User logged in.  
ftp> binary  
200 Transfer type changed to BINARY  
ftp> put vb330-5.2.0-10.tea  
...  
ftp> bye
```

*Step 2: Initiate the save to flash using telnet, ssh or USB cable*

The image, which is now stored on the probe's RAM-disk, needs to be saved to flash.

In a terminal window type these commands, replacing the IP address with the relevant one (note that the password will not be visible on the screen):

```
telnet 10.0.20.101  
gbprobe login: save_flash  
password: save_flash
```

You can also use an Secure Shell (ssh) client, such as PuTTY<sup>1</sup>, or connect directly using a USB cable as explained in section 4.8.2. Log in using the same user-name and password as mentioned for the Telnet option above.

## G.5 Wait while the software is being saved

This will take 6–15 minutes. The probe will then reboot automatically. The probe should state that the software image has been saved successfully.

When using the alternate method do not disconnect the telnet, ssh or USB session before the software upgrade is completed.

**Note that if the probe is powered off while saving image to flash it will not be able to reboot normally afterwards.**

## G.6 Verify the new image

Connect a browser towards the probe and verify the version and build time in the **About — Release info** view.

---

<sup>1</sup><https://www.chiark.greenend.org.uk/~sgtatham/putty/>

## G.7 Software upload troubleshooting

If the upgrade is rejected, verify that the software version you are trying to upload is covered by software maintenance. Refer to F Appendix: Software Maintenance for more details.

Probes that are unable to execute the user program (usually caused by interrupting the save-to-flash process described above) can still be upgraded. Contact Sencore for details.

To verify that the probe is unable to start the user program, connect the USB cable as explained in section 4.8.2 and reboot the probe. The diagnostics output will tell if the probe is unable to locate or execute the user program.

If the web interface does not appear to work correctly straight after upgrading the probe it may be because the web browser is using files that are cached. Files may be cached for up to one hour in the web browser. To fix the issue, clear the cache manually:

**Google Chrome:** Settings — Advanced — Clear browsing data — Cached images and files

**Mozilla Firefox:** Options — Privacy & Security — Cached Web Content — Clear Now

**Microsoft Edge:** Settings — Clear browsing data — Choose what to clear — Cached data and files

Note that the probe configuration may be lost when downgrading to an older software version. In this case the saved configuration file may be useful.

## H Appendix: Restoring probe factory defaults

It is possible to reset the probe to factory settings, erasing most information about the probe configuration and alarm history. For convenience, the network configuration is kept.

Also note that the unit license key should be noted and stored before the factory reset is performed, as it might be reset by the factory reset process. The license key is found in the **About — License** view of the probe, please refer to section 6.14.2. The license key is also printed during the factory reset process.

To perform a factory reset of the probe, connect to it using the USB cable using the method described in section 4.8.2. Instead of logging in as **admin**, log in with the user name **reset\_factory** and the password **reset\_factory**. This will start the factory reset process. Do not close the terminal window during the reset process. It is also possible to connect using telnet or ssh, if the corresponding setting has been enabled in the **Setup — Security — Ports** view. Remote factory reset is by default disabled.

When regular web connection is established, verify that the license key is present in the **About — License** view of the probe GUI. If it is not, type or paste it in the license key field and click the Submit button.