



MRD 5800

Advanced Modular Receiver

User Manual



Copyright

© 2017 Sencore, Inc. All rights reserved.
3200 Sencore Drive, Sioux Falls, SD USA
www.sencore.com

This publication contains confidential, proprietary, and trade secret information. No part of this document may be copied, photocopied, reproduced, translated, or reduced to any machine-readable or electronic format without prior written permission from Sencore. Information in this document is subject to change without notice and Sencore Inc. assumes no responsibility or liability for any errors or inaccuracies. Sencore, Sencore Inc, and the Sencore logo are trademarks or registered trademarks in the United States and other countries. All other products or services mentioned in this document are identified by the trademarks, service marks, or product names as designated by the companies who market those products. Inquiries should be made directly to those companies. This document may also have links to third-party web pages that are beyond the control of Sencore. The presence of such links does not imply that Sencore endorses or recommends the content on those pages. Sencore acknowledges the use of third-party open source software and licenses in some Sencore products. This freely available source code can be obtained by contacting Sencore Inc.

About Sencore

Sencore is an engineering leader in the development of high-quality signal transmission solutions for the broadcast, cable, satellite, IPTV, telecommunications, and professional audio/video markets. The company's world-class portfolio includes video delivery products, system monitoring and analysis solutions, and test and measurement equipment, all designed to support system interoperability and backed by best-in-class customer support. Sencore meets the rapidly changing needs of modern media by ensuring the efficient delivery of high-quality video from the source to the home. For more information, visit www.sencore.com.

Revision History

Date	Version	Description	Author
10/31/2012	0.1	First Draft	ACD
02/04/2013	1.0	Initial Release	ACD
04/18/2013	1.1	Specification Edits and GUI Changes	ACD
06/19/2013	1.2	Specifications Edits	GAK
06/20/2013	1.3	Updates for 1.1.2 Release	GJL
07/10/2013	1.4	Edits	GJL
08/30/2013	1.5	Update for 1.2.0 Release	NGJ
11/21/2013	1.6	Update for 1.3.0 Release	NGJ
12/16/2013	1.7	Update noise figure	TLD
02/28/2014	1.8	Update for 1.4.0 Release	CDP
05/07/2014	1.9	Update for 2.0.0 Release	CDP
06/17/2014	1.10	Update for 2.0.2 Release	CDP
09/18/2014	1.11	Update for 2.1.0 Release	CDP
10/31/2014	1.12	Update for 2.2.0 Release	CDP
02/05/2014	1.13	Update for 2.2.2 Release	JDF
3/9/2015	1.14	Update for 2.3.0 Release	CDP
7/8/2015	1.15	Update for 2.4.0 Release	CDP
10/21/2015	1.16	Update for 2.5.0 Release	CDP
2/24/2016	1.17	Update for 3.0.0 Release	CDP
6/6/2016	1.18	Update for 3.1.0 Release	CDP
9/23/2016	1.19	Update for 3.2.0 Release	CDP
04/07/17	1.20	Update for 3.3.0 release	ACD

Safety Instructions

- Read these instructions
- Keep these instructions
- Heed all warnings
- Follow all instructions
- Do not use this apparatus near water
- Clean only with dry cloth
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Do not expose this apparatus to dripping or splashing and ensure that no objects filled with liquids, such as vases, are placed on the apparatus.
- To completely disconnect this apparatus from the AC Mains, disconnect the power supply cord plug from the AC receptacle.
- The mains plug of the power supply cord shall remain readily operable.
- **Damage Requiring Service:** Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - When the power-supply cord or plug is damaged.
 - If liquid has been spilled, or objects have fallen into the product.
 - If the product has been exposed to rain or water.
 - If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of the controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
 - If the product has been dropped or damaged in any way.
 - The product exhibits a distinct change in performance.
- **Replacement Parts:** When replacement parts are required, be sure the service technician uses replacement parts specified by Sencore, or parts having the same operating characteristics as the original parts. Unauthorized part substitutions made may result in fire, electric shock or other hazards.

SAFETY PRECAUTIONS

There is always a danger present when using electronic equipment.

Unexpected high voltages can be present at unusual locations in defective equipment and signal distribution systems. Become familiar with the equipment that you are working with and observe the following safety precautions.

- Every precaution has been taken in the design of your MRD 5800 to ensure that it is as safe as possible. However, safe operation depends on you the operator.
- Always be sure your equipment is in good working order. Ensure that all points of connection are secure to the chassis and that protective covers are in place and secured with fasteners.
- Never work alone when working in hazardous conditions. Always have another person close by in case of an accident.
- Always refer to the manual for safe operation. If you have a question about the application or operation call Sencore for assistance.
- **WARNING** – To reduce the risk of fire or electrical shock never allow your equipment to be exposed to water, rain or high moisture environments. If exposed to a liquid, remove power safely (at the breaker) and send your equipment to be serviced by a qualified technician.
- To reduce the risk of shock the MRD 5800 must be connected to a mains socket outlet with a protective earthing connection.
- For the MRD 5800 the mains plug is the main disconnect and should remain readily accessible and operable at all times.
The MRD 5800 is equipped with an internal system battery. The MRD 5800 must be sent to Sencore service for replacement of this battery.
- When installing the MRD 5800 utilizing the DC power supply, the power supply **MUST** be used in conjunction with an over-current protective device rated at 50 V, 5 A, type: Slow-blo, as part of battery-supply circuit.
- To reduce the risk of shock and damage to equipment, it is recommended that the chassis grounding screw located on the rear of the MRD 5800 – be connected to the installation's rack, the vehicle's chassis, the battery's negative terminal, and/or earth ground.

CAUTION – Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

FCC Class A Information

The MRD 5800 has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his or her own expense.

Shielded cables must be used with this unit to ensure compliance with the Class A FCC limits.

⚠ Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Dolby Digital Information

This product has been manufactured under license from Dolby Laboratories.

“Dolby Digital”, “AC-3”, and “Dolby Digital Plus” are licensed trademarks of Dolby Laboratories.

Package Contents

The following is a list of the items that are included along with the MRD 5800:

1. Declaration of Conformity
2. AC Power Cable
3. Quick Start Guide

Note: If any option cables were ordered with the MRD 5800, they will be included in the box as well.


If any of these items were omitted from the packaging of the MRD 5800 please call 1-800-SENCORE to obtain a replacement. Manuals for Sencore products can be downloaded at www.sencore.com



1) Declaration of Conformity



2) AC Power Cable

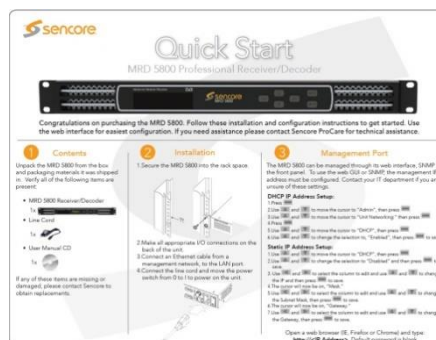

3) Quick Start Guide

Table of Contents

Section 1 Overview	11
1.1 Product Introduction.....	12
1.2 Front Panel Overview	12
1.3 Rear Panel Overview	12
1.4 Cooling.....	13
1.5 Rack Information.....	13
Section 2 Installation	14
2.1 Rack Installation	15
2.2 Power Connection	15
2.3 AC Power Connection	15
2.4 AC Dual Redundant Power Connection (optional)	16
2.5 DC Power Connection	16
2.6 Maintenance	16
2.7 Network Setup via Front Panel	16
Section 3 Operating the Front Panel	19
3.1 MRD 5800 Front Panel Overview	20
Section 4 Operating the Web Interface	22
4.1 MRD 5800 Web Interface Overview	23
4.1.1 Logging into the MRD 5800 Web Interface	23
4.1.2 Hiding Unused Inputs	23
4.1.3 Buttons and Status Indicators.....	23
4.1.4 Drag and Drop Menus	24
4.2 Main Panel.....	25
4.2.1 Configuring Active Inputs.....	25
4.2.2 Configuring ASI Input	27
4.2.3 Configuring MPEG/IP Input	28
4.2.4 Configuring DVB-S/S2/S2X Input.....	31
4.2.5 Configuring DVB-S/S2 Input.....	33
4.2.6 Configuring 8VSB/QAM Input.....	35
4.2.7 Configuring Turbo PSK Input	36
4.2.8 Configuring DVB-T2/C2/ISDB-T Input.....	37
4.2.9 Configuring DVB-CI Descrambling.....	39
4.2.10 Configuring BISS Descrambling.....	41
4.2.11 Configuring Service Selection	43
4.2.12 Configuring Video Services	47
4.2.13 Configuring Secondary Video Services.....	49
4.2.14 Configuring Audio	51
4.2.15 Configuring Genlock	53
4.2.16 SCTE35	54
4.2.17 ESAM.....	57
4.2.18 Configuring Ancillary Data Options	59
4.2.19 Configuring SDI Outputs Port 1 & 2	60
4.2.20 Configuring SDI Audio Embedding.....	65
4.2.21 Configuring Secondary SDI Outputs	66
4.2.22 Configuring Secondary SDI Audio Embedding	69
4.2.23 Configuring Composite Output	71
4.2.24 Configuring Analog Audio Output	72

4.2.25	Configuring Digital Audio Output	73
4.2.26	PID Filter	73
4.2.27	Configuring ASI Output.....	74
4.2.28	Configuring the MPEG/IP Outputs	75
4.2.29	Configuring the MPEG/IP MPE Outputs.....	77
4.2.30	Viewing PSIP Information.....	79
4.3	Admin Panel	80
4.3.1	Changing Unit Password	81
4.3.2	Profiles.....	81
4.3.3	General Settings.....	82
4.3.4	Unit Network Configuration.....	83
4.3.5	MPEG/IP Network Configuration	84
4.3.6	Licensing.....	86
4.3.7	Date/Time	86
4.3.8	Configuring SNMP	87
4.3.9	Syslog	89
4.3.10	In-Band Control	90
4.3.11	Updating the MRD 5800	90
4.3.12	Reboot Unit.....	92
4.3.13	Reset Defaults	92
4.4	Reporting Panel	93
4.4.1	Active Alarms.....	93
4.4.2	Event Logs.....	94
4.4.3	Configuring the Logs	95
4.5	About Panel	97
Section 5 Appendices.....		98
Appendix A	– Acronyms and Glossary.....	99
Appendix B	– Error and Event List.....	102
Appendix C	– Specifications.....	105
Appendix D	– Pinouts for Analog Audio and Relay Connectors	116
	116	
Appendix E	– MRD 5800 Audio Explanation	117
Appendix F	– MRD 5800 Discrete Audio Configuration	120
Appendix G	– Open Source Software.....	121
Appendix H	– Warranty	123
Appendix I	– Support and Contact Information	123

Section 1 Overview



Introduction

This section includes the following topics:

1.1	Product Introduction.....	12
1.2	Front Panel Overview	12
1.3	Rear Panel Overview.....	12
1.4	Cooling.....	13
1.5	Rack Information.....	13

1.1 Product Introduction

The flagship MRD 5800 Advanced Modular Receiver continues Sencore's long history of leadership in the receiver/decoder space. The product boasts a full complement of cutting-edge features, including 4:2:2 H.264 8bit/10bit decoding, up to 8 individual audio PIDs, 16/32APSK satellite demodulation, and 1080p60 video support with 3G-SDI output. This feature set makes the MRD 5800 the ideal choice for contribution reception or demanding distribution applications which require a future-proof set of specifications.

Every MRD 5800 ships with a full complement of basic inputs and outputs built-in, including ASI input and output and dual SD/HD/3G-SDI outputs. The addition of a digital video output means that video monitoring is as easy as finding the nearest standard consumer television or PC monitor. In addition, available factory-configurable MPEG over IP I/O and DVB-S2 receiver modules make adapting the product to almost any use case easy.

The receiver also maintains Sencore's long tradition of ease of use, with a straight-forward web interface accessible via all major browsers and complete control of the unit via the front panel keypad, and is backed by Sencore's best-in-class staff of ProCare support engineers.

1.2 Front Panel Overview


The MRD 5800 can be controlled from the front panel using the LCD screen and buttons that are shown below. A detailed description of using the front panel can be found in Section 3.1. All hardware listed below comes standard except for the DVB-CI slots which are a factory installed option.



1. LCD screen
2. Input Indicator
3. Error Indicator
4. Up, Down, Left, Right buttons
5. Back and Enter Buttons
6. 2x DVB-CI Slots (Factory Option)

1.3 Rear Panel Overview

The MRD 5800 comes standard with all of the hardware listed below except where noted as a factory installed option. The two option cards available for the MRD 5800 are the Quad Input DVB-S/S2 card or dual port MPEG/IP Input/Output card. ASI is the standard input on all MRD 5800 units. The external genlock reference connection is also a factory installed option.



1. RJ45 Management Port
2. Relay Output Connector
3. External Genlock Reference Input (Factory Option)
4. Eight Digital Audio Outputs
5. Two 15-Pin Analog Audio Connectors
6. Composite Video Output
7. Two 3G/HD/SD-SDI Output Connectors (mirrored)
8. Digital Video Output Connector
9. ASI I/O Connectors
10. Option Card Slot #1 (factory installed)
11. Option Card Slot #2 (factory Installed)
12. Chassis ground
13. Optional Dual Power Supply
14. Optional Simultaneous SD Video Card (factory installed)

1.4 Cooling

The MRD 5800 is cooled via forced induction through the front of the unit and exhausted through the vents in the rear of the chassis. The MRD 5800 is equipped with a temperature controlled status indicator. If the temperature inside the unit exceeds 60°C the red “Error” text will illuminate on the front panel and a description of the error will appear in the “Error List.”

1.5 Rack Information

The MRD 5800 is intended to be mounted in a standard 19” rack. It occupies 1RU of rack space and the connections are all on the rear of the unit.

Section 2 Installation



Introduction


This section includes the following topics:

2.1	Rack Installation	15
2.2	Power Connection	15
2.3	AC Power Connection	15
2.4	AC Dual Redundant Power Connection (optional)	16
2.5	DC Power Connection	16
2.6	Maintenance	16
2.7	Network Setup via Front Panel	16

2.1 Rack Installation

To install the MRD 5800 into a rack use the following steps:

1. Determine the desired position in the rack for the MRD 5800 making sure that the air intake on the front of the unit and the exhausts on the sides of the unit will not be obstructed.
2. Insert the rack mount clips into place over the mounting holes in the rack.
3. Slide the MRD 5800 into position in the rack.
4. Secure the MRD 5800 to the rack by installing the four supplied screws through the front mounting holes and tightening.
5. If needed, secure a grounding wire use the grounding location on the rear panel of the MRD 5800. See Section 1.3 for grounding location.

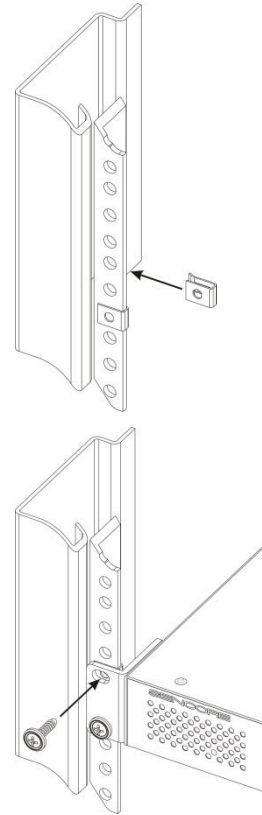

2.2 Power Connection

Using the proper power connections is vital to the safe operation of the MRD 5800. Only use the supplied 3-prong power connector or one with equal specifications. NEVER tamper with or remove the 3rd – prong grounding pin. This could cause damage to the MRD 5800, personnel, or property.

2.3 AC Power Connection

The MRD 5800 is intended for use on either 120V or 240V systems. The power supply will automatically detect the system it is connected to. To hook up the power use the following steps:

1. Locate the AC power cord that was included with the MRD 5800.
2. Plug the female end of the power cord (end with no prongs) into the back of the unit.
3. Locate a protected outlet (usually inside of the rack) to plug the male end of the power cable into.

2.4 AC Dual Redundant Power Connection (optional)

The Dual Redundant option allows the MRD 5800 to be powered by two separate supplies either operating 120V or 240V systems. The power supply will automatically detect the system it is connected to. To hook up the power use the following steps:

1. Locate the AC power cord that was included with the MRD 5800.
2. Plug the female end of the power cord (end with no prongs) into the back of the unit.
3. Locate a protected outlet (usually inside of the rack) to plug the male end of the power cable into.

2.5 DC Power Connection

The MRD 5800 with the DC chassis option is intended for use on 48V DC systems. A power cable is not included for this option. In order to apply power to the unit in this configuration, simply connect the screw terminals on rear of the unit to the rack's DC power rails.

Be sure that the power source and cable is used in conjunction with an over-current protective device rated at 50 V, 5 A, type: Slow-blo fuse as part of battery-supply circuit. Also, to reduce the risk of shock and damage to equipment, it is recommended that the chassis grounding screw (1.3) located on the rear of the MRD 5800 – be connected to the installation's rack, battery negative terminal, and/or earth ground.

2.6 Maintenance





The MRD 5800 is virtually a maintenance-free piece of equipment. There are no user serviceable parts on the inside of the unit


2.7 Network Setup via Front Panel




The MRD 5800 can be setup on a network connection to allow remote management and SNMP configuration. For these features to work, the network settings for the MRD 5800 must first be configured properly for the network it is connected to.

Static IP Address

To setup the MRD 5800 with a static IP address, use the following steps:

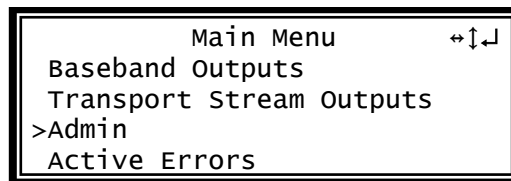1. Press the  button.
2. Use the  and  buttons to move the cursor to "Admin", then press the  button.







3. Use the  and  buttons to move the cursor to “Unit Networking”, then press the  button.

```

Admin                                     ↕↔↵
>Unit Networking
System Time
About System
Voltage Levels

```




Note: The first menu displayed is status menu. In order to begin making changes to networking settings press the  button.

4. Use the  and  buttons to move the cursor to “DHCP”, then press the  button.




```

Configure Network                         ↕↔↵
Host Name: .....
>DHCP: Disabled

```

5. Use the  and  buttons to change the selection to “Disabled” then press the  button.






IP Address/Subnet Mask/Gateway

1. Use the  and  buttons to move the cursor to “IP”, then press the  button.

```

Configure Network                         ↕↔↵
Host Name: .....
DHCP: Disabled
>IP: 0.0.0.0
Mask: 0.0.0.0






```

2. Use the  and  buttons to select the column to edit and use the  and  buttons to change the IP, then press the  button to save the selection.

```

Configure Network                         ↕↔↵
Host Name: .....
DHCP: Disabled
>IP: 000.000.000.000
Mask: 0.0.0.0






```

3. The cursor will now be on “Mask”.
4. Use the  and  buttons to select the column to edit and use the  and  buttons to change the Subnet Mask, then press the  button to save the selection.

```

Configure Network                         ↕↔↵
Host Name: .....
DHCP: Disabled
IP: 0.0.0.0
>Mask: 000.000.000.000

```

5. The cursor will now be on "Gateway".
6. Use the  and  buttons to select the column to edit and use the  and  buttons to change the Gateway, then press the  button to save the selection.







```

Configure Network  +↕↔
DHCP: Disabled
IP: 0.0.0.0
Mask: 0.0.0.0
>Gateway: 000.000.000.000

```

DHCP

The MRD 5800 can be configured to use DHCP to obtain an IP address/Subnet Mask/Gateway.

1. Use the  and  buttons to move the cursor to "DHCP:" then press the  button.
2. Use the  and  buttons to change the selection to "Enabled" then press the  button to save the selection.

```

Configure Network  +↕↔
Host Name: -----
>DHCP: Enabled

```

Note: It may take up to a minute for the MRD 5800 to obtain an IP address. During this time the unit will display a "busy" message next to DHCP.

Section 3 Operating the Front Panel



Introduction


This section includes the following topics:

3.1	MRD 5800 Front Panel Overview	20
-----	-------------------------------------	----

3.1 MRD 5800 Front Panel Overview




The MRD 5800 front panel allows the user to configure all settings that are present in the web interface using the buttons located on the front of the unit. The screen below is the idle screen of the MRD 5800. This idle screen allows the user to view the incoming bitrate of the active input, which input is set to active, the management IP address of the unit and the service currently set to decode.

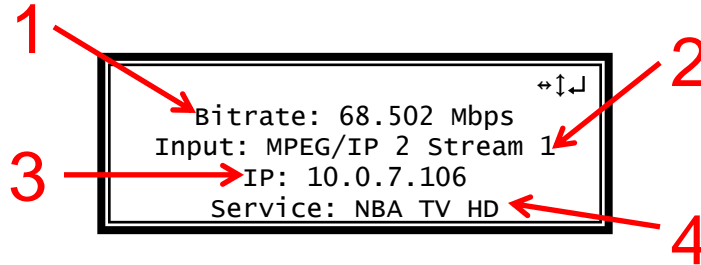

1. Bitrate of incoming stream displayed in Mbps.
2. Current active input.
3. IP address of management port.
4. Current decoded service.

The following figure shows a typical screen on the front panel. Several important features have been circled and noted below. These features are common to all screens and assist when navigating, viewing and editing unit information. The **BACK** button allows the user to return to the home screen, cancel settings and go back a menu. In order to edit a selected parameter the **ENTER** button must be pressed. Once a parameter has been changed the **ENTER** button must be pressed again before the change takes effect on the unit.

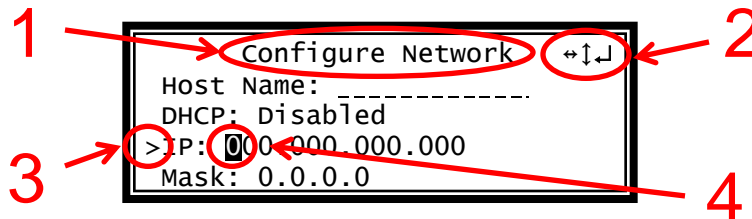

1. Screen title.
2. Icons indicate which control buttons are currently valid for entry.

3. Cursor shows which line is active.
4. When editing, active character or item is highlighted.

Section 4 Operating the Web Interface



Introduction

This section includes the following topics:

4.1	MRD 5800 Web Interface Overview	23
4.2	Main Panel	25
4.3	Admin Panel	80
4.4	Reporting Panel	93
4.5	About Panel	97

4.1 MRD 5800 Web Interface Overview



4.1.1 Logging into the MRD 5800 Web Interface

To open the MRD 5800 web interface use one of the following supported browsers and navigate to the unit's IP address:


- Internet Explorer 7 & above
- Firefox 3.5 & above
- Google Chrome



The user will need to login to the web interface. By default the admin user account is available without a password. Press the login button in order to login to the web interface.

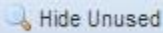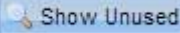4.1.2 Hiding Unused Inputs




The MRD 5800 web interface allows the user to hide inactive inputs using the  Hide Unused button or show all available inputs by click the  Show Unused button. Only the inputs configured as the Primary Input and Backup Input (see Section 4.2.1) will be displayed when unused inputs are hidden.

4.1.3 Buttons and Status Indicators

When the  icon is shown user configuration is available. Clicking this button will open menus where settings can be changed by the user.


When the  icon is shown additional status information can be viewed. Click this button will expand the menu to display the additional status information. All text in status menus shown in **ORANGE** are user configurable settings. Text shown in **BLUE** is not user configurable and is strictly a status or value. To minimize the status windows again click the  icon.

Status in the MRD 5800 web interface is shown with LED status indicators:

- Green LED  Status is good. No errors are present and function is operating normally.
- Red LED  Status indicates function is affected by active error. To view the errors navigate to Alarms panel to view Active Errors.
- Grey LED  Status is inactive. Function is currently disabled or unavailable.

4.1.4 Drag and Drop Menus

Certain menus in the MRD 5800 allow the user to drag and drop items to auto populate fields. Conditional Access and Service Selection menus are some examples of menus that drag and drop can be used. In the example below a service in the transport stream view on the right hand side of the window is selected and dragged over to auto populate the PIDs in the service selection section.

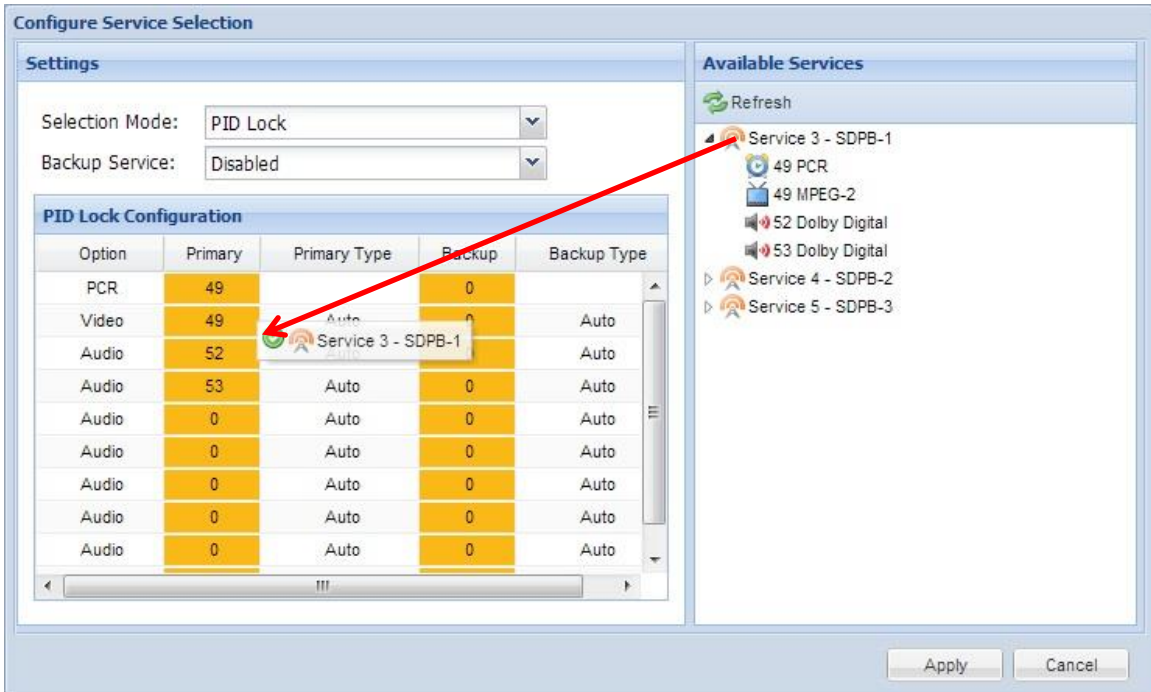

4.2 Main Panel



The Main panel of the MRD 5800 web interface is used to configure the unit to decode, de-encapsulate and demodulate. When configuring the MRD 5800 the user begins at the top of the menu and works down. The inputs are configured, then descrambling (if present), then service or PIDs are selected for decode, then outputs are configured. Pictured below is a fully populated unit with all options licensed.

The screenshot displays the 'Main Control Panel' of the MRD 5800 web interface. It features a navigation bar with 'Main', 'Admin', 'Reporting', and 'About' tabs. The main content area is organized into several expandable sections:

- Inputs:** Includes 'Show Unused Inputs', 'Switch to Backup Input', and 'View PSI Tables'. The 'Input Selection' row shows 'Active: ASI', 'Primary: ASI', and 'Backup: None'. Below it, the 'ASI' row shows 'Null Stripped: Disabled' and a rate of '0.000 Mbps'.
- Conditional Access:** Contains 'BISS' (Operation Mode: Disabled) and 'DVB-CI' (Bottom Slot: None, Top Slot: None, both Disabled).
- Transport Stream Processing:** Includes 'SCTE35' and 'ESAM'.
- Decoding:** Shows 'Service' (Service: 2, Mode: Service Lock, On Backup: Use Primary Service). It has expandable options for 'Video' (PID: 0, Native Format: 0x0, Video Bitrate: 0.000 Mbps), 'SCTE35' (PID: --, Section Presence: Not Present), and 'Additional Data'.
- Baseband Processing:** Includes 'Video' (Output Format: 1920x1080i 16x9 29.97fps), 'Audio', 'Genlock' (External Format: None, Ref. Source: Disabled, Color Reference: Not Present), and 'Ancillary Data'.
- Baseband Outputs:** Lists 'SDI Port 1 & 2', 'Composite', 'Analog Audio', and 'Digital Audio'.
- Data Outputs:** Includes 'Show Unused Outputs', 'PID Filter', and 'ASI' (Source: Unmodified Input, 0.000 Mbps).

4.2.1 Configuring Active Inputs

This menu allows the user to configure a primary and backup input. In case there is an input failover the MRD 5800 is capable of detecting the failed state and switching to a secondary backup input in order to provide a continuous output. Which input is primary and backup, how the inputs switchover and restore and switchover timing is all user

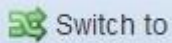configurable. The user can force the MRD 5800 to switch between the Primary and Backup Inputs by clicking the  button. To change the active input and failover settings click the  icon next to Input Selection:

Inputs				
Hide Unused Inputs 				
 Input Selection	Active: ASI	Primary: DVB-S2 Slot 1 Port A	Backup: ASI	
 ASI				
  MPEG/IP Slot 2 Stream 1	*:5000	Packet Status: Not Present	FEC: Not Present	
  MPEG/IP Slot 2 Stream 2	239.192.0.200:10000	Packet Status: Not Present	FEC: Not Present	
  DVB-S2 Slot 1 Port A	4140.0 MHz	Level: -55 dBm	C/N: 16.7 dB	Link Margin:

Active Input Indicator

Configure Inputs

Primary Input:

Backup Input:

Switch On:

Restore On:

Switchover (secs.):


Active Input and Failover Configuration Menu

Setting	Range	Description
Primary Input	ASI MPEG/IP Slot X Stream X DVB-S2 Slot X Port X DVB-S2X Slot X Stream X 8VSB/QAM Slot X Turbo PSK Slot X DVB-T2/C2/ISDB-T Slot X None	Used for both normal operation and input failover settings. During normal operation this input will be the active input.
Backup Input	ASI MPEG/IP Slot X Stream X DVB-S2 Slot X Port X DVB-S2X Slot X Stream X	During failover operation this input will become the active input. The catalyst for what causes the unit to switch to this input is configured in the following setting.

	8VSB/QAM Slot X Turbo PSK Slot X DVB-T2/C2/ISDB-T Slot X None	
Switch On	Manual Only TS Sync Loss Decode Failure	<p><i>Manual Only:</i> the unit will not switch inputs automatically. The user must manually switch inputs.</p> <p><i>TS Sync Loss:</i> the MRD 5800 will switch from the primary to the backup input if the primary stream loses synchronization for the duration of the Switchover Interval.</p> <p><i>Decode Failure:</i> the unit will switch to the backup input when it encounters decoding errors on the primary input.</p>
Restore On	Manual Only Primary Input TS Restored Backup Input TS Sync Loss Decode Failure	<p><i>Manual Only:</i> the unit will not restore to the primary input automatically. The user must manually switch inputs.</p> <p><i>Primary Input TS Restored:</i> the MRD 5800 restores to primary when the Primary input regains transport stream synchronization.</p> <p><i>Backup Input TS Sync Loss:</i> the unit will switch from backup to primary when the backup stream loses synchronization for the duration of the Switchover interval.</p> <p><i>Decode Failure:</i> the unit restores to the Primary Input when the Backup Input experiences a decoding error.</p>
Switchover	1-20 seconds	The time in seconds which <i>Switch On</i> or <i>Restore On</i> value must remain in the configured state before the MRD 5800 switches between the Primary Input and Backup Input or vice versa.

4.2.2 Configuring ASI Input

This menu allows the user to either Enable or Disable the ASI Input on the MRD 5800. Beginning with revision J main boards the ASI ports can be configured as either an input or output. Earlier revision remain configured as 1 input and 1 output port. Main board version can be located on the About tab under the Options section.

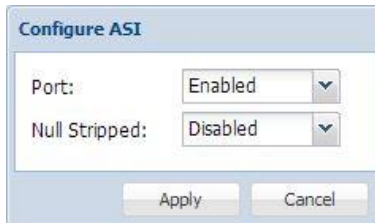

Rev I and earlier main board ASI options


The screenshot shows a dialog box titled "Configure ASI Port 1". It has three dropdown menus: "Direction" is set to "Input", "Port" is set to "Enabled", and "Null Stripped" is set to "Enabled". At the bottom of the dialog are two buttons: "Apply" and "Cancel".

Rev J and later main board ASI options

Setting	Range	Description
Direction	Input Output	Configure the ASI port to either an input or an output. Applies only to main board revision J or later. Main board version can be located on the about tab under the Options section.
Port	Enabled Disabled	This setting allows the user to enable or disable the ASI Input to the MRD 5800.
Null Stripped	Disabled Enabled	Enabling Null Stripped allows the MRD 5800 to receive streams that do not contain null packets. (i.e. VBR Transport Streams)

4.2.3 Configuring MPEG/IP Input

If the MPEG/IP Input card was selected as a factory installed option, the following menus and options will be available for configuration. This menu allows the user to configure the MPEG/IP inputs. Each MPEG/IP card has two ports that can be set to receive and/or transmit. This menu is for setting up the reception of MPEG/IP unicast or multicast transport streams. The menu for Stream 1 and 2 have the same settings. IGMPv2 is used to join/leave multicast streams by default if no IGMP Filter addresses are entered. If IGMP Filter Mode addresses are specified then IGMPv3 is used.

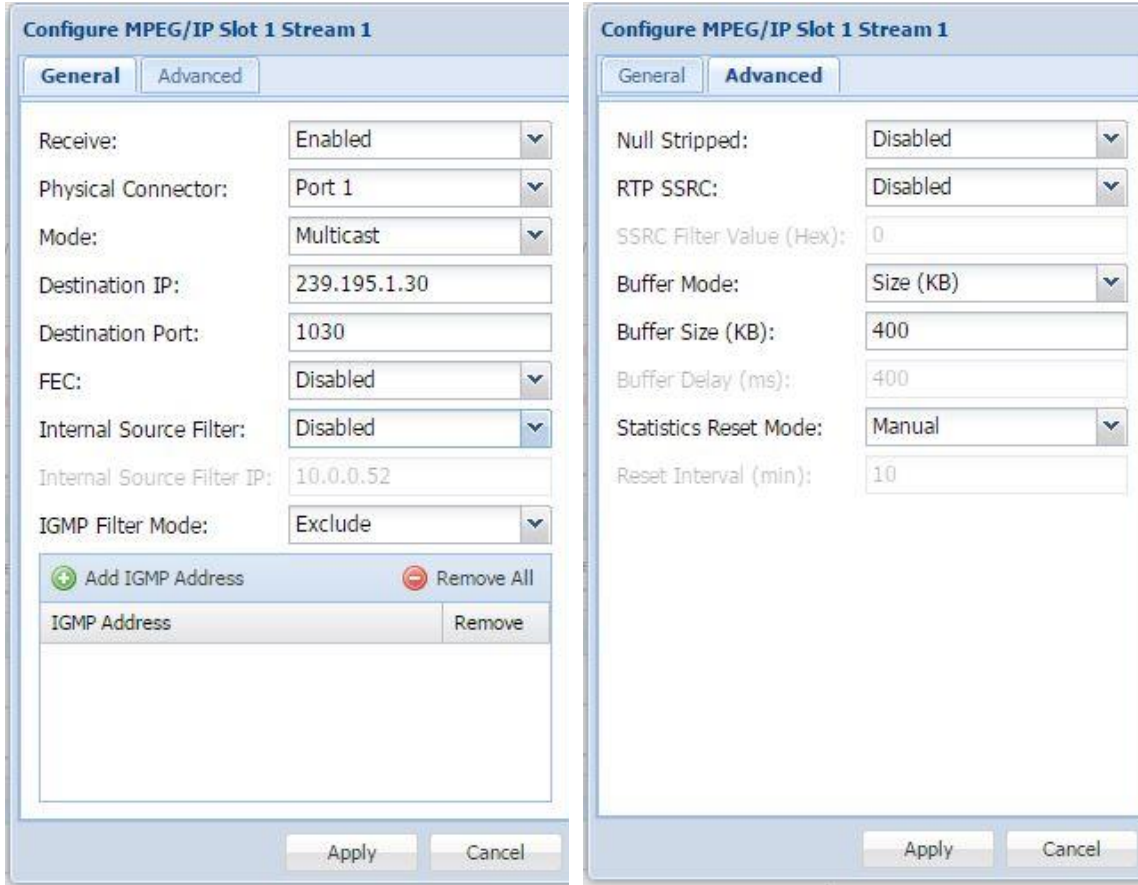

General and Advanced options for IP input

Setting	Range	Description
Receive	Enabled Disabled	This setting allows the user to enable or disable these input stream settings.
Physical Connector	Port 1 Port 2	The physical connector on the MPEG/IP card that will be used to receive the input.
Mode	Multicast Unicast	<i>Multicast</i> setting allows the unit to receive multicast streams. Multicast streams originate from the IP range 224.0.0.0 – 239.255.255.255. <i>Unicast</i> allows the unit to receive unicast streams. Unicast streams originate directly from a source device.
Destination IP	224.0.0.0 – 239.255.255.255	This setting is only available when receiving a multicast stream. This address is the IP address the source device is sending to.

Destination Port	0 - 65535	This is the UDP port the source device is sending to. This is the only setting required to receive a unicast stream.
FEC	Enabled Disabled	Enabling FEC (Forward Error Correction) tells the MRD 5800 to look at Destination Port +2 and Destination Port +4 for a SMPTE 2022 FEC Matrix.
Internal Source Filter	Enabled Disabled	Enabling Source filtering disables IGMP V3 filtering and allows a user to whitelist a single IP address for a given multicast and block all other source IP's
Internal Source Filter IP	0.0.0.0 – 255.255.255.255	Source IP for whitelist. All other source IP addresses are blocked
IGMP Filter Mode	Exclude Include	Used on networks supporting IGMPv3. If this setting is set to <i>Exclude</i> any streams originating from the user defined IP addresses will be rejected. If this setting is set to <i>Include</i> any streams originating from the user defined IP addresses will be received.
Null Stripped	Enabled Disabled	Enabling Null Stripped allows the MRD 5800 to receive streams that do not contain null packets. (i.e. VBR TS Streams)
RTP SSRC	Enabled Disabled	Enabling RTP SSRC allows the MRD 5800 to filter the input by the user defined value. Only streams containing the user defined value will be received by the MRD 5800.
SSRC Filter Value	0 - 4294967295	The Filter Value the MRD 5800 checks for before receiving a stream with RTP SSRC.
Buffer Mode	Size (KB) Delay (ms)	Allows option to set buffer mode to Size in KB or Delay ms
Buffer Size (KB)	1 – 4000 KB	This setting determines how much data is received before the MRD 5800 starts decoding. Increasing this value will allow the MRD 5800 is receive streams on networks with high network jitter. Increasing this value also increases the latency of the MRD 5800.
Buffer Delay (ms)	1 – 4000 ms	The buffer delay setting allows the buffer size to be set by delay time. The Buffer delay time will be determined by the input data rate.
Statistics Reset Mode	Manual Auto	Statistics can be viewed by hitting the + symbol next to the MPEG/IP option card on the main window. Selecting Auto will reset the statistics on a chosen interval. When the reset occurs, statistical information for

that period will be logged. Selecting Manual will only clear the statistics by hitting the refresh button.

Reset Interval (min) 5-65535


Interval in which the Auto option will reset and log the statistics displayed on the main window

Status		Statistics	
Buffer Delay:	0 ms	Out of Order Packets:	0
Sync Status:	Unlocked	Duplicate Packets:	0
Packets Per Frame:	0	Lost Packets:	0
Encapsulation:	UNKNOWN	Corrected Packets:	0
FEC Columns (L):	0	Uncorrected Packets:	0
FEC Rows (D):	0	IAT (ms):	0.000
Corrected Packets / FEC Period:	0	Max IAT (ms):	0.000
		Statistics Reset Mode:	Manual
		Reset Interval:	10 min
		Last Reset:	01/01/1970 00:00:00

IP statistics menu

4.2.4 Configuring DVB-S/S2/S2X Input

If the DVB-S/S2/S2X input card was selected as a factory installed option, the following menus and options will be available for configuration. This menu allows the user to configure the DVB-S/S2/S2X inputs. The input card is equipped with dual demodulators and four ports (labeled A, B, C and D). This configuration allows the card to receive two signals simultaneously for fast switching between primary and backup inputs. The menu for both demodulators have the same settings. The input card will automatically detect modulation and symbol rate during signal acquisition. LNB Power configuration for this input card is done in the Admin tab.

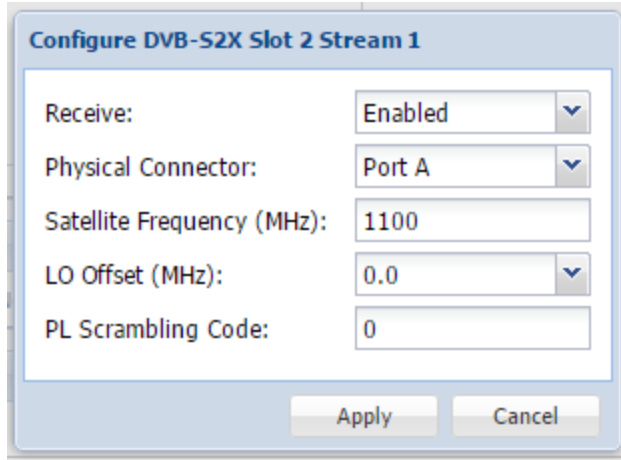

Receive	Enabled Disabled	This setting allows the user to enable or disable this input stream.
Physical Connector	Port A Port B Port C Port D	This setting allows the user to select which physical RF connector will be used to receive the stream.
Satellite Frequency	C-Band: 4GHz – 8GHz Ku Band: 11.2Ghz – 14.5Ghz L-Band: 950MHz – 2150MHz Dependent on LO Offset	If LO Offset is set to 0 then L-Band frequency is entered into the Satellite Frequency dialog box. If LO Offset is set to a pre-defined option then enter C-band or Ku-Band frequency.
LO Offset	5150 9750 10600 10750 11250	The offset in MHz that the local oscillator is operating.
PL Scrambling Code	0 – 262141	The MRD has the ability to receive satellite signals scrambled using PL Scrambling. In order to receive the stream, enter the value of the incoming signals PL Scrambling code.

4.2.5 Configuring DVB-S/S2 Input

If the DVB-S/S2 Input card was selected as a factory installed option, the following menus and options will be available for configuration. This menu allows the user to configure the DVB-S/S2 inputs. Each DVB-S/S2 input card has four ports (labeled A, B, C and D) which only one port can be active at a time. This menu is for setting up the reception of DVB-S/S2 satellite signals. The menu for Port A, B, C and D have the same settings.

Setting	Range	Description
Port	Enabled Disabled	This setting allows the user to enable or disable this reception port.
Mode	DVB-S DVB-S2 Auto	This setting allows the user to choose between <i>DVB-S</i> or <i>DVB-S2</i> modulation schemes. Setting to Auto will have the unit automatically detect whether the input is DVB-S or DVB-S2.
Satellite Frequency	C-Band: 4GHz – 8GHz Ku Band: 11.2Ghz – 14.5Ghz L-Band: 950MHz – 2150MHz Dependent on LO Offset	If LO Offset is set to 0 then L-Band frequency is entered into the Satellite Frequency dialog box. If LO Offset to set to a pre-defined option then enter C-band or Ku-Band frequency.

Wide Search	Enable Disable	When Enabled the search range may be extended depending on the symbol rate. See appendix C for more information.
LO Offset	5150 9750 10600 10750 11250	The offset in MHz that the local oscillator is operating.
Symbol Rate Mode	Manual Auto	The Manual option allows the user to choose the symbol rate. The Auto option automatically detects the incoming symbol rate. Note: Acquisition time may be longer in auto mode, especially when the symbol rate is below 1MSps or above 55MSps.
Symbol Rate	0 - 60	The symbol rate of incoming satellite signal in MSps. Accurate to one decimal place (kSps). Used when Symbol Rate Mode is set to Manual.
PLS Code	0 – 262141	The MRD 5800 has the ability to receive satellite signals scrambled using PL Scrambling. In order to receive the stream, enter the value of the incoming signals PL Scrambling code.
LNB Power	Off 13 VDC 14 VDC 18 VDC 19 VDC	The MRD 5800 has the ability to provide the necessary voltage to power an LNB. Select the correct voltage to supply to the LNB.
22kHz Tone	Enabled Disabled	Enabling or disabling the 22khz tone allows the MRD 5800 to trigger the LNB to switch polarities.
Multistream State	Enabled Disabled	The MRD 5800 has the ability to receive multistream satellite signals. If the signal is multistream capable, enable this setting. This option is only available in DVB-S2 Mode. <i>NOTE: This is a licensed feature.</i>
ISI	0-255	This setting is the ISI (Input Stream Identifier) the MRD 5800 uses to filter multistream input. This option is only available if Multistream is licensed and enabled.

4.2.6 Configuring 8VSB/QAM Input

If the 8VSB/QAM Input card was selected as a factory installed option, the following menus and options will be available for configuration. This menu allows the user to configure the 8VSB/QAM input. This menu is for setting up the reception of 8VSB off air signals or QAM cable signals.

Setting	Range	Description
Receive	Enabled Disabled	This setting allows the user to enable or disable this reception port.
Mode	8VSB 64-QAMB 256-QAMB	This setting allows the user to choose between 8VSB or QAM modulation schemes.
Channel Plan	Off Air FCC Cable HRC Cable IRC Cable	If 8 VSB is the selected Mode, the only available option is <i>Off Air</i> . If either 64-QAMB or 256-QAMB is the selected Mode, this setting allows the user to choose which Cable scheme is used.
Channel	Off Air: 2-69 FCC, HRC, or IRC Cable: 2-158	This setting is for the desired channel to be received.
Low RF Level (dBmV)	-34 - +40	This is the Low RF Level threshold when the <i>Low Level Alarm</i> will be triggered in dBmV

Low MER (dB)	0 - 40	This is the Low MER threshold when the <i>Low MER</i> Alarm will be triggered in dB.
---------------------	--------	--

4.2.7 Configuring Turbo PSK Input

If the Turbo PSK Input card was selected as a factory installed option, the following menus and options will be available for configuration. This menu allows the user to configure the Turbo PSK input. This menu is for setting up the reception of DVB-S and Turbo PSK satellite signals.

Configure Turbo PSK Slot 2

Receive: Enabled

Mode: DVB-S

Modulation: QPSK 1/2

LO Offset (MHz): 0.0

Satellite Frequency (MHz): 950

Symbol Rate (MSps): 1

Apply Cancel

Setting	Range	Description
Recieve	Enabled Disabled	This setting allows the user to enable or disable this reception port.
Mode	DVB-S TurboPSK	This setting allows the user to choose between <i>DVB-S</i> or <i>TurboPSK</i> modulation schemes.
Modulation	QPSK 1/2 QPSK 2/3 QPSK 3/4 QPSK 5/6 QPSK 7/8 8PSK 2/3 8PSK 3/4 (2.05) 8PSK 3/4 (2.10) 8PSK 3/4 (2.20) 8PSK 5/6 8PSK 8/9	This setting allows the user to select which modulation parameters are used for the incoming signal and the dropdown list is dependent on the mode that is selected.

LO Offset	5150 9750 10600 10750 11250	The offset in MHz that the local oscillator is operating.
Satellite Frequency	C-Band: 4GHz – 8GHz Ku Band: 11.2Ghz – 14.5Ghz L-Band: 950MHz – 2150MHz Dependent on LO Offset	If LO Offset is set to 0 then L-Band frequency is entered into the Satellite Frequency dialog box. If LO Offset to set to a pre-defined option then enter C-band or Ku-Band frequency.
Symbol Rate	0.256 - 30	The symbol rate of incoming satellite signal in MSps. Accurate to one decimal place (kSps).

Note: Reception may not be possible at rates less than 1MSps

4.2.8 Configuring DVB-T2/C2/ISDB-T Input

If the DVB-T2/C2/ISDB-T Input card was selected as a factory installed option, the following menus and options will be available for configuration. This menu allows the user to configure a DVB-T/T2/C/C2 or ISDB-T input.

Configure DVB-T2/C2/ISDB-T Slot 2

General

Receive: Enabled

Mode: DVB-T

Channel Plan: Eur-Asia-Afr

Channel: 21

Advanced

Frequency (MHz): 474

Bandwidth: 8 MHz

PLP ID: 0

Profile: Auto

Low RF Level (dBmV): -10

Low MER (dB): 20

Apply Cancel

Setting	Range	Description
Receive	Enabled Disabled	This setting allows the user to enable or disable this reception port.
Mode	DVB-T DVB-T2 DVB-C DVB-C2 ISDB-T	This setting allows the user to choose between <i>DVB-T/T2/C/C2</i> or <i>ISDB-T</i> modulation schemes.
Channel Plan	Australia Eur-Asia-Afr Ireland New Zealand Taiwan South Africa	This setting allows the user to select which channel plan they would like to use. Channel Plan options are tied to which modulation mode is selected.



South America
 United Kingdom
 European Cable
 Japan
 Philippines


Channel		Select a channel from the channels available in the dropdown. The list of available channels will be based on which channel plan is selected
Frequency (MHz)	42-1002	Selecting a channel from the channel dropdown will populate this field automatically based on the user selected channel. A user can manually select a frequency if desired
Bandwidth	1.7 MHz 5 MHz 6 MHz 7 MHz 8 MHz	Selecting a channel from the channel dropdown will populate this field automatically based on the user selected channel plan. A user can manually select channel bandwidth if desired.
PLP ID		Unique PLP ID used to select a particular stream within the DVB-T2 or DVB-C2 input signal
Profile	Auto Base Lite	Select the DVB-T2 profile to use
Low RF Level (dBmV)	-34 - +40	This is the Low RF Level threshold when the <i>Low Level Alarm</i> will be triggered in dBmV
Low MER (dB)	0 - 40	This is the Low MER threshold when the <i>Low MER Alarm</i> will be triggered in dB.

4.2.9 Configuring DVB-CI Descrambling

This section will describe how to configure DVB-CI descrambling in the MRD 5800. First, the user will need to configure the CAM slots and descrambling mode. Once this is complete the user can configure which services or PIDs to descramble.

4.2.9.1 Configuring DVB-CI Slots





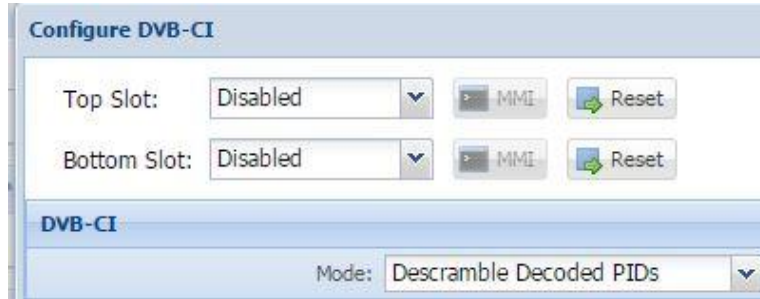
This menu allows the user configure the DVB-CI slots in the MRD 5800. The MRD 5800 has two DVB-CI slots, a top and bottom, where CAM Modules can be inserted. Both slots are individually configurable using the Bottom Slot and Top Slot tabs. CAM Modules can be reset manually using the  Reset button. The  MMI button opens the MMI (Man Machine Interface) for the CAM in the respective slot. MMI support is dependent on what is supported by the CAM




Setting	Range	Description
Mode	Descramble Decoded PIDs Descramble Selected PIDs Descramble Selected Services	<i>Decoded PIDs</i> sets the MRD to descramble only the PIDs of the service that is currently set to decode. If the PIDs change in the incoming stream the MRD will adapt to these changes, provided that Service Selection is set to “Service Lock” (Refer to Section 4.2.11). <i>Selected PIDs</i> sets the MRD to descramble PIDs set in the Descramble Services window (Refer to Section 4.2.9.2). If the PIDs change in the incoming stream the MRD will not adapt to these changes and will not be able to descramble. <i>Selected Services</i> sets the MRD to descramble Services set in the Descramble Services window Refer to Section 4.2.9.2). If the Services change in the incoming stream the MRD will not be able to descramble.
Top Slot	Enabled	This setting allows the user to enable or disable the DVB-CI slot.
Bottom Slot	Disabled	

4.2.9.2 Configuring Service Descrambling

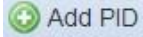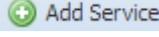This menu allows the user to select the services the MRD 5800 will descramble using the CAM Modules and Smart Cards inserted into the DVB-CI slots. See Section 4.2.9.1 to configure these slots. These options are applicable only if the Mode in the DVB-CI settings is set to Selected PIDs or Selected Services (Refer to Section 4.2.9.1). The drag and drop method can be used to drag services from the right column to the left column. The drop

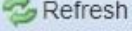down menu next to each selected service allows the user to choose either the bottom or top slot to descramble the service. If in Selected PIDs mode, PIDs to descramble can be added manually by clicking  Add PID button. If in Selected Services mode, Services to descramble can be added manually by clicking the  Add Service button. The icons next to each service indicate whether the service is scrambled or not scrambled. Scrambled services will show the  icon next to them while services that are not scrambled will show the  icon. Clicking the  Refresh button forces the MRD 5800 to rescan the transport stream for changes.

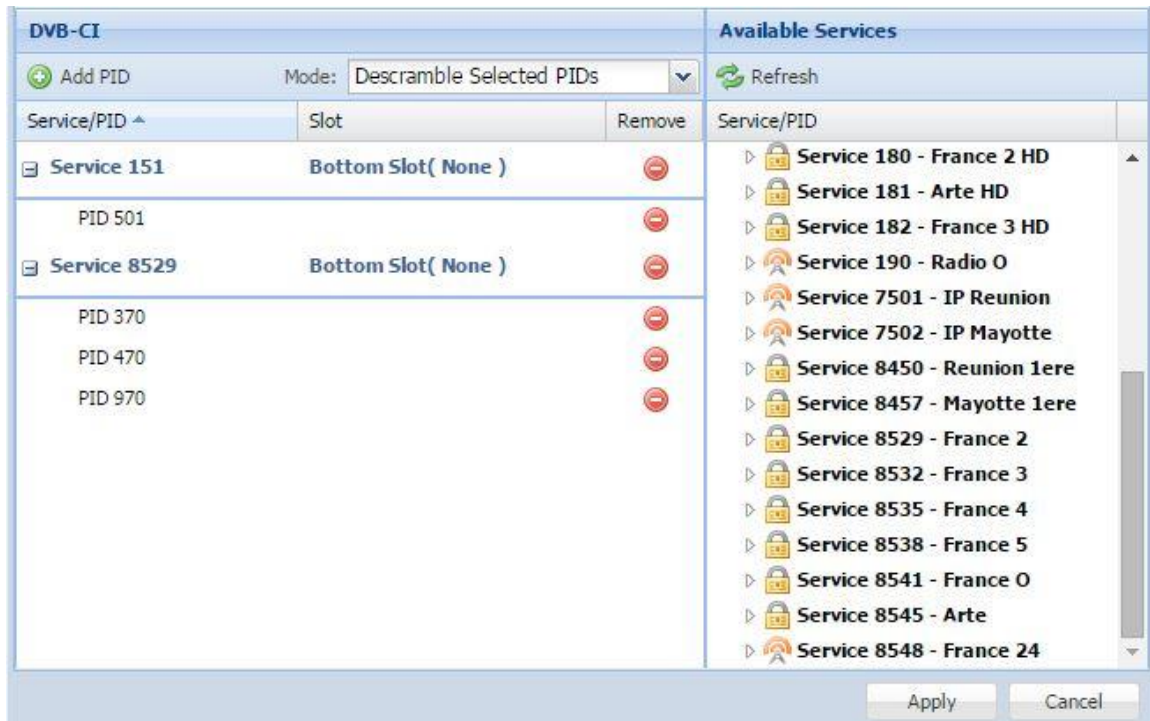

DVB-CI Service Descrambling Menu


4.2.10 Configuring BISS Descrambling

This section will describe how to configure BISS descrambling in the MRD 5800. There are two types of BISS descrambling.

In “Descramble All PIDs” or “Descramble Decoded PIDs” mode, the user simply configures a BISS key set and selects it from the drop down.

For streams with multiple, per-service keys the user must first configure the key sets, and then assign them to services.

4.2.10.1 Configuring BISS Keys



This menu allows the user to configure BISS descrambling. 12 unique BISS keys can be entered. If the BISS mode is set to Mode E a  icon will appear next to Mode E Injected ID. This icon allows the user to unlock and modify the Injected ID.


BISS Menu

Setting	Range	Description
Operation Mode	Disabled Descramble Decoded PIDs Descramble Selected Services Descramble All PIDs	Descramble Decoded PID's will descramble the pids that are currently assigned to be decoded by the MRD 5800. Descramble Selected Services will allow the user to select service(s) to be descrambled on the Selected Services tab. Descramble All PIDs will apply the selected key to the entire transport stream.
Selected Key	Key 1-12	Select a key to configure.
Alias	16 characters	Set an Alias for the selected key.
Mode	Mode 1 Mode E	This setting sets the Mode of the BISS key that has scrambled the transport stream.
Mode 1 Session Word	N/A	If Mode 1 is selected the user enters the BISS session word here.

Mode E Session Word	N/A	If Mode E is selected the user enters the BISS session word here.
Mode E Injected ID	N/A	If Mode E is selected the user enters the BISS injected ID here.

4.2.10.2 Configuring Per-Service Descrambling

This menu allows the user to select the services the MRD 5800 will descramble using the BISS keys configured in Section 4.2.10.1. These options are applicable only if Operation Mode in the BISS settings is set to Descramble Selected Services (Refer to Section 4.2.10.1). The drag and drop method can be used to drag services from the right column to the left column. The BISS key to descramble services can be selected using the drop down menu next to each service. Services can be added manually by clicking  Add Service button. Clicking the  Refresh button forces the MRD 5800 to rescan the transport stream for changes.

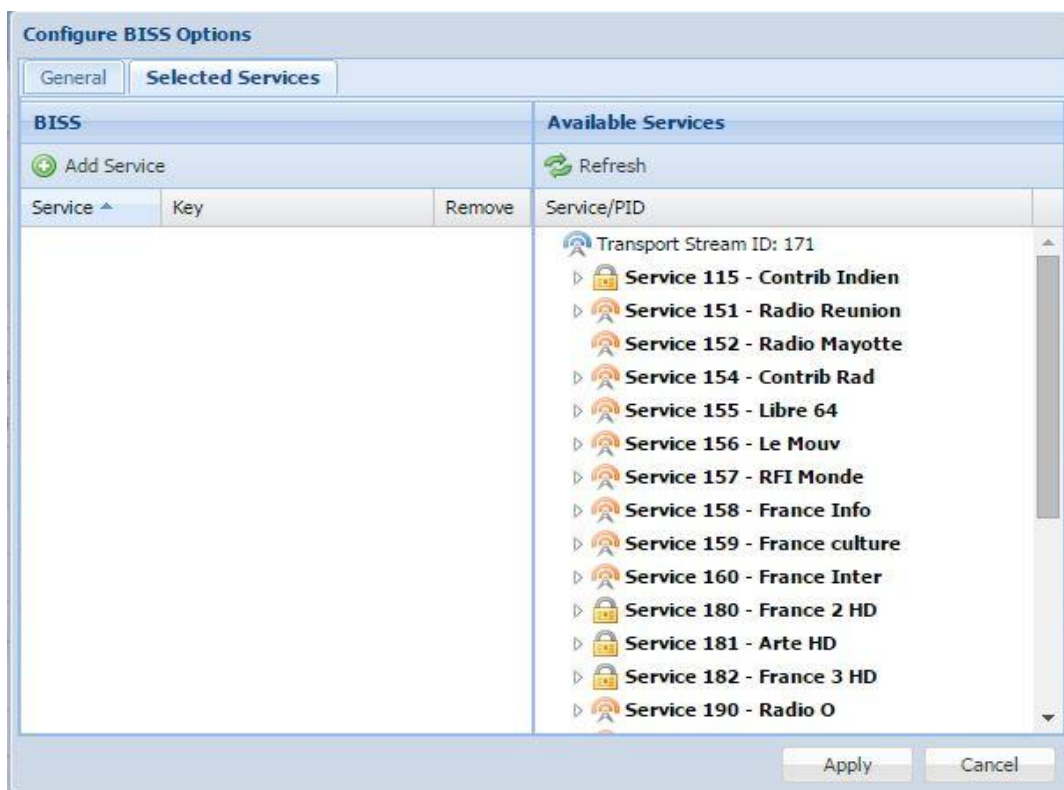


BISS Service Descrambling Menu

4.2.11 Configuring Service Selection

This menu allows the user to configure the PIDs or Service the MRD 5800 will decode. Depending on the Selection Mode that is set, the menu will change to reflect the applicable settings.

Service Lock

In Service Lock mode the MRD is set to decode a specified service number or service name. If the PIDs within the service change at any time, the MRD will continue to decode the service. The drag and drop method can be used to populate the Service Name or Service Number dialog boxes.

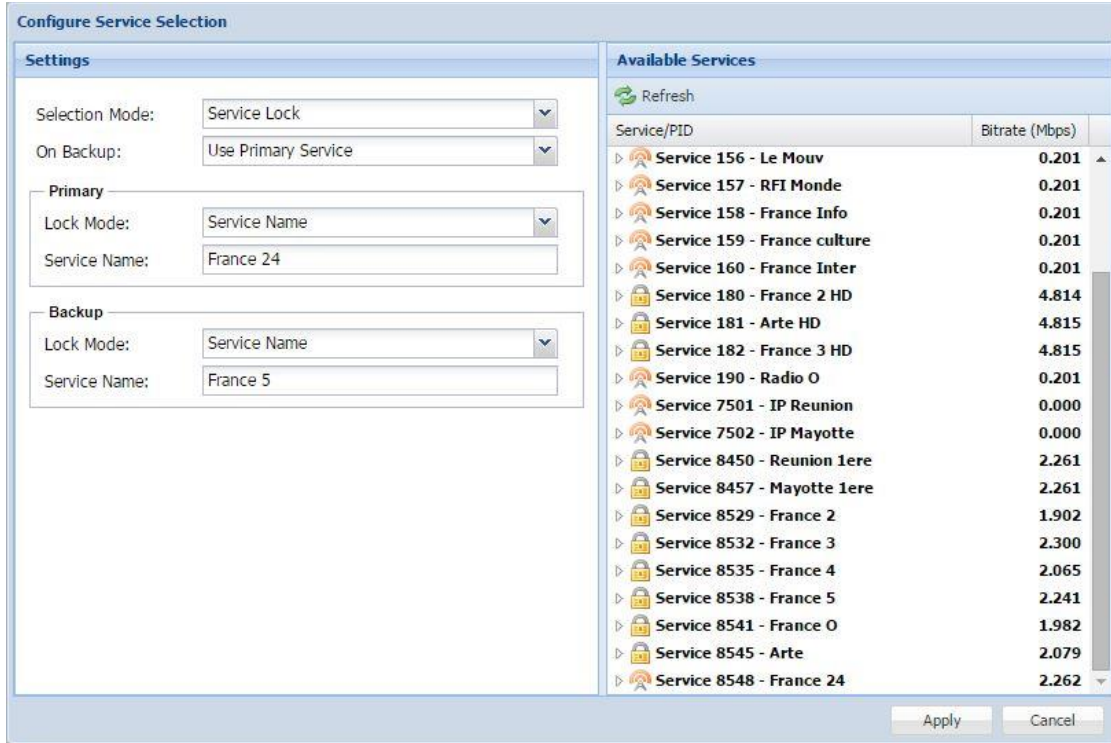

Service Lock Selection Menu


Setting	Range	Description
Selection Mode	Service Lock	Setting to <i>Service Lock</i> sets the unit to decode any PIDs associated with a service number or service name. Setting to <i>PID Lock</i> sets the unit to decode only the PIDs specified in the PID Lock Configuration matrix. <i>Auto Seek</i> mode will tune the unit to the first service listed in the PAT if a transport stream is present.
	PID Lock	
	Auto Seek	
On Backup	Use Primary Service	Sets the service the MRD 5800 will tune to in case of an input failover. If <i>Use Primary Service</i> is selected the MRD 5800 will tune to the service name specified in the Primary section. If <i>Use Backup Service</i> is selected the service name specified in the Backup section will be tuned. How the MRD 5800 fails over inputs is configured in Section 4.2.1
	Use Backup Service	
Lock Mode	Service Name	If set to <i>Service Name</i> the MRD will decode only services matching the name specified

Service Number (SDT in DVB or TVCT in ATSC tables must be present in this mode). If set to *Service Number* the MRD will decode only services matching the number specified.

Note: S302M Audio Type is now auto detected by the MRD5800

PID Lock Mode

In PID Lock mode the MRD will only decode the PIDs specified by the user in the PID Lock Configuration matrix. The drag and drop method can be used to auto-populate the cells in the matrix. Stream types can be manually defined under the Primary Type and Backup Type columns. Individual cells under Primary and Backup columns can be selected and PIDs can be typed in manually.

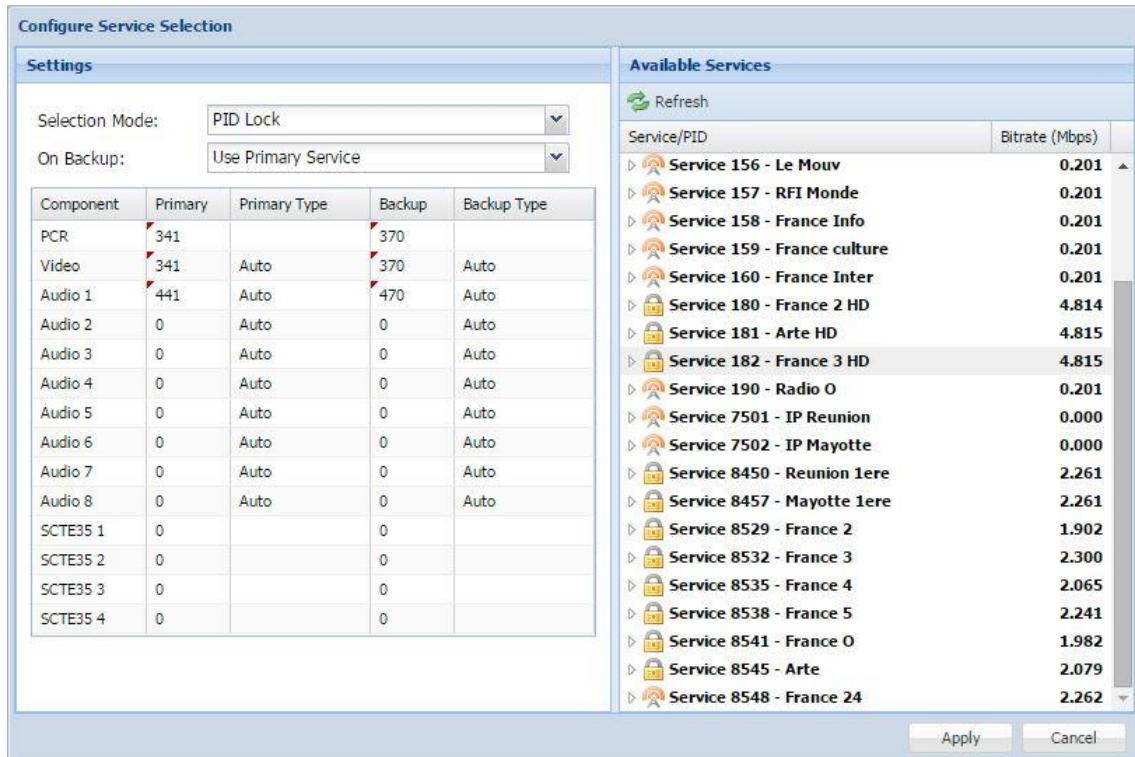


PID Lock Selection Menu

Setting	Range	Description
On Backup	Use Primary PIDs	Sets the PIDs the MRD 5800 will tune to in case of an input failover. If <i>Use Primary PIDs</i> is selected the MRD 5800 will tune to the PIDs specified in the Primary PID column. If <i>Use Backup PIDs</i> is selected the service name specified in the Backup PID column will be tuned. How the MRD 5800 fails over inputs is configured in Section 4.2.1.
	Use Backup PIDs	

Auto Seek Mode


In Auto Seek mode the MRD will decode first service listed in the PAT. All PIDs will automatically be assigned and decoded. No other configurations are available in this mode. This mode should only be used to verify the MRD is receiving a valid signal and it able to decode. This mode is not recommended for a professional environment.

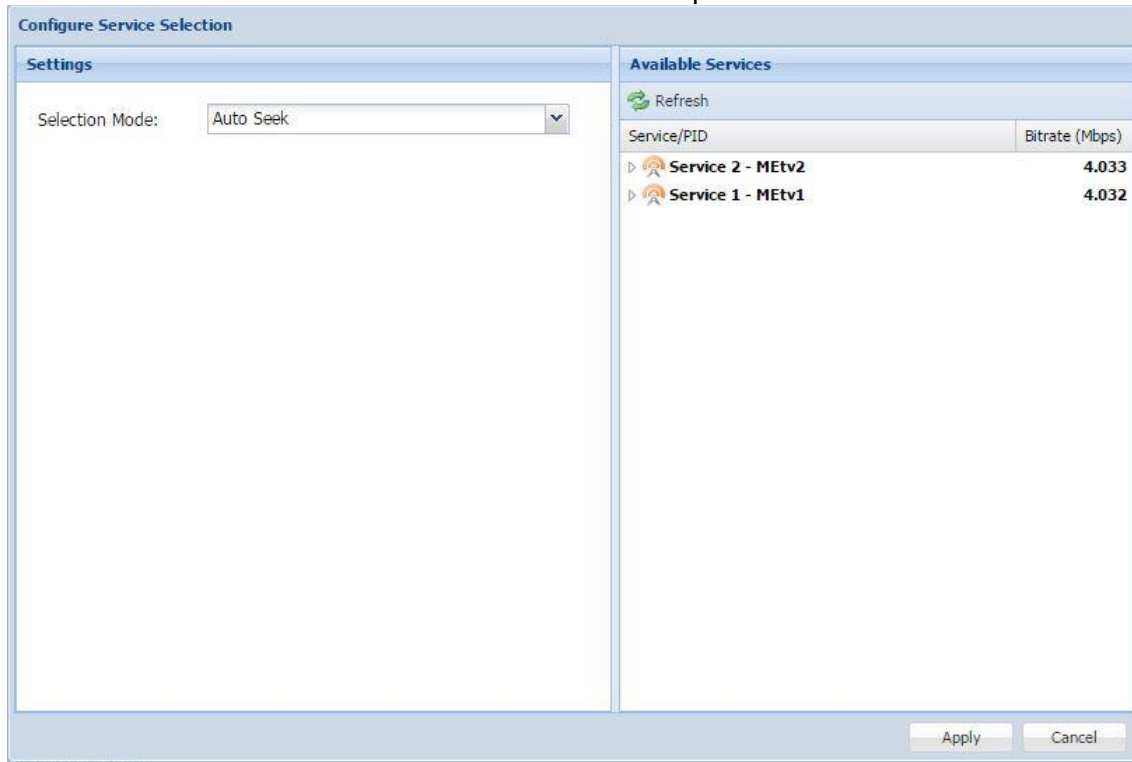

Auto Seek Menu

4.2.12 Configuring Video Services

The menu allows the user to configure the SDI, Digital Video and Composite output formats of the MRD 5800. Please note that the composite video output is only active if the output video format is SD. Overlays and image insertion are configured in this menu as well. This menu will be labeled as Primary Video if a Simultaneous SD Video Card is an installed option.

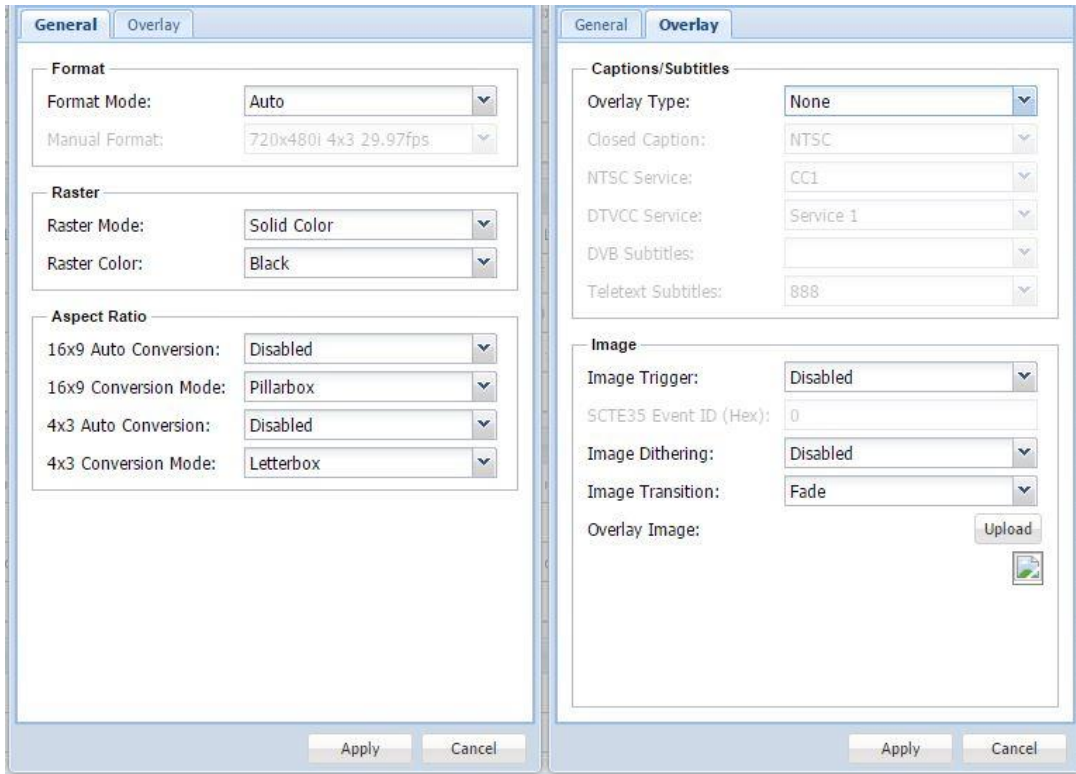

General and Overlay Options

Setting	Range	Description
Format Mode	Auto Manual	Setting to <i>Auto</i> the MRD 5800 will output video to match the incoming native video format. Setting to <i>Manual</i> the user can define the video format the MRD 5800 will output.
Manual Format	Refer to Appendix C for supported formats.	This setting is the video format the MRD 5800 will output.

Raster Mode	Solid Color Last Frame	If no input is present the MRD 5800 will output either the last frame present or raster.
Raster Color	Black, White, Yellow, Cyan, Magenta, Red, Blue, Green, Gray	If no input is present and solid color option is chosen the MRD 5800 will output raster. This is the color of the video the MRD will output.
4x3 Output Aspect Ratio Auto Conversion	Disabled AFD	If 4x3 Auto Conversion is set to <i>Disabled</i> the MRD 5800 uses the 4x3 Conversion Mode setting to format video. If 4x3 Auto Conversion is set to <i>AFD</i> the MRD 5800 will apply the conversion defined by the AFD code in the incoming stream. If 4x3 Auto Conversion is set to <i>AFD</i> , but the AFD code is not present or invalid in the incoming stream the 4x3 Conversion Mode setting will be used.
4x3 Output Aspect Ratio Conversion Mode	Center-Cut Letterbox Anamorphic	<i>Center-Cut</i> cuts off top and bottom of the video. <i>Letterbox</i> adds bars at the top and bottom of the video. <i>Anamorphic</i> stretches the video height and width to match the format mode.
16x9 Output Aspect Ratio Auto Conversion	Disabled AFD	If 16x9 Auto Conversion is set to <i>Disabled</i> the MRD 5800 uses the 16x9 Conversion Mode setting to format video. If 16x9 Auto Conversion is set to <i>AFD</i> the MRD 5800 will apply the conversion defined by the AFD code in the incoming stream. If 16x9 Auto Conversion is set to <i>AFD</i> , but the AFD code is not present or invalid in the incoming stream the 16x9 Conversion Mode setting will be used.
16x9 Output Aspect Ratio Conversion Mode	Center-Cut Pillarbox Anamorphic	<i>Center-Cut</i> cuts off the sides of the video. <i>Pillarbox</i> adds bars at the left and right of the video. <i>Anamorphic</i> stretches the video height and width to match the format mode.
Overlay Type	None Closed Captions DVB Subtitles Teletext Subtitles	<i>Closed Captions</i> overlays burns closed captioning in the video output. <i>DVB Subtitles</i> burns subtitles in video output. <i>Teletext Subtitles</i> burns subtitles in the video output. <i>None</i> disables overlays completely.
Closed Caption	NTSC DTVCC	Sets the type of closed captions that will be in the overlay.
NTSC Service	CC1 – CC4	Sets the NTSC closed caption service that will be displayed in the overlay. This setting is only available if the Closed Caption option is set to NTSC.

DTVCC Service	Service 1-6	Sets the DTVCC closed caption service that will be displayed in the overlay. This setting is only available if the Closed Caption option is set to DTVCC.
DVB Subtitles	Language Codes	If DVB Subtitles overlays are enabled this setting choosing the language which the subtitles are displayed. Only the languages present in the stream are given.
Teletext Subtitles	3 Hexidecimal Characters	If Teletext Subtitles overlays are enabled this setting choosing the page (language) of which subtitles are displayed. Only the pages present in the stream are given.
Image Trigger	Disabled SCTE 35 Decode Failure Always Active	This setting will enable or disable the image overlay in the video output. The SCTE 35 option will insert based on an event ID. The decode failure option will overlay the image if the video not decoding error is raised. Always active will always overlay the image in the video output.
SCTE35 Event ID		Specify the SCTE35 Event ID that will cause the image overlay to trigger.
Image Dithering	Enabled Disabled	Enable or Disable dithering of the uploaded image
Image Transition	Fade Cut	Specify if the image should fade in and out or cut in and out when using SCTE 35 or Decode Failure options

4.2.13 Configuring Secondary Video Services

This menu, if applicable, allows the user to configure the simultaneous SDI, and the second Composite output of the MRD 5800. Please note the simultaneous SDI output is limited to SD only. Also note the simultaneous SDI and simultaneous Composite outputs will output the same selected service as the primary video output.

Configure Secondary Video

General

Format Mode: Auto

Manual Format: 720x480i 4x3 29.97fps

Raster Mode: Solid Color

Raster Color: Black

4x3 Output Aspect Ratio

Auto Conversion: Disabled

Conversion Mode: Center-Cut

16x9 Output Aspect Ratio

Auto Conversion: Disabled

Conversion Mode: Pillarbox

Apply Cancel

Setting	Range	Description
Format Mode	Auto Manual	Setting to <i>Auto</i> the MRD 5800 will output video in an SD format based on the incoming native video format. Setting to <i>Manual</i> the user can define the SD video format the MRD 5800 will output.
Manual Format	720x576i (4x3 or 16x9) @ 25Hz 720x480i (4x3 or 16x9) @ 29.97Hz	This setting is the video format the MRD 5800 will output.
Raster Mode	Solid Color Last Frame	If no input is present the MRD 5800 will output either the last frame present or raster.
Raster Color	Black, White, Yellow, Cyan, Magenta, Red, Blue, Green, Gray	If no input is present and solid color option is chosen the MRD 5800 will output raster. This is the color of the video the MRD will output.
4x3 Output Aspect Ratio Auto Conversion	Disabled	If 4x3 Auto Conversion is set to <i>Disabled</i> the MRD 5800 uses the 4x3 Conversion

	AFD	Mode setting to format video. If 4x3 Auto Conversion is set to <i>AFD</i> the MRD 5800 will apply the conversion defined by the AFD code in the incoming stream. If 4x3 Auto Conversion is set to <i>AFD</i> , but the AFD code is not present or invalid in the incoming stream the 4x3 Conversion Mode setting will be used.
4x3 Output Aspect Ratio Conversion Mode	Center-Cut	<i>Center-Cut</i> cuts off top and bottom of the video. <i>Letterbox</i> adds bars at the top and bottom of the video. <i>Anamorphic</i> stretches the video height and width to match the format mode.
	Letterbox	
	Anamorphic	
16x9 Output Aspect Ratio Auto Conversion	Disabled	If 16x9 Auto Conversion is set to <i>Disabled</i> the MRD 5800 uses the 16x9 Conversion Mode setting to format video. If 16x9 Auto Conversion is set to <i>AFD</i> the MRD 5800 will apply the conversion defined by the AFD code in the incoming stream. If 16x9 Auto Conversion is set to <i>AFD</i> , but the AFD code is not present or invalid in the incoming stream the 16x9 Conversion Mode setting will be used.
	AFD	
16x9 Output Aspect Ratio Conversion Mode	Center-Cut	<i>Center-Cut</i> cuts off the sides of the video. <i>Pillarbox</i> adds bars at the left and right of the video. <i>Anamorphic</i> stretches the video height and width to match the format mode.
	Pillarbox	
	Anamorphic	

4.2.14 Configuring Audio

This menu allows the user to configure the audio downmix settings or select a pair of discrete audio channels(if the 5.1 discrete audio license is present). Two audio presets are available: Transmission and Monitor. These presets can be applied by clicking the **Presets** button. The menus for Audio 1 through Audio 8 all contain the same settings.




Setting	Range	Description
Operational Mode	Line Mode	Refer to Appendix E for explanation.
	RF Mode	
	Custom 1	
	Custom 0	
Processing Mode	Downmix	Refer to Appendix E for explanation.
	Discrete	Refer to Appendix F for explanation
Discrete Channels	Lf/Rf	Selectable Pairs of Discrete Channels(Refer to Appendix F)
	C/LFE	
	Ls/Rs	
	Ch1/Ch2	
	Ch3/Ch4	
	Ch5/Ch6	
	Ch7/Ch8	
Dynamic Range	Enabled	Refer to Appendix E for explanation.
	Disabled	
Downmix	Lo/Ro (Stereo)	When the audio is downmixed in the MRD 5800 two audio channels are created. The channels can be configured using the settings available in the drop down menu. (Refer to Appendix E)
	Lt/Rt (Dolby Surround)	
	Lt/Rt (Auto)	
	Dual Mono	
	Dual Left	
	Dual Right	

Dolby Format Mode	Consumer Professional	This option selects the Dolby Digital format mode. (Refer to Appendix E)
Audio Offset(ms):	-50 to +100 ms	This setting will adjust the audio output timing from -50 ms to +100 ms. This setting will affect all interfaces configured to output this audio service.
DolbyE Offset:	None Advance 1 Frame	This setting will adjust the audio output timing for if this audio service is a DolbyE audio. Setting to <i>None</i> no timing changes are made. Setting to <i>Advance 1 Frame</i> will advance the audio 1 frame. This setting will affect all interfaces configured to output this audio service.

4.2.15 Configuring Genlock

If the Genlock Reference option was selected as a factory installed option, the following menus and options will be available for configuration. This menu allows the user to configure the genlock reference used by the MRD 5800. The MRD 5800 can be configured to use an external user provided reference or disabled completely.

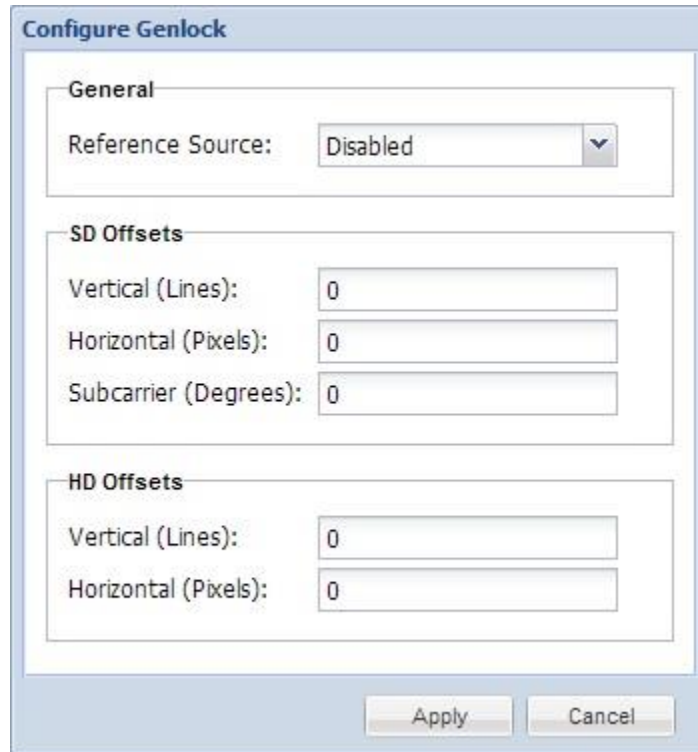

Setting	Range	Description
Reference Source	Disabled	Setting to <i>Disabled</i> will synchronize video output to the PCR carried in the transport

	External	stream. Setting to <i>External</i> uses the user provided external genlock reference.
SD Vertical (Lines)	-312 - 312	Plus or minus half of the number of lines in the genlock reference for SD formats.
SD Horizontal (Pixels)	-431 - 432	Plus or minus half of the number of pixels in the genlock reference SD formats.
Subcarrier (Degrees)	-180 - 180	Plus or minus 180 degrees of the color subcarrier.
HD Vertical (Lines)	-562 - 562	Plus or minus half of the number of lines in the genlock reference for HD formats.
HD Horizontal (Pixels)	-1374 – 1375	Plus or minus half of the number of pixels in the genlock reference for HD formats.

Note: The Genlock reference connector if enabled requires external termination.


4.2.16 SCTE35

If the SCTE35 license is enabled, the following menus and options will be available for configuration. The SCTE35 to SCTE104 and SCTE35 to Relay options are used in an application where the MRD 5800 is receiving a transport stream with SCTE35 DPI splice messages.

In an SCTE35 to 104 configuration, the MRD extracts SCTE 35 messages from the transport stream and converts them to SCTE104 messages, and embeds them as VANC packets on the SDI output.

In the SCTE35 to relay configuration the unit will trigger a relay based on SCTE35 DPI splice message and user configurations for the relays.

The SCTE 35 insertion option contains configuration settings for manually triggered or SNMP triggered SCTE 35 DPI splice messages.

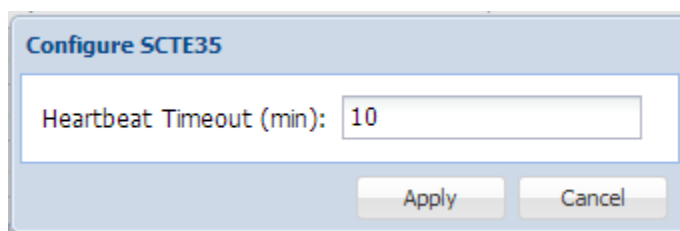


Setting	Range	Description
Heartbeat Timeout (min)	1-60	Setting this value will determine the time in minutes between SCTE35 messages before the MRD 5800 will report an error

The screenshot shows a configuration window with two tabs: 'General' and 'Relays'. The 'Relays' tab is active. On the left, there is a 'Select Trigger' list with 'Trigger 1', 'Trigger 2', and 'Trigger 3'. 'Trigger 1' is selected. The main area is titled 'Trigger 1 Configuration' and contains the following settings:

- Relay Triggering: Enabled (dropdown)
- Relay Output: Relay 1 (dropdown)
- Event ID Filter: Pass All (dropdown)
- Event ID (Hex): 0 (text input)
- Event Source (Hex): 0 (text input)
- Offset (ms): 0 (text input)
- Relay Mode: Pulse (dropdown)
- Pulse Event: Out of Network (dropdown)
- Pulse Duration (ms): 100 (text input)
- Latch Timeout (sec): 40 (text input)

Setting	Range	Description
Relay Triggering	Enabled Disabled	Enable or Disable selected Trigger
Relay Output	Relay 1 Relay 2 Relay 3	Select which Relay the configured trigger will use. See appendix D for relay pinout.
Event ID Filter	Pass All Pass Event ID Pass Event Source	Selects whether all Events will trigger the relay, or only those with a certain Event ID or Source
Event ID (Hex)	0-FFFFFFFF	Used in “Pass Event ID” mode to filter which SCTE 35 messages that will trigger the relay
Event Source (Hex)	0-FFFFFFFF	Used in “Pass Event Source” mode to filter which SCTE 35 messages that will trigger the relay
Offset (ms)	-4000ms to 4000ms	Specify an offset for the Trigger
Relay Mode	Pulse Latch	Specify a mode for the relay. In pulse mode the relay will fire once on either OON or RTN. In latch mode the relay will remain energized for the entire break duration

Pulse Event	Out of Network Return to Network	Select which SCTE 35 splice_insert message triggers the relay
Pulse Duration (ms)	10-1000	Select a duration for the pulse
Latch Timeout (ms)	1-300	Specify a duration for latch mode. Note: Receiving a Return to Network message will override the latch timeout.

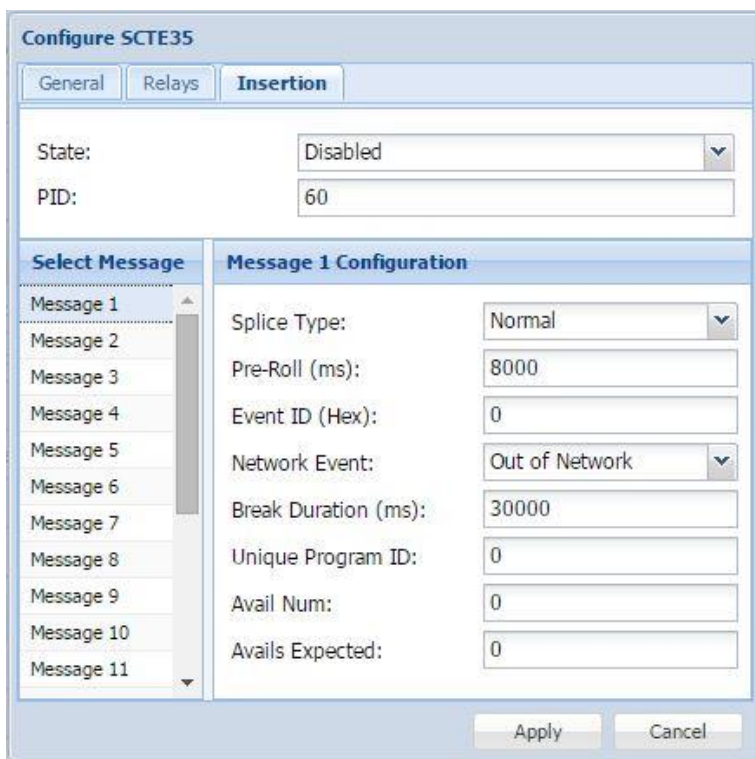

Setting	Range	Description
State	Enabled Disabled	Enable or Disable SCTE 35 message Insertion
PID	0-8191	PID on which the inserted SCTE 35 messages will be inserted
Splice Type	Normal Immediate	Selects whether the SCTE 35 message will be of the “splice immediate” type (which can trigger an instantaneous switch downstream) or the normal type which uses a PTS-based preroll value to time the insertion.
Pre-Roll (ms)	0-20000	Configured offset prior to splice point

Event ID (Hex)	0-FFFFFFFF	Unique Event ID for the the SCTE 35 message
Network Event	Out of Network Return to Network	Select which network transition signal is used for the SCTE 35 message
Break Duration (ms)	0-95443717	Duration in ms of the Out of Network Break
Unique Program ID	0-65535	Unique program identification within a service
Avail Num	0-255	Authentication for a specific avail in the Unique Program ID
Avails Expected	0-255	Number of Avails expected in the current viewing event

Messages can be manually inserted by clicking the green arrow that is shown when the SCTE 35 section is expanded as shown below. In a typical operational scenario, the splice insertion will be automated and triggered using the SNMP MIB.

SCTE35/ESAM

SCTE35 General Configuration

Heartbeat Timeout (min): 10

Trigger 1 Configuration

Relay Triggering: Disabled
Relay Output: Relay 1
Event Filter: Pass All
Event ID: 0x0
Event Source: 0x0
Offset: 0 ms
Relay Mode: Pulse
Pulse Event: Out of Network
Pulse Duration: 100 ms
Latch Timeout: 40 sec

Trigger 2 Configuration

Relay Triggering: Disabled
Relay Output: Relay 1
Event Filter: Pass All
Event ID: 0x0
Event Source: 0x0
Offset: 0 ms
Relay Mode: Pulse
Pulse Event: Out of Network
Pulse Duration: 100 ms
Latch Timeout: 40 sec

Trigger 3 Configuration

Relay Triggering: Disabled
Relay Output: Relay 1
Event Filter: Pass All
Event ID: 0x0
Event Source: 0x0
Offset: 0 ms
Relay Mode: Pulse
Pulse Event: Out of Network
Pulse Duration: 100 ms
Latch Timeout: 40 sec

SCTE35 Insertion Configuration

State: Disabled
PID: 60

Message	Splice Type	Pre-Roll	Event ID	Event	Break Duration	Program ID	Avail Num	Avails Expected	Insert Message
Message 1	Normal	8000 ms	0x0	OON	30000 ms	0	0	0	➡
Message 2	Normal	8000 ms	0x0	OON	30000 ms	0	0	0	➡
Message 3	Normal	8000 ms	0x0	OON	30000 ms	0	0	0	➡
Message 4	Normal	8000 ms	0x0	OON	30000 ms	0	0	0	➡

4.2.17 ESAM

If the ESAM license is enabled, the following menu and options will be available for configuration. The MRD interfaces with a Placement Opportunity Information Service (POIS) using the CableLabs ESAM (Real-time Event Signaling and Management) standard. When the ESAM feature is configured, each SCTE35 message which is received in the incoming stream is sent to the POIS for processing (via the control interface). The POIS can request that the MRD replace the message, pass the message with no change, or delete the message.

Asynchronous SCTE 35 message insertion allows the ESAM server to create and insert SCTE 35 messages onto a specified PID in the transport stream.

Setting	Range	Description
ESAM Processing	Enabled Disabled	Enable or Disable ESAM processing
POIS URI	Valid String	Specify the address of the POIS server
POIS Timeout (sec)	1-5	Specify a timeout to receive a response from the POIS
Timeout Behavior	Pass Message Retry POIS Discard Message	Specify a behavior that is used by the MRD if the timeout is reached
Acquisition Point ID	Valid String	Optional reference used by the POIS for processing
Acquisition Signal ID	Valid String	Optional reference used by the POIS for processing
State	Enabled Disabled	Enable or Disable Asynchronous message insertion

Port	0-65535	Port on which the MRD 5800 will listen for SCTE 35 messages from the ESAM server
PID	SCTE 35 Pid present in TS	PID on which the SCTE 35 messages will be inserted in the transport stream

4.2.18 Configuring Ancillary Data Options

This menu allows the user to configure processing options relating to ancillary (ANC/VBI) data generation. Currently it contains options for Source ID and, if the SCTE35 license is enabled, it will also allow the user to configure the filter mode for SCTE104 messages.

Setting	Range	Description
Lookup Mode	Auto Manual	Setting Lookup Mode to auto will use the service information from the active stream service information tables (if source id present). Setting Lookup Mode to manual will allow the user to input a user defined source id.
Manual Source ID	ASCII Characters	User defined Source ID will need to be less than 14 characters
Timeout (sec)	5 – 120 sec	This will define the timeout for automatic extraction.
Filter Mode	Pass All Operations Pass First Operation	Setting Pass First Operation will filter SCTE 104 messages with multiple OpIDs and only pass the first OpID of that message.

4.2.19 Configuring SDI Outputs Port 1 & 2

The following menus allow the user to configure the embedded audio and auxiliary data in the SDI video output for port 1 & 2. There are unique settings for SD and HD video. All VANC embedding Line settings contain the values 4 through 19. All HANC embedding Line settings contain the values 5 through 15.

Configure SDI Output Port 1 & 2

SD | HD | Audio

General

Video Loss Mode: ▾

VANC

EIA 708-B:	<input type="text" value="Disabled"/> ▾	Line:	<input type="text" value="9"/> ▾
ATC:	<input type="text" value="Disabled"/> ▾	Line:	<input type="text" value="13"/> ▾
TTX/VPS/WSS (S2031):	<input type="text" value="Disabled"/> ▾	Line:	<input type="text" value="5"/> ▾
AMOL/TVG2X/VITC:	<input type="text" value="Disabled"/> ▾	Line:	<input type="text" value="5"/> ▾
AFD:	<input type="text" value="Disabled"/> ▾	Line:	<input type="text" value="16"/> ▾
RDD11:	<input type="text" value="Disabled"/> ▾		
SMPTE2038:	<input type="text" value="Disabled"/> ▾		
VII:	<input type="text" value="Disabled"/> ▾	Line:	<input type="text" value="16"/> ▾
Source ID:	<input type="text" value="Disabled"/> ▾	Line:	<input type="text" value="10"/> ▾
SCTE104:	<input type="text" value="Disabled"/> ▾	Line:	<input type="text" value="12"/> ▾

VBI

TTX:	<input type="text" value="Disabled"/> ▾
WSS:	<input type="text" value="Disabled"/> ▾
VPS:	<input type="text" value="Disabled"/> ▾
AMOL:	<input type="text" value="Disabled"/> ▾
TVG2X:	<input type="text" value="Disabled"/> ▾
VITC:	<input type="text" value="Disabled"/> ▾
L21 Captions:	<input type="text" value="Disabled"/> ▾

Apply Cancel

SD SDI Output Configuration Menu

General

Setting	Range	Description
---------	-------	-------------

Video Loss Mode	Disable SDI	Setting to <i>Disable SDI</i> disables the SDI output of the MRD in case of an error state. Setting to <i>Display Raster</i> the MRD will display the raster color selected in Section 4.2.10
	Display Raster	


VANC Embedding

EIA 708-B	Enabled Disabled	Enable/Disable EIA 708-B Closed Caption embedding in the VANC. Choose one line between lines 4-19 to embed data.
ATC	Enabled Disabled	Enable/Disable Ancillary Time Code (ATC) embedding in the VANC. Choose one line between lines 4-19 to embed data.
TTX/VPS/WSS (S2031)	Enabled Disabled	Enable/Disable EN301775 VBI waveform data embedding in the VANC. Choose one line between lines 4-19 to embed data.
AMOL/TVG2X/VITC	Enabled Disabled	Enable/Disable SCTE127 VBI waveform data embedding in the VANC. Choose one line between lines 4-19 to embed data.
AFD	Enabled Disabled	Enable/Disable Automatic Format Description (AFD) embedding in the VANC. Choose one line between lines 4-19 to embed data.
RDD11	Enabled Disabled	Enable/Disable Registered Disclosure Document 11 (RDD11) embedding in the VANC.
SMPTE2038	Enabled Disabled	Enable/Disable SMPTE2038 method of embedding data in the VANC.
VII AFD	Enabled Disabled	Enable/Disable AFD in Video Index Data embedding in the VANC. Choose one line between lines 4-19 to embed data.
Source ID	Enabled Disabled	Enable/Disable Source ID embedding in the VANC. Choose one line between lines 4-19 to embed data.
SCTE104	Enabled Disabled	Enable/Disable SCTE104 embedding in the VANC. Choose one line between lines 4-19 to embed data.

SD SDI VBI Embedding

When the MRD 5800 is configured to output SD video the VBI data can be encoded into the vertical blanking as a VBI waveform. The options below allow the user to enable or disable these waveforms.

Setting	Range	Description
TTX	Enabled	Enable/Disable Teletext embedding in the VBI. The line which Teletext will be embedded is dependent on data in the incoming stream.
	Disabled	
WSS	Enabled	Enable/Disable Widescreen Signaling (WSS) embedding in the VBI. WSS is output on line 23 in the VBI.
	Disabled	
VPS	Enabled	Enable/Disable Video Program System (VPS) embedding in the VBI. VPS is output on line 16 in the VBI.
	Disabled	
AMOL	Enabled	Enable/Disable Automated Measurement of Lineups (AMOL) embedding in the VBI. The line which AMOL will be embedded is dependent on data in the incoming stream.
	Disabled	
TVG2X	Enabled	Enable/Disable TV Guide data embedding in the VBI. The line which TVG2X will be embedded is dependent on data in the incoming stream.
	Disabled	
VITC	Enabled	Enable/Disable Vertical Interval Timecode embedding in the VBI. VITC is sourced from the video elementary stream and is embedded on line 14.
	Disabled	
L21 Captions	Enabled	Enable/Disable Line 21 Closed Caption embedding in the VBI. Closed Captions are output on line 21 in the VBI.
	Disabled	

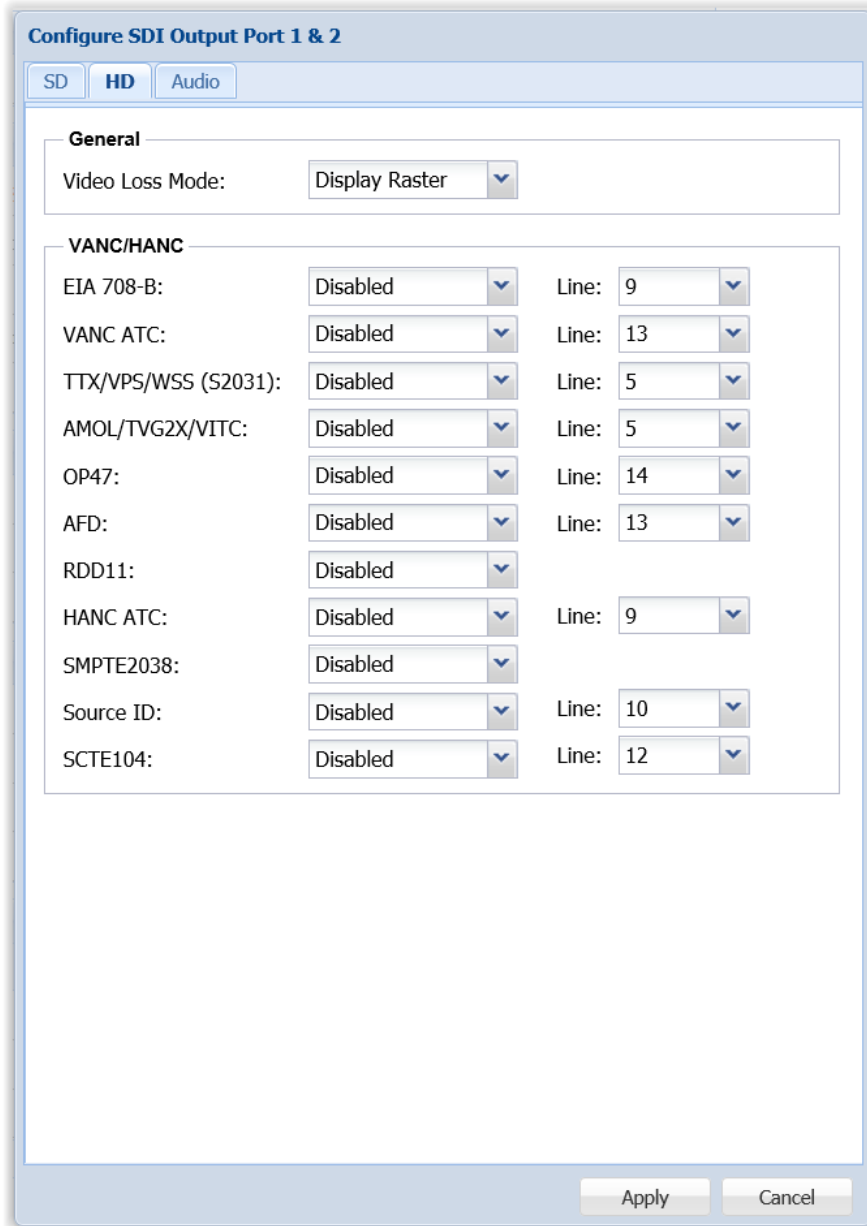

HD SDI Output Configuration Menu

General

Setting	Range	Description
Video Loss Mode	Disable SDI	Setting to <i>Disable SDI</i> squelches the SDI output of the MRD in case of an error state. Setting to <i>Display Raster</i> the MRD will display the raster color selected in Section 4.2.12.
	Display Raster	

HD SDI VANC Embedding

Setting	Range	Description
EIA 708-B	Enabled Disabled	Enable/Disable EIA 708-B Closed Caption embedding in the VANC. Choose one line between lines 4-19 to embed data.
VANC ATC	Enabled Disabled	Enable/Disable Ancillary Time Code (ATC) embedding in the VANC. Choose one line between lines 4-19 to embed data.
TTX/VPS/WSS (S2031)	Enabled Disabled	Enable/Disable EN301775 VBI waveform data embedding in the VANC. Choose one line between lines 4-19 to embed data.
AMOL/TVG2X/VITC	Enabled Disabled	Enable/Disable SCTE127 VBI waveform data embedding in the VANC. Choose one line between lines 4-19 to embed data.
OP47	Enabled Disabled	Enable/Disable OP47 Subtitle embedding in the VANC. Choose one line between lines 4-19 to embed data.
AFD	Enabled Disabled	Enable/Disable Automatic Format Description (AFD) embedding in the VANC. Choose one line between lines 4-19 to embed data.
RDD11	Enabled Disabled	Enable/Disable Registered Disclosure Document 11 (RDD11) embedding in the VANC.
HANC ATC	Enabled Disabled	Enable/Disable Ancillary Time Code (ATC) embedding in the HANC. Choose one line between lines 5-15 to embed data.
SMPTE2038	Enabled Disabled	Enable/Disable SMPTE2038 method of embedding data in the VANC.
Source ID	Enabled Disabled	Enable/Disable Source ID embedding in the VANC. Choose one line between lines 4-19 to embed data.
SCTE104	Enabled Disabled	Enable/Disable SCTE104 embedding in the VANC. Choose one line between lines 4-19 to embed data.

4.2.20 Configuring SDI Audio Embedding

This menu allows the user to configure SDI embedded audio settings. The MRD 5800 comes standard with the ability to handle up to four audio services. With additional licensing the MRD 5800 can handle up to eight unique audio services. When licensed for eight audio services the user will have eight audio pairs available to embed audio in the SDI. These four groups consist of eight pairs, with two pairs to each group. All audio pairs share the same options.

The screenshot shows a window titled "Configure SDI Output" with three tabs: "SD", "HD", and "Audio". The "Audio" tab is selected. The window contains four sections, each labeled "Group 1" through "Group 4". Each group has two rows: "Pair 1:" and "Pair 2:". Each row has a dropdown menu. In Group 1, Pair 1 is "Audio 1 PCM" and Pair 2 is "Audio 1 Pass-through". In Group 2, Pair 1 is "Audio 2 PCM" and Pair 2 is "Audio 2 Pass-through". In Group 3, Pair 1 is "Off" and Pair 2 is "Off". In Group 4, Pair 1 is "Off" and Pair 2 is "Off". At the bottom right of the window are "Apply" and "Cancel" buttons.

SDI Embedded Audio Configuration Menu

Group 1-4	Off	Assigning a <i>PCM</i> audio to a Group Pair will embed the decoded or downmixed two channel audio using the settings defined in Section 4.2.13. Assigning <i>Pass-Through</i> to a Group Pair will embed unprocessed compressed audio in the SDI VANC. Selecting Off disables the Group Pair completely.
Pair 1-2	Audio 1-8 PCM	
	Audio 1-8 Pass-through	

4.2.21 Configuring Secondary SDI Outputs

The following menus allow the user to configure the embedded audio and auxiliary data in the secondary, simultaneous SDI video output. All VANC embedding Line settings contain the values 4 through 19.

Configure Secondary SDI Output Port 3 & 4

SD Audio

General

Video Loss Mode:

VANC

EIA 708-B: Line:

ATC: Line:

TTX/VPS/WSS (S2031): Line:

AMOL/TVG2X/VITC: Line:

AFD: Line:

RDD11:

SMPTE2038:

VII: Line:

Source ID: Line:

VBI

TTX:

WSS:

VPS:

AMOL:

TVG2X:

VITC:

L21 Captions:

Apply Cancel

General

Setting	Range	Description
Video Loss Mode	Disable SDI Display Raster	Setting to <i>Disable SDI</i> disables the SDI output of the MRD in case of an error state. Setting to <i>Display Raster</i> the MRD will

display the raster color selected in Section 4.2.12

VANC Embedding

Setting	Range	Description
EIA 708-B	Enabled Disabled	Enable/Disable EIA 708-B Closed Caption embedding in the VANC. Choose one line between lines 4-19 to embed data.
ATC	Enabled Disabled	Enable/Disable Ancillary Time Code (ATC) embedding in the VANC. Choose one line between lines 4-19 to embed data.
TTX/VPS/WSS (S2031)	Enabled Disabled	Enable/Disable EN301775 VBI waveform data embedding in the VANC. Choose one line between lines 4-19 to embed data.
AMOL/TVG2X/VITC	Enabled Disabled	Enable/Disable SCTE127 VBI waveform data embedding in the VANC. Choose one line between lines 4-19 to embed data.
AFD	Enabled Disabled	Enable/Disable Automatic Format Description (AFD) embedding in the VANC. Choose one line between lines 4-19 to embed data.
RDD11	Enabled Disabled	Enable/Disable Registered Disclosure Document 11 (RDD11) embedding in the VANC.
SMPTE2038	Enabled Disabled	Enable/Disable SMPTE2038 method of embedding data in the VANC.
VII AFD	Enabled Disabled	Enable/Disable AFD in Video Index Data embedding in the VANC. Choose one line between lines 4-19 to embed data.
Source ID	Enabled Disabled	Enable/Disable Source ID embedding in the VANC. Choose one line between lines 4-19 to embed data.
SCTE104	Enabled Disabled	Enable/Disable SCTE104 embedding in the VANC. Choose one line between lines 4-19 to embed data.


SD SDI VBI Embedding

When the MRD 5800 is configured to output SD video the VBI data can be encoded into the vertical blanking as a VBI waveform. The options below allow the user to enable or disable these waveforms.

Setting	Range	Description
TTX	Enabled	Enable/Disable Teletext embedding in the VBI. The line which Teletext will be embedded is dependent on data in the incoming stream.
	Disabled	
WSS	Enabled	Enable/Disable Widescreen Signaling (WSS) embedding in the VBI. WSS is output on line 23 in the VBI.
	Disabled	
VPS	Enabled	Enable/Disable Video Program System (VPS) embedding in the VBI. VPS is output on line 16 in the VBI.
	Disabled	
AMOL	Enabled	Enable/Disable Automated Measurement of Lineups (AMOL) embedding in the VBI. The line which AMOL will be embedded is dependent on data in the incoming stream.
	Disabled	
TVG2X	Enabled	Enable/Disable TV Guide data embedding in the VBI. The line which TVG2X will be embedded is dependent on data in the incoming stream.
	Disabled	
VITC	Enabled	Enable/Disable Vertical Interval Timecode embedding in the VBI. VITC is sourced from the video elementary stream and is embedded on line 14.
	Disabled	
L21 Captions	Enabled	Enable/Disable Line 21 Closed Caption embedding in the VBI. Closed Captions are output on line 21 in the VBI.
	Disabled	

4.2.22 Configuring Secondary SDI Audio Embedding

This menu allows the user to configure simultaneous SDI embedded audio settings. The MRD 5800 comes standard with the ability to handle up to four audio services. With additional licensing, the MRD 5800 can handle up to eight unique audio services. When licensed for eight audio services, the user will have eight audio pairs available to embed audio in the SDI output. These four groups consist of eight pairs, with two pairs to each group. All audio pairs share the same options.

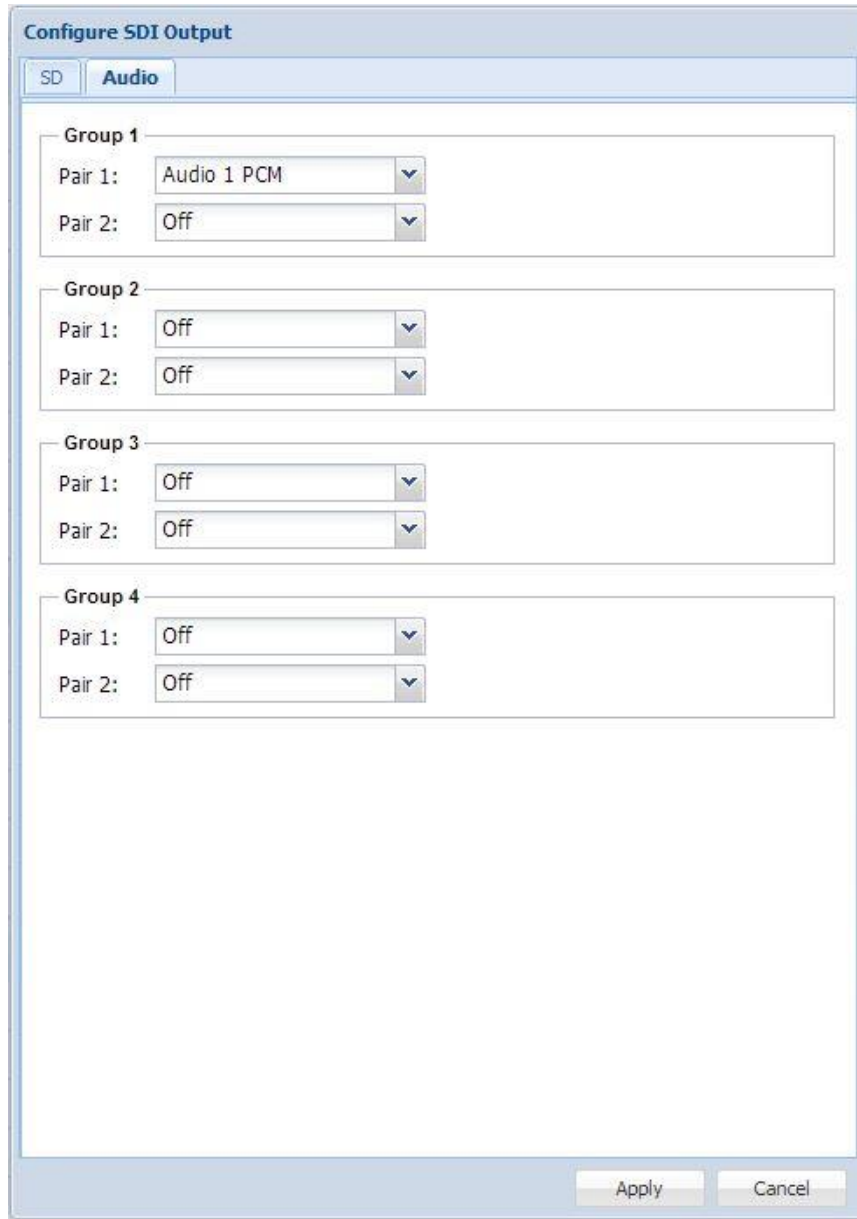


Secondary SDI Embedded Audio Configuration Menu

Setting	Range	Description
Group 1-4	Off	Assigning a <i>PCM</i> audio to a Group Pair will embed the decoded or downmixed two channel audio using the settings defined in Section 4.2.13.
Pair 1-2	Audio 1-8 PCM	
	Audio 1-8 Pass-through	Assigning <i>Pass-Through</i> to a Group Pair will embed unprocessed compressed audio in the SDI VANC. Selecting <i>Off</i> disables the Group Pair completely.

4.2.23 Configuring Composite Output

This menu allows the user to configure the composite video output (primary and secondary if applicable) of the MRD 5800. Color subcarriers and VBI embedding are configured in this menu. Please note that the composite video output is only active if the output video format is SD.

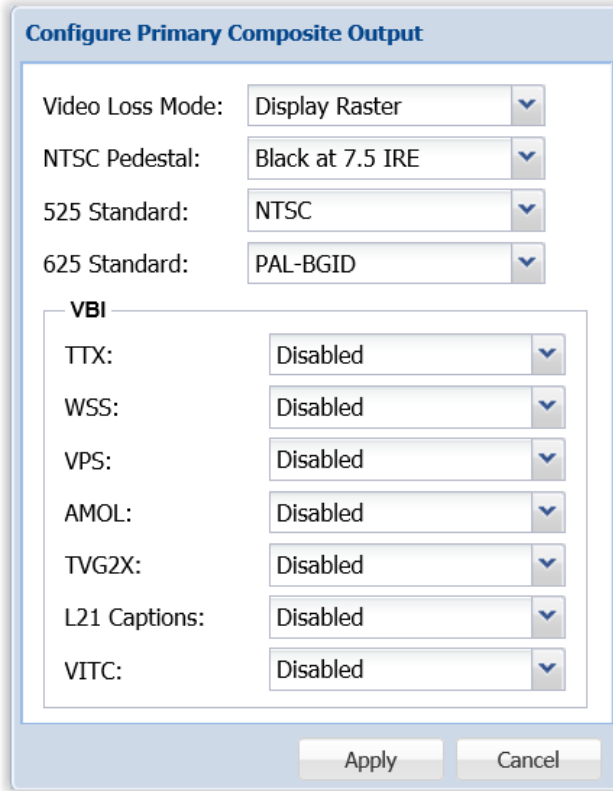

Setting	Range	Description
Video Loss Mode	Disable Composite Display Raster	This option allows the user to define how the composite video output reacts when video is not decoding. If <i>Disable Composite</i> is selected the composite video output is squelched. If <i>Display Raster</i> is selected the composite video output displays the Raster Color defined in Section 4.2.12.
NTSC Pedestal	Enabled Disabled	Enabling the NTSC Pedestal uses the NTSC pedestal (7.5 IRE) for black levels.
525 Standard	NTSC PAL-M	Select the color subcarrier used for 525 line video formats.

625 Standard	PAL-BGID PAL-N	Select the color subcarrier used for 625 line video formats.
TTX	Enabled Disabled	Enable/Disable Teletext embedding in the VBI. The line which Teletext will be embedded is dependent on data in the incoming stream.
WSS	Enabled Disabled	Enable/Disable Widescreen Signaling (WSS) embedding in the VBI. WSS is output on line 23 in the VBI.
VPS	Enabled Disabled	Enable/Disable Video Program System (VPS) embedding in the VBI. VPS is output on line 16 in the VBI.
AMOL	Enabled Disabled	Enable/Disable Automated Measurement of Lineups (AMOL) embedding in the VBI. The line which AMOL will be embedded is dependent on data in the incoming stream.
TVG2X	Enabled Disabled	Enable/Disable TV Guide data embedding in the VBI. The line which TVG2X will be embedded is dependent on data in the incoming stream.
L21 Captions	Enabled Disabled	Enable/Disable Line 21 Closed Caption embedding in the VBI. Closed Captions are output on line 21 in the VBI.
VITC	Enabled Disabled	Enable/Disable Vertical Interval Timecode (VITC) embedding in the VBI. VITC is sourced from the video elementary stream and is embedded on line 14.

4.2.24 Configuring Analog Audio Output

This menu allows the user to configure the analog output outputs of the MRD 5800. Four analog audio outputs are available. The dBu level of the outputs can be adjusted for each of the four audio outputs. For the Analog Output connector pin out refer to Appendix C.

Configure Analog Audio Output	
Analog Output 1:	Audio 1 ▾ Level (dBu): 0.4
Analog Output 2:	Audio 2 ▾ Level (dBu): 0.4
Analog Output 3:	Off ▾ Level (dBu): 4
Analog Output 4:	Off ▾ Level (dBu): 4
<input type="button" value="Apply"/> <input type="button" value="Cancel"/>	

Setting

Range


Description

Analog Output 1-4	Off Audio 1-8	Assign <i>Audio 1-8</i> to an analog audio output for output. Select <i>Off</i> to disable the analog output completely.
--------------------------	------------------	--

Level	-10-4	Level of the analog audio output in dBu.
--------------	-------	--

4.2.25 Configuring Digital Audio Output


This menu allows the user to configure the digital audio outputs of the MRD 5800. The number of outputs available directly correlates with the number of audio services the unit is licensed to support. Up to eight digital audio outputs are available.

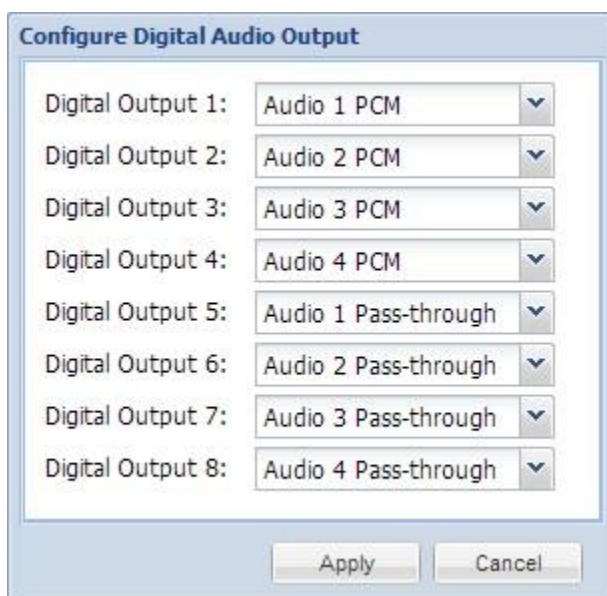

Setting	Range	Description
Digital Output 1-8	Off Audio 1-8 PCM Audio 1-8 Pass-through	Assigning a <i>PCM</i> audio to a digital output will output the decoded or downmixed two channel audio using the settings defined in Section 4.2.13. Assigning <i>Pass-Through</i> to a digital output will output unprocessed compressed audio. Selecting <i>Off</i> disables the digital output completely.

4.2.26 PID Filter

If the PID/Service Filter license is enabled, the following menus and options will be available for configuration. PID filtering will allow the user to create a new output TS by selecting and dragging one or more services/PIDs from the incoming transport stream into the Selected Services/Pids box or use the currently decoded stream. The user can also configure a TS bitrate for each PID filtered stream and select different table inclusion options.

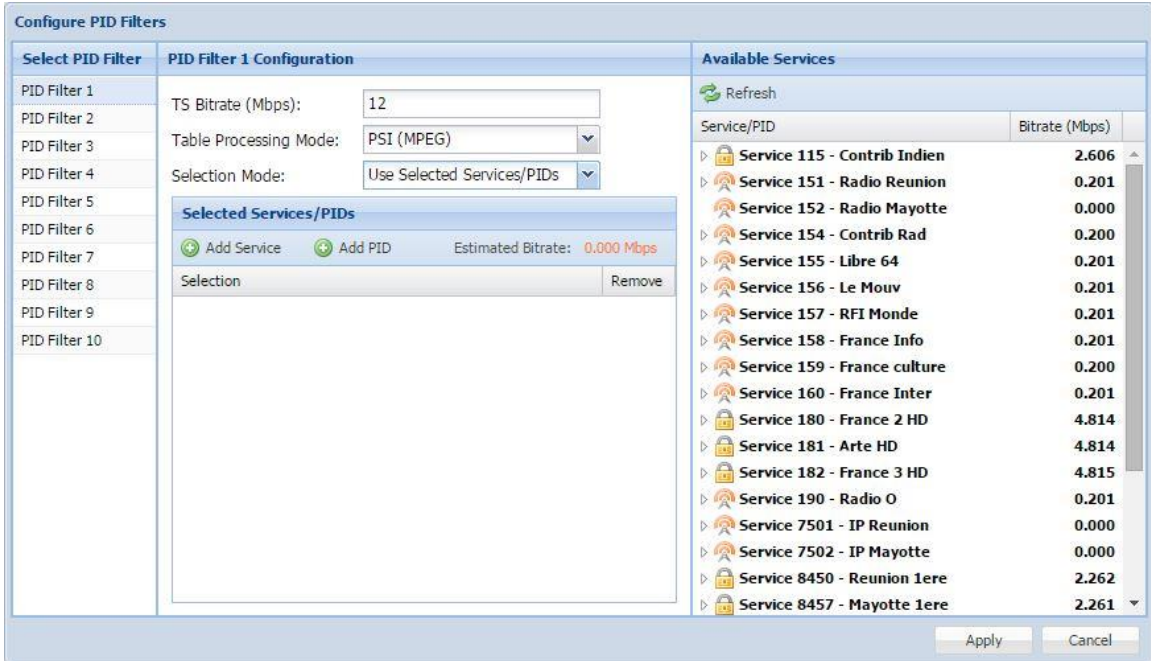


Setting	Range	Description
Select PID Filter	PID filter 1-10	Select which PID filter to configure
TS Bitrate (Mbps)	.25 to 160	Configure the TS Bitrate for the PID filter stream selected
Table Processing Mode	PSI (MPEG)	Adjusted tables: PAT, PMT Passed tables: CAT, NIT Discarded tables: all remaining
Table Processing Mode	SI (DVB)	Adjusted tables: PAT, PMT,SDT Passed tables: CAT, NIT, EIT, RST, TDT, TOT Discarded tables: TSDT, BAT
Selection Mode	Use Selected Services/PIDs Use Decoded Service	Use Selected Services/PIDs will allow the user to select which services are in the new TS. Use Decoded Service will only include the service that is currently selected for decoding by the MRD 5800

4.2.27 Configuring ASI Output

This menu allows the user to configure the ASI output of the MRD 5800. When enabled this output acts as an active loop output of the active input. For example, if the DVB-

S/S2 input card is the current active input the ASI output port will output a demodulated signal of the satellite input.

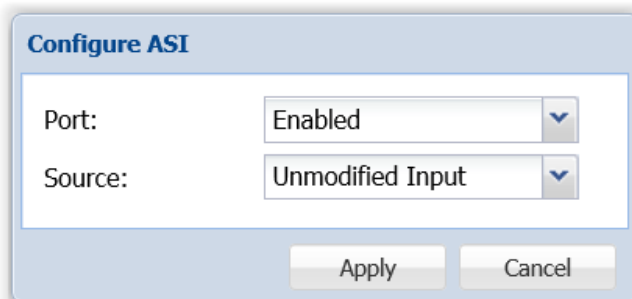

Setting	Range	Description
Port	Enabled	Enable or disable the ASI output port.
	Disabled	
Source	Unmodified Input	Unmodified Input will pass the incoming TS to the output without applying any BISS or DVB-CI decryption
	Descrambled	Descrambled (or Descrambled and Processed) will output the TS with any applied BISS or DVB-CI decryption.
	Descrambled and Processed	
	Pid Filter 1-10	
		PID Filter will output the TS from the PID filter menu option.

4.2.28 Configuring the MPEG/IP Outputs

This menu allows the user to configure the MPEG/IP outputs. Each MPEG/IP card has two ports that can be set to receive and/or transmit. This menu is for setting up the transmission of MPEG/IP unicast or multicast transport streams. The menu for Stream 1 and 2 have the same settings. The menu for Streams 3 through 10 will contain the same options as Transmit 1 and Transmit 2 with one exception: Forward Error Correction is only available (if licensed) on Transmit 1 and 2.

Configure MPEG/IP Slot 2 Stream 1

General Settings

Transmit:

Source:

Physical Connector:

Destination IP:

Destination Port:

Source Port:

TS Packets Per IP Packet:

Differentiated Services:

Encapsulation:

Advanced Settings

FEC:

FEC Columns:

FEC Rows:

Setting	Range	Description
Transmit	Enabled Disabled	Enable or disable the MPEG/IP transmit group.
Source	Unmodified Input Descrambled Descrambled and Processed Pid Filter 1-10	Unmodified Input will pass the incoming TS to the output without applying any BISS or DVB-CI decryption. Descrambled (or Descrambled and Processed) will output the TS with any applied BISS or DVB-CI decryption. PID Filter will output the TS from the PID filter menu option.
Physical Connector	Port 1 Port 2	The physical connector on the MPEG/IP card that will be used to transmit the output.
Destination IP	Multicast - 224.0.0.0 - 239.255.255.255	When sending to a unicast address the destination IP address must match the receiving device's IP address. When sending a multicast

		the address must be sent within the multicast IP range.
Destination Port	0 - 65535	When sending to a unicast address, the destination port must match the receiving device's port. When sending a multicast, any port within the accepted range can be used, but it is good practice to always choose a port >1030 and an even number
Source Port	0 - 65535	This is the port used by the MRD 5800 to transmit the MPEG/IP stream.
TS Packets Per IP Packet	1-7	The number of TS packets that are contained with a single IP packet. Default is 7. Lowering this value below default increases network overhead.
Differentiated Services	Default Assured Forwarding 1-1 to 4-3 Expedited Forwarding	Define the quality of service (QoS) classification the packets carry when transmitted.
Encapsulation	UDP RTP	Sets the Encapsulation to UDP or RTP.
FEC	Off Columns Columns/Rows	Sets the FEC Type or disables FEC.
FEC Columns	1-20 (Columns) 4-20 (Columns/Rows)	Defines the number of Columns used to construct the FEC Matrix. (Columns * Rows must be ≤ 100.)
FEC Rows	4-20	Defines the number of Rows used to construct the FEC Matrix. (Columns * Rows must be ≤ 100.)

4.2.29 Configuring the MPEG/IP MPE Outputs

This menu allows the user to configure the MPEG/IP Multi-Protocol Encapsulation (MPE) outputs. Each MPE Output allows the user to select an MPE data PID from the transport stream to be output.

Configure MPEG/IP Slot 1 MPE 1

Settings	Available Services
Transmit: <input type="text" value="Disabled"/>	Refresh
Physical Connector: <input type="text" value="Port 1"/>	Service/PID
PID: <input type="text" value="0"/>	▶ Service 3
MAC Filter State: <input type="text" value="Disabled"/>	▶ Service 4
MAC Address: <input type="text" value="00:00:00:00:00:00"/>	▶ Service 5
	<input type="button" value="Apply"/> <input type="button" value="Cancel"/>

Setting	Range	Description
Transmit	Enabled Disabled	Enable or disable transmission of de-encapsulated MPE data.
Physical Connector	Port 1 Port 2	The physical connector on the MPEG/IP card that will be used to transmit the MPE data.
PID		Selected MPE PID from the transport stream to use for MPE output
MAC Filter State	Enabled Disabled	Enable or Disable the filtering of output data based on a MAC address in the selected MPE PID
MAC Address	00:00:00:00:00:00 FF:FF:FF:FF:FF:FF	Filtered MAC address that will be transmitted in the MPE output. All data with other MAC addresses in the selected MPE PID will be discarded

4.2.30 Viewing PSIP Information

To view the PSIP information for the applied TS, select the View PSI Tables button located on the right hand side of the Inputs section. This will open a new window that displays all of the PSIP information for the applied TS. The tables displayed will include PAT, PMT and CAT and tables associated with the stream type (DVB,ATSC). SDT tables will be displayed for DVB streams and MGT,TVCT,EIT, ETT, STT tables will be displayed for ATSC streams.

The screenshot shows a window titled "View PSI Tables" with a tree view on the left and a details pane on the right. The tree view shows "PSI Tables" expanded to "0 PAT" and "17 SDT". The details pane shows "PAT Details" with the following information:

PAT Details	PID:	0
	Version:	0
	TS ID:	1
	Program Count:	1

Below the PAT details is a table for "PMTs":

PID	Version	Program Number	ES Count
101	0	2	4

A "Close" button is located in the bottom right corner of the window.

Clicking the Refresh button in the upper left corner will update the tables displayed.

4.3 Admin Panel

The screenshot displays the Admin Control Panel for the MRD 5800. The interface includes a navigation bar with tabs for Main, Admin, Reporting, and About. The Admin tab is active, showing a sub-menu with options like Change Password, Profiles, SNMP MIBs, and Diagnostics. The main content area is divided into several sections:

- General Settings:** Shows Unit Alias as '(No Alias)' and Protect BISS-E Injected ID as 'No'.
- Unit Network Configuration:** A table showing network settings for a static mode.


Mode	IP Address	Subnet Mask	Gateway	Hostname	MAC
Static	10.0.105.100	255.255.0.0	10.0.1.3	(none)	00:05:4D:01:80:EB
- MPEG/IP Network Configuration:** Shows configuration for two slots.


MPEG/IP	IP Address	Subnet Mask	Gateway	MAC	Link Status	Tx Rate (Mbps)	Rx Rate (Mbps)	IGMP
Slot 2 - 1	192.168.1.125	255.255.0.0	192.168.0.1	00:06:4D:01:84:7F	N/A (Down)	0.000	0.000	V3
Slot 2 - 2	192.168.1.126	255.255.0.0	192.168.0.1	00:06:4D:01:84:80	N/A (Down)	0.000	0.000	V3
- License Information:** A table listing various options and their license status.

Option	Supported	State	Instances
MRD 58701 - Genlock	Yes	Licensed	1
MRD 58710 - HD 4:2:0, SD 4:2:2/4:2:0 Decoding	Yes	Licensed	1
MRD 58720 - HD/SD 4:2:2/4:2:0 Decoding	Yes	Licensed	1
MRD 58740 - 3G-SDI/1080p60 Video Output	Yes	Licensed	1
MRD 58880 - 4x->8x Audio Service Decoding Upgrade	Yes	Licensed	1
MRD 58916 - DVB-S2 Advanced Feature	Yes	Licensed	1
MRD 58921 - BISS Descrambling	Yes	Licensed	1
MRD 58925 - IP FEC Output	Yes	Licensed	1
MRD 58991 - Multi-service Descrambling	Yes	Licensed	1
MRD 58992 - SCTE 35-104 Conversion License	Yes	Licensed	1
- Date / Time:** Shows Update Mode as NTP, Current Date as 11/21/2013, Current Time as 13:57:49, and NTP Server as 10.0.1.23.
- SNMP Communities:** Shows Read-Only Community as 'public' and Read-Write Community as 'private'.
- SNMP Trap Managers:** A section for configuring SNMP managers, currently empty.

To access the Admin Control Panel, click on the **Admin** tab. This menu allows the user to control many aspects of the MRD 5800.

4.3.1 Changing Unit Password

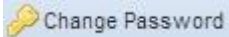
The MRD 5800 can be assigned an access password and the current access password can be changed. In order to make changes to passwords, click the  button. A window will appear to enter the current password and new password.

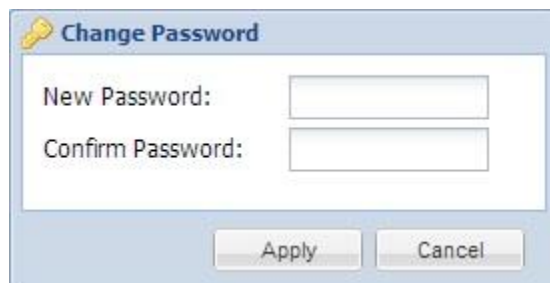









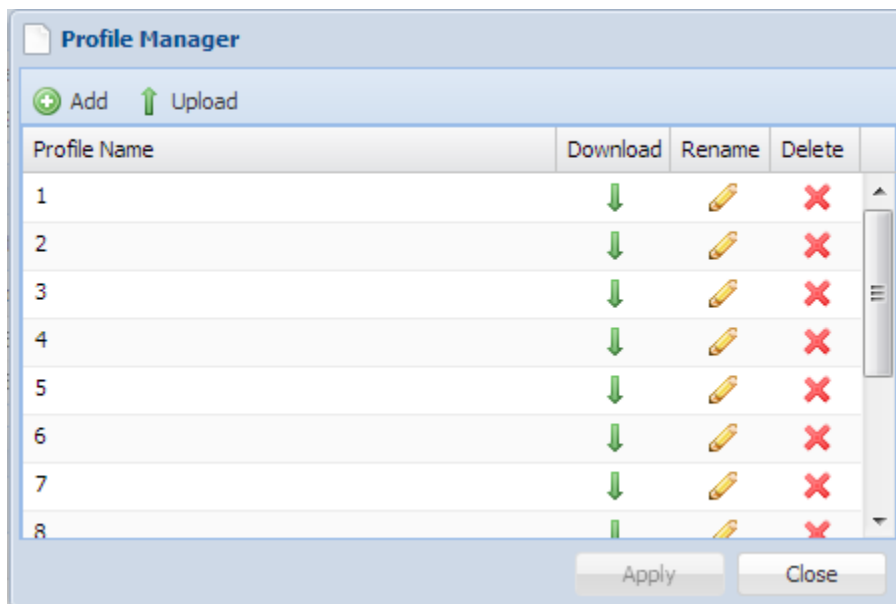















The dialog box titled "Change Password" contains two input fields: "New Password:" and "Confirm Password:". Below the fields are two buttons: "Apply" and "Cancel".

4.3.2 Profiles

The MRD 5800 has the ability to save all configured settings to multiple profiles. Profiles can be saved locally, renamed and saved to external storage to be used on other MRD 5800s. Profiles can be used to quickly and easily change the configuration of an MRD 5800 to suit different inputs and decoding requirements.



The Profile Manager window shows a table with columns for Profile Name, Download, Rename, and Delete. There are 8 profiles listed, each with a corresponding icon for each action. The window also includes "Add" and "Upload" buttons at the top and "Apply" and "Close" buttons at the bottom.

Profile Name	Download	Rename	Delete
1			
2			
3			
4			
5			
6			
7			
8			

Action

Button


Description

Add New Profile







Adds a new profile from current settings. User must name profile before creation is complete.


Upload Profile





Allows the user to browse to external storage or workstation to upload profile to MRD 5800.



Apply Profile		Select a profile from the drop down menu and click this button. The MRD 5800 will apply all settings contained in the profile selected.
Rename Profile		Select a profile from the drop down menu and click this button. The user will be prompted for a new name for the profile.
Delete Profile		Select a profile from the drop down menu and click this button. The user will be prompted to confirm deletion of the profile.
Download Profile		Select a profile from the drop down menu and click this button. The user will be prompted to select a directory to download the profile.


4.3.3 General Settings

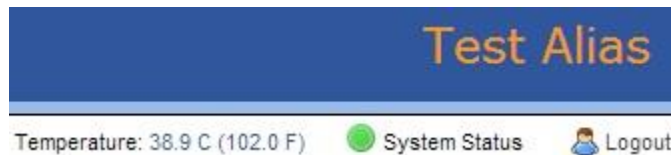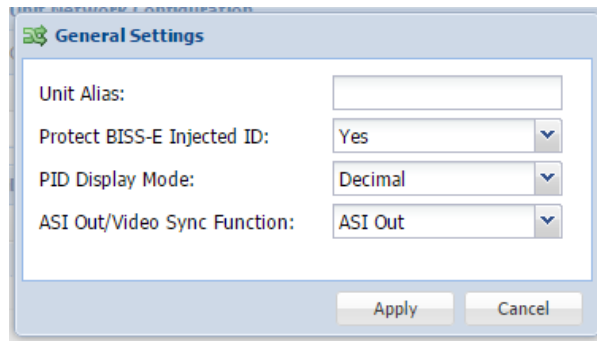The MRD 5800 can be assigned an alias which is displayed in the upper right hand corner of the web interface. The alias can help define which MRD 5800 the operator is currently logged into. The BISS-E Injected ID for BISS Mode E can also be protected from being accidentally changed. Setting the Protect BISS-E Injected ID to Yes will force the user to unlock the dialog box in the BISS Descrambling configuration menu before allowing any changes to be made. The edit the Unit Alias or protect the BISS-E Injected ID click on the  **Configure General Settings** button. The PID Display mode changes how PID values are displayed in the web interface. The values can either be displayed in decimal or HEX values. The ASI Out/Video Sync Function is for special applications purposes. This should remain set to ASI Out.



4.3.4 Unit Network Configuration

The management port of the MRD 5800 can be configured from the web interface. To make changes to the management port click, the  button under the Unit Network Configuration section. Domain name servers can be configured on the MRD clicking the  **Configure Nameservers** button. IP address and web address entries are accepted as Nameserver addresses.

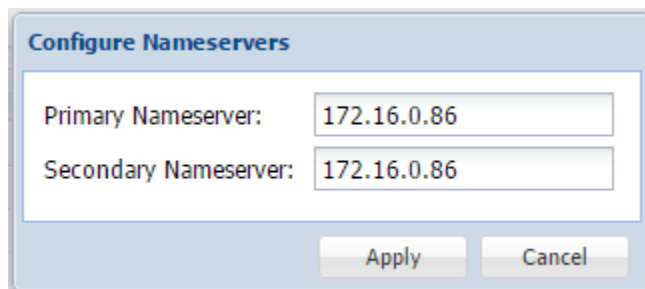

Configure Nameservers


Primary Nameserver: 172.16.0.86

Secondary Nameserver: 172.16.0.86

Apply Cancel

If the MRD 5800 contains a 58127 option card the unit can be configured to have an optional 2nd control port.

NOTE: Exercise extreme caution when performing changes to this menu as network communication can be lost with the MRD 5800.

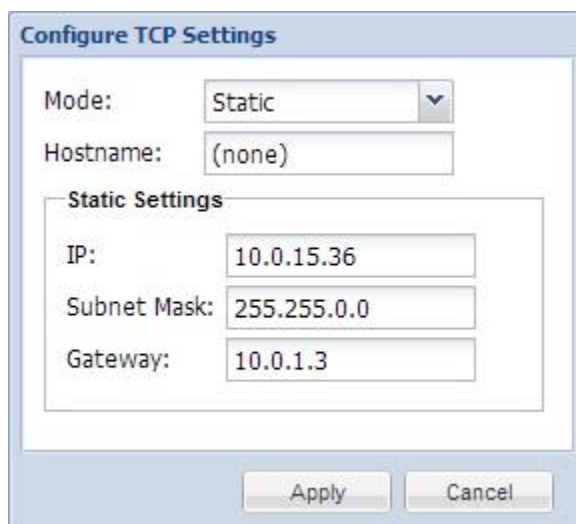

Configure TCP Settings

Mode: Static

Hostname: (none)

Static Settings

IP: 10.0.15.36


Subnet Mask: 255.255.0.0

Gateway: 10.0.1.3


Apply Cancel

Setting	Range	Description
Mode	DHCP Static	Setting to <i>DHCP</i> will allow the network assign an IP address automatically to the MRD 5800 (if supported). Setting to <i>Static</i> allows the user to

		manually define all TCP/IP settings for the management port.
Hostname	Valid characters: A through Z 0 through 9 - (hyphen)	This setting allows the user to define an optional unit Hostname.
IP	Four decimal octets: XXX.XXX.XXX.XXX	This option is only available if Static Mode is set. This is the IP address assigned to the management port.
Subnet Mask	255.0.0.0 – 255.255.255.254	This option is only available if Static Mode is set. This is the Subnet Mask assigned to the management port.
Gateway	Four decimal octets: XXX.XXX.XXX.XXX	This option is only available if Static Mode is set. This is the Gateway address assigned to the management port.

The 2nd management port of the MRD 5800 can be configured from the web interface. To make changes to which port is the 2nd management port click, the configure control ports  button under the Unit Network Configuration section.


4.3.5 MPEG/IP Network Configuration


The MPEG/IP card is used to receive MPEG over IP transport streams. The MPEG/IP card supported unicast, multicast, UDP and RTP. The ports of the MPEG/IP card on the MRD 5800 can be configured from the web interface. To configure the Default Gateway and ICMP Response settings click the  **Configure Card** button.



The screenshot shows a dialog box titled "Configure MPEG/IP Card" for "Slot 2". It contains two dropdown menus: "Default Gateway" is set to "Port 1" and "ICMP Response" is set to "Enabled". At the bottom, there are "Apply" and "Cancel" buttons.

Setting	Range	Description
Default Gateway	Port 1 Port 2	Setting to <i>Port 1</i> uses the gateway address of port 1 as the default gateway. Setting to <i>Port 2</i> uses the gateway address of port 2 as the default gateway.
ICMP Response	Enabled Disabled	Setting to enabled allows the MRD 5800 to respond to ICMP requests (ping). If disabled the MRD 5800 will not respond to these requests.

To configure the TCP/IP settings of the MPEG/IP ports click the  button under the MPEG/IP Network Configuration section next to the corresponding port. The settings for both ports are the same.

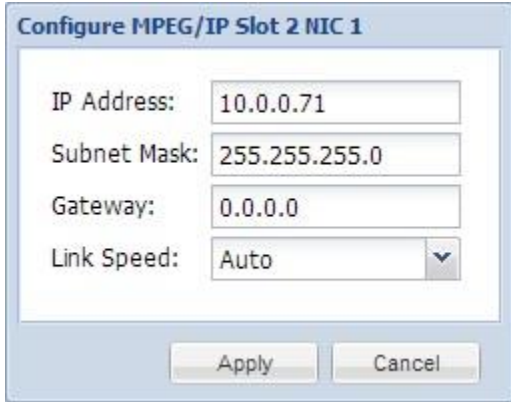

Configure MPEG/IP Slot 2 NIC 1

IP Address: 10.0.0.71

Subnet Mask: 255.255.255.0

Gateway: 0.0.0.0

Link Speed: Auto


Apply Cancel


Setting	Range	Description
IP Address	1.0.0.0 - 126.0.0.0 128.0.0.0 - 191.255.0.0 192.0.1.0 - 223.255.255.0	This setting is the TCP/IP address assigned to the port.
Subnet Mask	255.0.0.0 – 255.255.255.254	This setting is the subnet mask assigned to the port.
Gateway	1.0.0.0 - 126.0.0.0 128.0.0.0 - 191.255.0.0 192.0.1.0 - 223.255.255.0	This setting is the gateway address assigned to the port.
Link Speed	Auto 1000Mbps/Full 1000Mbps/Half 100Mbps/Full 100Mbps/Half 10Mbps/Full 10Mbps/Half	Setting Link Speed to Auto allows the MRD 5800 to determine the link speed of the network. If this is not possible or the user wants to define a link speed select one of the other values available.


4.3.6 Licensing

Certain features of the MRD 5800 require licenses in order to be functional. The interface displays all licenses available as well as the following status:

- License Locked or Unlocked
- License is Supported or Unsupported by the installed hardware

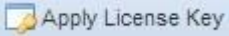
If licenses need to be applied to the MRD 5800 click  button. The menu below will appear where the user can copy and paste the provided license key from Sencore. The currently applied license key can be viewed by clicking the

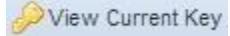
 button.



The dialog box titled "Enter License Key" features a large text input field with the placeholder text "Enter a new license key here...". At the bottom right of the dialog, there are two buttons: "Apply" and "Cancel".

4.3.7 Date/Time

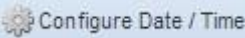The MRD 5800 can be set to synchronize with an NTP server or a manual data and time can be defined by the user. Click the  button to configure the date and time. These values are used to timestamp entries in the Alarm and Event logs under the Reporting tab.

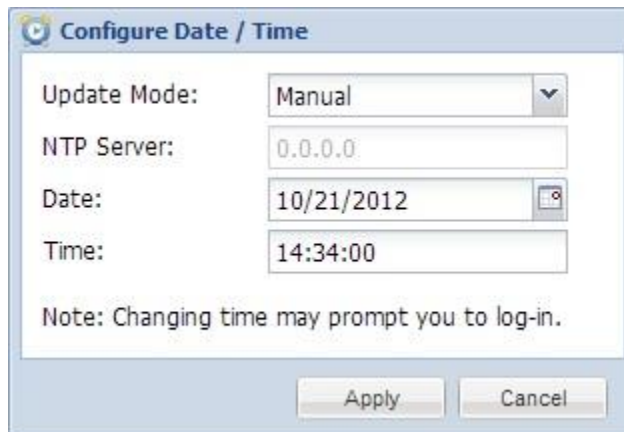

The dialog box titled "Configure Date / Time" contains the following fields:


- Update Mode: Manual (dropdown menu)
- NTP Server: 0.0.0.0 (text input)
- Date: 10/21/2012 (calendar icon)
- Time: 14:34:00 (text input)

A note at the bottom reads: "Note: Changing time may prompt you to log-in." At the bottom right, there are "Apply" and "Cancel" buttons.

Setting

Range

Description

Update Mode	NTP Manual	Setting to <i>NTP</i> uses the local network's NTP server to synchronize date and time. <i>Manual</i> allows the user to define a date and time.
NTP Server	Four decimal octets: XXX.XXX.XXX.XXX Domain Name	This is the IP Address or Domain Name of the local NTP Server on the network. This setting is only available if Update Mode is set to NTP.
Date	MM/DD/YYYY	This setting is the user defined date. A calendar widget can be used to select the data by clicking the  button. This setting is only available if Update Mode is set to Manual.
Time	00:00:00 – 24:00:00	This setting is the user defined time. The time is based on a 24 hour clock. This setting is only available if the Update Mode is set to Manual.

4.3.8 Configuring SNMP

4.3.8.1 SNMP Communities


SNMP Communities define whether users have read-only or read-write SNMP rights. These two communities are given unique names. The default names for these communities are:


- Read –Only Community: public
- Read- Write Community: private




To modify the names of these communities click on the  **Configure SNMP Communities** button.




4.3.8.2 SNMP Trap Managers

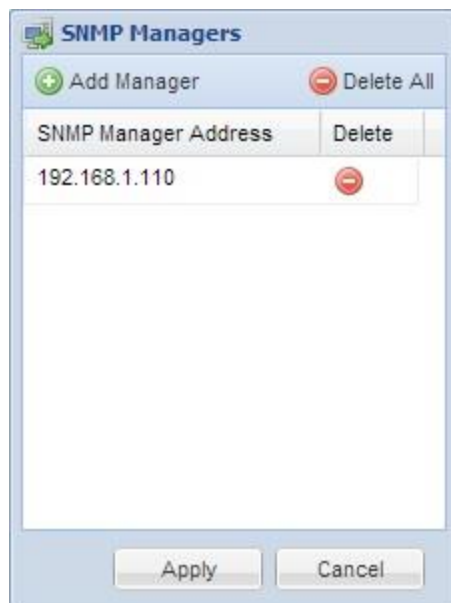The SNMP trap managers are recipients of SNMP traps sent from the MRD 5800. The following menu allows the user to configure the recipient's IP addresses. To add and remove recipients of the SNMP traps click the  **Configure SNMP Managers** button.

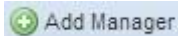

Action	Button	Description
Add Manager		Clicking this button prompts the user for the IP address of the SNMP trap manager.
Delete All		Clicking this button prompts the user to confirm the deletion of all SNMP trap manager IP addresses. If the user confirms deletion all SNMP trap manager IP addresses will be removed.
Delete Single Entry		Highlight a single SNMP trap manager IP address and click this button to delete the entry. A prompt will appear confirming the deletion of IP address.

4.3.8.3 Download SNMP MIB Files

The MRD 5800 stores the SNMP MIB files for the currently installed version of software on the unit. These files can be downloaded directly from the MRD 5800 by clicking on the  button. The screen below will appear where the files can be downloaded and saved off of the unit.


Index of /mibs/

Name	Last Modified	Size	Type
Parent Directory/		-	Directory
 INET-ADDRESS-MIB.MIB	2012-Oct-18 13:54:20	16.3K	application/octet-stream
 SENCORE-CSP-MIB.MIB	2012-Oct-18 13:54:20	66.7K	application/octet-stream
 SENCORE-GLOBAL-REG.MIB	2012-Oct-18 13:54:20	2.3K	application/octet-stream
 SENCORE-MRD5800-MIB.mib	2012-Oct-18 13:54:21	136.0K	application/octet-stream
 SNMP-COMMUNITY-MIB.MIB	2012-Oct-18 13:54:20	15.1K	application/octet-stream
 SNMP-FRAMEWORK-MIB.MIB	2012-Oct-18 13:54:20	21.8K	application/octet-stream
 SNMP-MPD-MIB.MIB	2012-Oct-18 13:54:20	5.3K	application/octet-stream
 SNMP-TARGET-MIB.MIB	2012-Oct-18 13:54:20	22.2K	application/octet-stream
 SNMP-USER-BASED-SM-MIB.MIB	2012-Oct-18 13:54:20	38.2K	application/octet-stream
 SNMP-VIEW-BASED-ACM-MIB.MIB	2012-Oct-18 13:54:20	33.3K	application/octet-stream
 SNMPv2-MIB.MIB	2012-Oct-18 13:54:20	28.6K	application/octet-stream
 SNMPv2-SMI.MIB	2012-Oct-18 13:54:20	8.7K	application/octet-stream
 SNMPv2-TC.MIB	2012-Oct-18 13:54:20	37.1K	application/octet-stream

To Download: Right-Click, Save Link As or Save Target As

4.3.9 Syslog

The MRD 5800 can be configured to send error and event logs formatted in the syslog protocol to a remote user specified Syslog server.

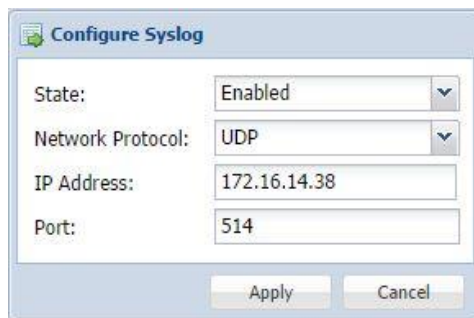


The image shows a 'Configure Syslog' dialog box with the following fields:

- State: Enabled (dropdown menu)
- Network Protocol: UDP (dropdown menu)
- IP Address: 172.16.14.38 (text input)
- Port: 514 (text input)

Buttons: Apply, Cancel

Action	Range	Description
State	Enabled Disabled	Enable or Disable sending messages to Syslog server.
Network Protocol	UDP TCP	Select which network protocol used to transmit to the Syslog server
IP Address	Four decimal octets: XXX.XXX.XXX.XXX	IP of the Syslog server. 0.0.0.0 and 255.255.255.255 are not permitted
Port	0 - 65535	Destination port of the Syslog server

4.3.10 In-Band Control

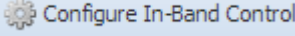
The In-Band Control is used to change settings and receive updates from data within a PID in the incoming TS, as injected by the Sencore CMD 4000 In-band Control Server. The following menu allows the user to configure the In-Band Control settings. To configure the In-Band Control settings click the  button.







Action	Range	Description
State	Enabled	Enable or Disable the In-Band Control.
	Disabled	
PID	1-8190	Sets the unit to look for commands on the PID that is set.
Group	None	This setting assigns the unit to a corresponding Group or No Group.
	1-128	

4.3.11 Updating the MRD 5800

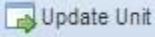
4.3.11.1 Applying Software Updates

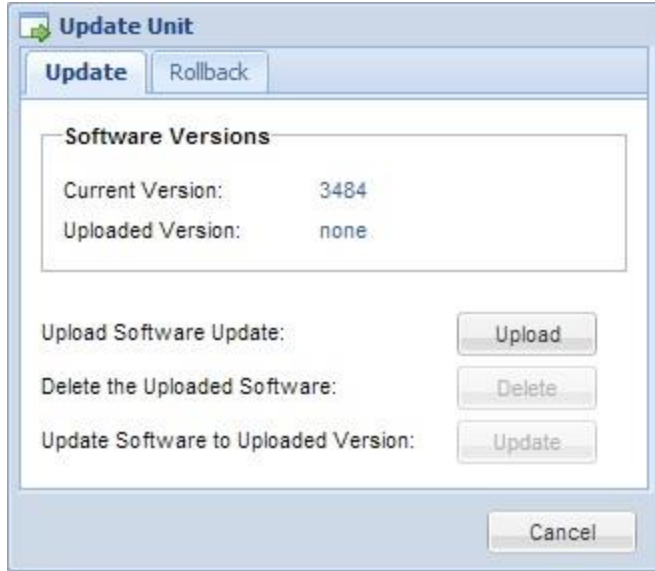
Updates to the MRD 5800 are performed through the web interface. A software update file is provided by Sencore and then uploaded to the unit. Once uploaded, the software update is applied to the unit. To upload software updates to the unit click on the  button. The current version and uploaded version is displayed in the Software Versions section. The MRD 5800 will reboot after a software update is complete.

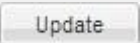


Action	Button	Description
Upload Software Update		To upload software updates to the MRD 5800 click this button. The user will be prompted to navigate to an update file. The file will then upload to the MRD 5800. When complete the MRD 5800 will prompt the user to either apply the update or cancel
Delete the Uploaded Software		Clicking this button prompts the user to confirm the deletion of the software update from the MRD 5800. This will also clear the Uploaded Version status of the Software Versions section.
Update Software to Uploaded Version		Clicking the button starts the software update process. The MRD 5800 will prompt the user to confirm the update. Click Yes to continue or No to cancel.


4.3.11.2 Rollback Software Updates

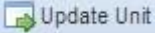The MRD 5800 is capable of reverting back to a previous version of software using the Rollback feature. The MRD 5800 maintains two separate software images; one is the most current version of software with all current settings and the other is the previous version of software with all settings. To perform a rollback, click the  **Update Unit** button and then click the **Rollback** tab. The MRD 5800 will reboot after the rollback process is complete.

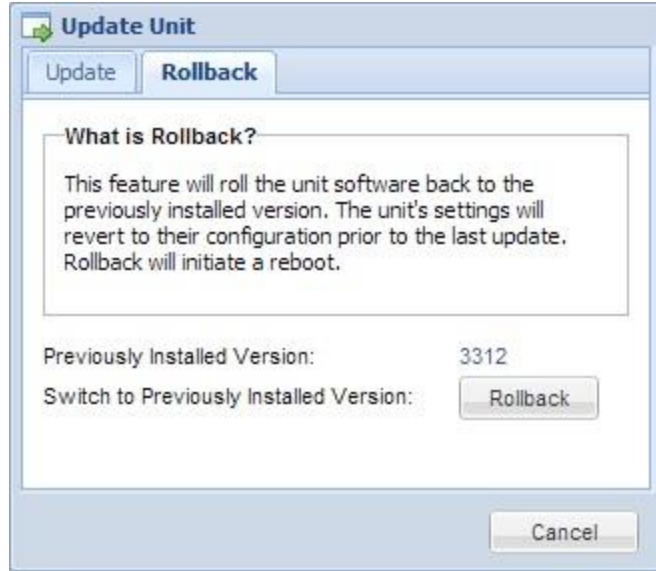


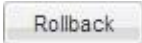Action	Button	Description
Rollback Software		Clicking this button starts the Rollback process. The MRD 5800 will prompt the user to confirm the rollback or click cancel to stop the process.

4.3.12 Reboot Unit

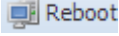The MRD 5800 can be rebooted from the web interface. In order to perform a reboot click the  button. The MRD 5800 will prompt the user to confirm the reboot. Once the reboot is complete the login screen will appear allowing the web interface to be logged into.

4.3.13 Reset Defaults

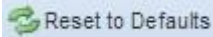The MRD 5800 settings can be reset to factory defaults. All settings will be returned to the factory defaults except the network management ports TCP/IP settings. All event logs will be cleared. To reset all settings to default click the  button. The MRD 5800 will prompt the user to confirm the reset.

4.4 Reporting Panel

The screenshot shows the 'Reporting Control Panel' with the 'Alarms' tab selected. The panel displays a table of active alarms with the following data:

State	Name	Location	Last Changed
ⓘ	Transport Stream Not Present	Unit	12/17/2012 16:27:19
ⓘ	Link Loss Error	MPEG/IP Slot 1 NIC 1	12/17/2012 16:27:31
ⓘ	IP Loss Error	Input MPEG/IP 2-1	12/17/2012 16:27:36
ⓘ	TS Sync Loss	Input MPEG/IP 2-1	12/17/2012 16:27:31



The **Reporting** tab in the MRD 5800 contains logs for active alarms currently affecting the unit and an event log. The active alarms are updated periodically in order to reflect the real-time state of the unit. Once an error is cleared it will be cleared from the active alarms window. The event log can be used to view alarm and event history. Both the active alarm and event logs can be configured to hide or change the behavior of alarms and events.

4.4.1 Active Alarms




Clicking on the **Alarms** button displays the Active Alarms menu. This list displays all of the active alarms currently affecting the unit. There are four columns in the log that display different types of information.


The screenshot shows the 'Reporting Control Panel' with the 'Alarms' tab selected. The panel displays a table of active alarms with the following data:

State	Name	Location	Last Changed
ⓘ	Video Not Decoding	Decoder	12/17/2012 16:28:27
ⓘ	Link Loss Error	MPEG/IP Slot 1 NIC 1	12/17/2012 16:28:45
ⓘ	Link Loss Error	MPEG/IP Slot 1 NIC 2	12/17/2012 16:28:41
ⓘ	Input Video Unsupported	Decoder	12/17/2012 16:28:27







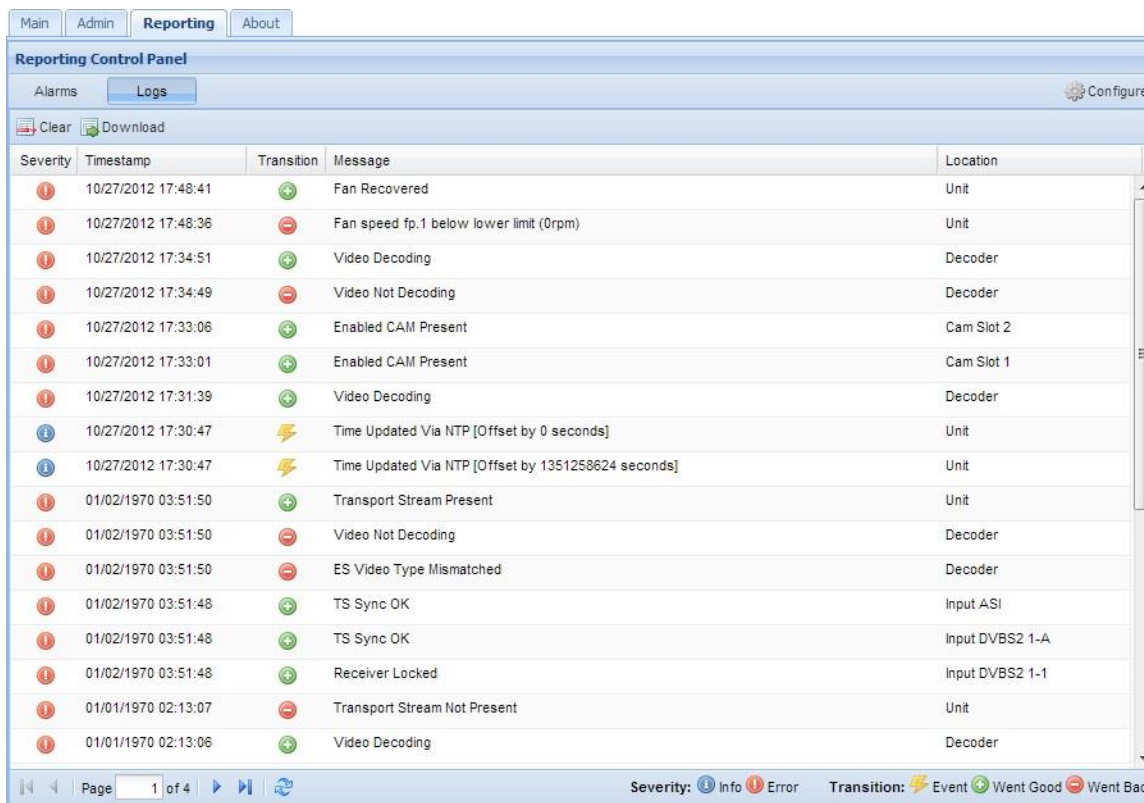



























Title	Description
State	This column displays the nature of the alarm. The  icon means the log entry is informational and is not an error. The  icon means the log entry is an active alarm.
Name	This column displays the description of the error. The function that is experiencing an error condition is described here.
Location	This column displays the hardware or function that is experiencing the active error.
Last Changed	This column displays the data and time the error was raised. This data and time correlates with the Date and Time settings configured in Section 4.3.7.






4.4.2 Event Logs

Clicking on the  button displays the Event Log menu. This list displays all of the events and alarms that have affected the unit. The MRD 5800 stores up to four days' worth of logs. If the unit is rebooted or powered off and on the event logs are cleared. The logs can be cleared manually by clicking the  button. The logs can be downloaded as a .tsv file and saved to an external location by clicking the  button. There are five columns in the log that display different types of information.




The screenshot shows the 'Reporting Control Panel' with the 'Logs' tab selected. The table below represents the data shown in the log.

Severity	Timestamp	Transition	Message	Location
	10/27/2012 17:48:41		Fan Recovered	Unit
	10/27/2012 17:48:36		Fan speed fp.1 below lower limit (0rpm)	Unit
	10/27/2012 17:34:51		Video Decoding	Decoder
	10/27/2012 17:34:49		Video Not Decoding	Decoder
	10/27/2012 17:33:06		Enabled CAM Present	Cam Slot 2
	10/27/2012 17:33:01		Enabled CAM Present	Cam Slot 1
	10/27/2012 17:31:39		Video Decoding	Decoder
	10/27/2012 17:30:47		Time Updated Via NTP [Offset by 0 seconds]	Unit
	10/27/2012 17:30:47		Time Updated Via NTP [Offset by 1351258624 seconds]	Unit
	01/02/1970 03:51:50		Transport Stream Present	Unit
	01/02/1970 03:51:50		Video Not Decoding	Decoder
	01/02/1970 03:51:50		ES Video Type Mismatched	Decoder
	01/02/1970 03:51:48		TS Sync OK	Input ASI
	01/02/1970 03:51:48		TS Sync OK	Input DVBS2 1-A
	01/02/1970 03:51:48		Receiver Locked	Input DVBS2 1-1
	01/01/1970 02:13:07		Transport Stream Not Present	Unit
	01/01/1970 02:13:06		Video Decoding	Decoder

Title	Description
Severity	This column displays the nature of the alarm. The  icon means the log entry is informational and is not an error. The  icon means the log entry is an active alarm.
Timestamp	This column displays the data and time the error was raised or cleared. This data and time correlates with the Date and Time settings configured in Section 4.3.7.
Transition	This column displays when an alarm transition from a bad to good state. When an error is raised the  icon is displayed. When an error is cleared the  icon is displayed. When an event takes place the  icon is displayed.
Message	This column displays the description of the error or event. The function or hardware that experienced the event or error is described here.
Location	This column displays the hardware or function that experienced the alarm or event.

4.4.3 Configuring the Logs

The MRD 5800 allows the user to configure alarms and events. Events and alarms can be hidden, set to send SNMP traps or close a relay when active. In order to configure these options click the  **Configure** button while in the **Logs** section of the **Reporting** tab. The **Conditions** tab allows the user to configure the alarms reported by the MRD 5800. The **Events** tab allows the user to configure the events reported by the MRD 5800. Each column and its function are described below. A user configured time offset can also be applied to allow viewing the logs in a local time zone.



Configure Conditions and Events

Set Viewer Time Offset: -06:00 HR

Conditions | Events


Name ^	Location	Log <input type="checkbox"/>	Severity	Alarm <input type="checkbox"/>	SNMP Trap <input type="checkbox"/>	Relay <input type="checkbox"/>	Relay #
12V Supply Error	Unit	<input checked="" type="checkbox"/>	Error	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Relay 1
3.3V Supply Error	Unit	<input checked="" type="checkbox"/>	Error	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Relay 1
5V Supply Error	Unit	<input checked="" type="checkbox"/>	Error	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Relay 1
AFD not Present	Decoder	<input checked="" type="checkbox"/>	Error	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Relay 1
ANC/VBI Line Conflict - AFD	Secondary Video Output	<input checked="" type="checkbox"/>	Error	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Relay 1
ANC/VBI Line Conflict - AFD	Primary Video Output	<input checked="" type="checkbox"/>	Error	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Relay 1
ANC/VBI Line Conflict - AMOL	Secondary Video Output	<input checked="" type="checkbox"/>	Error	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Relay 1
ANC/VBI Line Conflict - AMOL	Primary Video Output	<input checked="" type="checkbox"/>	Error	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Relay 1
ANC/VBI Line Conflict - CC	Primary Video Output	<input checked="" type="checkbox"/>	Error	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Relay 1
ANC/VBI Line Conflict - CC	Secondary Video Output	<input checked="" type="checkbox"/>	Error	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Relay 1
ANC/VBI Line Conflict - EN301775	Primary Video Output	<input checked="" type="checkbox"/>	Error	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Relay 1
ANC/VBI Line Conflict - EN301775	Secondary Video Output	<input checked="" type="checkbox"/>	Error	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Relay 1
ANC/VBI Line Conflict - OP47	Secondary Video Output	<input checked="" type="checkbox"/>	Error	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Relay 1
ANC/VBI Line Conflict - OP47	Primary Video Output	<input checked="" type="checkbox"/>	Error	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Relay 1
ANC/VBI Line Conflict - RDD11	Secondary Video Output	<input checked="" type="checkbox"/>	Error	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Relay 1
ANC/VBI Line Conflict - RDD11	Primary Video Output	<input checked="" type="checkbox"/>	Error	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Relay 1
ANC/VBI Line Conflict - SCTE127	Primary Video Output	<input checked="" type="checkbox"/>	Error	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Relay 1
ANC/VBI Line Conflict - SCTE127	Secondary Video Output	<input checked="" type="checkbox"/>	Error	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Relay 1

Apply Cancel

Title	Description
Name	This column displays the name of the error or condition. This is informational data; no options can be set here.
Location	This column displays the hardware or function that the alarm or event applies to. This is informational data; no options can be set here.
Log	Checking the box in this column creates an entry in the event log in the case this error or event is raised. If this box is unchecked this error or event will be hidden and not logged if raised.
Log Severity	This column is only available in the Conditions tab This option allows the user to set the severity of the error to Info or Error. If Info is selected in the drop down box the  icon will displayed in the event log. If Error is selected the  icon will be displayed in the event log.
Alarm	This column is only available in the Conditions tab This option allows the user to enable or disable this alarm in the Active Alarms log. If checked the alarm will be displayed in the Active Alarms log if raised. If this box is unchecked this error will be hidden.
SNMP Trap	This column allows the user to send an SNMP Trap if this alarm is raised. If this box is checked an SNMP Trap is sent when this alarm is raised. If this box is unchecked an SNMP is not sent.
Relay	This column allows the user to set a Relay closure if this alarm is raised. If this box is checked a Relay will be closed. If this box is unchecked a Relay will not be closed. See Appendix C for pinout.

Relay #	This column allows the user to select which of the three relays available on the MRD 5800 will be closed when the alarm is raised.
Relay Duration	This column is only available in the Events tab. This option allows the user to define the length of time in milliseconds the relay will be closed after the event is logged. This setting can be configured from 100-1000 milliseconds.

4.5 About Panel

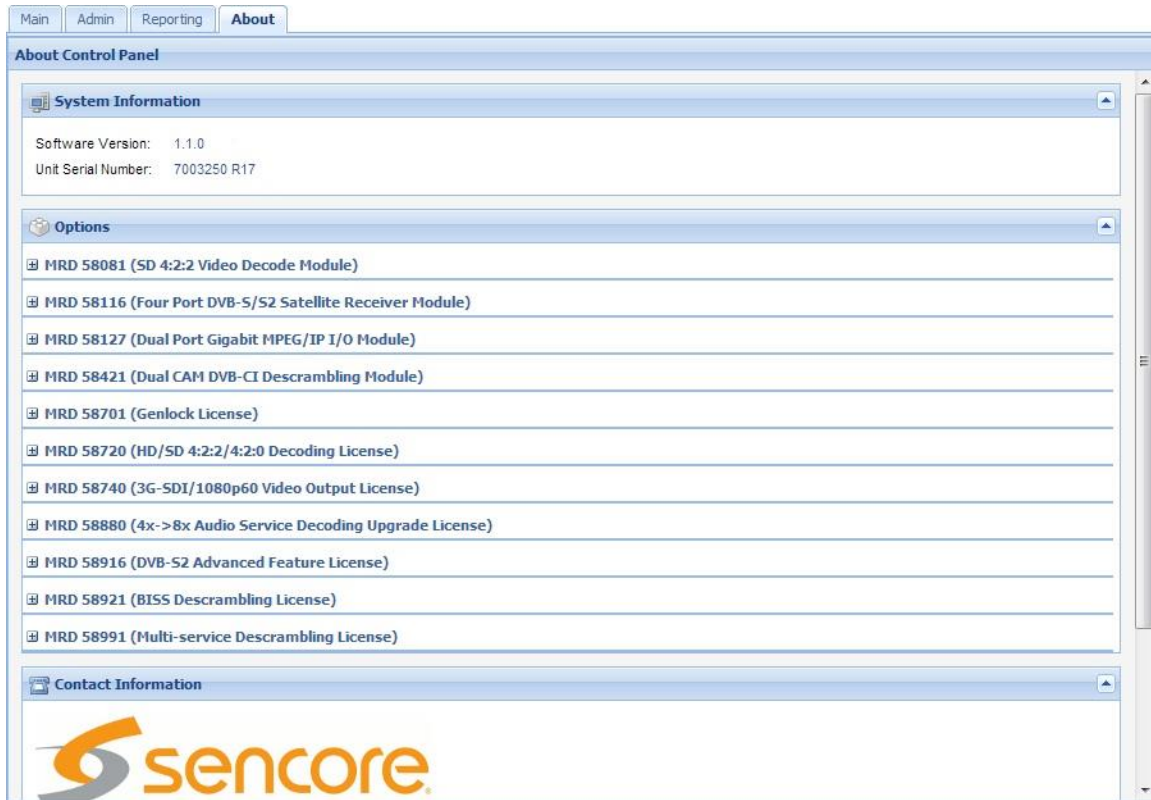

Under the **About** tab, there are no user definable parameters but there is information about software versions currently installed, which licenses are installed, how to contact Sencore, and third party software information.

Section 5 Appendices



Introduction

This section includes the following appendices:

Appendix A	– Acronyms and Glossary	99
Appendix B	– Error and Event List.....	102
Appendix C	– Specifications.....	105
Appendix D	– Pinouts for Analog Audio and Relay Connectors	116
Appendix E	– MRD 5800 Audio Explanation	117
Appendix F	– MRD 5800 Discrete Audio Configuration	120
Appendix G	– Open Source Software.....	121
Appendix H	– Warranty	123
Appendix I	– Support and Contact Information	123

Appendix A – Acronyms and Glossary

- 8VSB:** Vestigial sideband modulation with 8 discrete amplitude levels.
- 16VSB:** Vestigial sideband modulation with 16 discrete amplitude levels.
- AAC:** Advanced Audio Coding
- AC-3:** Also known as Dolby Digital
- AES:** Audio Engineering Society
- AFD:** Auto Format Descriptor
- ASI:** Asynchronous Serial Interface
- ATSC:** Advanced Television Systems Committee
- AV:** Audio Video
- Bit Rate:** The rate at which the compressed bit stream is delivered from the channel to the input of a decoder.
- BNC:** British Naval Connector
- BPS:** Bits per second.
- CAM:** Conditional Access Module
- CAT:** Conditional Access Table
- CAT6:** Category 6 – Cable standard for gigabit Ethernet
- CC:** Closed Caption
- CI:** Common Interface
- CoP:** Code of Practice
- CRC:** Cyclic Redundancy Check
- CVCT:** Cable Virtual Channel Table
- dB:** Decibel
- DDPlus:** Dolby Digital Plus
- DHCP:** Dynamic Host Configuration Protocol
- DPI:** Digital Program Insertion
- DTVCC:** Digital Television Closed Captioning
- DVB:** Digital Video Broadcasting
- EBU:** European Broadcasting Union
- EIA:** Electronic Industries Alliance
- EIT:** Event Information Table
- EPG:** Electronic Program Guide
- ETM:** Extended Text Message
- ETT:** Extended Text Table
- Event:** An event is defined as a collection of elementary streams with a common time base, an associated start time, and an associated end time.
- FCC:** Federal Communications Commission
- FEC:** Forward Error Correction
- Field:** For an interlaced video signal, a “field” is the assembly of alternate lines of a frame. Therefore, an interlaced frame is composed of two fields, a top field and a bottom field.
- Frame:** A frame contains lines of spatial information of a video signal. For progressive video, these lines contain samples starting from one time instant and continuing through successive lines to the bottom of the frame. For interlaced video a frame consists of two fields, a top field and a bottom field. One of these fields will commence one field later than the other.
- HANC:** Horizontal Ancillary
- HD:** High Definition

High level: A range of allowed picture parameters defined by the MPEG-2 video coding specification which corresponds to high definition television.

I/O: Input/Output

IP: Internet Protocol

Kbps: 1000 bit per second

LED: Light Emitting Diode

LNB: Low-Noise Block

MAC: Medium Access Control

Main level: A range of allowed picture parameters defined by the MPEG-2 video coding specification with maximum resolution equivalent to ITU-R Recommendation 601.

Main profile: A subset of the syntax of the MPEG-2 video coding specification that is expected to be supported over a large range of applications.

Mbps: 1,000,000 bits per second.

MER: Modulation Error Ratio

MGT: Master Guide Table

MIB: Management Information Base

MP@HL: Main profile at high level.

MP@ML: Main profile at main level.

MPEG: Refers to standards developed by the ISO/IEC JTC1/SC29 WG11, *Moving Picture Experts Group*. MPEG may also refer to the Group.

MPEG-2: Refers to ISO/IEC standards 13818-1 (Systems), 13818-2 (Video), 13818-3 (Audio), 13818-4

MPTS: Multiprogram Transport Stream

MRD: Modular Receiver Decoder

NTP: Networking Time Protocol

NTSC: National Television System Committee

OSD: On Screen Display

PAL: Phase-Alternating Line

PAT: Program Association Table

PCM: Pulse-Code Modulation

PCR: Program Clock Reference

PCM: Pulse-code Modulation

PID: Packet Identifier. A unique integer value used to associate elementary streams of a program in a single or multi-program transport stream.

PMT: Program Map Table

Profile: A defined subset of the syntax specified in the MPEG-2 video coding specification

Program specific information (PSI): PSI consists of normative data which is necessary for the demultiplexing of transport streams and the successful regeneration of programs.

Program: A program is a collection of program elements. Program elements may be elementary streams. Program elements need not have any defined time base; those that do have a common time base and are intended for synchronized presentation.

PTS: Presentation Time Stamp

QAM: Quadrature Amplitude Modulation

QPSK: Quadrature Phase-Shift Keying

RDS: Receiver Decoder System

RF: Radio Frequency

RGBHV: Red, Green, Blue, Horizontal, Vertical
RO: Read Only
RPM: Revolutions Per Minute
RRT: Rating Region Table
RS-232: Recommended Standard. A standard for serial binary data interconnection.
RU: Rack Unit
RW: Read/Write
SD: Standard Definition
SDI: Serial Digital Interface
SFP: Small Form-Factor Pluggable
SI: System Information
SMPTE: Society of Motion Pictures and Television Engineers
SNMP: Simple Network Management Protocol
SPTS: Single Program Transport Stream
SSRC: Synchronization Source
STD input buffer: A first-in, first-out buffer at the input of a system target decoder for storage of compressed data from elementary streams before decoding.
STD: System Target Decoder. A hypothetical reference model of a decoding process used to describe the semantics of the Digital Television Standard multiplexed bit stream.
STT: System Time Table
TS: Transport Stream
TVCT: Terrestrial Virtual Channel Table
UTC: Coordinated Universal Time
VANC: Vertical Ancillary
VBI: Video Blanking Interval
VCT: Virtual Channel Table. Used in reference to either TVCT or CVCT.
XLR: Cannon “X” series connector, with a Latch, and Rubber around the contacts.
YPbPr: Component Red, Green, Blue

Appendix B – Error and Event List

Error	Description
12V Supply Error	Voltage on 12V rail has exceeded safe operational range.
3.3V Supply Error	Voltage on 3.3V rail has exceeded safe operational range.
5V Supply Error	Voltage on 5V rail has exceeded safe operational range.
AFD Not Present	Auto Conversion is enabled in Video Service configuration but the stream does not contain an AFD code.
ANC/VBI Line Conflict - AFD	The VANC line AFD is currently set to be embedded on is conflicting with another line of data in the VANC.
ANC/VBI Line Conflict - AMOL	The VANC line AMOL is currently set to be embedded on is conflicting with another line of data in the VANC.
ANC/VBI Line Conflict - CC	The VANC line CC is currently set to be embedded on is conflicting with another line of data in the VANC.
ANC/VBI Line Conflict – EN301775	The VANC line EN301775 is currently set to be embedded on is conflicting with another line of data in the VANC.
ANC/VBI Line Conflict – OP47	The VANC line OP47 is currently set to be embedded on is conflicting with another line of data in the VANC.
ANC/VBI Line Conflict – RDD11	The VANC line RDD11 is currently set to be embedded on is conflicting with another line of data in the VANC.
ANC/VBI Line Conflict – SCTE127	The VANC line SCTE127 is currently set to be embedded on is conflicting with another line of data in the VANC.
ANC/VBI Line Conflict – SMPTE2038	The VANC line SMPTE2038 is currently set to be embedded on is conflicting with another line of data in the VANC.
ANC/VBI Line Conflict – Source ID	The VANC line Source ID is currently set to be embedded on is conflicting with another line of data in the VANC.
ANC/VBI Line Conflict – System Timecode	The VANC line Timecode is currently set to be embedded on is conflicting with another line of data in the VANC.
ANC/VBI Line Conflict - Teletext	The VANC line Teletext is currently set to be embedded on is conflicting with another line of data in the VANC.
ANC/VBI Line Conflict – TVG2X	The VANC line TVG2X is currently set to be embedded on is conflicting with another line of data in the VANC.
ANC/VBI Line Conflict - VII	The VANC line VII is currently set to be embedded on is conflicting with another line of data in the VANC.
ANC/VBI Line Conflict - VPS	The VANC line VPS is currently set to be embedded on is conflicting with another line of data in the VANC.
ANC/VBI Line Conflict - WSS	The VANC line WSS is currently set to be embedded on is conflicting with another line of data in the VANC.
Audio Not Decoding	Audio is corrupted in incoming stream or format is not supported.

Auto Video Format Error	MRD 5800 is unable to determine the native incoming video in order to format output.
BISS Conflicting PIDs	PIDs selected to be descrambled by one BISS key are already assigned to be descrambled by another BISS key.
BISS Service Not Found	Service that BISS key is assigned to descramble is not present in the incoming stream.
Backup Input Active Condition	Primary input is currently in a failed condition and the MRD 5800 has failed over to the Backup input.
Bitrate Exceeded Error	Total incoming transport stream bitrate has exceeded 213 Mbps.
CAM Descramble Fail	CAM Module is not descrambling selected pids or services
CAM Not Present	DVB-CI Descrambling is enabled but CAM Module is not installed.
CAM PID Not Found	PID selected to be descrambled by the CAM is not present in the incoming stream.
ES Type Mismatch	Elementary stream type does not match the stream type defined by the user.
FEC Reception Error	Packets in incoming IP stream cannot be repaired with forward error correction.
Fan Speed Below Lower Limit	Cooling fan in the MRD 5800 has failed.
Genlock Not Present	Genlock reference is enabled but not present.
IP Loss Error	No IP packets have been received by the MPEG/IP card for two seconds.
ISI Not Found	ISI value defined by the user is not found in the incoming multistream signal.
Incompatible Genlock Reference	External genlock reference is not compatible with output video format.
Input Video Unsupported	Native format of incoming video is not a supported video format.
LNB Power Error	LNB Power is enabled but the MRD 5800 is detecting power is being provided by another source, there is excessive current drain or an overvoltage has occurred.
Link Loss Error	Physical IP link is not present on the MPEG/IP card.
Loss of Carrier Lock	Receiver carrier lock source is lost.
Low Level	8VSB/QAM RF Level is below the user settable threshold
Low Mer	8VSB/QAM MER is below the user settable threshold
Multistream Mode Input Mismatch	Multistream Mode is enabled and input signal is not multistream capable or Multistream Mode is disabled and input signal is multistream capable.
No Services Detected	Service Lock service selection mode is enabled but no services are present in the active input transport stream.
Pid Filter Overflow Error	Configured PID Filter TS rate is too low.

Pid Filter Selection Not Present	Selected Service or PID is not present for inclusion in the output PID filter TS.
Power Supply Error	Power is lost to one of the Redundant Power Supplies
RDD11 Overflow	RDD11 data cannot fit into the VANC embedding line selected.
RTP Reception Error	Uncorrectable out of order or duplicate packets are present in incoming IP stream.
SCTE35 Heartbeat Timeout	The user settable time limit has been exceeded between SCTE35 messages.
ES Sync Error Condition	One of the in-use elementary streams is not synchronized to the PCR
Selected Audio PID Not Present	PID Locked mode is set as service selection mode and audio PID defined by user is not present in the incoming stream.
Selected PCR PID Not Present	PID Locked mode is set as service selection mode and PCR PID defined by user is not present in the incoming stream.
Selected SCTE35 PID Not Present	PID Locked mode is set as service selection mode and SCTE35 PID defined by user is not present in the incoming stream.
Selected Video PID Not Present	PID Locked mode is set as service selection mode and video PID defined by user is not present in the incoming stream.
Service Not Found	Service Lock service selection mode is enabled but service defined by user is not present in the incoming stream.
Temperature Error	The MRD 5800 has detected the internal temperature is 60 degrees Celsius or above.
Transport Error Indicator	The MRD 5800 has detected that the transport stream error indicator is present on the active input.
Transport Stream Not Present	The MRD 5800 has detected that the transport stream from the active input is no longer present.
TS Sync Loss	Transport stream sync for IP stream is not detected.
Unicast Receiver Not Found Error	The MRD 5800 cannot discover the destination for the unicast IP stream within 10 seconds after the initial ARP is sent.
Unlicensed Modulation	Input stream on active input is either 16APSK or 32APSK and the modulations are no licensed on the MRD 5800.
Unlicensed VCM/Multistream	Input stream on the active input contains a multistream signal and the MRD 5800 is not licensed for multistream.
Video Not Decoding	The configured service or video PID to be decoded is not being successfully decoded by the MRD 5800.

Appendix C – Specifications

MRD 5800 – Base Unit

Includes –	Display, keypad, embedded controller, chassis/case, power supply/line cord
System –	
Display Type:	LCD
Display Configuration:	240 pixels by 64 pixels
Keypad:	Snap-dome Membrane
Front Panel Lockout:	Password control, up to 8 alpha-numeric characters (no punctuations or spaces allows)
Configurations Allows:	Single video decoder with up to two option cards
Rear Panel:	Fixed inputs and outputs with two option card slots. Option cards not field upgradeable.
Remote Operation/Update Interface –	
Type:	Ethernet, 10/100
Rear Panels indicators:	Link (Green LED), Activity (Amber LED)
Connector:	RJ45
Front Panel Indicators –	
Error LED:	Red indicates error is occurring Off indicates no errors detected
INPUT LED:	Green indicates valid input is present Off indicates no valid input
Monitor and Control Interfaces –	
Web server GUI:	HTTP via web browsing for control & monitoring
Front Panel:	Control & monitoring
SNMP:	Control & monitoring
Operating Altitudes	0 to 10000 feet
AC Power –	
Operating Voltage:	100-240VAC
PSU Max Power:	150W
Current Draw:	Base Unit with no option cards – 38-40W
	Base Unit with active ASI input – 54-55W
	MPEG/IP option card with active input – 2-3W (additional)
	DVB-S/S2 option card with active input and LNB load of 19V @ 500mA – 8-9W (additional)
	DVB-CI Module option with 2 CAM Modules installed – 2-3W (additional)
	8VSB/QAM option card with active input – 2-3W (additional)
Max Power Draw:	70-72W
Frequency:	48-63Hz
Connector:	IEC C14

Line Cord:	Detachable, 3-prong
Dual Redundant AC Power Option–	
Operating Voltage:	100-240VAC
PSU Max Power:	150W
Current Draw:	Base Unit with no option cards – 38-40W
	Base Unit with active ASI input – 54-55W
	MPEG/IP option card with active input – 2-3W (additional)
	DVB-S/S2 option card with active input and LNB load of 19V @ 500mA – 8-9W (additional)
	DVB-CI Module option with 2 CAM Modules installed – 2-3W (additional)
	8VSB/QAM option card with active input – 2-3W (additional)
Max Power Draw:	70-72W
Frequency:	50/60Hz
Connector:	IEC C14
Line Cord:	Detachable, 3-prong
Redundancy:	Load Sharing
DC Power –	
Operating Voltage:	36-72V DC
PSU Max Power:	200W
Current Draw:	Base Unit with no option cards – 38-40W
	Base Unit with active ASI input – 54-55W
	MPEG/IP option card with active input – 2-3W (additional)
	DVB-S/S2 option card with active input and LNB load of 19V @ 500mA – 8-9W (additional)
	DVB-CI Module option with 2 CAM Modules installed – 2-3W (additional)
	8VSB/QAM option card with active input – 2-3W (additional)
Max Power Draw:	70-72W
Connector:	2 pin terminal block

Genlock Interface (MRD 58701) Adds –

Genlock Connector:	75Ω Female BNC
Input Impedance:	10kΩ
Return Loss:	≥20 dB, 0Mhz to 8 Mhz
Drive Level:	1.0 Vpp ±10%
Genlock Capability –	HD – Adjustment of pixels and lines. Max number of dependent on video mode. SD – Adjustment of subcarrier, pixels and lines.
Supported Genlock References:	NTSC Black Burst PAL-B/G/I/D/M/N Black Burst 1080i x 1920 @ 25, 29.97 and 30fps 1080p x 1920 @ 23.97, 24, 25, 29.97, 30, 50, 59.94 and 60fps 720p x 1280 @ 50, 59.94 and 60fps

Video Decoding Features**General –**

TS Data Rate: .25-200 Mb/s

Video Decoder –**Video Profiles and Levels:****Base Unit –**

MPEG-2 HP@HL (SD Only)

H.264 Hi422P@4.2 (SD Only)

H.264 Constrained BP@4.2 (SD Only)

HD 4:2:0 License (MRD 58710) Adds –

MPEG-2 HP@HL (HD Formats)

H.264 up to HP@4.2 (HD Formats)

HD 4:2:2 License (MRD 58720) Adds –

MPEG-2 422P@HL (All Formats)

H.264 Hi422P@4.2 (All Formats)

HEVC Decode Module (58265) and HEVC Decoding license (58765) Adds-

HEVC Main and Main 10 Profiles up to Level 3, Main Tier (SD only)

HEVC Decode Module (58265) and HEVC Decoding license (58765) with HD 4:2:0 License (MRD 58710) Adds-

HEVC Main and Main 10 Profiles up to Level 4, High Tier (HD up to 1080p30 30Mbps and 1080p60 20Mbps)

HEVC Decode Module (58265) and HEVC Decoding license (58765) with HD 4:2:2 License (MRD 58720) Adds-

HEVC Main 4:2:2 10 profile up to Level 4, High Tier (HD up to 1080p30 30Mbps and 1080p60 20Mbps)

Video Bit Rate:

MPEG-2 1-100Mb/s (dependent on profile)

Video Formats:	H.264 CABAC Entropy coded 1 - 80Mb/s CAVLC Entropy coded 1 - 100Mb/s Base Unit – 1080i x 1920 (16x9) @ 25, 29.97 and 30Hz 1080p x 1920 (16x9) @ 23.97, 24, 25, 29.97 and 30Hz 720p x 1280 (16x9) @ 50, 59.94, and 60Hz 576i x 720 (4x3 or 16x9) @ 25Hz 576i x 704 (4x3 or 16x9) @ 25hz 576i x 544 (4x3 or 16x9) @ 25hz 480i x 720 (4x3 or 16x9) @ 29.97Hz
SDI (Serial Digital Interface) Video Out –	1080p60 License Adds – 1080p x 1920 (16x9) @ 50, 59.94 and 60Hz
SDI Standards:	Base Unit – SD-SDI ANSI/SMPTE S259M
	HD 4:2:0 License (MRD 58710) or HD 4:2:2 License (MRD 58720) Adds – HD-SDI ANSI/SMPTE 292M
	1080p60 License (MRD 58740) Adds – 3G-SDI Level A ANSI/SMPTE 424M
Connector:	75Ω Female BNC
Return Loss:	≥15 dB, 5Mhz to 1.5GHz ≥10 dB, 1.5 GHz to 3.0GHz
Drive Level:	800 mVpp ±10%
Data Bit Rate:	3G-SDI – 3.0 Gb/s HD-SDI – 1.5 Gb/s SD-SDI – 270Mb/s
Display Modes:	HD – Pillarbars, Cropped, Anamorphic SD – Letterbox, Cropped, Anamorphic
Simultaneous SDI (Serial Digital Interface) Video Out –	
SDI Standards:	Option Card – SD-SDI ANSI/SMPTE S259M
Connector:	75Ω Female BNC
Return Loss:	≥15 dB, 5Mhz to 1.5GHz
Drive Level:	800 mVpp ±10%
Data Bit Rate:	SD-SDI – 270Mb/s
Display Modes:	16x9 – Pillarbox, Center-Cut, Anamorphic 4x3 – Letterbox, Center-Cut, Anamorphic
Composite Video Out –	
Video Format Standards:	SMPTE 170M-2004, NTSC, PAL-B/G/I/D/M/N
Connector:	One 75 Ω ±10% Female BNC (CVBS)
Return Loss:	>25dB, 0 to 6.00 MHz
Frequency Response:	± 0.7dB From 0 to 4.00MHz
Drive Level:	140 IRE (1.0Vpp), ±2 IRE
Chroma/Luma Delay:	±26 ns Max
Field Time Distortion:	< 2% (± 3 IRE)

Line Time Distortion:	< 1% (\pm 1 IRE)
Short Time Distortion:	< 2% (\pm 3 IRE)
Differential Gain:	< 4%
Differential Phase:	< 1.5° degrees
Signal to Noise Ratio:	\geq 55dB luminance weighted
K factor	< 2.5%

Digital Video Out –	
Digital Video Standard:	SDA-HDMI-OM-E Rev A
Connector:	HDMI-type Female Type-A

Audio Decoding Features

Number of Audio Services:	Base Unit – 4 Audio Services
	8 Audio Service Decode License (MRD 58880) Adds – 4 Audio Services (8 total)
Audio Codecs Supported:	Dolby Digital (AC-3) & Plus (EAC-3) AAC-LC, HE-AAC, & HE-AACv2 MPEG1L2 & MPEG2L2 Linear PCM & Dolby E (Pass-through)
Output Formats:	Digital Pass-through PCM (Decoded Discrete channels for 5.1 Sources or Downmixed for 5.1 Sources) Analog (Decoded Discrete channels for 5.1 Sources or Downmixed for 5.1 Sources)

Audio Output Features

AES Outputs –	8x 75 Ω BNC AES3/EBU Unbalanced
Analog Outputs –	
Output Type:	Balanced, 2 channel pairs (+/-, L/R)
Connector:	2x High density 15-pin D-sub, male
Impedance:	<100 Ω Nominal Output Impedance
Max Output Level:	+24dBu @ 0dBFS Adjustable down to +10dBu by 0.5dB steps.
Conditions For Measurements	\geq 600 Ω Load Impedance –20dBFS encoded TS source Output level is adjusted to +4 dBu @ -20 dBFS
THD+N:	< 0.015% from 20 Hz to 20kHz @ +24dBu
Dynamic Range:	104 dB
Signal to Noise	80 dB
Crosstalk:	< -80dB from 20Hz to 20kHz
Frequency Response:	\pm 0.5dB 20Hz to 20kHz,
Optional Breakout Cables:	4x XLR Breakout Cable (MRD_AUD_OPT_XLR) 4x BNC Breakout Cable (MRD_AUD_OPT_BNC) 1x Terminal Block (MRD_AUD_OPT_TERM)
SDI Embedded Audio Output Standards:	SMPTE 272M (for SD-SDI) SMPTE 299 (for HD-SDI)
Density:	8 Audio Pairs

Sampling Frequency: 48 kHz

Ancillary Data Support

SDI VANC Data Types:	AFD (SMPTE 2016) Closed Captions (CEA-708) OP-47 (SMPTE RDD-08) SMPTE RDD-11 TVG2X, AMOL-48/96 (SCTE-127) Teletext/WSS/VPS (SMPTE-2031) Time Code (SMPTE 12M-2) SMPTE2038 Source ID SCTE104 (SMPTE 2010) VII (SMPTE RP-186)
SDI HANC Data Types:	Time Code (SMPTE 12M-2)
VBI Waveforms (SDI/Composite):	Line 21 Captions (CEA-608) TVG2X, AMOL-48/96 (SCTE-127) Teletext (EN300706) WSS (EN300294) VPS (EN300231)) Timecode in VBI (SMPTE 12M-1)
Synchronization with video :	Frame Accurate

Video Overlay Support

Closed Caption Overlays:	CEA-608, CEA-708, or SCTE-20
DVB-Subtitle Overlays:	HD/SD with Auto Scaling (EN 300743)

ASI Input and Output Features

General –	
Connector:	2x BNC, Female
Impedance:	75Ω
Return Loss:	≥15dB, 3.5 to 270 MHz
ASI Serial TS Input / Output –	
Number of ASI Inputs:	1 or 2 (rev j or later)
Number of ASI Outputs:	1 (non loop-through) or 2 (rev j or later)
Standard:	EN50083-9 (V2:3/98) DVB ASI
Data Bit Rate:	270 Mb/s
Maximum TS Rate:	200 Mb/s
Minimum TS Rate:	250 Kb/s
Packet Sizes	Input: 188 and 204 bytes Output: 188 bytes
Modes Supported:	Burst, Byte and Inverted

DVB-CI Descrambling Module Option

CAM Decryption –	
General –	
Compatibility Standard:	DVB-CI EN 50221
Number of CAM Slots:	2

Auto CAM insertion/removal detection:	Yes
CAM Usage:	Selectable, Enable/Disable
CAM Name Display:	Yes
Multicrypt Support:	Yes
Decryption Selection – Elementary Stream types:	Video (MPEG2 & H264), Audio
Selection Modes:	Base Unit – Decoded Elementary Streams
	Multi-Service Descrambling License (MRD 58991) Adds – Individually selectable elementary streams
Maximum TS bitrate	DVB-CI – 100Mb/s
CAS Supported –	All major CA vendors supported

BISS Descrambling Option

Compatibility Standard:	DVB-CSA
Supported Modes:	Base Unit – None
	BISS Descrambling License (MRD58921) Adds – Mode 1, Mode E, Injected ID
	No limitation to number of services descrambled per key
	Multi-BISS descrambling using up to 12 keys
Maximum TS bitrate:	200 Mb/s

IP Input/Output Module Option

General –	
Connector:	2x 10/100/1000 auto negotiate Base-T RJ-45 Ethernet Ports
Receive –	
Input Format:	UDP, RTP and RTP with extension headers Multicast and Unicast CBR, VBR, Null Stripped
Receiver Capability:	2 simultaneous MPEG over IP transport streams
FEC Receive:	Pro MPEG CoP3 SMPTE2022 Range: $L * D \leq 100$ $1 \leq L \leq 20$ $4 \leq D \leq 20$ Annex B
Multicast Filtering:	Filters based on IP address
Buffer size:	1 - 4000 KB, or 1 – 4000ms, user configurable
Bitrate Range:	.25 – 200 Mb/s
Packets/IP Frame:	1-7 MPEG Packets/IP Frame
IGMP Compatibility:	Version 2 and 3
Transmit –	
Output Format:	UDP and RTP
Bitrate Range:	.25 – 200 Mb/s
Packets/IP Frame:	1-7 MPEG Packets/IP Frame

Number of Outputs:	2 Mirrored TS – Unicast and/or Multicast
IP FEC Output (MRD58925) Adds – FEC:	Columns, Columns/Rows
FEC Transmit:	Pro MPEG CoP3 SMPTE2022 Range: $L * D \leq 100$ $1 \leq L \leq 20$ $4 \leq D \leq 20$

DVB-S/S2/S2X Input Module Option

General –

Frequency Range:	950 MHz – 2150 MHz
Number of inputs:	4 (A, B, C and D)
Connector:	F-81 Type, Female (4)
Impedance:	75 Ohms
Return Loss:	>9 dB
Separation:	>50 dB adjacent, >60 dB non-adjacent
RF frequency:	950 MHz to 2150 MHz in 100 kHz steps
Tuning:	Difference between Satellite frequency and LO frequency
Satellite frequency:	950 – 14500 MHz
LO frequency:	0 – 12000 MHz, with presets of 0, 5150, 9750, 10600, 10750 and 11250 MHz

Packet size:	188 bytes
Tuning Step Size:	125 kHz, maximum
Nyquist root filter roll-off factors:	.05, .10, .15, .20, .25, .35
RF Input Level:	-65 dBm to -25 dBm
Input RF Spectrum:	Normal/Inverted Auto Detect
PL Scrambling Codes supported:	0-262,141
Image Rejection:	>30dB
Noise Figure:	<15dB, maximum
Max TS Bitrate:	160 Mb/s

LNB Power and 22 kHz Tone –

LNB Power	Off/13/14/18/19VDC @ >450mA
LNB voltage regulation:	± 4%
22 kHz Tone:	Off/On @ 650 mV (± 250 mV) peak-peak

DVB-S –

Standard:	EN 300 421
FEC Code:	Conv. + Reed-Solomon
Modulation:	QPSK
Modulation/Coding supported:	CCM
Code rates:	1/2, 2/3, 3/4, 5/6, 7/8
QPSK Symbol rate:	0.5-60 MSym/s

DVB-S2 –

Standard:	EN 302 307
Decoding type:	LDPC and BCH
Modulation:	QPSK, 8PSK
Modulation/Coding supported:	CCM
FEC Framing Type	Short frame size (16200), Normal frame size (64800)
Supported rates:	QPSK: 1/4, 1/3, 2/5, 1/2, 3/5, 2/3, 3/4, 4/5, 5/6, 8/9, 9/10 8PSK: 3/5, 2/3, 3/4, 5/6, 8/9, 9/10

Symbol rate:	0.5-60 MSym/s
Pilot:	On/Off Auto Detect
DVB-S2 Advanced (MRD 58916) Adds –	
Modulation:	16APSK, 32APSK
Modulation/Coding:	VCM
Supported Rates:	16APSK: 2/3, 3/4, 4/5, 5/6, 8/9, 9/10 32APSK: 3/4, 4/5, 5/6, 8/9, 9/10
Symbol Rate:	0.5-60 MSym/s
Multistream reception:	Single ISI (stream specified)
ISSY:	Supported

DVB-S/S2 Input Module Option

General –

Frequency Range:	950 MHz – 2150 MHz
Number of inputs:	4 (A, B, C and D)
Connector:	F-81 Type, Female (4)
Impedance:	75 Ohms
Return Loss:	>9 dB
Separation:	>50 dB adjacent, >60 dB non-adjacent
RF frequency:	950 MHz to 2150 MHz in 100 kHz steps
Tuning:	Difference between Satellite frequency and LO frequency
Satellite frequency:	950 – 14500 MHz
LO frequency:	0 – 12000 MHz, with presets of 0, 5150, 9750, 10600, 10750 and 11250 MHz
Packet size:	188 bytes
Tuning Step Size:	125 kHz, maximum
Nyquist root filter roll-off factors:	.05, .10, .15, .20, .25, .35
RF Input Level:	-65 dBm to -25 dBm
AFC Tuning Range:	± .5 MHz in Standard and Wide mode (with SR .5 ≤ 1 MSps)
	± 1 MHz in Standard and Wide mode (with SR 1 ≤ 2 MSps)
	± 1.5 MHz in Standard and Wide mode (with SR 2 ≤ 3 MSps)
	± 2 MHz in Standard and Wide mode (with SR 3 ≤ 4 MSps)
	± 2.5 MHz in Standard and Wide mode (with SR 4 ≤ 5 MSps)
	± 3 MHz in Standard mode (with SR ≥ 5 MSps)
	± 4 MHz in Wide mode (with SR 5 ≤ 6 MSps)
	± 5 MHz in Wide mode (with SR ≥ 6 MSps)
	Standard / Wide modes user selectable
Input RF Spectrum:	Normal/Inverted Auto Detect
PL Scrambling Codes supported:	0-262,141

Image Rejection:	>30dB
Noise Figure:	<15dB, maximum
Max TS Bitrate:	160 Mb/s
LNB Power and 22 kHz Tone –	
LNB Power	Off/13/14/18/19VDC @ >450mA
LNB voltage regulation:	± 4%
22 kHz Tone:	Off/On @ 650 mV (± 250 mV) peak-peak
DVB-S –	
Standard:	EN 300 421
FEC Code:	Conv. + Reed-Solomon
Modulation:	QPSK
Modulation/Coding supported:	CCM
Code rates:	1/2, 2/3, 3/4, 5/6, 7/8
QPSK Symbol rate:	0.5-60 MSym/s
DVB-S2 –	
Standard:	EN 302 307
Decoding type:	LDPC and BCH
Modulation:	QPSK, 8PSK
Modulation/Coding supported:	CCM
FEC Framing Type	Short frame size (16200), Normal frame size (64800)
Supported rates:	QPSK: 1/4, 1/3, 2/5, 1/2, 3/5, 2/3, 3/4, 4/5, 5/6, 8/9, 9/10 8PSK: 3/5, 2/3, 3/4, 5/6, 8/9, 9/10
Symbol rate:	0.5-60 MSym/s
Pilot:	On/Off Auto Detect
DVB-S2 Advanced (MRD 58916) Adds –	
Modulation:	16APSK, 32APSK
Modulation/Coding:	VCM
Supported Rates:	16APSK: 2/3, 3/4, 4/5, 5/6, 8/9, 9/10 32APSK: 3/4, 4/5, 5/6, 8/9, 9/10
Symbol Rate:	0.5-60 MSym/s
Multistream reception:	Single ISI (stream specified)
ISSY:	Supported

8VSB/QAM Input Module Option

General –	
Frequency Range:	50 MHz – 1000 MHz VHF/UHF (Ch2 – Ch69) CATV (Ch2 – Ch158)
Channel Plans:	Off Air, FCC, IRC, HRC
Number of inputs:	1
Connector:	F-Type, Female
Impedance:	75 Ohms
Sensitivity:	-34dBmV to + 40dBmV (A74 Compliant)
Modulation:	8VSB, QAM-B
MER:	Range: 0dB to 40dB Accuracy: +/- 2dB
RF Level:	Low Limit Flag: User Defined Range: -34dBmV to +40dBmV Accuracy: +/- 5dBmV Low Limit Flag: User Defined

QAM –

Standard: ITU Annex B/SCTE DVS-031
 QAM Mode: 64 and 256
 De-interleaver: I=1-128, J=128/1
 Nyquist Roll Off (Alpha): 12%, 18%

8VSB –

Standard: ATSC A/53E
 Decoding Levels: 8
 Nyquist Roll Off (Alpha): 11.5%

DVB-T2/C2/ISDB-T Input Module Option

General –

Frequency Range: 42 MHz – 1002 MHz
 Number of inputs: 1
 Connector: F-Type, Female
 Impedance: 75 Ohms
 Sensitivity: -34dBmV to + 40dBmV (A74 Compliant)
 Modulation: QPSK, 16QAM, 32QAM, 64QAM, 128QAM, 256QAM, 1024QAM, 4096QAM
 MER: Range: 0dB to 40dB
 Accuracy: +/- 2dB
 Low Limit Flag: User Defined
 RF Level: Range: -34dBmV to +40dBmV
 Accuracy: +/- 5dBmV
 Low Limit Flag: User Defined

Appendix D – Pinouts for Analog Audio and Relay Connectors



(DB-15) ANALOG AUDIO 1-2

PIN	CHANNEL	FUNCTION
1	Channel 1	Left +
2	Channel 1	Right +
3	Channel 2	Left +
4	Channel 2	Right +
5	--	--
6	Channel 1	Left -
7	Channel 1	Right -
8	Channel 2	Left -
9	Channel 2	Right -
10	--	--
11	--	Ground
12	--	Ground
13	--	Ground
14	--	Ground
15	--	Ground


(DB-15) ANALOG AUDIO 3-4

PIN	CHANNEL	FUNCTION
1	Channel 3	Left +
2	Channel 3	Right +
3	Channel 4	Left +
4	Channel 4	Right +
5	--	--
6	Channel 3	Left -
7	Channel 3	Right -
8	Channel 4	Left -
9	Channel 4	Right -
10	--	--
11	--	Ground
12	--	Ground
13	--	Ground
14	--	Ground
15	--	Ground


(DB-9) RELAY PINOUT

PIN	RELAY	FUNCTION
1	Relay 1	Normally Open
2	Relay 1	Normally Closed
3	Relay 2	Common
4	Relay 3	Normally Open
5	Relay 3	Normally Closed
6	Relay 1	Common
7	Relay 2	Normally Open
8	Relay 2	Normally Closed
9	Relay 3	Common

DB-9 Connector (Female) Pin #'s

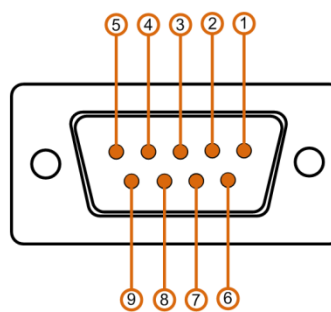

DB-15 Connector (Male) Pin #'s

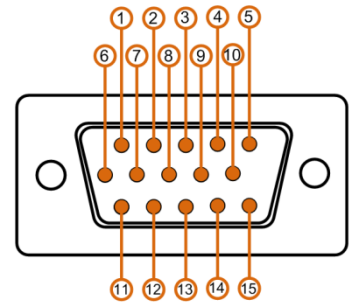

Note: Relay functions shown represent the MRD in a powered-on state with no active alarms.

Appendix E – MRD 5800 Audio Explanation

Downmix Audio Setup

There are two primary modes of audio down mix operation for the MRD 5800 receiver/decoders. These settings only affect the signal if the digital output is set to PCM. It will also affect those embedded audio channels that are set to a PCM down mix. There are no gain changes or decoding if the digital or embedded outputs are set to Pass-through. The preset modes are Monitor (the default setting) and Transmission.

The first preset, Transmission, allows no changes by the customer. Transmission is intended to provide a limited dynamic range signal to drive a set top box or a transmitter. The Transmission mode does respond to dialog normalization data. It provides a gain boost of 11 dB and has compression to prevent the signal from overdriving a modulator. The 11dB gain boost is applied to the analog outputs, AES digital outputs set to PCM, and any embedded outputs set to PCM. It will not affect the gain of digital outputs or embedded outputs set to Pass-Through. It is intended to provide a similar audio level as a broadcast TV station signal through an RF modulator. The down mix includes the center and surrounds channels if they are present, and is represented as Lt/Rt. (left total, right total)

The second preset is Monitor. It has moderate processing, no gain boost and its down mix involves left and right channels only (Lo/Ro). The mode setting is Line as the default, but may be changed to RF, Custom 0 or Custom 1. In Line mode, the Dolby Dialog Normalization data is followed along with moderate processing. The default down mix setting for Monitor is Lo/Ro. The down mix may be changed to Lt/Rt or Lt/Rt/auto. Lt/Rt auto follows the embedded data in the stream if the producer has a preferred down mix. It will switch automatically between Lo/Ro and Lt/Rt depending on the data in the stream. If no mode is specified, the down mix will be Lt/Rt. In addition, the Dual Mono modes of operation may be selected. They will only have an effect if the stream is encoded as Dual Mono. Dual Left or Dual Right applies that signal to both left and right channels of the digital service, left and right channels of the analog outputs, and left and right channels of any embedded stream set to PCM. Selecting RF as the compression setting will add 11 dB of gain and the same processing as the Transmission mode to the analog outputs, AES digital outputs set to PCM, and any embedded outputs set to PCM.

There is an additional selection at the bottom of the Dolby setup pull-down menu. This allows selection between Professional Mode and Consumer Mode. In Professional Mode the built-in latency value is 32 msec for all formats. In Consumer Mode, this latency varies depending on the format. If you wish to monitor using a consumer receiver, you should choose Consumer Mode. The output sampling rate will always be 48 kHz, even in consumer. The Consumer/Pro identification bit will be set to Consumer. Normal operation in the air chain will use the Professional setting. This setting affects both Dolby Digital (AC-3) and Dolby Digital Plus.

If you want to run with no processing, choose Custom 1, Lo/Ro, and Dynamic Range disabled. This will still allow gain changes called for in the Dolby metadata via Dial-Norm settings in the stream.

Audio Output Settings

The digital audio services may be set to PCM (AES) or Pass-through (AES data) as an output. This applies to all available sources. The PCM setting will decode and automatically down mix an AC-3 or Dolby Digital Plus stream to two channels of AES audio. Pass-through simply passes thru the Dolby AC-3 data in an AES stream to be decoded by an external decoder such as the Dolby 568. Be aware the Dolby DP-568 is a professional decoder and always has a decoding latency of 32 msec. The older Dolby DP-564 has both professional and consumer modes of operation. If it identifies the Pro/Consumer ID bit as Professional, the latency will always be 32 msec. If it identifies the Pro/Consumer bit as Consumer, the latency will vary according to the format. Check the DP-564 manual for the actual latency values for Consumer mode. The analog channels can be assigned to any of the digital sources. The analog gain may be adjusted for the desired level. The gain setting does not affect the level of either the embedded audio or the digital services. A setting of +4 dBu provides an output of +4 dBu for a digital signal level of -20 dBFS. To check the audio output level, place the audio setup in Custom1 mode, down mix set to Lo/Ro, and the Dynamic Range disabled. This will remove any signal processing in the down mix. Set the digital service output being measured to PCM. A test stream of -20dBFS will output from the digital services as -20dBFS. If the analog channels are set to a gain setting of +4 dBu, the output should be +4 dBu plus or minus 0.5 dBu. The analog output level can be set in increments of 0.5 dBu from -10 dBu to +4 dBu referenced to a -20 dBFS digital input level. When you are setting the output levels it is suggested that an AC-3 stereo tone (2.0) be used as the source. Do not use a Dolby AC-3 5.1 tone source as your test signal. The five channels will down mix to a different level structure than a stereo signal depending on the down mix setting.

Downmix Reference Table

The following table is applicable for MPEG Audio (Mono and Stereo), Dolby Digital (Mono, Stereo and 5.1), Dolby Digital Plus (Mono, Stereo and 5.1) and AAC (Mono, Stereo and 5.1).


Incoming audio PID -->	Downmix Option	--> Output effect
Stereo	Lo/Ro	OUT = IN
Stereo	Lt/Rt (DS)	OUT = IN
Stereo	Lt/Rt (Auto)	OUT = IN
Stereo	Dual mono	OUT = IN
Stereo	Dual left	OUT L = OUT R = IN L
Stereo	Dual right	OUT L = OUT R = IN R
Mono	Lo/Ro	OUT L = OUT R = IN

Mono	Lt/Rt (DS)	OUT L = OUT R = IN
Mono	Lt/Rt (Auto)	OUT L = OUT R = IN
Mono	Dual mono	OUT L = OUT R = IN
Mono	Dual left	OUT L = OUT R = IN
Mono	Dual right	OUT L = OUT R = IN
5.1	Lo/Ro	OUT L = L + C + Ls OUT R = R + C + Rs (per ATSC A52)
5.1	Lt/Rt (DS)	OUT L = L + C - Ls - Rs OUT R = R + C + Ls + Rs (per ATSC A52)
5.1	Lt/Rt (Auto)	Lo/Ro or Lt/Rt depending on dolby metadata
5.1	Dual mono	OUT L = front left OUT R = front right
5.1	Dual left	OUT L = OUT R = IN Lo
5.1	Dual right	OUT L = OUT R = IN Ro


Appendix F – MRD 5800 Discrete Audio Configuration

Audio Setup

Selecting the discrete option differs from downmix in that it simply decodes the selected audio channels rather than downmixing multiple channels into 2 channels. The service selection mode from 4.2.8 must be set to PID lock in order to output 3 pairs of audio (and completely decode a full 5.1 input). Assign the audio pid containing the 5.1 audio service to 3 separate audio components. The example below illustrates this with PID 558.

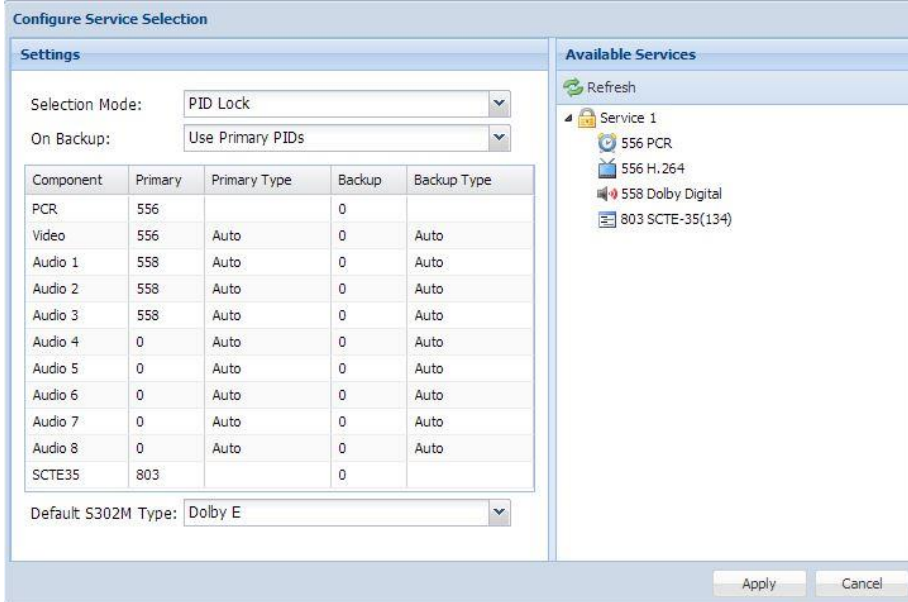

Desired discrete channels can then be selected for the assigned audio as illustrated below.

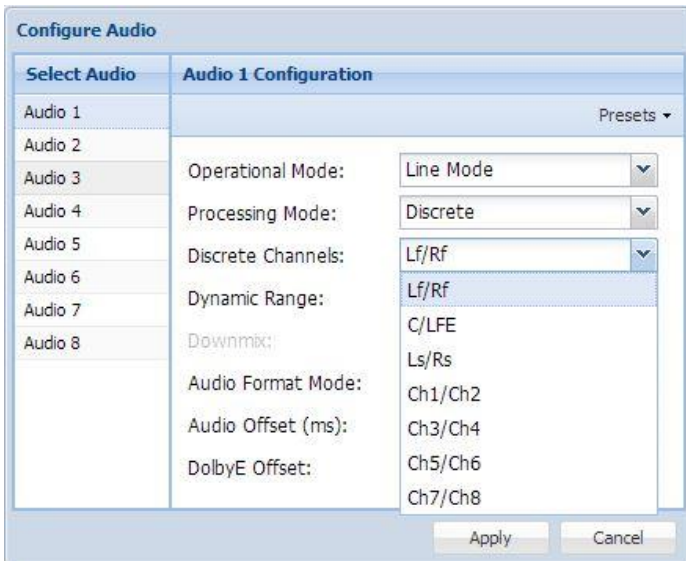

For audio services that indicate the specific channels (Lf, Rf, C, Ls, Rs, LFE) the user can select the audio channels to assign to a output using the named discrete options. If the specific channels are not identified (LPCM Audio for example) than the user can use the multi-channel audio service to select the channel pair of the audio service to output. When the user has selected a named discrete option but the audio channels are not identified in the service the unit will output Ch1/Ch2 (if present) if Lf/Rf is chosen, Ch3/Ch4 (if present) if C/LFE is chosen and Ch5/Ch6 (if present) if Ls/Rs is chosen.

The following audio formats identify specific channels.

Dolby Digital

Dolby Digital Plus

AAC-LC

HE-AAC version 1

Appendix G – Open Source Software

The MRD 5800 includes:

Package	Version	License	Copyright
AT32 UC3B Software Framework	1.7.0	BSD	2009, Atmel Corporation
BaseX4JIT	4.0	GPL Version 3, 29 June 2007	2007-2009, Active Group, Inc
BusyBox	1.20.1	GPL Version 2, June 1991	Erik Anderson, et. al.
Cgicc	3.2.9	LGPL Version 29, June 2007	Stephen F. Booth
dfu-programmer	0.5.2	GPL Version 2, June 1991	Weston Schmidt
Dropbear	2012.55	MIT-like	2002-2008 Matt Johnston, et. al (see license)
E2fsprogs	1.41.9	GPL Version 2, June 1991	Theodore Ts'o
ethtool	2.6.34	GPL Version 2, June 1991	David Miller, et. al.
FamFamFam Silk Icons	013	Creative Commons Attribution 2.5	Mark James
FastDB	3.71	MIT-like	Konstantin Knizhnik
FCGI	2.4.6	FastCGI	Open Market, Inc
Iproute2	3.4.0	GPL Version 2, June 1991	Stephen Hemminger, Alexey Kuznetsov
Libusb	0.1.12	GPL Version 2.1, Feb 1999	Johannes Erdfelt, Thomas Sailer, Brad Hards
Lighttpd	1.4.23	BSD	2004, Jan Kneschke
Linux	2.6.30	GPL Version 2, June 1991	Linus Torvalds, et. Al.

Log4cpp	1.0	GPL Version 2.1 Feb 1999	Bastiann Bakker
Monit	5.1.1	GPL Version 3, 29 June 07	2010 Tildeslash Ltd.
Net-SNMP	5.7.1	BSD	1989, 1991, 1992 by Carnegie Mellon Univsty.
NTP	4.2.4p7	NTP License	1992-2009 David L. Mills
OpenSSL	1.0.1c	BSD-Like	1998-2008 The OpenSSL Project, 1995-1998
OProfile	0.9.7	GPL Version 2, June 1991	John Levon, Philippe Elie, et. al
PCRE	8.00	BSD	1997-2009 University of Cambridge, 2007-2008
POPT	1.14	MIT	1998 Red Hat Software
qDecoder	12.0.2	BSD	200-2012 Seungyoung Kim
Socket-CAN	1171	BSD-like, GPL Version 2, June 1991	2002-2007 Volkswagen Group Electronic Research
Spawn-FCGI	1.6.3	BSD	Jan Kneschke, Stefan Bahler
TCLAP	1.2.0	MIT	2003 Michael E Smoot
U-Boot	2009.11.1	GPL Version 2, June 1991	Wolfgane Denk, et. al.
USB-Utills	0.86	GPL Version 2, June 1991	Thomas Sailer, Johannes Erdfelt, David Brownell,
Zlib	1.2.3	Zlib/libpng License	1995-2005 Jean-loup Gailly and Mark Adler

Appendix H – Warranty

Sencore One-Year Warranty

Sencore warrants this instrument against defects from any cause, except acts of God and abusive use, for a period of 1 (one) year from date of purchase. During this warranty period, Sencore will correct any covered defects without charge for parts, labor, or recalibration.

Appendix I – Support and Contact Information

Returning Products for Service or Calibration

The MRD 5800 is a delicate piece of equipment and needs to be serviced and repaired by Sencore. Periodically it is necessary to return a product for repair or calibration. In order to expedite this process please carefully read the instructions below.

RMA Number

Before any product can be returned for service or calibration, an RMA number must be obtained. In order to obtain a RMA number, use the following steps:

1. Contact the Sencore service department by going online to www.sencore.com and select Support.
2. Select Service and Repair from the options given.
3. Fill in the following required information:
 - a. First & Last Name
 - b. Company
 - c. Email
 - d. Phone Number
 - e. Ship and Bill to Address
 - f. Unit Model and Serial Numbers
4. A RMA number will be emailed you shortly after completing the form with return instructions.

Shipping the Product

Once an RMA number has been issued, the unit needs to be packaged and shipped back to Sencore. It's best to use the original box and packaging for the product but if this not available, check with the customer service representative for the proper packaging instructions.

Note: DO NOT return any power cables or accessories unless instructed to do so by the customer service representative

